

1993-1994 Softail Models Parts Catalog

Alphabetical List

Parts

Hardware List

New Parts List

Numerical Index

Component Types and Introduction Dates

Common Service Parts

READER'S COMMENTS

The Harley-Davidson Service Communications Department maintains a continuous effort to improve the quality and usefulness of its publications. To do this effectively, we need user feedback - your critical evaluation of this manual.

Please comment on the completeness, accuracy, organization, usability, and readability of this manual.

Please list the page, item, and part number(s) of any errors you find in this manual.

Please tell us how we can improve this manual.

Name	Document 99455-94B
Occupation	Dealership
Street	Department

GENERAL INFORMATION

THIS IS NOT AN ASSEMBLY MANUAL AND SHOULD NOT BE USED AS SUCH.

About this Manual

This Parts Catalog has been prepared to make it easier for you to order parts for your motorcycles. The numbers shown in the illustrations correspond to the numbers in the "INDEX NO." column in the parts lists. Consult the illustrations when ordering parts to make sure that you receive all the required parts. The number in parentheses following the part description is the quantity needed for complete assembly. If there is no number in parentheses, only one is used. Prices of parts in this catalog are published separately.

When ordering parts, the following instructions should be followed carefully.

- Make sure to specify the correct part number for each item. The part numbers appear under the "PART NO." column in the parts lists.
- Orders may be placed via your computer for all parts. Review your system documentation on placing orders electronically. All non-warranty replacement crankcase orders require return of the complete left crankcase half with vehicle identification number (VIN). All non-warranty replacement frame orders require return of the steering neck with vehicle identification number (VIN). Non-compliance will result in a fine. See non-warranty frame and crankcase policy or contact Dealer Services.
- The sale or use of these parts or accessories does not grant the purchaser a license or other right under any Harley-Davidson patent.
- For all 2008 and later painted parts, refer to the Service Section of h-dnet.com which features a listing of painted part numbers, except CVO (Custom Vehicle Operations) models which are located in their own respective catalogs.
- All parts that were added for the new model year will have the entire line shaded on the parts list page. This can be used to identify any new parts that are unique to a specific model, and help distinguish new and previous model year parts.
- Parts marked "**RESTRICTED SALE PART**" are limited edition items and can only be ordered as direct replacements.
- Orientation symbols are used when the illustration is not in the standard "Right-Front" orientation. The symbol is a motorcycle with an arrow in the front indicating the direction of view. The symbol is at the bottom left or right side of the illustration page.
- To request a missing or loose part, simply submit a Return Material Authorization (RMA) claim on h-dnet.com with code "T-part not included with vehicle" for all vehicle missing parts claims. Then place an order for the missing item on your next Parts and Accessories order. Upon filing the RMA claim, your dealership will be credited for the dealer net cost of the part. The Vehicle Identification Number must be

included on the RMA claim in order for you to receive credit. This process is to be used for vehicles manufactured at all plants.

To the best knowledge of Harley-Davidson Motor Company, the material contained herein is accurate as of the date this publication was approved for printing. Harley-Davidson Motor Company reserves the right to change specifications, equipment or designs at any time without notice and without incurring obligation.

©2018 H-D.

GENERAL INFORMATION

LOOSE PARTS

The Loose Parts section is located at the back of this parts catalog. This section lists the parts which are shipped unfastened with the vehicles covered in this catalog.

HARDWARE LIST

The Hardware List is located at the back of this parts catalog. This section contains the information for each piece of hardware found in each parts list.

NEW PARTS LIST

The New Parts List is located at the back of this parts catalog. This list serves as a summary of new parts.

NUMERICAL INDEX

The Numerical Index is located at the back of this parts catalog. This index includes all part numbers used in this catalog and the page numbers of where they can be found.

COMPONENT TYPES AND INTRODUCTION DATES

The Component Types and Introduction Dates section is located at the back of this parts catalog. This section contains a list of component part numbers and year of introduction.

COMMON SERVICE PARTS

The Common Service Parts section is located at the back of this parts catalog. This section contains the most commonly ordered parts for service on vehicles covered in this catalog. These parts are ordered through the normal ordering process.

SIP (SERVICE INFORMATION PORTAL)

For the latest updates to these manuals, see the Service Information Portal.

VEHICLE IDENTIFICATION NUMBER

See Figure 1. A unique 17-digit serial, or vehicle identification number (VIN), is assigned to each motorcycle. For a description of each digit in the vehicle identification number (VIN), refer to Table 1.

For all models except V-Rod the full 17-digit serial, or vehicle identification number (VIN), is stamped on the right side of the frame backbone at the rear of the steering head. The vehicle identification number (VIN) is also printed on a label on the right front downtube. An abbreviated vehicle identification number (VIN) is stamped on the left side crankcase between the front and rear cylinders.

For V-Rod models only the full 17-digit serial, or vehicle identification number (VIN), is stamped on the right side of the steering head. The vehicle identification number (VIN) is also printed on a label on the left frame tube above the front engine cylinder. An abbreviated vehicle identification number (VIN) is stamped on the left side crankcase below the rear cylinder head.

Always give the full 17-digit vehicle identification number (VIN) when ordering parts or making any inquiry about your motorcycle.

1993 & 1994 SOFTAIL MODELS

VIN Model Codes

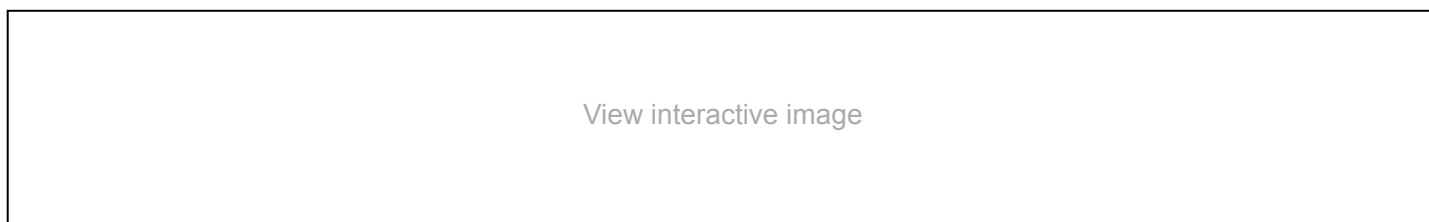


Figure 1. Typical Harley-Davidson VIN

Table 2. Harley-Davidson VIN Breakdown

POSITION	DESCRIPTION	POSSIBLE VALUES
1	Market designation	1=Domestic 5=International
2	Manufacturer	HD=Harley-Davidson
3	Motorcycle type	1=Heavyweight motorcycle (901 cc and larger)
4	Model	See model table
5	Engine type	L=Carbureted
6	Introduction date	1=Regular 2=Mid-year 3=California 4=Special Edition
7	V.I.N. check digit	Can be 0-9 or X
8	Model year	P=1993 R=1994
9	Assembly plant	Y=York, PA
10	Sequential number	varies

Table 3. VIN Model Codes


CODE	MODEL	CODE	MODEL	CODE	MODEL
BJ	FLSTC	BK	FXSTC	BL	FXSTS
BM	FLSTF	BN	FLSTN		

NOTES

AIR CLEANER & ENRICHENER
ALTERNATOR & REGULATOR
AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC
BATTERY
BELTS, CHAINS & SPROCKETS
CALIFORNIA EVAPORATIVE EMISSIONS KIT
CARBURETOR (1 OF 2)
CARBURETOR (2 OF 2)
CLUTCH
CLUTCH CONTROL
CRANKCASE (1 OF 2)
CRANKCASE (2 OF 2)
CRANKCASE - GEAR SIDE
CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (1 OF 2)
CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (2 OF 2)
ELECTRONIC IGNITION SYSTEM
EXHAUST SYSTEM (1 OF 2)
EXHAUST SYSTEM (2 OF 2)
FOOTBOARDS
FOOTRESTS
FORK ROCKERS & CALIPER MOUNTING - FXSTS
FRAME, REAR FORK & JIFFY STAND (1 OF 2)
FRAME, REAR FORK & JIFFY STAND (2 OF 2)
FRONT BRAKE CALIPER
FRONT BRAKE CONTROL
FRONT FENDER - FXSTS
FRONT FENDERS
FRONT FORK - FLSTC/F/N (1 OF 2)
FRONT FORK - FLSTC/F/N (2 OF 2)
FRONT FORK - FXSTC
FRONT FORK - FXSTS
FRONT TURN SIGNALS
FRONT WHEEL (1 OF 2)
FRONT WHEEL (2 OF 2)
FUEL TANK
FUEL TANK TRIM
GASKET KIT - ENGINE OVERHAUL
GASKET KIT - TOP END
GEAR SHIFTER (1 OF 2)
GEAR SHIFTER (2 OF 2)
HANDLEBAR
HANDLEBAR SWITCHES
HEADLAMP (1 OF 2)
HEADLAMP (2 OF 2)
HORN
INSTRUMENTS (1 OF 2)
INSTRUMENTS (2 OF 2)
LICENSE PLATE BRACKETS

MIRRORS
 MISCELLANEOUS ELECTRICAL
 OIL FILTERS & MOUNTS
 OIL PUMP
 OIL TANK
 PISTONS, CONNECTING RODS & FLYWHEELS
 PRIMARY HOUSING
 REAR BELT GUARD
 REAR BRAKE CALIPER
 REAR BRAKE CONTROL - FLST (1 OF 2)
 REAR BRAKE CONTROL - FLST (2 OF 2)
 REAR BRAKE CONTROL - FXST
 REAR FENDER
 REAR FENDER SUPPORTS
 REAR WHEEL (1 OF 2)
 REAR WHEEL (2 OF 2)
 RELAY, STARTER
 ROCKER ARMS, COVERS & PUSHRODS - V²TM EVOLUTION
 SADDLEBAGS - FLSTC & FLSTN
 SEATS & SISSY BAR
 SHOCK ABSORBERS
 STARTER MOTOR (1 OF 2)
 STARTER MOTOR (2 OF 2)
 SWITCHES & CIRCUIT BREAKERS
 TAIL LAMP & REAR TURN SIGNALS
 THROTTLE CONTROL
 TRANSMISSION GEARS
 TRANSMISSION HOUSING
 WINDSHIELD - FLSTC
 WIRING
 Parts

CYLINDERS, HEADS & VALVES - V²TM - REAR SHOWN (1 OF 2)

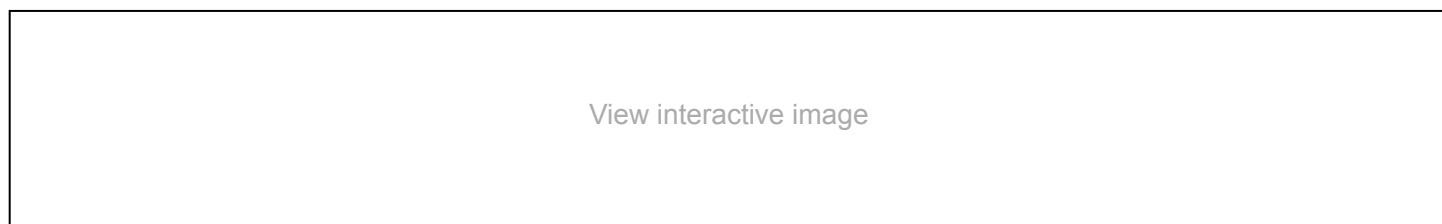

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2879W	BOLT (3)	ALL
2	4716W	SCREW (2)	ALL
3	4726	BOLT	ALL
4	6019	WASHER (2)	ALL
5	6516HW	WASHER	ALL
6	7039	LOCKWASHER	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
7	7601	LOCKNUT, flange (3)	ALL
8	16121-93	ENGINE ASSEMBLY, complete (chrome & black wrinkle)	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
	16121-94	ENGINE ASM., complete (chrome & black wrinkle)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
	16126-93	ENGINE ASSEMBLY, complete (chrome & black wrinkle) (California)	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
	16126-94	ENGINE ASSEMBLY, complete (chrome & black wrinkle) (California)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
9	16242-90	BRACKET, engine mounting	ALL
10	16247-91	BRACKET, engine mounting	ALL
11	16284-84	MOUNTING BLOCK	ALL
12	16478-85A	SCREW, internal thread (4)	ALL
13	16480-92A	SCREW, internal thread (4)	ALL
14	16512-86A	CYLINDER W/PISTON, black wrinkle (2)	ALL
15	16573-83A	INSERT, cylinder stud (4)	ALL
16	16692-95	HEAD, front cylinder, w/ guides & seats (black wrinkle)	ALL
	16696-92A	HEAD, rear cylinder, w/ guides & seats (black wrinkle)	ALL
17	16715-83	STUD, exhaust port (4)	ALL
18	16770-84F	GASKET, cylinder head (2)	ALL
19	16774-86D	GASKET, cylinder base (2)	ALL

CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (2 OF 2)

[View interactive image](#)

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
20	16837-85C	STUD, cylinder base (8)	ALL
21	17040-92A	GASKET KIT, top end	ALL
	17041-92A	GASKET KIT, engine overhaul	ALL
22	18001-83B	SEAL, valve (4)	ALL
23	18011-86	INSERT, exhaust valve seat (2)	ALL
	18124-83	INSERT, exhaust valve seat, 0.005 O.S. (2)	ALL
24	18020-83	INSERT, intake valve seat (2)	ALL
	18134-83	INSERT, intake valve seat, 0.005 O.S. (2)	ALL
25	18074-83B	INTAKE VALVE (2)	ALL
	18076-83	INTAKE VALVE, 0.03 short (2)	ALL
26	18082-83A	EXHAUST VALVE (2)	ALL
	18087-83	EXHAUST VALVE, 0.030 short (2)	ALL
27	18101-83D	VALVE GUIDE, intake & exhaust (4)	ALL
	18130-83D	VALVE GUIDE, intake & exhaust, 0.001 O.S. (4)	ALL
	18131-83D	VALVE GUIDE, intake & exhaust, 0.003 O.S. (4)	ALL
	18133-83B	VALVE GUIDE, intake & exhaust, 0.002 O.S. (4)	ALL
28	18201-83	VALVE SPRING, outer (4)	ALL
29	18202-83	VALVE SPRING, inner (4)	ALL
30	18219-83A	COLLAR, valve spring, upper (4)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
31	18222-83A	COLLAR, valve spring, lower (4)	ALL
32	18229-83A	RETAINER, valve collar (8)	ALL
33	26432-76A	O-RING, cylinder stud insert (4)	ALL
INTERNATIONAL MODELS ONLY			
34	16122-93	ENGINE ASSEMBLY, complete (chrome & black wrinkle) (HDI)	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
	16122-94	ENGINE ASSEMBLY, complete (chrome & black wrinkle) (HDI)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994

ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	882	SCREW (8)	ALL
2	3500A	BOLT (4)	ALL
3	3501A	BOLT (4)	ALL
4	3770	SCREW (8)	ALL
5	3849	SCREW (6)	ALL
6	4718A	SCREW (4)	ALL
7	6016	WASHER (8)	ALL
8	16800-84A	GASKET, rocker cover/cylinder head, valve & pushrod sides (replaces 16778-84A & 16779-84A) (2)	ALL
9	6736	WASHER (6)	ALL
10	6737	WASHER (4)	ALL
11	6762B	WASHER (4)	ALL
12	11132A	O-RING, pushrod cover (4)	ALL
13	11145A	O-RING, pushrod cover (4)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
14	11157	O-RING (4)	ALL
15	16778-84A	GASKET, cylinder head, right (use 16800-84A) (2)	ALL
16	16779-84A	GASKET, cylinder head, left (use 16800-84A) (2)	ALL
17	17042-92A	GASKET KIT, rocker boxes, w/ 8, 18, 19, 20, 37 & 38	ALL
18	17355-92A	GASKET, rocker cover, lower (2)	ALL
19	17356-92A	GASKET, rocker cover, upper (2)	ALL
20	17358-84B	GASKET, rocker cover, inner (2)	ALL
21	17360-83A	ROCKER ARM, front intake, rear exhaust (2)	ALL
22	17375-83A	ROCKER ARM, rear intake, front exhaust (2)	ALL
23	17429-91	BEARING, rocker arm (8)	ALL
24	17528-92	ROCKER COVER, outer (chrome) (2)	ALL
25	17529-92	SPACER, rocker covers (chrome) (2)	ALL
26	17530-92	ROCKER COVER, inner (chrome) (2)	ALL
27	17611-83	SHAFT, rocker arm (4)	ALL
28	17921-83A	PUSHROD, rear exhaust, 11.210 inches long	ALL
	17924-83A	PUSHROD, rear intake, 11.045 inches long	ALL
	17927-83A	PUSHROD, front exhaust, 11.325 inches long	ALL
	17930-83A	PUSHROD, front intake, 11.090 inches long	ALL
29	17935-79B	COVER, pushrod, upper (4)	ALL
30	17938-83	COVER, pushrod, lower (4)	ALL
31	17945-36B	CAP, cover spring (4)	ALL
32	17947-36	SPRING, pushrod cover (4)	ALL
33	17950-66	RETAINER, spring cap (4)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
34	18523-86B	TAPPET, w/ roller (4)	ALL
35	18622-85B	TAPPET GUIDE, rear (black wrinkle)	ALL
	18623-85B	TAPPET GUIDE, front (black wrinkle)	ALL
36	18633-48D	GASKET, tappet guide, rear	ALL
	18634-48C	GASKET, tappet guide, front	ALL
37	26856-89A	VALVE, umbrella	ALL
38	63858-49	GASKET (8)	ALL

PISTONS, CONNECTING RODS & FLYWHEELS

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	6506	WASHER, bronze (2)	ALL
2	11218	KEY, crank pin & gearshaft	ALL
3	11219	T-KEY	ALL
4	21920-83	PISTON RING SET, std. (2)	ALL
	21921-83	PISTON RING SET, 0.005 inch O.S. (2)	ALL
	21922-83	PISTON RING SET, 0.010 inch O.S. (2)	ALL
	21923-83	PISTON RING SET, 0.020 inch O.S. (2)	ALL
	21924-83	PISTON RING SET, 0.030 inch O.S. (2)	ALL
5	21940-83	PISTON & RINGS ASSEMBLY, standard (2)	ALL
	21941-83	PISTON & RINGS ASSEMBLY, 0.005 inch O.S. (2)	ALL
	21942-83	PISTON & RINGS ASSEMBLY, 0.010 inch O.S. (2)	ALL
	21943-83	PISTON & RINGS ASSEMBLY, 0.020 inch O.S. (2)	ALL
	21944-83	PISTON & RINGS ASSEMBLY, 0.030 inch O.S. (2)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
6	22589-83B	LOCK RING, piston pin (4)	ALL
7	22764-83	PISTON PIN (2)	ALL
8	23906-93B	SET OF FLYWHEELS & SHAFT W/ RODS	ALL
9	23928-87	INNER RING	ALL
10	23961-80A	CRANK PIN, standard	ALL
	23974-87	CRANK PIN, 0.001 inch O.S.	ALL
	23975-87	CRANK PIN, 0.002 inch O.S.	ALL
11	23981-98	NUT, crank pin (2)	ALL
12	24281-83	SET OF RODS, w/ bearings & crankpin	ALL
13	24334-36	BUSHING, piston pin, 0.002 inch O.S. (2)	ALL
	24335-36	BUSHING, piston pin, 0.010 inch O.S. (2)	ALL
14	24345-36A	BUSHING, rear connecting rod, lower (2)	ALL
15	24346-87A	BEARING SET	ALL
16	24356-36A	BUSHING, front connecting rod, lower	ALL

CRANKCASE (1 OF 2)

[View interactive image](#)

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	358	DOWEL PIN (2)	ALL
2	653	EXPANSION PLUG	ALL
3	720	PLUG, timing hole	ALL
4	3427	BOLT (2)	ALL
5	3430	BOLT	ALL
6	3504	BOLT (2)	ALL
7	3506	STUD (3)	ALL
8	3512	BOLT (2)	ALL
9	4416	BOLT (2)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
10	6016	WASHER (7)	ALL
11	6019	WASHER (2)	ALL
12	7506	NUT (4)	ALL
13	7593	NUT, flange (7)	ALL
14	7883	NUT (2)	ALL
15	9028	BEARING ASSEMBLY, sprocket shaft	ALL
16	9110	SHIM, bearing assembly, 0.0905-.0895 inch	ALL
	9120	SHIM, bearing assembly, 0.0925-.0915 inch	ALL
	9121	SHIM, bearing assembly, 0.0945-.0935 inch	ALL
	9122	SHIM, bearing assembly, 0.0965-.0955 inch	ALL
	9123	SHIM, bearing assembly, 0.0985-.0975 inch	ALL
	9124	SHIM, bearing assembly, 0.1005-.0995 inch	ALL
	9125	SHIM, bearing assembly, 0.1025-.1015 inch	ALL
	9126	SHIM, bearing assembly, 0.1045-.1035 inch	ALL
	9127	SHIM, bearing assembly, 0.1065-.1055 inch	ALL
	9128	SHIM, bearing assembly, 0.1085-.1075 inch	ALL
	9129	SHIM, bearing assembly, 0.1105-.1095 inch	ALL
	9130	SHIM, bearing assembly, 0.1125-.1115 inch	ALL
	9131	SHIM, bearing assembly, 0.1145-.1135 inch	ALL
	9132	SHIM, bearing assembly, 0.1165-.1155 inch	ALL
	9133	SHIM, bearing assembly, 0.1185-.1175 inch	ALL
	9134	SHIM, bearing assembly, 0.1205-.1195 inch	ALL

CRANKCASE (2 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
17	11160A	RETAINING RING, bearing, left	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	11177A	RETAINING RING, bearing, right	ALL
19	12026B	OIL SEAL	ALL
20	16837-85C	STUD, cylinder base (8)	ALL
21	24002-70	SPACER, sprocket shaft	ALL
22	24032-70	SPACER, sprocket shaft, 0.060 inch thick	ALL
	24033-70	SPACER, sprocket shaft, 0.090 inch thick	ALL
	24034-70	SPACER, sprocket shaft, 0.120 inch thick	ALL
	24035-70	SPACER, sprocket shaft, 0.150 inch thick	ALL
	24036-70	SPACER, sprocket shaft, 0.180 inch thick	ALL
	24037-70	SPACER, sprocket shaft, 0.210 inch thick	ALL
23	24571-93	SET OF CRANKCASES (black wrinkle)	ALL
24	24599-93	BUSHING, right crankcase, standard	ALL
	24600-58B	BUSHING, right crankcase, 0.002 inch O.S.O.D.	ALL
	24601-58B	BUSHING, right crankcase, 0.005 inch O.S.O.D.	ALL
25	24626-87A	BEARING SET, gear side (white/gray)	ALL
	24628-87A	BEARING SET, gear side (green)	ALL
	24641-87A	BEARING SET, gear side (red)	ALL
	24643-87A	BEARING SET, gear side (blue)	ALL
26	35850-84	SPACER, sprocket shaft, 0.010 inch thick	ALL
	35851-84	SPACER, sprocket shaft, 0.020 inch thick	ALL
	35852-84	SPACER, sprocket shaft, 0.030 inch thick (use 35850-84 & 35851-84)	ALL
27	63533-41A	FITTING, oil hose	ALL

CRANKCASE - GEAR SIDE

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	275	DOWEL PIN (as required)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	358	DOWEL PIN (2)	ALL
3	653	PLUG, crankcase	ALL
4	1601	SCREW (2)	ALL
5	3480A	SCREW	ALL
6	4813A	SCREW	ALL
7	4718A	SCREW	ALL
8	4740A	SCREW (3)	ALL
9	7629	NUT	ALL
10	7916A	JAMNUT, gear shaft	ALL
11	8699	RIVET, ignition cover (2)	ALL
12	9058A	NEEDLE BEARING, crankcase cam cover	ALL
13	83162-51	OIL SEAL, bearing	ALL
14	11105	O-RING	ALL
15	11219	T-KEY	ALL
16	24040-93	PINION GEAR, 1.4850-53 pd. (orange)	ALL
	24041-93	PINION GEAR, 1.4846-49 pd. (white)	ALL
	24042-93	PINION GEAR, 1.4842-45 pd. (yellow)	ALL
	24043-93	PINION GEAR, 1.4838-41 pd. (red)	ALL
	24044-93	PINION GEAR, 1.4834-37 pd. (blue)	ALL
	24045-93	PINION GEAR, 1.4830-33 pd. (green)	ALL
	24046-93	PINION GEAR, 1.4826-29 pd. (black)	ALL
17	24581-93	SET OF CAM AND PINION GEARS, matched (California)	ALL
	24586-93	SET OF CAM AND PINION GEARS, matched	ALL
18	24641-36	BUSHING, oil pump shaft	ALL
19	24981-70	OIL SCREEN, crankcase	ALL
20	24982-70	SPRING, oil screen	ALL
21	25225-93B	GASKET, gear cover	ALL
22	25256-93A	GEAR COVER, chrome	ALL
23	25310-82A	BREATHER VALVE GEAR	ALL
24	25320-82	THRUST WASHER, breather valve, 0.130 inch thick	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	25321-82	THRUST WASHER, breather valve, 0.135 inch thick	ALL
	25322-82	THRUST WASHER, breather valve, 0.140 inch thick	ALL
	25323-82	THRUST WASHER, breather valve, 0.145 inch thick	ALL
	25325-82	THRUST WASHER, breather valve, 0.150 inch thick	ALL
	25326-82	THRUST WASHER, breather valve, 0.155 inch thick	ALL
	25327-82	THRUST WASHER, breather valve, 0.160 inch thick	ALL
	25328-82	THRUST WASHER, breather valve, 0.165 inch thick	ALL
25	25550-57A	THRUST WASHER, cam gear	ALL
26	25581-70	BUSHING, gear cover	ALL
27	25582-93	BUSHING, gear cover pinion shaft	ALL
28	32606-82	SCREW (2)	ALL
29	26263-80	PLUG, oil screen	ALL
30	26354-93	DRIVE GEAR, oil pump	ALL
31	26561-84	OIL PRESSURE SWITCH	ALL
32	32504-80A	COVER, inner	ALL
33	32524-83	TIMER COVER	ALL
34	32591-80	GASKET, ignition cover	ALL

OIL PUMP

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	239	PIN, valve stop	ALL
2	891	SCREW (2)	ALL
3	927A	SCREW (2)	ALL
4	4742A	SCREW (4)	ALL
5	6099	WASHER (2)	ALL
6	6239	WASHER (4)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
7	8873	BALL, check valve, 3/8 inch diameter	ALL
8	11002	RETAINING RING, oil pump	ALL
9	11105	O-RING, check valve cover screw (2)	ALL
10	11241	O-RING (2)	ALL
11	26030-92A	END CAP (black wrinkle)	ALL
12	26226-92	BODY, oil pump (black wrinkle)	ALL
13	26207-83	SPRING, relief valve	ALL
14	26227-58	OIL SEAL	ALL
15	26267-92	COVER, oil pump (black wrinkle)	ALL
16	26262-80	SPRING, check valve	ALL
17	26263-80	COVER SCREW, check & relief valves (2)	ALL
18	26273-92A	GASKET, body (paper)	ALL
19	26276-92A	GASKET, cover (paper)	ALL
20	26315-68A	DRIVE GEAR	ALL
21	26317-68A	IDLER GEAR	ALL
22	26326-62A	DRIVE IDLER GEAR	ALL
23	26327-68	SHAFT, idler gear	ALL
24	26328-74	DRIVE GEAR	ALL
25	26345-73	DRIVE GEAR, 24T	ALL
26	26346-70	DRIVE SHAFT	ALL
27	26348-15	KEY, drive shaft (3)	ALL
28	26348-36	RETAINING RING, drive shaft	ALL
29	26400-82B	VALVE, oil pump	ALL
30	45830-48	PLUG (2)	ALL
31	63533-41A	FITTING, straight	ALL
32	26050-92	OIL PUMP (black wrinkle)	ALL

CARBURETOR (1 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3201WA	SCREW (4)	ALL
2	10014	CLAMP (2)	ALL
3	11192	RETAINING RING	ALL
4	26566-91	VACUUM SWITCH	ALL
5	26995-86B	SEAL, intake manifold (2)	ALL
6	26563-91A	VACUUM HOSE	ALL
7	27886-78A	VALVE W/ CLIP	ALL
8	27002-89	SEAL RING	ALL
9	27009-86A	FLANGE, mounting, front	ALL
10	27010-86A	FLANGE, mounting, rear	ALL
11	27019-89A	MANIFOLD	ALL
12	27035-92A	CARBURETOR (California)	ALL
	27038-92A	CARBURETOR (early model year)	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
	27206-93B	CARBURETOR (late model year)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
13	27040-88	TOP, carburetor	ALL
14	27116-88	MAIN JET, 1.65 mm (California)	ALL
15	27100-88	NEEDLE JET	ALL
16	27101-88	NEEDLE JET HOLDER	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
17	27122-89	ROD	ALL
18	27123-89A	SPRING	ALL
19	27124-89	E-CLIP	ALL
20	27125-89	WASHER	ALL
21	27126-89	LEVER	ALL
22	27127-89	WASHER	ALL
23	27128-89	PIN (2)	ALL
24	27129-88	SCREW, top (3)	ALL
25	27130-90	IDLE SCREW	ALL
26	27136-90A	SPRING	ALL
27	27137-81	WASHER (3)	ALL
28	27146-89	SCREW, w/ washer (3)	ALL
29	27147-89	COLLAR	ALL
30	27148-89	WASHER	ALL
31	27156-89	ROD	ALL
32	27157-89	O-RING	ALL

CARBURETOR (2 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
33	27158-89	DRAIN SCREW	ALL
34	27159-92	FLOAT CHAMBER ASM.	ALL
35	27160-89	PUMP HOUSING	ALL
36	27162-89	SPRING	ALL
37	27281-92	SLOW JET	ALL
38	27186-92	JET NEEDLE	ALL
	27280-92	JET NEEDLE (California)	ALL
39	27311-76	CAP, accelerator pump	ALL
40	27315-88A	SPRING	ALL
41	27317-88	SCREW	ALL
42	27339-90	BRACKET, throttle cables	ALL
43	27360-76	O-RING	ALL
44	27361-76A	DIAPHRAGM, accelerator pump	ALL
45	27362-76	SPRING, diaphragm	ALL
46	27368-76	CLIP, overflow hose	ALL
47	27369-76	HOSE, overflow w/ 46	ALL
48	27371-76A	FITTING	ALL
49	27575-88A	PIN	ALL
50	27576-92	FLOAT	ALL
51	27577-92	O-RING	ALL
52	27579-88A	SCREW (4)	ALL
53	27580-88	CABLE GUIDE	ALL
54	27581-88	STARTER CAP	ALL
55	27582-88	CABLE SEALING CAP	ALL
56	27583-88	STARTER VALVE	ALL
57	27585-88	VACUUM PISTON	ALL
58	27586-88	SPRING SEAT	ALL
59	27587-88	SCREW	ALL
NOTE: Hose or insulator is sold in bulk length under the following part numbers. Cut to length.			
60	26570-84	HOSE, 3/16 I.D. (10 ft. long) (black)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
61	63501-68B	HOSE, 1/4 I.D. (25 ft. long) (black)	ALL
62	62555-95	INSULATOR, 1/2 I.D. (nylon) (8 ft. long)	ALL
INTERNATIONAL MODELS ONLY			
63	26994-90	MANIFOLD (HDI)	ALL

AIR CLEANER & ENRICHENER

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	864A	SCREW (3)	ALL
2	1795A	SCREW (California) (2)	ALL
3	2711	SCREW (California)	ALL
4	2737	SCREW (California) (2)	ALL
5	3221	SCREW (California)	ALL
6	3577	SCREW, breather (2)	ALL
7	4713W	BOLT (2)	ALL
8	6048W	WASHER	ALL
9	6109	WASHER	ALL
10	6253W	WASHER (California) (2)	ALL
11	7601	LOCKNUT, flange (2)	ALL
12	8535	RIVET (California) (2)	ALL
13	8625	POP RIVET	ALL
14	9894	CLIP, ground (not shown)	ALL
15	10006	CABLE STRAP	ALL
16	11460	GROMMET	ALL
17	61095-92	FITTING (California)	ALL
18	69126-92	BRACKET, enrichment cable	ALL
19	24922-93	BREATHING CONNECTOR (2)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
20	28823-89	BAFFLE PLATE ASSEMBLY (California)	ALL
	29068-89	BAFFLE PLATE	ALL
21	28841-89	SOLENOID (California)	ALL
22	28842-89	LINK (California)	ALL
23	29017-92	BACKPLATE ASSEMBLY (California)	ALL
	29134-92	BACKPLATE ASSEMBLY	ALL
24	29059-88A	GASKET	ALL
25	29126-90B	SAFETY LABEL	ALL
26	29161-86	TRIM, "HERITAGE SOFTAIL"	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
	29169-84	TRIM, "SOFTAIL"	FXSTC 1993, FXSTC 1994
	29181-88	TRIM, "SPRINGER SOFTAIL"	FXSTS 1993, FXSTS 1994
	29256-90	TRIM, "FAT BOY"	FLSTF 1993, FLSTF 1994
27	29165-89	COVER, air cleaner	ALL
28	29229-88D	CABLE, enrichment	ALL
29	29252-89	MOLDING	ALL
30	29258-91	MOLDING	ALL
31	29259-91A	FILTER ELEMENT	ALL
32	29269-83A	SCREW	ALL
	29283-93	SCREW	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
33	32442-93	WIRING HARNESS, solenoid (California), w/ 34-39	ALL
34	70292-89	HOUSING, 4-way socket	ALL
35	72038-71A	TERMINAL, socket	ALL
36	9858	TERMINAL, ring	ALL
37	9928	TERMINAL, flag	ALL
38	72039-71A	TERMINAL, pin	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
39	72043-71A	HOUSING, pin	ALL
INTERNATIONAL MODELS ONLY			
40	29070-89B	BAFFLE PLATE	ALL

ALTERNATOR & REGULATOR

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2216W	SCREW (2)	ALL
2	2720	SCREW (4)	ALL
3	29961-85	SPACER	ALL
4	29970-88D	STATOR	ALL
5	7124	LOCKWASHER	ALL
6	7688	NUT (2)	ALL
7	9866	WIRE TERMINAL, ring type	ALL
8	10006	CABLE STRAP	ALL
9	29954-71A	RETAINER, alternator plug	ALL
10	29957-81B	ROTOR ASSEMBLY	ALL
11	74519-88A	REGULATOR	ALL

ELECTRONIC IGNITION SYSTEM

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
-----------	----------	-------------	----------

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	933	SCREW (2)	ALL
2	1601	SCREW (2)	ALL
3	2611C	BOLT	ALL
4	3602A	SCREW (2)	ALL
5	3993	BOLT (2)	ALL
6	4718A	SCREW (2)	ALL
7	5207	WELL NUT (2)	ALL
8	6716	WASHER (2)	ALL
9	7036	WASHER (2)	ALL
10	7041	LOCKWASHER	ALL
11	7629	NUT (2)	ALL
12	7686	LOCKNUT (2)	ALL
13	7753	NUT	ALL
14	8699	RIVET, timer cover (2)	ALL
15	9881	ADAPTOR, terminal (not shown)	ALL
16	9908	TERMINAL, spark plug cable	ALL
17	10003	CLAMP	ALL
18	10065	CABLE STRAP	ALL
	10073	CABLE STRAP	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
19	31614-83A	IGNITION COIL	ALL
20	31727-85	NUT PLATE	ALL
21	31800-78A	IGNITION COIL COVER KIT, chrome	ALL
22	31983-71C	SPARK PLUG CABLE, rear cylinder	ALL
	31985-91A	SPARK PLUG CABLE, front cylinder	ALL
23	32311-83	SPARK PLUG, No. 5R6A-0.40 gap (2)	ALL
24	32400-80B	SENSOR ASSEMBLY, w/o receptacle	ALL
25	32402-83	ROTOR	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
26	32405-91B	IGNITION MODULE	ALL
27	32504-80A	TIMER COVER, inner	ALL
28	32524-83	TIMER COVER	ALL
29	32591-80	GASKET, timer cover	ALL
30	32606-82	SCREW, timer plate (2)	ALL
31	38711-93	RETAINER, sensor wire	ALL
32	67075-57A	BRACKET, spark plug cable	ALL
33	72051-77A	RECEPTACLE, 3-way	ALL
34	74521-77A	PLUG, 3-way sensor	ALL
35	74536-77A	PIN, single socket (10)	ALL
36	74539-77A	SOCKET, single pin (10)	ALL
37	83162-51	OIL SEAL	ALL

STARTER MOTOR (1 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	925	SCREW, cover	ALL
2	928	BOLT, starter (use 31553-94B) (2)	ALL
3	929A	SCREW (2)	ALL
4	3403	LOCKNUT, flange	ALL
5	3559	BOLT, starter (2)	ALL
6	4325	BOLT	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
	4358A	SCREW	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
7	4326A	SCREW (2)	ALL
8	6217	WASHER (use 31604-91A) (2)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
9	7041	LOCKWASHER (2)	ALL
10	7838	NUT (2)	ALL
11	8871	BALL BEARING	ALL
12	8879	BALL	ALL
13	8883	BALL BEARING	ALL
14	9077	CLUTCH ROLLER (5)	ALL
15	10957	O-RING (use 31516-94A)	ALL
16	11182	RETAINING RING	ALL
17	11183	RETAINING RING	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
	11248	RETAINING RING	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
18	31342-93	PINION GEAR	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
	31342-94	PINION GEAR	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
19	31430-93	WASHER, thrust	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
	31430-94	WASHER, thrust	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
20	31510-90	HOUSING, starter	ALL
21	31514-90	YOKE ASSEMBLY, starter	ALL
22	31515-90	ARMATURE ASSEMBLY, w/ 8871 & 8883	ALL
23	31538-98	SWITCH KIT, magnetic	ALL
24	31518-90	BRUSH HOLDER ASSEMBLY, w/ spring	ALL
25	31519-90	FRAME, starter end	ALL
26	31525-90	IDLER GEAR (use 31553-94B)	ALL
27	31527-90	BRACKET, cover	ALL
28	31535-91	COVER (chrome)	ALL
29	31530-90	RETAINER, idler gear	ALL
30	31548-90	COUPLING	ALL

STARTER MOTOR (2 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
31	31600-90	SPRING, return (use 31516-94A)	ALL
32	31604-91A	STARTER SOLENOID REPAIR KIT	ALL
33	31660-90	DRAIN VENT	ALL
34	31662-90	BOOT, insulating	ALL
35	31663-90	CLUTCH, starter (use 31516-94A)	ALL
36	31664-90	SHAFT, output (use 31516-94A)	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
	31664-94	SHAFT, output (use 31516-94A)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
37	31688-90	COVER, solenoid	ALL
38	31689-90	BOLT, w/ washer (3)	ALL
39	31692-90	SPRING	ALL
40	31695-90	O-RING (2)	ALL
41	33126-93	LOCKPLATE	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
	33126-94	LOCKPLATE	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
42	33127-93	SHAFT, extension	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
	33127-94	SHAFT, extension	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
43	33449-90	SPRING, pinion gear	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	33449-94	SPRING, pinion gear	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
44	60647-90	COUPLING (use 31612-09)	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
	60647-94	COUPLING (use 31612-09)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
45	31516-94A	CLUTCH ASSEMBLY, starter w/ 8879, 10957, 31663-90, 31664-94 & 31692-90	ALL
46	31553-90A	STARTER, complete	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
	31553-94B	STARTER, complete (black texture)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
47	31612-09	JACKSHAFT KIT, starter, w/ 6, 16, 17, 18, 19, 30, 41, 42, 43 & 44	ALL
48	31693-90	CLIP, cable	ALL

GEAR SHIFTER (1 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	601	ROLL PIN	ALL
2	856A	SCREW	ALL
3	3691	SCREW	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
4	4017	BOLT	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTS 1993, FXSTS 1994
4	4017	BOLT (2)	FLSTC 1993, FLSTC 1994, FXSTC 1993, FXSTC 1994
5	3784	SET SCREW, shifter fork shaft, left	ALL
6	3993	BOLT (4)	ALL
7	4741A	SCREW (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994
8	6016	WASHER (as required)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
9	6057	WASHER	ALL
10	6302	WASHER	ALL
11	6497HW	WASHER	ALL
12	6736	WASHER (4)	ALL
13	7041	LOCKWASHER	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
14	7230	LOCKWASHER	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
15	7507	ACORN NUT	ALL
16	7515	JAMNUT	ALL
17	9114	NEEDLE BEARING	ALL
18	9115	NEEDLE BEARING	ALL
19	11016	RETAINING RING	ALL
20	11083	RETAINING RING	ALL
21	11150	RETAINING RING	ALL
22	11191	O-RING (2)	ALL
23	11729	STUD	ALL
24	12045	SEAL	ALL
25	33119-79B	ADJUSTING SCREW, shifter arm	ALL
26	33205-80	THRUST WASHER, 0.017 thick (as required)	ALL
	33206-80	THRUST WASHER, 0.020 thick (as required)	ALL
	33207-80	THRUST WASHER, 0.022 thick (as required)	ALL
	33208-80	THRUST WASHER, 0.025 thick (as required)	ALL
	33209-80	THRUST WASHER, 0.028 thick (as required)	ALL
	33210-80	THRUST WASHER, 0.031 thick (as required)	ALL
	33211-80	THRUST WASHER, 0.035 thick (as required)	ALL
	33212-80	THRUST WASHER, 0.039 thick (as required)	ALL

GEAR SHIFTER (2 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
27	33320-79D	SHIFTER CAM	ALL
28	33326-79A	SUPPORT, shifter cam-left	ALL
29	33332-79	SUPPORT, shifter cam-right	ALL
30	33642-89	COVER ASSEMBLY, shifter (chrome)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
31	33660-90B	SHIFT LEVER, chrome	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
	33668-90C	SHIFT LEVER, chrome	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
32	33714-90B	BUSHING (2)	ALL
33	33715-85A	LEVER, shifter rod	ALL
34	33729-82A	BALL JOINT (not illustrated)	ALL
35	33871-85B	END, shifter rod (not illustrated)	ALL
36	33895-82D	SHIFTER LEVER, chrome	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
36	33895-82D	SHIFTER LEVER, chrome (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
37	34082-79	PIN, shifter shaft lever (use 34084-86A)	ALL
38	34083-79	SPRING, shifter shaft lever	ALL
39	34084-86A	LEVER, shifter shaft, w/ 37 & 38	ALL
40	34085-79A	CAM FOLLOWER	ALL
41	34086-79	PAWL, shifter cam	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
42	34087-79A	SPRING, shifter shaft	ALL
43	34088-87A	SHAFT, shifter fork	ALL
44	34089-79	SPRING	ALL
45	34191-79E	SHIFTER FORK	ALL
46	34193-79E	SHIFTER FORK	ALL
47	34195-79E	SHIFTER FORK	ALL
48	34564-90B	SHIFT LEVER, chrome	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
49	34611-65A	PEG, shift lever	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
49	34611-65A	PEG, shift lever (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
50	35068-79	PLATE	ALL
INTERNATIONAL MODELS ONLY			
51	14270-92	DECAL, shift pattern (Japan)	ALL

TRANSMISSION HOUSING

[View interactive image](#)

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	337	DOWEL PIN	ALL
2	375	DOWEL PIN	ALL
3	609	PIN (6)	ALL
4	634	PIN	ALL
5	37075-87	FILLER PLUG, chrome	ALL
6	739A	PLUG, magnetic	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
7	37105-87A	CLUTCH RELEASE COVER, chrome	ALL
8	3210A	SCREW (4)	ALL
9	4717A	SCREW (5)	ALL
10	4741A	SCREW (4)	ALL
11	4814A	SCREW (2)	ALL
12	42533-91A	VENT HOSE	ALL
13	6016	WASHER (6)	ALL
14	62375-57A	FITTING, upper cover	ALL
15	8873	BALL (3)	ALL
16	8977	NEEDLE BEARING	ALL
17	8996A	BALL BEARING, mainshaft, left side	ALL
18	8998	BALL BEARING (2)	ALL
19	10998	RETAINING RING	ALL
20	11132A	O-RING, filler plug	ALL
21	11161	RETAINING RING, ball bearing	ALL
22	11165	QUAD SEAL, ball bearing	ALL
23	11179	O-RING, clutch cable	ALL
24	11733A	STUD (5)	ALL
25	12050	OIL SEAL, mainshaft, left side (early model year)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
	12067B	OIL SEAL, mainshaft, left side (late model year)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
26	25452-87A	INNER RAMP	ALL
27	25453-87A	OUTER RAMP	ALL
28	33006-93	TRANSMISSION (chrome & black wrinkle)	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
	33006-94	TRANSMISSION (chrome & black wrinkle)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
29	33043-80	WASHER, neutral indicator switch	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
30	33114-79	SPACER	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
31	33334-85	SPACER, sprocket (early model year)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
	33344-94	SPACER, sprocket (late model year)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
32	33900-59C	SWITCH, neutral indicator	ALL
33	34468-86A	COVER, upper (chrome)	ALL
34	34732-96	HOUSING, black wrinkle	ALL
35	34904-86D	GASKET, upper cover	ALL
36	34920-86A	COUPLING	ALL
37	35021-89	RETAINING RING, bearing (2)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
	11020	RETAINING RING, bearing (2)	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
38	35258-87D	BEARING HOUSING ASSEMBLY, w/ 3, 18 & 37 (black wrinkle)	ALL
39	35076-79	SPACER (2)	ALL
40	35078-79	NUT, mainshaft & countershaft	ALL
41	35652-79B	GASKET, bearing housing	ALL
42	36801-87C	GASKET, right side cover	ALL
INTERNATIONAL MODELS ONLY			
43	33040-94	TRANSMISSION (chrome & black wrinkle) (HDI except Japan)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994

TRANSMISSION GEARS

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	6003	WASHER (5)	ALL
2	8876A	BEARING (4)	ALL
3	11067	RETAINING RING (6)	ALL
4	11096	RETAINING RING	ALL
5	12035B	OIL SEAL, mainshaft fifth gear	ALL
6	34091-85A	BEARING, inner race	ALL
7	35025-79B	FIRST GEAR, mainshaft	ALL
8	35026-79C	GEAR, mainshaft 2nd and countershaft 3rd (2)	ALL
9	35027-79B	GEAR, mainshaft 3rd and countershaft 2nd (2)	ALL
10	35028-79B	FOURTH GEAR, mainshaft	ALL
11	35029-91A	FIFTH GEAR, mainshaft	ALL
12	35042-91	MAINSHAFT	ALL
13	35051-89A	NEEDLE BEARING (2)	ALL
14	35064-79	SPACER, mainshaft	ALL
15	35622-79C	FIRST GEAR, countershaft	ALL
16	35625-79B	FOURTH GEAR, countershaft	ALL
17	35626-79B	FIFTH GEAR, countershaft	ALL
18	35629-79	SPACER	ALL
19	35632-79	COUNTERSHAFT	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
20	37069-90A	PUSHROD END	ALL
21	37088-90	PUSHROD, clutch release (through mainshaft)	ALL
22	37090-84A	END, clutch pushrod, left side	ALL
23	37312-75	BEARING	ALL
24	37313-80	THRUST WASHER (2)	ALL
INTERNATIONAL MODELS ONLY			
25	35026-94	GEAR, mainshaft 2nd and countershaft 3rd (HDI except Japan) (2)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
26	35027-94	GEAR, mainshaft 3rd and countershaft 2nd (HDI except Japan) (2)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
27	35028-94	FOURTH GEAR, mainshaft (HDI except Japan)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
28	35029-94	FIFTH GEAR, mainshaft (HDI except Japan)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
29	35625-94	FOURTH GEAR, countershaft (HDI except Japan)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
30	35626-94	FIFTH GEAR, countershaft (HDI except Japan)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994

CLUTCH

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	7848W	JAMNUT	ALL
2	11096	RETAINING RING	ALL
3	37069-90A	PUSHROD END	ALL
4	37088-90	PUSHROD, clutch release	ALL
5	37090-84A	END, pushrod, left	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
6	37312-75	BEARING, pushrod	ALL
7	37313-80	THRUST WASHER (2)	ALL
8	37496-90A	NUT, mainshaft	ALL
9	37550-90A	CLUTCH HUB	ALL
10	37707-90	SHELL & SPROCKET, w/ ring gear	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
	37707-94	SHELL & SPROCKET, w/ ring gear	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
11	37871-90	SPRING, diaphragm	ALL
12	37872-90	SEAT, clutch spring	ALL
13	37903-90	RELEASE PLATE	ALL
14	37904-90	RETAINING RING, external	ALL
15	37905-90	RETAINING RING, internal	ALL
16	37906-90	BEARING, ball, double row	ALL
17	37908-90	RETAINING RING, internal	ALL
18	37909-90	RETAINING RING, internal	ALL
19	37911-90	FRICTION PLATE, paper (set of 8)	ALL
20	37912-91	PRESSURE PLATE	ALL
21	37913-90	STEEL PLATE, smooth (6)	ALL
22	37977-90	SPRING PLATE, smooth	ALL
23	37971-90	CLUTCH PLATE KIT, w/ 19, 21 & 22	ALL

CLUTCH CONTROL

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2562	SCREW	ALL
2	4015	SCREW (2)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
3	6099	WASHER (2)	ALL
4	10124	CLAMP	ALL
5	11143	RETAINING RING	ALL
6	38607-87A	CABLE, clutch control	ALL
7	38608-82B	BRACKET, hand lever	ALL
8	38630-88	BOOT, clutch cable	ALL
9	45015-96	HAND LEVER	ALL
10	45021-86	SPRING, anti-rattle	ALL
11	45032-82	PIN, hand lever pivot	ALL
12	45036-88	ANCHOR PIN	ALL
13	45044-82	CLAMP, lever bracket	ALL
14	45423-92	BUSHING	ALL
15	90770-79	SCREW	ALL

BELTS, CHAINS & SPROCKETS

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	1783C	SCREW (2)	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
2	2614	BOLT (2)	ALL
3	3594	SCREW (2)	ALL
4	5444	BOLT	ALL
5	6400HB	WASHER	ALL
6	6703	WASHER (2)	ALL
7	7778	LOCKNUT	ALL
8	24032-70	SPACER, sprocket shaft, 0.06 thick	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	24033-70	SPACER, sprocket shaft, 0.09 thick	ALL
	24034-70	SPACER, sprocket shaft, 0.12 thick	ALL
	24035-70	SPACER, sprocket shaft, 0.15 thick	ALL
	24036-70	SPACER, sprocket shaft, 0.18 thick	ALL
	24037-70	SPACER, sprocket shaft, 0.21 thick	ALL
	35850-84	SPACER, sprocket shaft, 0.01 thick (as required)	ALL
	35851-84	SPACER, sprocket shaft, 0.02 thick (as required)	ALL
	35852-84	SPACER, sprocket shaft, 0.03 thick (as required) (use 35850-84 & 35851-84)	ALL
9	29960-91A	SPACER	ALL
10	35211-91B	NUT, sprocket	ALL
11	39976-65B	PAD, chain tensioner	ALL
12	39990-65	CHAIN TENSIONER	ALL
13	39992-65C	CHAIN TENSIONER MOUNTING KIT, w/ 4, 5 & 7	ALL
14	39993-65	PLATE, chain tensioner	ALL
15	39996-65	LOCKWASHER, chain tensioner plate	ALL
16	39998-65A	ANCHOR PLATE, chain tensioner	ALL
17	40012-90	REAR BELT, 128T	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
	40023-86	REAR BELT, 132T	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
18	40007-36B	PRIMARY CHAIN	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
19	40210-85D	TRANSMISSION SPROCKET KIT, includes seal, spacer, 3, 10 & 22 (early model year)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
20	40250-94C	SPROCKET, transmission, 32T (late model year)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
21	40217-79A	SPROCKET, rear, 70 T (black)	FLSTC 1994, FLSTN 1994, FXSTS 1994
	40221-85A	SPROCKET, rear, 70 T (silver)	FLSTF 1994, FXSTC 1994
	40236-88A	SPROCKET, rear, 61 T (silver)	FLSTF 1993, FXSTC 1993
	40237-88A	SPROCKET, rear, 61 T (black)	FLSTC 1993, FLSTN 1993, FXSTS 1993
22	40251-92A	LOCKPLATE	ALL
23	40266-85	SHAFT EXTENSION	ALL
24	40269-85A	COMPENSATING SPROCKET	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
	40308-94	COMPENSATING SPROCKET, 25 T	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
25	40299-83A	SLIDING CAM	ALL
26	40384-91	COVER ASSEMBLY, w/springs	ALL
27	40392-91	NUT	ALL
INTERNATIONAL MODELS ONLY			
28	40012-90	REAR BELT, 128T (HDI & 1994 Australia early models)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
	40017-94	REAR BELT, 130T (Swiss & 1994 Australia late models)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
29	40236-88A	SPROCKET, rear, 61T (silver) (HDI & 1994 Australia early models)	FLSTF 1994, FXSTC 1994
	40237-88A	SPROCKET, rear, 61T (black) (HDI & 1994 Australia early models)	FLSTC 1994, FLSTN 1994, FXSTS 1994
	40311-94	SPROCKET, rear, 65T (silver) (Swiss & 1994 Australia late models)	FLSTF 1994, FXSTC 1994
	40312-94	SPROCKET, rear, 65T (black) (Swiss & 1994 Australia late models)	FLSTC 1994, FLSTN 1994, FXSTS 1994

REAR BELT GUARD

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2882W	SCREW (2)	ALL
2	3540	SCREW (2)	ALL
3	3987	BOLT	ALL
4	6702	WASHER (6)	ALL
5	7507	ACORN NUT (2)	ALL
6	7669	NUT (2)	ALL
7	11411	GROMMET	ALL
8	60362-86B	DEBRIS DEFLECTOR	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
	60415-89C	DEBRIS DEFLECTOR	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
9	60533-86	BELT GUARD (chrome)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
	60537-89	BELT GUARD, w/ 1, 4, 6 & 7 (chrome)	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
INTERNATIONAL MODELS ONLY			
10	6703	WASHER (HDI)	ALL
11	60415-89C	DEBRIS DEFLECTOR (HDI)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
12	60537-89	BELT GUARD, w/ 1, 4, 6 & 7 (HDI)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994

FRONT BRAKE CONTROL

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	923	SCREW	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
2	2579A	SCREW (2)	ALL
3	3594	SCREW	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FXSTS 1993, FXSTS 1994
4	3538	SCREW	FXSTS 1993, FXSTS 1994
5	4015	SCREW (2)	ALL
6	6099	WASHER (2)	ALL
7	6703	WASHER	ALL
8	7686	LOCKNUT	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
9	7531	LOCKNUT	FXSTS 1993, FXSTS 1994
10	10031	CLAMP, brake line	FXSTC 1993, FXSTC 1994
11	10076	CLAMP (2)	FXSTS 1993, FXSTS 1994
12	10081	CABLE STRAP, double loop	ALL
13	11143	RETAINING RING	ALL
14	41713-86	CLAMP, brake line	ALL
15	41733-88	GASKET, master cylinder, single disc (2)	ALL
16	41739-84A	FITTING, master cylinder, single disc	ALL
17	42303-89B	BRAKE LINE	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
	42305-86B	BRAKE LINE	FLSTC 1993, FLSTC 1994
	45110-88C	BRAKE LINE	FXSTS 1993, FXSTS 1994
	45112-84B	BRAKE LINE	FXSTC 1993, FXSTC 1994
18	45004-85	COVER, master cylinder	ALL
19	45005-85	GASKET, master cylinder cover	ALL
20	45019-93	MASTER CYLINDER, w/ hand lever	ALL
21	45016-93	HAND LEVER	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
22	45031-82A	PIN, stoplamp switch & pushrod	ALL
23	45032-82	PIN, hand lever pivot	ALL
24	45042-82	SIGHT GLASS REPAIR KIT	ALL
25	45044-82	CLAMP, master cylinder	ALL
26	45051-82	PUSHROD, stoplamp switch	ALL
27	45072-87	REPAIR KIT, master cylinder	ALL
28	45423-92	BUSHING	ALL
29	41731-88A	GASKET (2)	ALL
30	41747-82A	FITTING	ALL

FRONT BRAKE CALIPER

View interactive image

View interactive table


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	534	COTTER PIN	FXSTS 1993, FXSTS 1994
2	855B	SCREW	ALL
3	3562	SCREW	ALL
4	6019	WASHER	ALL
5	6758	WASHER	FXSTS 1993, FXSTS 1994
6	44020-83A	PISTON REBUILD KIT, w/ 7, 8 & 10	ALL
7	44021-83	RETAINING RING, piston	ALL
8	44022-83	DUST BOOT, piston	ALL
9	44046-84C	CALIPER ASSEMBLY, left	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994

For FXSTS caliper mounting, see FORK ROCKERS AND CALIPER MOUNTING - FXSTS.

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	44077-88F	CALIPER ASSEMBLY, right	FXSTS 1993, FXSTS 1994
10	44047-83	SEAL, piston	ALL
11	44048-83	BLEEDER FITTING	ALL
12	44053-83B	GUIDE PIN KIT, w/ 13, 14 & mounting pins	FXSTS 1993, FXSTS 1994
	44053-92A	GUIDE PIN KIT, w/ 13, 14 & mounting pins	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994
13	44054-83	PIN BOOT	ALL
14	44059-83	O-RING (3)	ALL
15	44072-92A	BRACKET, caliper mounting (left)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994
	44074-88B	BRACKET, caliper mounting	FXSTS 1993, FXSTS 1994
16	44061-83	SPRING CLIP	ALL
17	44062-83	RETAINING PAD	ALL
18	44063-83C	PAD SET, w/ 3562	ALL
19	44190-88A	SCREW, flange	FXSTS 1993, FXSTS 1994
20	44197-77	LABEL	ALL

For FXSTS caliper mounting, see FORK ROCKERS AND CALIPER MOUNTING - FXSTS.

FRONT WHEEL (1 OF 2)

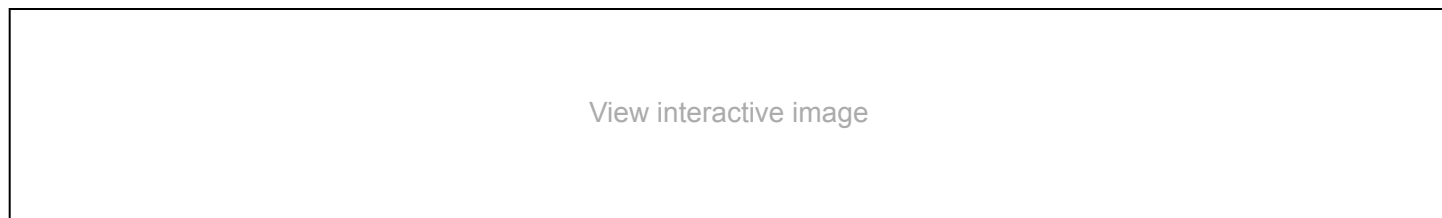

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
-----------	----------	-------------	----------

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3655A	SCREW (5)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994
	3655A	SCREW (10)	FLSTF 1993, FLSTF 1994
2	6590HW	WASHER	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994
	6639	WASHER, left	FXSTS 1993, FXSTS 1994
3	7068	LOCKWASHER	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994
4	7739	LOCKNUT (10)	ALL
5	7845	NUT	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994
	7994	LOCKNUT	FXSTS 1993, FXSTS 1994
6	9052	ROLLER BEARING (2)	ALL
7	11173	O-RING	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
8	11175	SNAP RING	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
9	40910-84B	SPACER, right bearing	FXSTC 1993, FXSTC 1994
	43657-89	SPACER, right bearing	FLSTF 1993, FLSTF 1994
10	41043-89	DISC WHEEL ASSEMBLY, 16 inches (early model year) (use 41038-92A)	FLSTF 1993
	41043-89A	DISC WHEEL ASSEMBLY, 16 inches (late model year) (replaces 41043-89)	FLSTF 1993, FLSTF 1994
	41038-92A	DISC WHEEL ASSEMBLY, 16 inches, w/o bearings	FLSTF 1993, FLSTF 1994
11	41109-88A	AXLE	FXSTS 1993, FXSTS 1994
12	41123-79	VALVE CAP	ALL
13	41584-86A	AXLE	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
14	43005-86	WHEEL ASSEMBLY, 16 inches laced	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
15	43241-05	SPOKE & NIPPLE SET, 16 inches (40)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
	43239-05	SPOKE & NIPPLE SET, 21 inches (40)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
16	43053-86	HUB, w/ bearings, seals & spacers (use 43053-86A)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
17	43067-86	CAP, hub (chrome)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
18	43085-81	RIM, 16 inches (chrome)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
19	43157-83A	VALVE STEM	FLSTF 1993, FLSTF 1994
20	43290-82	SPACER, 0.032 thick	ALL
	43291-82	SPACER, 0.016 thick	ALL
	43292-82	SPACER, 0.008 thick	ALL
	43293-82	SPACER, 0.004 thick	ALL
	43294-82	SPACER, 0.002 thick	ALL

FRONT WHEEL (2 OF 2)

[View interactive image](#)

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
21	43346-83B	AXLE	FXSTC 1993, FXSTC 1994
22	43676-88C	WHEEL ASSEMBLY, 21 inches laced	FXSTS 1993, FXSTS 1994
23	43612-92	SLEEVE	FLSTF 1993, FLSTF 1994
24	43650-82	SPACER WASHER	ALL
25	43654-86A	SPACER	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994
26	43662-80B	RIM, 21 inches (chrome)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
27	43668-82	SLEEVE, laced	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
28	43671-84C	WHEEL ASSEMBLY, 21 inches laced	FXSTC 1993, FXSTC 1994
29	43672-84	HUB, w/ bearings & seals (use 43671-84C)	FXSTC 1993, FXSTC 1994
	43677-88A	HUB, w/ bearings & seals	FXSTS 1993, FXSTS 1994
30	44029-88	SPACER, hub, right	FXSTS 1993, FXSTS 1994
31	44136-92	BRAKE DISC	ALL
32	44447-89	COVER, disc wheel (early model year)	FLSTF 1993
	44447-92	COVER, disc wheel (late model year)	FLSTF 1993, FLSTF 1994
33	47519-83A	OIL SEAL (2)	ALL
34	54321-85	NUT, valve stem	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
35	95578-41	WEIGHT, 1/2 oz., 0.275 inch I.D., round	FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
	95581-47	WEIGHT, 3/4 oz., 0.275 inch I.D., round	FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
	95582-47	WEIGHT, 1 oz., 0.275 inch I.D., round	FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
36	95595-84B	WEIGHT, 5 grams for cast wheel (silver)	FLSTF 1993, FLSTF 1994

REAR BRAKE CONTROL - FXST

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	515	COTTER PIN	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
2	3473	BOLT (2)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
3	3509	BOLT	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
4	6099	WASHER (2)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
5	6366	WASHER	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
6	6716	WASHER (2)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
7	7742	LOCKNUT	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
8	7744	JAMNUT	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
9	7855W	JAMNUT	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
10	10038A	CLAMP, reservoir hose (2)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
11	10122	CLIP	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
12	37503-41	LOCKWASHER	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
13	40903-87	RETAINING RING	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
14	40918-87	RETAINING RING	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
15	40920-87	SPRING, brake return	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
16	40922-87A	BOOT, push	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
17	41731-88A	GASKET (4)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
18	41747-82A	BOLT (2)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
19	41804-84A	RESERVOIR, master cylinder	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
20	45057-82	COVER, reservoir	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
21	42382-87C	REPAIR KIT, master cylinder	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
22	42446-87B	MASTER CYLINDER ASSEMBLY	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
23	42448-87	PUSHROD, master cylinder	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
24	42452-87	REPAIR KIT, master cylinder body	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
25	42455-80	GASKET, reservoir	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
26	42460-80B	PIN, rear brake rod clevis	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
27	42507-89A	BRACKET, brake lever and footrest	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
28	42515-82	LEVER, foot brake (chrome)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
29	42522-87A	CLEVIS, brake rod	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
30	42524-82A	BUSHING (2)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
31	42531-87	WASHER	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
32	42532-82	PAD, brake lever	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
33	42534-90	SCREW (2)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
34	44126-87	RETAINER, return spring	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
35	45156-89E	REAR BRAKE HOSE	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
36	63546-87	HOSE, reservoir	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
37	72023-51E	STOPLAMP SWITCH, rear	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994

REAR BRAKE CONTROL - FLST (1 OF 2)

[View interactive image](#)

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	515	COTTER PIN	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
2	3787	BOLT	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
3	4068A	BOLT	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
4	4713W	BOLT	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
5	6220W	WASHER	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
6	6334	WASHER	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
7	6352	WASHER	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
8	6366	WASHER	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
9	6702	WASHER (5)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
10	7007	SPRING WASHER (not illustrated)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
11	7038	LOCKWASHER	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
12	7740	LOCKNUT (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
13	7748W	NUT (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
14	7825	LOCKNUT	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
15	8108	SPEEDNUT	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
16	35078-79	NUT	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
17	40922-87A	BOOT, pushrod	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
18	40957-87C	BRAKE LINE	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
19	41713-86	CLAMP, rear brake line	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
20	41731-88A	GASKET (4)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
21	41745-79	COVER, master cylinder (chrome)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
22	41747-82A	BOLT (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994

REAR BRAKE CONTROL - FLST (2 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
23	42269-30	PIN, rear brake rod clevis	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
24	42301-87A	STUD, master cylinder	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
25	42375-87	SCREW, master cylinder cover (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
26	42382-87C	REPAIR KIT, master cylinder	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
27	42407-87C	LEVER, foot brake (chrome)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
28	42416-83	PAD, brake lever	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
29	42431-87A	SUPPORT, foot brake lever	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
30	42468-87E	MASTER CYLINDER ASSEMBLY	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
31	42473-87	REPAIR KIT, master cylinder body	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
32	42479-90	SPRING	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
33	44126-87	RETAINER, spring	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
34	45004-85	COVER, master cylinder (black)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
35	45005-85	GASKET, cover	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
36	45042-82	REPAIR KIT, sight glass	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
37	50972-75	FITTING, lubrication	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
38	50992-87A	ROD END, master cylinder	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
39	57215-75	BUSHING, foot brake lever (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
40	72023-51E	SWITCH, stoplamp, rear	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994

REAR BRAKE CALIPER

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	43946-86A	PISTON KIT, w/ 9	ALL
2	43960-86	RETAINER	ALL
3	44035-86A	BUSHING (2)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
4	44039-86	MOUNTING KIT, w/ guide pins and bushings	ALL
5	44045-87A	SEAL AND BOOT KIT	ALL
6	44048-83	BLEEDER FITTING	ALL
7	44050-87	CALIPER ASSEMBLY, w/o bracket	ALL
8	44147-87A	CAP, bleeder screw	ALL
9	44152-77	SEAL, piston	ALL
10	44198-87	LABEL	ALL
11	44199-79	BUMPER	ALL
12	44207-87	BRACKET, mounting w/ 3, 11 & shims	ALL
13	44209-87C	PAD SET, w/ inserts	ALL

REAR WHEEL (1 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	510	COTTER PIN	ALL
2	3730A	BOLT (cast wheels) (5)	ALL
	3769	BOLT (laced wheels) (5)	ALL
3	5756	WASHER	ALL
4	6516HW	WASHER (5)	ALL
5	7827W	LOCKNUT (5)	ALL
6	7778	LOCKNUT (5)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994, FXSTS 1993, FXSTS 1994
7	7987	NUT	ALL
8	9052	ROLLER BEARING (2)	ALL
9	40217-79A	SPROCKET, 70T (black)	FLSTC 1994, FLSTN 1994, FXSTS 1994
	40221-85A	SPROCKET, 70T (silver)	FLSTF 1994, FXSTC 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	40236-88A	SPROCKET, 61T (silver)	FLSTF 1993, FXSTC 1993
	40237-88A	SPROCKET, 61T (black)	FLSTC 1993, FLSTN 1993, FXSTS 1993
10	40975-86	WHEEL ASSEMBLY, 16 inches, laced (chrome)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994, FXSTS 1993, FXSTS 1994
11	40976-86A	HUB ASSEMBLY, w/ spacer	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994, FXSTS 1993, FXSTS 1994
12	41058-87B	DISC WHEEL	FLSTF 1993, FLSTF 1994, FXSTC 1993, FXSTC 1994
13	41110-79A	AXLE ASSEMBLY	ALL
14	41123-79	VALVE CAP	ALL
15	41595-86	SPACER, rear axle, left	ALL
16	41789-92	DISC, brake, w/ 20	ALL
17	43241-05	SPOKE & NIPPLE SET, 16 inches rim (40)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994, FXSTS 1993, FXSTS 1994
18	43085-81	RIM, 16 inches (chrome)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994, FXSTS 1993, FXSTS 1994

REAR WHEEL (2 OF 2)

[View interactive image](#)

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
19	43290-82	SPACER, 0.032 inch thick	ALL
	43291-82	SPACER, 0.016 inch thick	ALL
	43292-82	SPACER, 0.008 inch thick	ALL
	43293-82	SPACER, 0.004 inch thick	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	43294-82	SPACER, 0.002 inch thick	ALL
20	43567-92	SCREW (5)	ALL
21	43608-82	SPACER (cast wheels)	FLSTF 1993, FLSTF 1994, FXSTC 1993, FXSTC 1994
22	43668-82	SPACER (laced wheels)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994, FXSTS 1993, FXSTS 1994
23	43650-82	SPACER WASHER	ALL
24	43654-86A	SPACER (2)	ALL
25	47519-83A	OIL SEAL (2)	ALL
26	54321-85	NUT, valve stem	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994, FXSTS 1993, FXSTS 1994
27	95578-41	WEIGHT, 1/2 oz.-0.275 inch I.D.-round	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994, FXSTS 1993, FXSTS 1994
	95581-47	WEIGHT, 3/4 oz., 0.275 inch I.D., round	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994, FXSTS 1993, FXSTS 1994
	95582-47	WEIGHT, 1 oz., 0.275 inch I.D., round	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994, FXSTS 1993, FXSTS 1994
28	95595-84B	WEIGHT, 5 grams (silver)	FLSTF 1993, FLSTF 1994, FXSTC 1993, FXSTC 1994
29	43157-83A	VALVE STEM ASSEMBLY	ALL
INTERNATIONAL MODELS ONLY			
30	40236-88A	SPROCKET, 61T (silver) (HDI & early 1994 Australia Softtail Models)	FLSTF 1994, FXSTC 1994
	40237-88A	SPROCKET, 61T (black) (HDI & early 1994 Australia Softtail Models)	FLSTC 1994, FLSTN 1994, FXSTS 1994
	40311-94	SPROCKET, 65T (silver) (Swiss & late 1994 Australia Softtail Models)	FLSTF 1994, FXSTC 1994
	40312-94	SPROCKET, 65T (black) (Swiss & late 1994 Australia Softtail Models)	FLSTC 1994, FLSTN 1994, FXSTS 1994

FRONT FORK - FXSTC

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2823	SCREW (2)	FXSTC 1993, FXSTC 1994
2	4729	BOLT (2)	FXSTC 1993, FXSTC 1994
3	5710	WASHER (2)	FXSTC 1993, FXSTC 1994
4	6702	WASHER, right slider (2)	FXSTC 1993, FXSTC 1994
5	7039	LOCKWASHER (2)	FXSTC 1993, FXSTC 1994
6	7041	LOCKWASHER, right slider (2)	FXSTC 1993, FXSTC 1994
7	7748W	NUT, right slider (2)	FXSTC 1993, FXSTC 1994
8	45405-75A	SCREW, w/ washer, damper tube (2)	FXSTC 1993, FXSTC 1994
9	45417-84	SLIDER TUBE (2)	FXSTC 1993, FXSTC 1994
10	45418-84	DAMPER TUBE, complete (2)	FXSTC 1993, FXSTC 1994
11	45419-80	CAP, slider tube (2)	FXSTC 1993, FXSTC 1994
12	45420-80	DUST COVER (2)	FXSTC 1993, FXSTC 1994
13	45611-86	RETAINING RING	FXSTC 1993, FXSTC 1994
14	45640-88B	STEM & BRACKET, w/ bearing & shield	FXSTC 1993, FXSTC 1994
15	45648-85A	PAD, felt (2)	FXSTC 1993, FXSTC 1994
16	45670-80A	CAP, fork stem	FXSTC 1993, FXSTC 1994
17	45672-80B	BRACKET, upper (chrome)	FXSTC 1993, FXSTC 1994
18	67773-80A	MOUNTING PLATE, headlamp (chrome)	FXSTC 1993, FXSTC 1994
19	45717-63	LOCKWASHER, fork stem nut	FXSTC 1993, FXSTC 1994
20	45718-60	NUT, fork stem	FXSTC 1993, FXSTC 1994
21	45733-48	OIL SEAL, fork tube plug (2)	FXSTC 1993, FXSTC 1994
22	45832-77A	AXLE CAP, right slider	FXSTC 1993, FXSTC 1994
23	45834-77	LOWER STOP (2)	FXSTC 1993, FXSTC 1994
24	45838-77	PLUG, fork tube (2)	FXSTC 1993, FXSTC 1994
25	45842-77A	RETAINING RING, oil seal (2)	FXSTC 1993, FXSTC 1994
26	45845-77	O-RING, slider tube plug (2)	FXSTC 1993, FXSTC 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
27	45855-77	SPRING, damper tube (2)	FXSTC 1993, FXSTC 1994
28	45858-77	DRAIN SCREW, w/ washer, slider (2)	FXSTC 1993, FXSTC 1994
29	45859-77A	RING, damper tube (4)	FXSTC 1993, FXSTC 1994
30	45865-84	WASHER, slider (2)	FXSTC 1993, FXSTC 1994
31	45866-84	BUSHING, slider tube (2)	FXSTC 1993, FXSTC 1994
32	45873-91A	SLIDER, left	FXSTC 1993, FXSTC 1994
	45874-91	SLIDER, right	FXSTC 1993, FXSTC 1994
33	45875-84A	OIL SEAL, slider (2)	FXSTC 1993, FXSTC 1994
34	45934-86	BUSHING, brake caliper	FXSTC 1993, FXSTC 1994
35	45940-84	BUSHING, slider (2)	FXSTC 1993, FXSTC 1994
36	45998-73	STUD (2)	FXSTC 1993, FXSTC 1994
37	46004-91A	FORK SLIDER & TUBE ASSEMBLY, left	FXSTC 1993, FXSTC 1994
38	46006-91A	FORK SLIDER & TUBE ASSEMBLY, right	FXSTC 1993, FXSTC 1994
39	46020-84	BUSHING, upper, left slider, brake caliper	FXSTC 1993, FXSTC 1994
40	46048-84	SPRING (2)	FXSTC 1993, FXSTC 1994
41	48300-60	ROLLER BEARING, w/ cup (2)	FXSTC 1993, FXSTC 1994
42	48315-60	BEARING CUP (2)	FXSTC 1993, FXSTC 1994
43	48330-48A	ADJUSTING NUT, upper, w/ shield	FXSTC 1993, FXSTC 1994
44	48332-48C	ADJUSTING NUT, upper	FXSTC 1993, FXSTC 1994
45	48361-80	DUST SHIELD, bearing, upper	FXSTC 1993, FXSTC 1994
46	48365-48A	DUST SHIELD, bearing, lower	FXSTC 1993, FXSTC 1994
47	49377-09A	FORK REBUILD KIT, w/ 8, 25, 26, 29, 30, 31, 33 & 35	FXSTC 1993, FXSTC 1994
INTERNATIONAL MODELS ONLY			
48	48140-84A	STEERING HEAD LOCK ASSEMBLY (HDI) (not illustrated)	FXSTC 1993, FXSTC 1994

FRONT FORK - FLSTC/F/N (1 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	923	SCREW (4)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
2	3739	SCREW (4)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
3	3953W	BOLT (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
4	4105	SCREW (4)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
5	4352	SCREW	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
6	4453	BOLT	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
7	4729	BOLT (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
8	5710	WASHER (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
9	6655	WASHER	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
10	6702	WASHER (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
11	7039	LOCKWASHER (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
12	7041	LOCKWASHER (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
13	7124	LOCKWASHER (4)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
14	7748W	NUT (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
15	8108	SPEEDNUT	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
16	14150-86	WARNING LABEL	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
17	45405-75A	SCREW, w/ washer (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
18	45419-80	CAP, slider tube (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
19	45456-86B	BRACKET, upper	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
20	45605-88	STEM & BRACKET	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
21	45611-86	RETAINING RING, fork stem	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
22	45670-80A	CAP, fork stem	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
23	45733-48	OIL SEAL, fork tube plug (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
24	45832-77A	AXLE CAP, right slider	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
25	45834-77	LOWER STOP (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
26	45838-77	PLUG, fork tube (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
27	45842-77A	RETAINING RING, oil seal (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
28	45845-77	O-RING, slider tube plug (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
29	45858-77	DRAIN SCREW, w/ washer, slider (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994

FRONT FORK - FLSTC/F/N (2 OF 2)

[View interactive image](#)

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
30	45859-77A	RING, damper tube (4)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
31	45865-84	WASHER, slider (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
32	45866-84	BUSHING, slider tube (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
33	45875-84A	OIL SEAL (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
34	45915-86	FORK SLIDER & TUBE ASSEMBLY, right	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
35	45916-86	FORK SLIDER & TUBE ASSEMBLY, left	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
36	45917-86	SLIDER, right	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
37	45918-86	SLIDER, left	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
38	45930-86	SLIDER TUBE (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
39	45931-86	SPRING (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
40	45932-86	DAMPER TUBE (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
41	45933-86	SPRING, damper tube (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
42	45934-86	BUSHING, brake caliper	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
43	45940-84	BUSHING, slider (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
44	45964-86	COVER, slider (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
45	45998-73	STUD (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
46	48300-60	ROLLER BEARING, w/ cup (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
47	48315-60	BEARING CUP (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
48	48361-80	DUST SHIELD, bearing, upper	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
49	48365-48A	DUST SHIELD, bearing, lower	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
50	50991-86	BRACKET, front panel (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
51	67808-86	FRONT PANEL, buffed stainless steel	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
52	67816-86	BACK PANEL, left-rear	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
	67821-87	BACK PANEL, left, rear, w/ switch hole	FLSTC 1993, FLSTC 1994
53	67819-86	TRIM STRIP, front panel (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
54	67814-86	BACK PANEL, right, rear	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
55	49377-09A	FORK REBUILD KIT, w/ 17, 27, 28, 30, 31, 32, 33 & 43	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
INTERNATIONAL MODELS ONLY			
56	48140-84A	STEERING HEAD LOCK ASSEMBLY (HDI) (not illustrated)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994

FRONT FORK - FXSTS

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	855B	SCREW, shock absorber mounting (2)	FXSTS 1993, FXSTS 1994
2	3533	SCREW, spring reaction bracket, right	FXSTS 1993, FXSTS 1994
3	3538	SCREW, spring reaction bracket, left	FXSTS 1993, FXSTS 1994
4	4350A	SCREW, upper triple clamp	FXSTS 1993, FXSTS 1994
5	6353	WASHER, spring rod (2)	FXSTS 1993, FXSTS 1994
6	6756	WASHER, steering stem	FXSTS 1993, FXSTS 1994
7	6812	WASHER, shock absorber mounting (4)	FXSTS 1993, FXSTS 1994
8	7232	LOCKWASHER, spring reaction bracket	FXSTS 1993, FXSTS 1994
9	7627	ACORN NUT, steering stem	FXSTS 1993, FXSTS 1994
10	7680W	ACORN NUT (4)	FXSTS 1993, FXSTS 1994
11	45473-88	UPPER TRIPLE CLAMP	FXSTS 1993, FXSTS 1994
12	45567-88	ACORN NUT, lower spring rod (2)	FXSTS 1993, FXSTS 1994
13	45569-88B	RIGID FORK ASSEMBLY, w/ stem	FXSTS 1993, FXSTS 1994
14	45607-93	SPRING FORK	FXSTS 1993, FXSTS 1994
15	45611-86	RETAINING RING, fork stem	FXSTS 1993, FXSTS 1994
16	45628-92	SPRING ROD ASSEMBLY (2)	FXSTS 1993, FXSTS 1994
17	66030-88	DECAL, shock absorber	FXSTS 1993, FXSTS 1994
18	45935-88	BUSHING, spring rod (2)	FXSTS 1993, FXSTS 1994
19	45936-88	TRAVEL BUMPER (4)	FXSTS 1993, FXSTS 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
20	45937-88	SPRING SEAT (4)	FXSTS 1993, FXSTS 1994
21	46053-88	SPRING, rebound, top (2)	FXSTS 1993, FXSTS 1994
22	46054-88	SPRING, compression, inner (4)	FXSTS 1993, FXSTS 1994
23	46055-88	SPRING, compression, outer (2)	FXSTS 1993, FXSTS 1994
24	46056-88	SPRING CUP, compression spring (2)	FXSTS 1993, FXSTS 1994
25	46057-88	SPRING CUP, rebound spring (2)	FXSTS 1993, FXSTS 1994
26	46060-88	SPRING RESTRAINT, upper (2)	FXSTS 1993, FXSTS 1994
27	46062-88	SPRING BRIDGE	FXSTS 1993, FXSTS 1994
28	48300-60	ROLLER BEARING, w/ cup	FXSTS 1993, FXSTS 1994
29	48306-88	BEARING RETAINER, steering head	FXSTS 1993, FXSTS 1994
30	48361-80	DUST SHIELD, bearing, upper	FXSTS 1993, FXSTS 1994
31	48365-48A	DUST SHIELD, bearing, lower	FXSTS 1993, FXSTS 1994
32	54485-97	FRONT SHOCK ABSORBER	FXSTS 1993, FXSTS 1994
33	46008-93	FORK ASSEMBLY, complete	FXSTS 1993, FXSTS 1994
INTERNATIONAL MODELS ONLY			
34	48140-84A	STEERING HEAD LOCK ASSEMBLY (HDI) (not illustrated)	FXSTS 1993, FXSTS 1994

FORK ROCKERS & CALIPER MOUNTING - FXSTS

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	534	COTTER PIN, brake reaction link (2)	FXSTS 1993, FXSTS 1994
2	4747	SCREW, brake link to bracket	FXSTS 1993, FXSTS 1994
3	6040A	WASHER, front axle, outside right	FXSTS 1993, FXSTS 1994
4	6042A	WASHER, front axle, inside right	FXSTS 1993, FXSTS 1994
5	6371	WASHER	FXSTS 1993, FXSTS 1994
6	6498	WASHER	FXSTS 1993, FXSTS 1994
7	6812	WASHER, brake reaction link	FXSTS 1993, FXSTS 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
8	7012	WAVE WASHER, front axle, right	FXSTS 1993, FXSTS 1994
9	7588	NUT, shaft	FXSTS 1993, FXSTS 1994
10	7627	ACORN NUT, rockers to forks (4)	FXSTS 1993, FXSTS 1994
11	7667	NUT, brake reaction link (2)	FXSTS 1993, FXSTS 1994
12	9139	BEARING, spherical, fork to rocker (2)	FXSTS 1993, FXSTS 1994
13	9140	RACE, spherical bearing, fork to rocker (4)	FXSTS 1993, FXSTS 1994
14	9141	BALL, spherical bearing, fork to rocker (4)	FXSTS 1993, FXSTS 1994
15	11244	SPACER, rubber	FXSTS 1993, FXSTS 1994
16	41040-88B	BRAKE REACTION LINK	FXSTS 1993, FXSTS 1994
17	44029-88	SPACER, right	FXSTS 1993, FXSTS 1994
18	44030-88A	BUSHING, caliper mounting	FXSTS 1993, FXSTS 1994
19	44044-88B	BRACKET, caliper mounting	FXSTS 1993, FXSTS 1994
20	45649-91	ROCKER, left	FXSTS 1993, FXSTS 1994
	45651-91	ROCKER, right	FXSTS 1993, FXSTS 1994
21	45655-88	BEARING RETAINER, rigid fork (2)	FXSTS 1993, FXSTS 1994
22	45659-88	JAMNUT, bearing retainer (2)	FXSTS 1993, FXSTS 1994
23	45660-88A	PIVOT STUD, spring fork to rocker (2)	FXSTS 1993, FXSTS 1994
24	45662-88	WASHER, rocker to fork leg (4)	FXSTS 1993, FXSTS 1994
25	45663-88A	PIVOT STUD, rigid fork to rocker (2)	FXSTS 1993, FXSTS 1994

FRAME, REAR FORK & JIFFY STAND (1 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	728	PLUG, frame side (2)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
2	939	SCREW	ALL
3	1046	SCREW	ALL
4	2871W	BOLT (2)	FLSTC 1994, FLSTF 1994, FLSTN 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	3974HW	BOLT (2)	FXSTC 1993, FXSTS 1993
	3987	BOLT (2)	FXSTC 1994, FXSTS 1994
	4014W	BOLT (2)	FLSTC 1993, FLSTF 1993, FLSTN 1993
5	2882W	SCREW	ALL
6	3787	BOLT (4)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
7	3991	BOLT (2)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
	3996	BOLT (2)	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
8	4044	SCREW (4)	ALL
9	4961	BOLT (2)	ALL
10	6474	WASHER	FXSTC 1993, FXSTC 1994
11	6701	WASHER	ALL
12	6702	WASHER	ALL
13	6703	WASHER (4)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
14	7041	LOCKWASHER (5)	ALL
15	7115	LOCKWASHER	ALL
16	7124	LOCKWASHER	ALL
17	7142	LOCKWASHER (2)	ALL
18	7230	LOCKWASHER	ALL
19	7507	ACORN NUT (3)	FXSTC 1994, FXSTS 1994
	7748W	NUT (3)	FLSTC 1994, FLSTF 1994, FLSTN 1994
	7736	ACORN NUT, chrome (3)	FXSTC 1993, FXSTS 1993
	7753	NUT, jiffy stand (3)	FLSTC 1993, FLSTF 1993, FLSTN 1993
20	7742	LOCKNUT (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
21	7778	LOCKNUT (4)	ALL
22	7782	LOCKNUT (5)	ALL
23	7783	NUT, rear axle adjustment (2)	ALL
24	8108	SPEEDNUT (4)	ALL
25	9076	BEARING, rear fork pivot (2)	ALL

FRAME, REAR FORK & JIFFY STAND (2 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
26	10059A	CLAMP	ALL
27	11158	RETAINING RING, fork bearing (2)	ALL
28	11451	CUSHION (2)	ALL
29	11456	BUMPER	FXSTS 1993, FXSTS 1994
30	43283-86	SPACER, rear fork pivot (2)	ALL
31	47573-89B	REAR FORK, w/ 25 & 27	ALL
32	47008-92B	FRAME	ALL
33	47577-86	SPACER, rear axle adjustment (2)	ALL
34	47579-93	ADJUSTING SCREW, rear axle (2)	ALL
35	47698-86B	TRANSMISSION MOUNTING PLATE	ALL
36	47712-91	TAB, electrical	ALL
37	48031-89A	SWING AXIS TUBE	ALL
38	48315-60	BEARING CUP (2)	ALL
39	50005-85A	SPRING, jiffy stand leg	ALL
40	50015-74A	LEG STOP	ALL
41	50018-85	LEG BRACKET, chrome	ALL
42	50028-91	BRACKET, spring (chrome)	ALL
43	50087-89B	LEG, jiffy stand (chrome)	ALL
44	50972-75	FITTING, lubrication	ALL
45	59258-91	REFLECTOR, amber (2)	ALL
46	60363-86C	DEBRIS DEFLECTOR	ALL
47	62123-66A	BUMPER	ALL
INTERNATIONAL MODELS ONLY			
48	48130-92B	FRAME (HDI)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
49	48140-84A	STEERING HEAD LOCK (HDI) (not illustrated)	ALL
50	50025-84	SPRING, jiffy stand (HDI) (not illustrated)	ALL
	50027-84	SPRING, jiffy stand (HDI) (not illustrated)	ALL
	50034-84	SPRING, jiffy stand (HDI) (not illustrated)	ALL
51	59265-90	REFLECTOR, amber (HDI) (2)	FLSTF 1993, FLSTF 1994, FXSTS 1993, FXSTS 1994

SEATS & SISSY BAR

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	868A	SCREW (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
2	1357W	SCREW	FLSTC 1993, FLSTC 1994, FXSTC 1993, FXSTC 1994
3	3793A	SCREW (4)	FLSTC 1993, FLSTC 1994, FXSTC 1993, FXSTC 1994
4	2538	SCREW (2)	FLSTC 1993, FLSTC 1994
	2607	SCREW (2)	FXSTC 1993, FXSTC 1994
5	2739	SCREW	ALL
6	2879W	BOLT (2)	FLSTC 1993, FLSTC 1994, FXSTC 1993, FXSTC 1994
7	3574	SCREW (2)	ALL
8	3974HW	BOLT (2)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
9	4721	BOLT (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994
10	6333	WASHER (2)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
11	6379W	WASHER (4)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994
12	6410	WASHER, nylon	ALL
13	6701	WASHER (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994
14	7068	LOCKWASHER (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
15	7643W	JAMNUT (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994
16	7680W	ACORN NUT (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994
17	51184-88A	PASSENGER STRAP (black)	FXSTS 1993, FXSTS 1994
	51185-90	PASSENGER STRAP (black)	FLSTC 1993, FLSTC 1994
	51186-89B	PASSENGER STRAP (black)	FLSTF 1993, FLSTF 1994
	51188-86	PASSENGER STRAP (black)	FXSTC 1993, FXSTC 1994
	51190-92	PASSENGER STRAP (black)	FLSTN 1993, FLSTN 1994
18	51652-83B	BRACKET, seat	ALL
19	52191-86	BACKREST	FXSTC 1993, FXSTC 1994
20	52203-93B	SEAT, front	FLSTN 1993
	52283-94A	SEAT, front	FLSTN 1994
21	52204-93	SEAT, rear	FLSTN 1993
	52285-94B	SEAT, rear	FLSTN 1994
22	52912-00	SEAT KIT, passenger (black)	FLSTC 1993, FLSTC 1994
23	52236-86E	SEAT KIT, solo (black)	FLSTC 1993, FLSTC 1994
24	52209-90C	SEAT, w/ textured panel (rear)	FLSTF 1993, FLSTF 1994
25	52217-90C	SEAT, w/ textured panel (front)	FLSTF 1993, FLSTF 1994
26	52541-87A	BACKREST KIT, w/ concho (black)	FLSTC 1993, FLSTC 1994
27	52735-85	UPRIGHT, sissy bar	FLSTC 1993, FLSTC 1994, FXSTC 1993, FXSTC 1994
28	52771-82	BRACKET, backrest	FLSTC 1993, FLSTC 1994, FXSTC 1993, FXSTC 1994
29	52787-92	SIDE PLATE, right	FLSTC 1993, FLSTC 1994, FXSTC 1993, FXSTC 1994
30	52788-92	SIDE PLATE, left	FLSTC 1993, FLSTC 1994, FXSTC 1993, FXSTC 1994
31	59255-91	REFLECTOR, red (2)	FLSTC 1993, FLSTC 1994
32	91850-87A	CONCHO	FLSTC 1993, FLSTC 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
33	91768-96	SEAT, black	FXSTC 1993, FXSTC 1994
34	99000-77	MEDALLION	FXSTC 1993, FXSTC 1994
35	52503-88E	SEAT	FXSTS 1993, FXSTS 1994
INTERNATIONAL MODELS ONLY			
36	59254-91	REFLECTOR, amber (HDI) (2)	FXSTC 1993, FXSTC 1994

FOOTRESTS

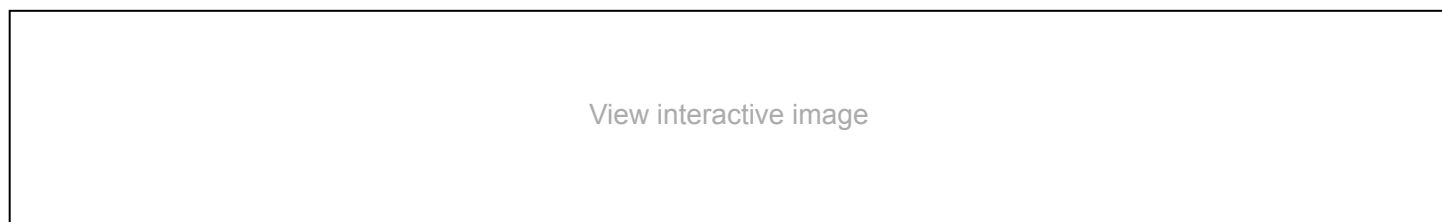

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	872A	SCREW, right	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
2	3440	BOLT	ALL
3	4163	SCREW	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
4	3516A	SCREW (2)	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
	3549A	SCREW (2)	FLSTC 1993, FLSTC 1994
5	4716W	SCREW	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
6	4721	BOLT (as required)	ALL
7	7068	LOCKWASHER (as required)	ALL
8	7667	NUT	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
9	7778	LOCKNUT	ALL
10	33048-72	FOOTREST, w/ cover (2)	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTS 1993, FXSTS 1994
10	33048-72	FOOTREST, w/ cover (4)	FXSTC 1993, FXSTC 1994
11	33189-63	COVER (black) (2)	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTS 1993, FXSTS 1994
11	33189-63	COVER (black) (4)	FXSTC 1993, FXSTC 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
12	33683-90A	BRACKET, shifter & footrest	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
13	42507-89A	BRACKET, brake lever & footrest	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
14	50972-75	FITTING, lubrication	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
15	50900-72	SUPPORT, passenger footrest	ALL
16	50912-72	SPRING WASHER (as required)	ALL
17	33708-94	BEARING SLEEVE (2)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994

FOOTBOARDS

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2773	SCREW	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
2	4721	BOLT	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
3	6400HB	WASHER	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
4	7038	LOCKWASHER	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
5	7230	LOCKWASHER	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
6	7716	LOCKNUT (4)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
7	33630-90A	BRACKET, left	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
8	42431-87A	BRACKET	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
9	50614-91A	PAD (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
10	50621-79A	FOOTBOARD, w/ 50614-91A (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
11	50635-82A	BOLT, footboard hinge (4)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
12	50989-86	STUD, left front (chrome)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
13	50990-86B	SUPPORT BRACKET, left rear	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
14	33708-94	BEARING SLEEVE (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994

SHOCK ABSORBERS

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	4074A	BOLT (4)	ALL
2	6724	WASHER (4)	ALL
3	54508-89A	SHOCK ABSORBER, complete (2)	ALL

HANDLEBAR

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3450	BOLT (2)	FXSTC 1993, FXSTC 1994
2	3471	BOLT (2)	FLSTC 1994, FLSTF 1994, FLSTN 1994
2	3471	BOLT (4)	FXSTS 1993, FXSTS 1994
3	56540-88	RISER (2)	FXSTS 1993, FXSTS 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
4	4816A	SCREW (4)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994
5	6753	WASHER	ALL
6	7068	LOCKWASHER (2)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1993, FXSTC 1994
7	70191-73A	CABLE, ground	FXSTC 1993, FXSTC 1994
	70197-86	CABLE, ground	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
8	7768W	LOCKNUT (2)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
9	10065	CABLE STRAP (2)	FXSTS 1993, FXSTS 1994
10	45544-88	STUD, rigid fork leg (2)	FXSTS 1993, FXSTS 1994
11	46059-90	SPRING	FXSTS 1993, FXSTS 1994
12	53156-86	BUSHING, rubber (4)	ALL
13	55919-82	HANDLEBAR	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
	56569-86	HANDLEBAR	FLSTC 1993, FLSTC 1994
14	56081-82A	HANDLEBAR	FXSTC 1993, FXSTC 1994
	56093-88A	HANDLEBAR	FXSTS 1993, FXSTS 1994
15	56073-83	RETAINER (4)	ALL
16	56105-84	STUD (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
17	56119-77A	CLAMP, upper	FXSTC 1993, FXSTC 1994
	56567-86B	CLAMP, upper (chrome)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
18	56541-86A	CLAMP, lower, left (chrome)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
	56542-86A	CLAMP, lower, right (chrome)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
19	56122-77	CLAMP, lower, left	FXSTC 1993, FXSTC 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	56124-77	CLAMP, lower, right	FXSTC 1993, FXSTC 1994
20	56153-73	SPACER (2)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1993, FXSTC 1994
21	56159-73	CUP WASHER (4)	ALL
22	56538-88	CLAMP (2)	FXSTS 1993, FXSTS 1994
23	7129	LOCKWASHER (not shown)	FLSTC 1994, FLSTF 1994, FLSTN 1994
INTERNATIONAL MODELS ONLY			
24	3531A	SCREW (HDI) (4)	FXSTS 1993, FXSTS 1994

THROTTLE CONTROL

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	9988	CLAMP, throttle cable	FXSTS 1993, FXSTS 1994
2	10006	CABLE STRAP	ALL
3	11155	RETAINING RING	ALL
4	56206-94A	GRIP, left	ALL
5	56220-94A	GRIP & SLEEVE, throttle, right	ALL
6	56305-90	IDLE CONTROL	FXSTS 1993, FXSTS 1994
	56342-90	IDLE CONTROL	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994
7	56306-90	THROTTLE CONTROL	FXSTS 1993, FXSTS 1994
	56343-90	THROTTLE CONTROL	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
8	56394-74	SPRING, adjusting screw	ALL
9	56396-74A	FRICTION SPRING, throttle	ALL
10	56397-74C	ADJUSTING SCREW KIT, w/ 3, 8 & 11	ALL
11	56402-83A	ADJUSTING SCREW	ALL
12	56508-76	FERRULE, control wire (2)	ALL
13	70504-81	CLIP, throttle cables	ALL

WINDSHIELD - FLSTC

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2444	SCREW (2)	FLSTC 1993, FLSTC 1994
2	2921	SCREW (7)	FLSTC 1993, FLSTC 1994
3	6645	WASHER (4)	FLSTC 1993, FLSTC 1994
4	7073	LOCKWASHER (9)	FLSTC 1993, FLSTC 1994
5	7651A	ACORN NUT (9)	FLSTC 1993, FLSTC 1994
6	58018-86A	WINDSHIELD ASSEMBLY, complete	FLSTC 1993, FLSTC 1994
7	58075-86	WINDOW, adjustable	FLSTC 1993, FLSTC 1994
8	58078-49	ADJUSTING BRACKET, right	FLSTC 1993, FLSTC 1994
	58079-49	ADJUSTING BRACKET, left	FLSTC 1993, FLSTC 1994
9	58183-78	WINDOW REPLACEMENT KIT	FLSTC 1993, FLSTC 1994
10	58406-75A	BRACE, right	FLSTC 1993, FLSTC 1994
	58408-75A	BRACE, left	FLSTC 1993, FLSTC 1994
11	58412-76A	BRACE, inner	FLSTC 1993, FLSTC 1994
12	58411-76A	BRACE, outer	FLSTC 1993, FLSTC 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
13	58416-77A	TAPE (2)	FLSTC 1993, FLSTC 1994
14	58417-77	TAPE (2)	FLSTC 1993, FLSTC 1994

HEADLAMP (1 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	861A	SCREW	FXSTS 1993, FXSTS 1994
2	2917	SCREW (2)	FXSTS 1993, FXSTS 1994
3	3514	SCREW	ALL
4	3945	BOLT	FLSTF 1993, FLSTF 1994, FXSTC 1993, FXSTC 1994
5	4411	BOLT	FLSTF 1993, FLSTF 1994
	4724	BOLT	FXSTC 1993, FXSTC 1994
6	6701	WASHER (2)	FLSTF 1993, FLSTF 1994, FXSTC 1993, FXSTC 1994
	6379W	WASHER (2)	FXSTS 1993, FXSTS 1994
7	7038	LOCKWASHER	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
7	7038	LOCKWASHER (2)	FXSTC 1993, FXSTC 1994
8	7606	LOCKNUT	FXSTC 1993, FXSTC 1994
9	7800W	NUT	FLSTF 1993, FLSTF 1994, FXSTC 1993, FXSTC 1994
10	9857	TERMINAL, headlamp harness, ring type (not shown)	ALL
11	10065	CABLE STRAP	ALL
12	67685-92	CLIP, bulb	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
13	68329-03	BULB, halogen-H-4	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
14	67698-81D	HEADLAMP ASSEMBLY, w/ bulb, boot and clip, 5-3/4 inches	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
15	67757-92	LENS, w/ clip	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
16	67705-92	BOOT, connector	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
17	67748-87	SCREW, door (chrome)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
18	67768-86	MOUNTING BLOCK	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
	67892-93	MOUNTING BLOCK	FXSTS 1993, FXSTS 1994
19	67769-82	MOUNTING RING	FXSTC 1993
	67769-93	MOUNTING RING	FXSTC 1994
20	67772-80	MOUNTING BLOCK	FXSTC 1993, FXSTC 1994

HEADLAMP (2 OF 2)

View interactive image

View interactive table


INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
21	67773-80A	MOUNTING PLATE	FXSTC 1993, FXSTC 1994
22	67777-80A	HEADLAMP ASSEMBLY, w/ housing & wiring, 5-3/4 inches	FXSTC 1993, FXSTC 1994
23	67789-91B	HEADLAMP ASSEMBLY, w/ housing & wiring, 7 inches	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
24	67790-82	TRIM RING, chrome	FXSTC 1993
	67790-93A	TRIM RING, chrome	FXSTC 1994
	67894-93A	TRIM RING, chrome	FXSTS 1993, FXSTS 1994
25	67841-93	HEADLAMP ASSEMBLY, w/ housing & wiring, 5-3/4 inches	FXSTS 1993, FXSTS 1994
26	68050-93A	RETAINING RING	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
27	68051-93A	TRIM RING, chrome	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
28	68052-93	SCREW (3)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
29	67601-94A	GASKET, headlamp (not shown)	FXSTS 1993, FXSTS 1994
30	67603-94A	RETAINER RING (not shown)	FXSTS 1993, FXSTS 1994

INTERNATIONAL MODELS ONLY

31	53438-92	BULB, position lamp (HDI) (not shown)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
32	67763-93	LENS ASSEMBLY, w/ bulb & boot, R.H. dip (HDI)	FXSTC 1994, FXSTS 1994
	67781-92A	LENS ASSEMBLY, w/ bulb & boot, L.H. dip (HDI)	FXSTC 1994, FXSTS 1994
33	67793-92A	LENS ASSEMBLY, w/ bulb & boot, R.H. dip (HDI)	FLSTC 1994, FLSTF 1994, FLSTN 1994
	67801-92A	LENS ASSEMBLY, w/ bulb and boot, L.H. dip (HDI)	FLSTC 1994, FLSTF 1994, FLSTN 1994
34	67798-92	BOOT (HDI)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
35	67823-92A	HEADLAMP, complete, w/ wiring, 7 inches (less bulb) (HDI)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
36	67849-93	HEADLAMP, complete, w/ wiring, 5-3/4 inches (less bulb) (HDI)	FXSTS 1993, FXSTS 1994
	67872-89B	HEADLAMP, complete, w/ wiring, 5-3/4 inches (less bulb) (HDI)	FXSTC 1993, FXSTC 1994
37	68654-92	SOCKET, position lamp (HDI) (not shown)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994

AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC

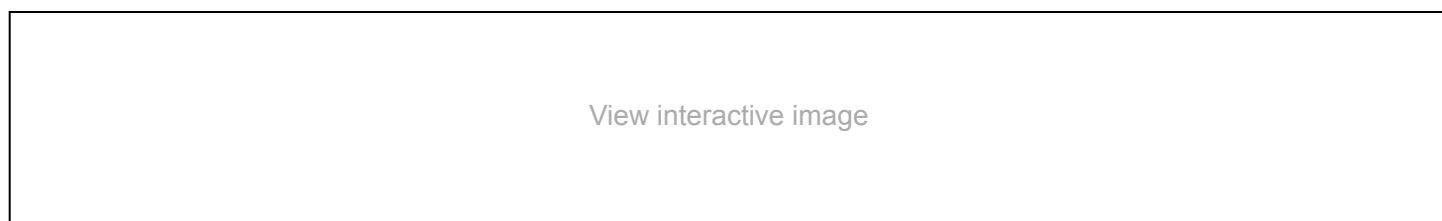

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
-----------	----------	-------------	----------

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2647B	SCREW (4)	FLSTC 1993, FLSTC 1994
2	3960W	BOLT (2)	FLSTC 1993, FLSTC 1994
3	4014W	BOLT (2)	FLSTC 1993, FLSTC 1994
4	6072	WASHER, belleville (2)	FLSTC 1994
5	4036	BOLT (2)	FLSTC 1993, FLSTC 1994
6	5885	SPACER (2)	FLSTC 1993, FLSTC 1994
7	6109	WASHER (2)	FLSTC 1993, FLSTC 1994
8	6645	WASHER (4)	FLSTC 1993, FLSTC 1994
9	68683-02	HOUSING, lamp (chrome)	FLSTC 1993, FLSTC 1994
10	7041	LOCKWASHER (6)	FLSTC 1993, FLSTC 1994
11	7069	LOCKWASHER (4)	FLSTC 1993, FLSTC 1994
12	7778	LOCKNUT (2)	FLSTC 1993, FLSTC 1994
13	9900	CONNECTOR, auxiliary lamp wire (not illustrated) (2)	FLSTC 1993, FLSTC 1994
14	10006	CABLE STRAP	FLSTC 1993, FLSTC 1994
15	57852-02A	BRACKET, auxiliary lamps	FLSTC 1993, FLSTC 1994
16	68725-62A	MOLDING, auxiliary lamps (2)	FLSTC 1993, FLSTC 1994
17	68000056	BULB, turn signal (used w/ 68414-05)	FLSTC 1993, FLSTC 1994
18	67858-89	TOGGLE SWITCH, auxiliary lamps	FLSTC 1993, FLSTC 1994
19	67846-70	NUT, toggle switch	FLSTC 1993, FLSTC 1994
20	68168-89A	BULB, turn signal (2)	FLSTC 1993, FLSTC 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
21	68661-87	TURN SIGNAL, left	FLSTC 1993, FLSTC 1994
	68668-87	TURN SIGNAL, right	FLSTC 1993, FLSTC 1994
22	68440-86	LENS, turn signal (amber) (2)	FLSTC 1993, FLSTC 1994
23	73191-96	SOCKET CONTACT, 16-20 gauge (8)	FLSTC 1993, FLSTC 1994
24	68452-86	SCREW (4)	FLSTC 1993, FLSTC 1994
25	68519-68A	MOUNTING BRACKET (2)	FLSTC 1993, FLSTC 1994
26	68619-83	LABEL, auxiliary lamp switch	FLSTC 1993, FLSTC 1994
27	73152-96BK	HOUSING, 2-way socket	FLSTC 1993, FLSTC 1994
28	68671-69D	AUXILIARY LAMP (2)	FLSTC 1993, FLSTC 1994
29	68672-38	SCREW, auxiliary lamp molding (2)	FLSTC 1993, FLSTC 1994
30	68674-69A	SEALED UNIT, auxiliary lamps (use 68348-05) (2)	FLSTC 1993, FLSTC 1994
31	68348-05	AUXILIARY LAMP KIT, w/ 68355-05 & 68414-05A (replaces 68674-69A) (2)	FLSTC 1993, FLSTC 1994
32	68690-69	CLIP, wire (not shown) (2)	FLSTC 1993
33	68720-62	CLAMP BLOCK, auxiliary lamps (2)	FLSTC 1993, FLSTC 1994
34	68721-62	SWIVEL BLOCK, auxiliary lamps (2)	FLSTC 1993, FLSTC 1994
35	68414-05A	AUXILIARY LAMP, w/ 68000056 (used w/ 68348-05A) (2)	FLSTC 1993, FLSTC 1994
36	72039-71A	PIN, single socket (4)	FLSTC 1993, FLSTC 1994
37	67615-89A	WIRING HARNESS, auxiliary lamps	FLSTC 1993, FLSTC 1994
38	68355-05	WIRE HARNESS (2)	FLSTC 1993, FLSTC 1994
INTERNATIONAL MODELS ONLY			

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
39	68401-90	TURN SIGNAL (HDI) (2)	FLSTC 1993, FLSTC 1994
40	68505-90	LENS, turn signal (amber) (HDI) (2)	FLSTC 1993, FLSTC 1994

FRONT FENDERS

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Refer to Painted Parts Book for painted part numbers.			
1	2531	SCREW (8)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
2	2604	SCREW (2)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
3	3485A	SCREW (4)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FXSTC 1993, FXSTC 1994
4	3560WA	BOLT (2)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
5	3561WC	BOLT (2)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
6	6220W	WASHER	FLSTF 1993, FLSTF 1994
7	6702	WASHER (4)	FXSTC 1993, FXSTC 1994
8	7036	WASHER	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
9	7041	LOCKWASHER (4)	FXSTC 1993, FXSTC 1994
10	7127	LOCKWASHER (4)	FLSTN 1993, FLSTN 1994
11	7220	LOCKWASHER (4)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
12	7507	ACORN NUT (4)	FXSTC 1993, FXSTC 1994
13	7531	LOCKNUT (4)	FLSTC 1993, FLSTC 1994
14	7600	NUT (8)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
15	7613A	PUSHNUT (6)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
16	7624	LOCKNUT (4)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
17	7629	NUT (2)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
18	7689W	JAMNUT	FLSTF 1993, FLSTF 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
19	8505	RIVET	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
20	14142-86A	TRIM, "Heritage Softail" (2)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
21	38622-87	GUIDE, speedometer cable	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
22	45085-88A	CABLE GUIDE	FLSTF 1993, FLSTF 1994
23	53439-79	BULB, fender tip lamp	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
24	59082-79	LAMP ASSEMBLY	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
25	59129-86A	FENDER, prime	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
26	59139-89	FENDER, prime	FLSTF 1993, FLSTF 1994
27	59180-80	LENS, fender lamp (amber)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
28	59181-80	GASKET, fender lamp lens	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
29	59197-87	WIRE ASSEMBLY, fender lamp	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
30	59211-74A	SIDE TRIM (2)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
31	59235-86	TRIM SKIRT, lower (black)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
32	59924-80B	FENDER, prime	FXSTC 1993, FXSTC 1994
33	70196-86	WIRE ASSEMBLY, fender lamp	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
34	68594-84	LAMP ASSEMBLY (HDI)	FLSTC 1993, FLSTC 1994
35	59182-84	LENS, fender lamp (white) (HDI)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994

FRONT FENDER - FXSTS

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2723A	SCREW, shoulder (2)	FXSTS 1993, FXSTS 1994
2	2738	PIVOT SHAFT (2)	FXSTS 1993, FXSTS 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
3	6099	WASHER	FXSTS 1993, FXSTS 1994
4	6409	WASHER (2)	FXSTS 1993, FXSTS 1994
5	7531	LOCKNUT (2)	FXSTS 1993, FXSTS 1994
6	8505	RIVET	FXSTS 1993, FXSTS 1994
7	11244	SPACER, rubber (2)	FXSTS 1993, FXSTS 1994
8	33714-90B	BEARING	FXSTS 1993, FXSTS 1994
9	33720-93	BEARING (4)	FXSTS 1993, FXSTS 1994
10	41042-93	PIVOT LINK, w/ 33720-93 (2)	FXSTS 1993, FXSTS 1994
11	45085-88A	CABLE GUIDE	FXSTS 1993, FXSTS 1994
12	59043-93	INSERT, fender (2)	FXSTS 1993, FXSTS 1994
13	59176-93	FENDER, prime	FXSTS 1993, FXSTS 1994

REAR FENDER

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Refer to Painted Parts Book for painted part numbers.			
1	2604	SCREW (2)	FLSTC 1993, FLSTC 1994
2	7118	LOCKWASHER (2)	FLSTC 1993, FLSTC 1994
3	7629	NUT (2)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
4	8483A	POP RIVET (2)	ALL
5	11430	GROMMET	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
6	11437	GROMMET	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
7	38712-68	CLAMP	FLSTF 1993, FLSTF 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
8	53439-79	BULB, fender tip lamp	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
9	59144-87A	FENDER, prime	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
10	59255-91	REFLECTOR, red (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
	59287-92	REFLECTOR, right (red)	FLSTN 1993, FLSTN 1994
	59288-92	REFLECTOR, left (red)	FLSTN 1993, FLSTN 1994
11	59596-89	FENDER, prime	FLSTF 1993, FLSTF 1994
12	59648-84A	DEBRIS DEFLECTOR, upper	ALL
13	59658-79A	LAMP ASSEMBLY, fender tip	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
14	59914-86A	FENDER, prime	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
15	68046-79	LENS, rear fender lamp	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
16	68047-79	GASKET, rear fender lamp	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
17	71795-63A	CLAMP	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
INTERNATIONAL MODELS ONLY			
18	59251-90	REFLECTOR ASSEMBLY, rear (red) w/ 59259-90 (not shown)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
19	59254-91	REFLECTOR, amber (2)	FLSTF 1993, FLSTF 1994, FXSTS 1993, FXSTS 1994
	59259-90	REFLECTOR, red	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
	59289-92	REFLECTOR, right, (amber)	FLSTN 1993, FLSTN 1994
	59290-92	REFLECTOR, left, (amber)	FLSTN 1993, FLSTN 1994

LICENSE PLATE BRACKETS

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2773	SCREW (3)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
2	5403B	BOLT	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
3	5465	BOLT (2)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
4	6703	WASHER	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
5	6716	WASHER (2)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
6	7624	LOCKNUT (2)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
7	7792	NUT (4)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
8	8483A	POP RIVET (2)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
9	52092-77	FOAM TAPE	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
10	59626-84	LICENSE PLATE BRACKET ASSEMBLY	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
11	59971-80	SPLASH SHIELD, rubber	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
12	59983-75	LICENSE PLATE BRACKET ASSEMBLY, w/ 10 & 15	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
13	59984-73	BRACKET	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
14	59986-75	SUPPORT	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
15	59988-72A	REFLECTOR	ALL
16	59993-80B	LICENSE PLATE BRACKET ASSEMBLY	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
17	60001-55	CLAMP	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
18	60005-77	CLAMP	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
19	61648-85	MOULDING (2)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
INTERNATIONAL MODELS ONLY			
20	59262-90B	REFLECTOR, rear (red) (HDI)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994

REAR FENDER SUPPORTS

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2005	SCREW (2)	ALL
2	94605-98	SCREW (4)	ALL
3	4716W	SCREW (4)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994
3	4716W	SCREW (6)	FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
4	4721	BOLT (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994
5	6379W	WASHER (2)	FLSTN 1993, FLSTN 1994
5	6379W	WASHER (4)	FLSTC 1993, FLSTC 1994
5	6379W	WASHER (6)	FLSTF 1993, FLSTF 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
6	6701	WASHER (2)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
6	6701	WASHER (4)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
7	7643W	JAMNUT (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994
8	7680W	ACORN NUT (2)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
8	7680W	ACORN NUT (4)	FLSTF 1993, FLSTF 1994
8	7680W	ACORN NUT (6)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
9	7775	LOCKNUT (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
10	59954-86A	SUPPORT, left (chrome)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
	59969-86A	SUPPORT, left (chrome)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
11	59955-86A	SUPPORT, right (chrome)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
	59964-86A	SUPPORT, right (chrome)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
INTERNATIONAL MODELS ONLY			
12	59964-86A	SUPPORT, right (chrome)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
13	59969-86A	SUPPORT, left (chrome)	ALL

PRIMARY HOUSING


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	375	PIN	ALL
2	739A	PLUG, magnetic	ALL
3	858A	BOLT (4)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
4	940	SCREW (3)	ALL
5	941	SCREW (4)	ALL
6	2818	BOLT (4)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
7	2871W	BOLT (4)	ALL
8	4068A	BOLT (4)	ALL
9	4740A	SCREW (7)	ALL
10	4820A	SCREW (5)	ALL
11	6016	WASHER (2)	ALL
12	6099	WASHER (7)	ALL
13	9135	BEARING	ALL
14	11147B	O-RING, housing cover	ALL
15	12052A	OIL SEAL	ALL
16	12053A	OIL SEAL	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
	12066A	OIL SEAL	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
17	60668-84B	COVER, clutch (chrome)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	25416-70A	O-RING, clutch cover	ALL
19	31433-84A	WASHER, nylon (3)	ALL
20	33318-85	LOCKING TAB (6)	ALL
21	33445-89	BUSHING	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
	33445-94A	BUSHING	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
22	33446-89	BUSHING	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
	33446-94A	BUSHING	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
23	50100-70	BUMPER, jiffy stand	ALL
24	60572-86	COVER, inspection (chrome)	ALL
25	60539-94B	GASKET, primary cover	ALL
26	60543-89	COVER ASSEMBLY, primary (chrome)	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
	60543-94	COVER ASSEMBLY, primary (chrome)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
27	60567-90C	GASKET, inspection cover	ALL
28	60630-94B	PRIMARY HOUSING ASSEMBLY (black wrinkle)	ALL
29	60678-85	RETAINING RING (2)	ALL

FUEL TANK

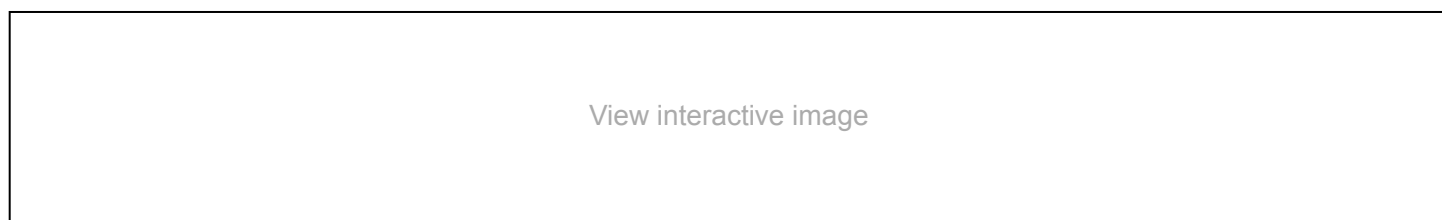

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
-----------	----------	-------------	----------

NOTE: Refer to Painted Parts Book for painted part numbers.

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	924	SCREW	FLSTC 1993, FLSTC 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
2	3445	BOLT (4)	ALL
3	3419	BOLT	ALL
4	3987	BOLT (2)	ALL
5	4014W	BOLT (2)	ALL
6	5775	WASHER (2)	ALL
7	6365	WASHER (4)	ALL
8	6645	WASHER (6)	ALL
9	7041	LOCKWASHER (2)	ALL
10	8108	SPEEDNUT	FLSTC 1993, FLSTC 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
11	8476	RIVET	ALL
12	9890	CLIP, vapor valve	ALL
13	10014	CLAMP, fuel hose (3)	ALL
14	10040	CLIP	FLSTF 1993, FLSTF 1994
15	11447	GROMMET, fuel tank mounting (6)	ALL
16	11717	FASTENING GROMMET (2)	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
17	27093-92A	HOSE, tank to vapor valve	ALL
18	27102-92	HOSE, valve to air	ALL
19	61290-97	FUEL TANK, right-3.5 gal. (prime)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FXSTS 1993, FXSTS 1994
	61291-97	FUEL TANK, right-5 gal. (prime)	FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994
20	61272-92C	CAP, fuel filler, right	ALL
21	61103-83B	CAP, fuel filler, left	ALL
22	61109-85D	GASKET (2)	ALL
23	61155-84B	TRIM, fuel tank	FLSTC 1993, FLSTC 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
24	61157-87	PAD, protective (2)	ALL
25	61165-89B	TRIM PANEL	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
26	61131-92	CONNECTION, ventline	ALL
27	61426-85C	FUEL TANK, left, 3.5 gal. (prime)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FXSTS 1993, FXSTS 1994
	61228-84C	FUEL TANK, left, 5 gal. (prime)	FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994
28	61640-84	FOAM STRIP (2)	ALL
29	61641-84	SPACER, trim	FLSTC 1993, FLSTC 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
30	61660-85	BRACKET, fuel tank mounting, upper	ALL
31	61667-90A	BRACKET, fuel tank mounting, lower	ALL
32	62043-81A	SPACER	ALL
33	62150-85	VAPOR VALVE	ALL
34	62161-02	NUT, fuel valve	ALL
35	62166-81A	FILTER, fuel valve	ALL
36	62167-81	FUEL VALVE	ALL
37	62172-02	GASKET, fuel valve	ALL
NOTE: Hose or insulator is sold in bulk length under the following part numbers. Cut to length.			
38	63501-68B	HOSE, 1/4 inch I.D. x 5/8 inch O.D. (rubber) (25 ft. long)	ALL
39	62555-95	INSULATOR, 1/2 inch I.D. (nylon) (8 ft. long)	ALL

FUEL TANK TRIM

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	14228-91	DECAL, silver, gray and orange (2)	FLSTF 1993, FLSTF 1994
	14287-94	DECAL, blue, aqua and silver (2)	FLSTF 1994
	14388-93	DECAL, blue, meteor and silver (2)	FLSTF 1993, FLSTF 1994
	14390-93	DECAL, red, meteor, gold, silver and orange (2)	FLSTF 1993, FLSTF 1994
2	61366-92	TRIM, right (black) (not illustrated)	FLSTN 1993
	61366-94	TRIM, right (white) (not illustrated)	FLSTN 1994
	61367-92	TRIM, left (black) (not illustrated)	FLSTN 1993
	61367-94	TRIM, left (white) (not illustrated)	FLSTN 1994
3	14335-90	DECAL, left (gold, red and orange) (not illustrated)	FLSTC 1993, FLSTC 1994
	14338-93	DECAL, right (pale gold, dark wineberry and red) (not illustrated)	FLSTC 1993, FLSTC 1994
	14339-90	DECAL, right (gold, red and orange) (not illustrated)	FLSTC 1993, FLSTC 1994
	14341-93	DECAL, left (pale gold, dark wineberry and red) (not illustrated)	FLSTC 1993, FLSTC 1994
	14386-93	DECAL, left (sky blue, dark aqua blue and red) (not illustrated)	FLSTC 1993, FLSTC 1994
	14387-93	DECAL, right (sky blue, dark aqua blue and red) (not illustrated)	FLSTC 1993, FLSTC 1994
4	14353-92	DECAL, left (black and red)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
	14354-92	DECAL, right (black and red)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
	14355-92	DECAL, left (black and orange)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
	14356-92	DECAL, right (black and orange)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
	14359-92	DECAL, left (dark candy sapphire and silver)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
	14360-92	DECAL, right (dark candy sapphire and silver)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	14384-93	DECAL, left (aqua blue and meteor)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
	14385-93	DECAL, right (aqua blue and meteor)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
	14397-93	DECAL, right (pale gold and olive drab)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
	14398-93	DECAL, right (pale gold and olive drab)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994

OIL TANK

[View interactive image](#)

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3546	BOLT (2)	ALL
2	3987	BOLT	ALL
3	7686	LOCKNUT (5)	ALL
4	7531	LOCKNUT	ALL
5	9969	CLAMP, drain hose	ALL
6	10006	CABLE STRAP, oil hoses (as required)	ALL
7	10080	CLAMP (6)	ALL
8	10086	CLAMP, drain hose (3)	ALL
9	62498-91	OIL TANK, chrome	ALL
10	62563-65	RUBBER MOUNT (4)	ALL
11	62634-84A	FILLER CAP, w/ dipstick	ALL
12	62704-84A	BRACKET, rear	ALL
13	62707-84	BRACKET, front, tank to frame	ALL
14	62725-90	PLUG, oil drain	ALL
15	63515-92	HOSE, tank to pump	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
16	63553-91	HOSE, tank drain	ALL
17	63572-86	HOSE, tank vent	ALL
18	63556-87	HOSE, tank vent	ALL
19	15368-01A	WARNING LABEL	ALL
20	75101-82	SPACER, rubber	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
NOTE: Hose or insulator is sold in bulk length under the following part numbers. Cut to length.			
21	63497-89	INSULATOR, 5/8 I.D. (nylon) (8 ft. long) (not shown)	ALL

OIL FILTERS & MOUNTS

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3210A	SCREW, socket head (2)	ALL
2	6771A	WASHER (2)	ALL
3	10080	CLAMP (4)	ALL
4	10112	CLAMP	ALL
5	26352-95A	ADAPTOR, oil filter	ALL
6	26378-92A	OIL FILTER MOUNT, black	ALL
7	33519-92A	TUBE, return	ALL
8	33520-92	TUBE, feed	ALL
9	63523-92A	FITTING, straight, w/ 10	ALL
10	63525-92	SEAL	ALL
11	63528-92	SEAL & FERRULE (2)	ALL
12	63530-92	FITTING, male nut (2)	ALL
13	63556-92	HOSE, filter line to tank	ALL
14	63796-77A	OIL FILTER, chrome	ALL

EXHAUST SYSTEM (1 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2818	BOLT (2)	ALL
2	4017	BOLT (4)	ALL
3	4722	BOLT (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
4	6702	WASHER (6)	ALL
5	7038	LOCKWASHER (2)	ALL
6	7041	LOCKWASHER (4)	ALL
7	7507	ACORN NUT (not shown)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
8	7531	LOCKNUT (2)	ALL
9	7593	NUT (4)	ALL
10	7748W	NUT (not shown)	FLSTC 1993, FLSTC 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
11	9955	CLAMP (6)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
11	9955	CLAMP (5)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
12	10074	CLAMP, shield (front)	FLSTC 1993, FLSTC 1994
12	10074	CLAMP, shield (2)	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
13	65276-62	CLAMP, muffler (2)	ALL
14	65324-83B	GASKET, exhaust port (2)	ALL
15	65325-83A	RETAINING RING, exhaust gasket (2)	ALL
16	65328-83A	CLAMP, exhaust manifold (2)	ALL
17	65380-85	MUFFLER, rear	FXSTS 1993, FXSTS 1994
	65380-90	MUFFLER (rear)	FXSTC 1993, FXSTC 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	65380-90	MUFFLER (2)	FLSTF 1993, FLSTF 1994
	65381-89A	MUFFLER (rear - fishtail)	FLSTC 1993, FLSTC 1994
	65381-89A	MUFFLER (rear - fishtail) (2)	FLSTN 1993, FLSTN 1994
18	65401-86	EXHAUST PIPE, front	FLSTC 1993, FLSTC 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
	65483-89	EXHAUST PIPE	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
19	65410-83	SHIELD, crossover pipe	FLSTC 1993, FLSTC 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
	65475-89	SHIELD, crossover pipe	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
20	65411-80A	CLAMP, crossover pipe (not shown)	FLSTC 1993, FLSTC 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
21	65432-89	SHIELD, front muffler	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
	65447-86	SHIELD, front muffler	FLSTC 1993, FLSTC 1994
22	65459-84A	SUPPORT TUBE	FLSTC 1993, FLSTC 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
23	65464-89	SHIELD, rear exhaust & muffler	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
24	65487-89	EXHAUST PIPE, rear	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
	65603-86	EXHAUST PIPE, rear	FLSTC 1993, FLSTC 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994

EXHAUST SYSTEM (2 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
25	65492-91	SUPPORT TUBE	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
26	65522-91	MUFFLER SUPPORT, rear	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
27	65689-89	MUFFLER (front - fishtail)	FLSTC 1993, FLSTC 1994
	65699-86	MUFFLER, front	FLSTC 1993, FLSTC 1994, FXSTS 1993, FXSTS 1994
	65699-90	MUFFLER, front	FXSTC 1993, FXSTC 1994
28	65702-86	SHIELD, rear exhaust	FLSTC 1993, FLSTC 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
29	65732-86	SHIELD, front exhaust	ALL
30	65781-82	GASKET	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
31	65782-82	WASHER, exhaust	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
INTERNATIONAL MODELS ONLY			
32	65382-89C	MUFFLER, rear (HDI)	FLSTC 1993, FLSTC 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
32	65382-89C	MUFFLER, rear (HDI) (2)	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
33	65395-89B	MUFFLER, front (HDI only)	FLSTC 1993, FLSTC 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
	65866-91	MUFFLER, front (catalytic) (Swiss)	FLSTC 1993, FLSTC 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
34	52103-31	SPACER, muffler extension (HDI) (not shown)	ALL
35	65190-84	EXTENSION, front muffler (HDI) (not shown)	ALL
36	65714-91	TAPE, catalytic muffler (Swiss) (not shown) (2)	FLSTC 1993, FLSTC 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
36	65714-91	TAPE, catalytic muffler (Swiss) (not shown) (4)	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
36	65716-91	TAPE, catalytic muffler (Swiss (not shown)) (2)	FLSTC 1993, FLSTC 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
37	65813-91	HEAT SHIELD (Swiss) (not shown)	FLSTC 1993, FLSTC 1994
37	65813-91	HEAT SHIELD (Swiss) (not shown) (2)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	65814-91	HEAT SHIELD (Swiss) (not shown) (2)	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
38	65821-90	EXHAUST SHIELD KIT, Germany (not shown)	FLSTF 1993, FLSTF 1994
39	65867-91	MUFFLER, rear (catalytic) (Swiss) (not shown)	FLSTC 1993, FLSTC 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
39	65867-91	MUFFLER, rear (catalytic) (Swiss) (not shown) (2)	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994

BATTERY

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	10067	CLAMP (not shown)	ALL
2	65989-90B	BATTERY	ALL
3	66000-80	BATTERY TERMINAL KIT	ALL
4	15368-01A	WARNING LABEL	ALL
5	66105-77	BATTERY STRAP (early model year)	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
6	66109-93	BATTERY STRAP, front (late model year)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
7	66111-93	BATTERY STRAP, rear (late model year)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
8	66210-85B	CUSHION	ALL
9	66308-80	CUSHION	ALL
10	75101-82	SPACER (early model year)	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993

INSTRUMENTS (1 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2567	SCREW (2)	ALL
2	2574WA	SCREW (6)	ALL
3	3419	BOLT (3)	ALL
4	4739A	BOLT	ALL
5	6198	WASHER (4)	ALL
6	67212-93	RESET KNOB KIT, w/ 24 & 26	ALL
7	7041	LOCKWASHER	ALL
8	7229W	LOCKWASHER (3)	ALL
9	7232	LOCKWASHER	ALL
10	7549A	ACORN NUT	ALL
11	7763W	JAMNUT	ALL
12	8155	SPEED NUT (2)	ALL
13	10065	CABLE STRAP (6)	ALL
14	11430	GROMMET, instrument panel (2)	ALL
15	62043-81A	SPACER, panel mounting	ALL
16	67024-84A	CABLE ASSEMBLY, speedometer	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
	67079-86A	CABLE ASSEMBLY, speedometer	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
17	67011-91	SPEEDOMETER, mph	ALL
18	67067-76	ISOLATOR STRIP, black	ALL
19	67068-76	PIN, speedometer mounting (2)	ALL
20	67069-76	RETAINING RING, speedometer mounting (2)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
21	67070-76	GROMMET, speedometer mounting (2)	ALL
22	67098-87	SEAL, drive unit	FXSTS 1993, FXSTS 1994
	67118-87	SEAL, drive unit	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994
23	67115-91	SUPPORT, speedometer	ALL
24	67117-85	SCREW	ALL
25	67120-84B	DRIVE UNIT, speedometer	FXSTC 1993, FXSTC 1994
	67125-86A	DRIVE UNIT, speedometer	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
	67166-88	DRIVE UNIT, speedometer	FXSTS 1993, FXSTS 1994

INSTRUMENTS (2 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
26	67215-89	KNOB, odometer reset	ALL
27	68462-64	BULB, indicator lamps (4)	ALL
28	70579-65	INSULATING BOOT	ALL
29	70936-91B	INSTRUMENT PANEL BASE	ALL
30	70939-84A	BRACKET, circuit breakers (use 70936-91B)	ALL
31	70941-84A	SPACER, instrument panel mounting (2)	ALL
32	71090-64	BULB, speedometer (2)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	71092-68A	BULB, high beam	ALL
33	71300-79	PLATE, ignition switch	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
	71300-94	PLATE, ignition switch	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
34	71134-68	SUPPORT, indicator lamp lens	ALL
35	71141-68	RETAINER, indicator lamp lens	ALL
36	71143-90	LENS, neutral (green)	ALL
37	71144-75A	LENS, high beam (blue)	ALL
38	71145-75	LENS, oil pressure (red)	ALL
39	71158-86B	SOCKET KIT, speedometer lamp	ALL
40	71182-47A	WASHER, signal lamp socket (4)	ALL
41	71241-91	COVER, instrument panel (chrome)	ALL
42	71295-68	GASKET, instrument panel cover (2)	ALL
43	71297-68	CLIP, lens support (2)	ALL
INTERNATIONAL MODELS ONLY			
44	67030-91A	SPEEDOMETER, kph (HDI)	ALL
45	71150-92	LENS, neutral (green)	ALL
46	71151-92	LENS, high beam (blue)	ALL
47	71152-92	LENS, oil pressure (red)	ALL

FRONT TURN SIGNALS

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	7127	LOCKWASHER (3)	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
2	7744	JAMNUT (2)	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
3	10006	CABLE STRAP (2)	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
	10065	CABLE STRAP	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
4	67822-88	BALL STUD (2)	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
5	67827-88A	CLAMP, ball stud (2)	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
6	67828-88A	RETAINER, right	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
7	67829-88	BALL RECEPTACLE, left	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
8	68168-89A	BULB, front turn signals (2)	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
9	68406-86C	LAMP, w/ wire, front (2)	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
10	68452-86	SCREW, turn signal lens (4)	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
11	72039-71A	PIN, single socket (2)	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
INTERNATIONAL MODELS ONLY			
12	68408-86D	LAMP, w/ wire, front (HDI)	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
13	68163-84	BULB (HDI) (2)	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
14	68566-90	LENS, turn signal (amber) (HDI) (2)	FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994

TAIL LAMP & REAR TURN SIGNALS

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2692WB	SCREW (4)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
2	2698A	SCREW (2)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
3	2904A	SCREW (2)	ALL
4	3576	SCREW (2)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
5	7042	LOCKWASHER (2)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
6	7045	LOCKWASHER (2)	ALL
7	7101	LOCKWASHER (2)	FLSTF 1993, FLSTF 1994
8	7501	SPEED NUT (2)	ALL
9	7800W	NUT (2)	FLSTF 1993, FLSTF 1994
10	10065	CABLE STRAP	ALL
11	10033	CLIP	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
12	59959-86	SPACER	ALL
13	68008-73B	TAIL LAMP ASSEMBLY	ALL
14	68026-73	SCREW, tail lamp (2)	ALL
15	68027-90	GASKET, tail lamp lens	ALL
16	68033-90	LENS, tail lamp (red)	ALL
17	68123-73	GASKET, tail lamp housing	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994
18	68168-89A	BULB, tail lamp	ALL
19	68402-86	LAMP, w/ wire, rear (amber) (2)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
20	68407-86	LAMP, w/ wire, rear (amber) (2)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	68410-87B	LAMP, w/ wire, rear (amber) (2)	FLSTF 1993, FLSTF 1994
21	68440-86	LENS, turn signal (2)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
22	68452-86	SCREW (4)	ALL
23	68457-86	LENS, turn signal	FLSTF 1993, FLSTF 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
24	68480-73	SUPPORT, rear lamp mounting (2)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
25	68493-90	SUPPORT, rear lamp mounting	FLSTF 1993, FLSTF 1994
26	68510-74C	BRACKET, rear turn signal	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
27	68572-64B	BULB, rear turn signal (2)	ALL
28	72039-71A	PIN, single socket (2)	ALL
INTERNATIONAL MODELS ONLY			
29	59710-84	COVER, rear turn signal hole (HDI) (not shown) (2)	FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
30	68010-90	TAIL LAMP ASSEMBLY (HDI)	ALL
31	68036-91	REFLECTOR, tail lamp (HDI)	ALL
32	68032-90	LENS, tail lamp (red) (HDI)	ALL
33	68169-90A	BULB, tail lamp (HDI)	ALL
34	68392-91A	LAMP, w/wire, rear (amber) (HDI) (2)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
35	68403-86A	LAMP, w/wire, rear (amber) (HDI) (2)	FLSTF 1993, FLSTF 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
36	68506-92	LENS, turn signal (amber) (HDI) (2)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
37	68507-90	LENS, turn signal (amber) (HDI) (2)	FLSTF 1993, FLSTF 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
38	68163-84	BULB, rear turn signal (HDI)	ALL

HORN

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3588	SCREW (2)	ALL
2	7495	NUT	ALL
3	7507	ACORN NUT	ALL
4	7576	NUT, flange	ALL
5	8108	SPEEDNUT, push (2)	ALL
6	10006	CABLE STRAP	ALL
7	69012-93A	COVER, horn (chrome)	ALL
8	69060-90H	HORN ASSEMBLY	ALL
9	69062-91	CLAMP	ALL
10	69120-91	BRACKET, horn	ALL
11	69125-65	MOUNT, horn (rubber)	ALL
12	89579-91	CAP, protective	ALL

WIRING


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2582	SCREW, headlamp ground (not shown)	ALL
	4091	SCREW, handlebar ground (not shown) (2)	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
2	7220	LOCKWASHER (not shown) (2)	ALL
2	7230	LOCKWASHER, battery ground (not shown)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
3	70060-92B	CABLE ASSEMBLY, battery negative	ALL
4	70078-91A	CABLE ASSEMBLY, battery positive	ALL
5	70191-73A	CABLE, ground	ALL
6	70216-93B	MAIN WIRING HARNESS (not shown)	ALL
7	70551-69	CONDUIT, 1/8 inch I.D.-htm. (black)	ALL
	70552-69	CONDUIT, 3/8 inch I.D. (black)	ALL
	70553-69	CONDUIT, 7/16 inch I.D. (black)	ALL
	70554-69	CONDUIT, 1/4 inch I.D. (black)	ALL
	70555-69	CONDUIT, 1/4 inch I.D.-htm. (black)	ALL
	70556-71	CONDUIT, 5/16 inch I.D. (black)	ALL
	70558-71	CONDUIT, 1/2 inch I.D. (black)	ALL
	70559-71	CONDUIT, 1/8 inch I.D. (black)	ALL
NOTE: Hose or insulator is sold in bulk length under the following part numbers. Cut to length.			
8	62555-95	INSULATOR, 1/2 inch I.D. (nylon) (8 ft. long)	ALL
INTERNATIONAL MODELS ONLY			
9	70321-89	MAIN WIRING HARNESS (HDI) (not shown)	FLSTC 1993, FLSTC 1994

MISCELLANEOUS ELECTRICAL

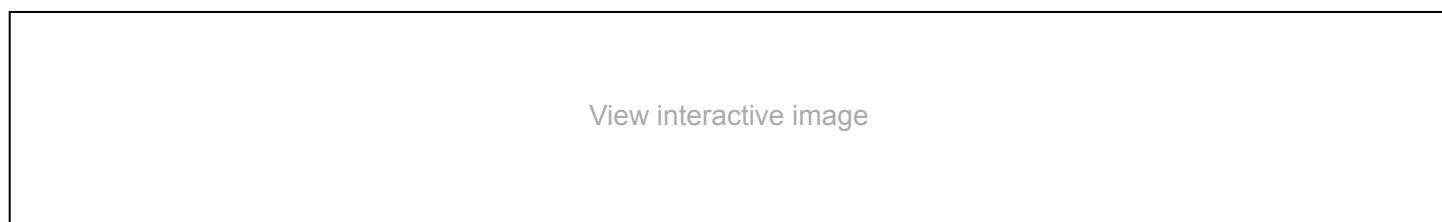

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	9852	TERMINAL, 45 degree spade	ALL
2	9856	TERMINAL, ring type, #6 hole	ALL
	9857	TERMINAL, ring type, #10 hole	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	9860	TERMINAL, ring type, 3/8 inch diameter hole	ALL
3	9862	TERMINAL, ring type, #10 hole	ALL
	9863	TERMINAL, ring type, 1/4 diameter hole	ALL
	9864	TERMINAL, ring type, 5/16 inch diameter hole	ALL
4	9866	TERMINAL, ring type, #10 hole	ALL
5	9871	TERMINAL, ring type, #6 hole	ALL
6	9875	TERMINAL, female spade, 5/16 inch slot	ALL
7	9898	TERMINAL, female flag, 14-16 wire	ALL
8	9900	TERMINAL, connector	ALL
9	9905	TERMINAL, cap type, 1/4 inch diameter	ALL
10	10006	CABLE STRAP, black	ALL
	10039	CABLE STRAP	ALL
	10065	CABLE STRAP	ALL
11	10073	CABLE STRAP	ALL
12	31998-91A	INSULATOR, receptacle housing (module conn.)	ALL
13	56073-83	RETAINER	ALL
14	70005-70	CABLE STRAP	ALL
15	70043-81	LABEL, battery-positive	ALL
16	70293-87A	CONNECTOR, ten socket (2)	ALL
17	70578-89	BOOT, insulating	ALL
	70579-65	BOOT, insulating	ALL
18	70585-93	CONNECTOR, splice, 18-22 gauge (red)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
	70586-93	CONNECTOR, splice, 14-16 gauge (blue)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
	70587-93	CONNECTOR, splice, 10-12 gauge (yellow)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
19	72034-71	CONNECTOR, 2 pin	FLSTC 1993, FLSTC 1994
20	72035-71	CONNECTOR, 2 socket	FLSTC 1993, FLSTC 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
21	72037-71	CONNECTOR, 6 socket	ALL
22	72038-71A	SOCKET, single pin	ALL
23	72039-71A	PIN, single socket	ALL
24	72043-71A	CONNECTOR, single pin	ALL
25	72044-71A	CONNECTOR, single socket	ALL
26	72046-79	CONNECTOR, spade terminals	ALL
27	72051-77A	CONNECTOR, 3 socket	ALL
28	72275-74	CONNECTOR TAB, 2 terminal	FLSTC 1993, FLSTC 1994
29	72276-74	CONNECTOR, 12 pin	FLSTC 1993, FLSTC 1994
30	72277-74	CONNECTOR TAB, 3 terminal	FLSTC 1993, FLSTC 1994
31	72278-74A	CONNECTOR, 12 socket	ALL
32	74412-91	BOOT, module harness	ALL
33	74521-77A	CONNECTOR, pin and socket	ALL
34	74536-77A	SOCKET, single pin	ALL
35	74539-77A	PIN, single socket	ALL

HANDLEBAR SWITCHES

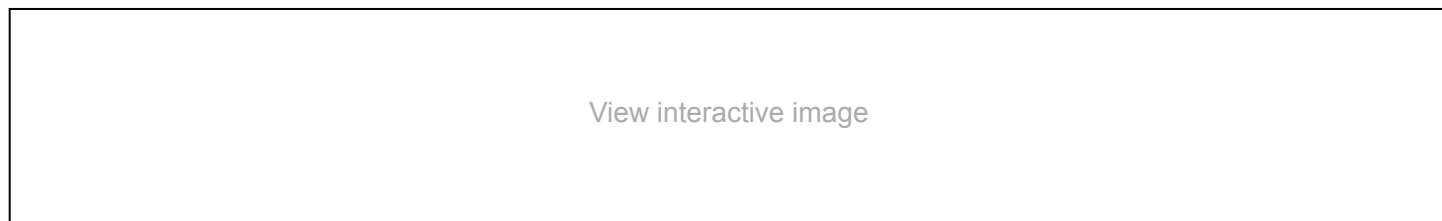

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2907	SCREW (4)	ALL
1	2907	SCREW (7)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	9875	TERMINAL, female spade (2)	ALL
3	9898	TERMINAL, flag	ALL
4	10065	CABLE STRAP (2)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994
5	11155	RETAINING RING	ALL
6	56073-83	RETAINER, wiring harness (4)	ALL
7	56394-74	SPRING, adjusting screw	ALL
8	56396-74A	SPRING, throttle grip	ALL
9	56397-74C	ADJUSTING SCREW KIT, w/ 5, 7 & 10	ALL
10	56402-83A	SCREW, throttle adjusting	ALL
11	70047-82	WIRE ASSEMBLY, 5 inches long (white)	ALL
12	70082-82	WIRE ASSEMBLY, 3 inches long (orange)	ALL
13	70218-87A	SWITCH ASSEMBLY KIT, complete, left	ALL
14	70219-87	SWITCH ASSEMBLY KIT, complete, right	ALL
15	71557-93	PLATE, switch (2)	ALL
16	71563-82A	HOUSING, lower, right	ALL
17	71564-82A	HOUSING, upper, right	ALL
18	71567-82	HOUSING, upper, left	ALL
19	71568-82A	HOUSING, lower, left	ALL
20	71589-92	SWITCH ASSEMBLY, engine stop/start	ALL
21	71590-92A	STOPLAMP SWITCH	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
22	71591-92	SWITCH ASSEMBLY, right turn signal	ALL
23	71597-92	SWITCH ASSEMBLY, dimmer and horn	ALL
24	71598-92	SWITCH ASSEMBLY, left turn signal	ALL
25	72038-71A	SOCKET, single pin	ALL
26	72039-71A	PIN, single socket (14)	ALL
27	72043-71A	CONNECTOR, single pin	ALL

SWITCHES & CIRCUIT BREAKERS

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2567	SCREW, sems	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
2	2574WA	SCREW (6)	ALL
3	2594A	SCREW (4)	ALL
4	3993	BOLT	ALL
5	6035A	WASHER, rubber	ALL
6	6036	WASHER	ALL
7	6047	WASHER (3)	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
7	6047	WASHER (late model year) (4)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
8	6199	WASHER	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
9	7015	LOCKWASHER (4)	ALL
10	7602	ACORN NUT (4)	ALL
11	7629	NUT (8)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
12	8483A	RIVET, circuit breakers (3)	ALL
13	9952	CLIP, circuit breaker (4)	ALL
14	10134	CLIP	ALL
15	31504-91B	STARTER RELAY (late model year)	FLSTC 1993, FLSTC 1994, FLSTF 1993, FLSTF 1994, FLSTN 1993, FLSTN 1994, FXSTC 1993, FXSTC 1994, FXSTS 1993, FXSTS 1994
	31506-79C	STARTER RELAY (early model year)	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
16	33043-80	WASHER, neutral indicator switch	ALL
17	33900-59C	SWITCH, neutral indicator	ALL
18	68537-89G	TURN SIGNAL CANCELLER	ALL
19	71501-73A	IGNITION SWITCH	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
	71501-94	IGNITION SWITCH	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
20	71506-84	SWITCH COVER	FLSTC 1993, FLSTF 1993, FLSTN 1993, FXSTC 1993, FXSTS 1993
	71506-94	SWITCH COVER	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
21	71541-84	PLATE, switch mounting	ALL
22	71560-84	CONTACT ROLLER	ALL
23	71580-84	SWITCH LOCK & KEY	ALL
24	71583-85	KEYSET, ignition switch (Specify key code)	ALL
25	71600-93	SPLASH COVER	ALL
26	72023-51E	STOPLAMP SWITCH, rear	ALL
27	74589-73	CIRCUIT BREAKER, 15 amp (3)	ALL
	74599-77B	CIRCUIT BREAKER, 30 amp, battery	ALL

SADDLEBAGS - FLSTC & FLSTN

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2602A	SCREW (6)	FLSTC 1993, FLSTC 1994
2	2882W	SCREW (6)	FLSTC 1993
3	3549A	SCREW (2)	FLSTC 1994
4	4017	BOLT (4)	FLSTC 1994
5	4719W	BOLT (4)	FLSTN 1993, FLSTN 1994
6	5787	T-SPACER (4)	FLSTC 1994
7	6019	WASHER (4)	FLSTN 1993, FLSTN 1994
8	6235	WASHER (4)	FLSTC 1993
8	6235	WASHER (6)	FLSTC 1994
9	6379W	WASHER (4)	FLSTC 1993
10	6701	WASHER (4)	FLSTC 1993, FLSTC 1994, FLSTN 1993, FLSTN 1994
11	6702	WASHER (2)	FLSTC 1994
12	6788	WASHER (4)	FLSTC 1994
13	7041	LOCKWASHER (6)	FLSTC 1993
14	7507	ACORN NUT (2)	FLSTC 1994
15	7601	LOCKNUT (4)	FLSTN 1993, FLSTN 1994
16	7778	LOCKNUT (4)	FLSTC 1993, FLSTC 1994
17	7783	NUT (4)	FLSTN 1993, FLSTN 1994
18	7868	T-SPACER (6)	FLSTC 1994
19	8099	WELL NUT (6)	FLSTC 1993
20	11473	GROMMET (10)	FLSTC 1994
21	51923-86	COTTER CIRCLE (2)	FLSTC 1993, FLSTC 1994
22	90346-90	SUPPORT, lower, front (2)	FLSTC 1993
	90346-94	SUPPORT, lower, front (2)	FLSTC 1994
23	90361-90	SUPPORT, upper (4)	FLSTC 1993

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
24	90361-94A	SUPPORT, upper (4)	FLSTC 1994
25	90470-90	ORNAMENT, teardrop, right (3)	FLSTC 1993, FLSTC 1994
	90471-90	ORNAMENT, teardrop, left (3)	FLSTC 1993, FLSTC 1994
26	90473-94	ISOLATOR (2)	FLSTC 1994
27	90476-93	SADDLEBAG, left	FLSTC 1993, FLSTC 1994
	90477-93	SADDLEBAG, right	FLSTC 1993, FLSTC 1994
28	90785-90	SUPPORT, right	FLSTC 1993
	90785-94	SUPPORT, right	FLSTC 1994
	90787-90	SUPPORT, left	FLSTC 1993
	90787-94	SUPPORT, left	FLSTC 1994
29	90804-92	SADDLEBAG, right	FLSTN 1993
	90804-94	SADDLEBAG, right	FLSTN 1994
	90806-92	SADDLEBAG, left	FLSTN 1993
	90806-94	SADDLEBAG, left	FLSTN 1994
30	91791-87	SADDLEBAG SUPPORT, right	FLSTN 1993, FLSTN 1994
	91792-87	SADDLEBAG SUPPORT, left	FLSTN 1993, FLSTN 1994

MIRRORS

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	5774	SPACER (2)	ALL
2	7127	LOCKWASHER (2)	ALL
3	7736	ACORN NUT (2)	ALL
4	91875-88A	MIRROR KIT, short, right, convex	ALL
	91892-88A	MIRROR KIT, short, left, convex	ALL

CALIFORNIA EVAPORATIVE EMISSIONS KIT

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: These parts are required for motorcycles sold in the state of California.			
1	3574	SCREW (2)	ALL
2	8099	WELL NUT (2)	ALL
3	9988	CLAMP (not illustrated)	ALL
4	10039	CABLE STRAP	ALL
5	27042-84A	CANNISTER ASSEMBLY	ALL
6	27047-84B	CANNISTER BRACKET	ALL
7	28884-92	EVAP. TUBE ASSEMBLY (not illustrated)	ALL
8	29306-92	CONNECTOR, evap. (not illustrated)	ALL
9	67239-83	CLIP, cable guide (not illustrated)	ALL
10	70933-90	PROTECTIVE TAPE (not illustrated)	ALL
NOTE: Hose or insulator is sold in bulk length under the following part numbers. Cut to length.			
11	26571-89	HOSE, 7/32 inch I.D. x 7/16 inch O.D. (rubber) (10 ft. lg.)	ALL
12	27138-90	HOSE, 3/16 inch I.D. x 11/32 inch O.D. (rubber) (10 ft. lg.)	ALL

Hardware List

View interactive table

PART NO.	DESCRIPTION
1046	SCREW No. 8 X 5/16 fillister head, self-tapping
1357W	SCREW 1/4-20 X 1 Phillips oval countersink head (stainless)
1601	SCREW No. 8-32 X 1/2 Pozidriv flat countersink head (Grade 2)
1783C	SCREW 5/16-18 X 7/8 Pozidriv flat countersink head (Grade 2)
1795A	SCREW 1/4-20 X 3 socket head (Grade 8)
2005	SCREW 3/8-24 X 15/16 Pozidriv oval countersink head (Grade 2) (chrome)
2216W	SCREW No. 4-24 X 1/2 Phillips oval countersink head, self-tapping
2444	SCREW No. 12-24 X 7/8 TORX head, with lockpatch
2531	SCREW No. 4-40 X 5/16 Pozidriv pan head (Grade 2)

PART NO.	DESCRIPTION
2538	SCREW 1/4-20 X 1 Pozidriv pan head (Grade 2)
2567	SCREW No. 8-32 X 3/8 SEMS hex head, self-tapping
2574WA	SCREW No. 6-32 X 1/4 oval head, with lockwasher
2579A	SCREW No. 8-32 X 5/16 Pozidriv oval head
2582	SCREW 5/16-18 X 3/4 Pozidriv pan head (Grade 2)
2594A	SCREW No. 8-32 X 1/4 Pozidriv pan head, with lockwasher (Grade 2)
2602A	SCREW 1/4-20 X 1-1/4 pan head (Grade 2)
2604	SCREW No. 10-32 X 1/2 Pozidriv pan head (Grade 2)
2607	SCREW 1/4-20 X 3/4 Pozidriv pan head (Grade 2)
2611C	BOLT No. 10-32 X 3/4 hex head, with washer (Grade 5)
2614	BOLT 1/4-28 X 2 hex head (Grade 5)
2647B	SCREW No. 10-24 X 3/4 socket head, self-locking
2692WB	SCREW No. 10-24 X 1/2 socket fillister head (Grade 8)
2698A	SCREW 5/16-18 X 9/16 socket fillister head
2711	SCREW No. 4-40 X 3/8 pan head, self-tapping
2720	SCREW 10-24 X 1.0 TORX head, with lockpatch
2737	SCREW No. 4-40 X 1/4 Pozidriv pan head (Grade 2)
2739	SCREW 1/4-28 X 1/2 Phillips truss head, with lockwasher (chrome)
2773	SCREW 1/4-20 X 1/2 Pozidriv pan head (Grade 2)
2818	BOLT 5/16-18 X 1-1/2 hex head (Grade 5)
2823	SCREW 5/16-24 X 3/8 Pozidriv truss head, with lockpatch
2871W	BOLT 5/16-18 X 1-1/4 hex head (Grade 5)
2879W	BOLT 3/8-16 X 1 hex head (Grade 5)
2882W	SCREW 5/16-18 X 5/8 hex head (Grade 5)
2904A	SCREW 3/8-24 X 3/4 socket head
2907	SCREW M3 X .05 X 8mm cross recess pan head, self-tapping
2921	SCREW No. 12 X 5/8 TORX pan head
29269-83A	SCREW 15/16-18 X 5/8 hex button head, with lockpatch
31689-90	BOLT M4 X 0.7 X 12 hex head
3201WA	SCREW 5/16-18 X 1-1/4 knurled head
3210A	SCREW 5/16-18 X 1-1/4 knurled head

PART NO.	DESCRIPTION
3221	SCREW No. 4-16 X 3/16 (Grade 8)
3403	LOCKNUT M8-1.25 X 12mm flange (zinc)
3419	BOLT 5/16-18 X 2-1/4 hex head (Grade 5)
3427	BOLT 5/16-18 X 3-1/2 hex head (Grade 5)
3430	BOLT 5/16-24 X 5 hex head (Grade 5)
3440	BOLT 3/8-16 X 1/2 hex head (Grade 5)
3445	BOLT 5/16-18 X 9/16 hex head, with lockpatch (Grade 5)
3450	BOLT 1/2-13 X 2-1/2 hex head (Grade 5)
3471	BOLT 1/2-13 X 2-3/4 hex head (Grade 5)
3473	BOLT No. 10-32 X 1/2 hex head (Grade 2)
3480A	SCREW 1/4-20 X 1-3/4 knurled head (Grade 8)
3485A	SCREW 5/16-18 X 1-3/4 knurled head (Grade 8)
3500A	BOLT 5/16-18 X 2-3/4 hex head (Grade 8)
3501A	BOLT 5/16-18 X 2-1/2 hex head (Grade 8)
3504	BOLT 5/16-24 X 5-3/8 hex head (Grade 5)
3506	STUD 5/16-24 X 5-3/4 hex head (Grade 5)
35078-79	NUT 3/4-16 X .391 X 1
3509	BOLT 3/8-16 X 2-3/4 hex head (Grade 8)
3512	BOLT 3/8-24 X 3-1/4 hex head (chrome)
3514	SCREW No. 8-32 X 1 fillister head (Grade 5)
3516A	SCREW 1/2-20 X 1-1/4 knurled head (Grade 8)
35211-91B	NUT 1-1/2-24 X .350 X 1-7/8 hex head
3531A	SCREW 5/16-18 X 3/8 knurled head (Grade 8)
3533	SCREW 5/16-24 X 3/8 socket button head
3538	SCREW 5/16-24 X 1/2 socket button head
3540	SCREW 5/16-18 X 5/8 socket button head
3546	BOLT 5/16-18 X 5/8 hex flange head, with lockpatch
3549A	SCREW 1/2-20 X 1-1/2 knurled head
3560WA	BOLT No. 10-24 X 3/8
3561WC	BOLT No. 10-24 X 3/8
3562	SCREW No. 12 X 1/2 hex head, with washer, self-tapping

PART NO.	DESCRIPTION
3574	SCREW 1/4-20 X 3/4 flange
3576	SCREW 5/16-18 X 1/2 hex head, with washer.
3588	SCREW 1/4-20 X 1/2 hex flange head
3594	SCREW 1/4-20 X 5/8 knurled head (Grade 8)
3602A	SCREW No. 10-32 X 1/2 self-tapping
3655A	SCREW 5/16-18 X 7/8 TORX pan head, with lockpatch (Grade 8)
3691	SCREW No. 8-32 X 5/8 socket button head
3730A	BOLT 7/16-14 X 1-3/4 hex head (Grade 8)
3739	SCREW 1/4 X 5/8 hex head, with lockpatch, self-tapping
3769	BOLT 7/16-14 X 1-1/2 hex head (Grade 5)
3770	SCREW 1/4-20 X 7/8 12 pt. head (Grade 5)
3784	SET SCREW 1/2-20 X 1/2 socket head, with lockpatch
3787	BOLT 1/4-20 X 3/4 hex head (Grade 5)
3793A	SCREW 1/4-20 X 5/8 TORX head (Grade 8)
3849	SCREW 1/4-20 X 1-1/4 SEMS hex head (Grade 8)
3945	BOLT 3/8-24 X 2-1/4 hex head (Grade 5)
3953W	BOLT 5/16-24 X 1/2 hex head (Grade 5)
3960W	BOLT 5/16-24 X 1 hex head (Grade 5)
3974HW	BOLT 5/16-24 X 3/4 hex head (Grade 5)
3987	BOLT 5/16-18 X 3/4 hex head (Grade 5)
3991	BOLT 5/16-18 X 7/8 hex head (Grade 5)
3993	BOLT 1/4-20 X 1-1/4 hex head (Grade 5)
3996	BOLT 5/16-24 X 7/8 hex head (Grade 5)
4014W	BOLT 5/16-24 X 1-1/4 hex head (Grade 5)
4015	SCREW 1/4-20 X 7/8 socket button head (Grade 8)
4017	BOLT 5/16-18 X 1 hex head (Grade 5)
4036	BOLT 5/16-24 X 1-1/2 hex head (Grade 5)
4044	SCREW 3/8-16 X 1-1/4 socket button head
4068A	BOLT 5/16-18 X 2-1/2 hex head (Grade 5)
4074A	BOLT 1/2-13 X 2 hex head, shoulder
4091	SCREW No. 10-24 X 1/2 hex head, with washer, self-tapping (zinc)

PART NO.	DESCRIPTION
4163	SCREW 3/4-16 X 7/8 TORX button head (Grade 8)
4325	BOLT 1/4-20 X 5-1/2 hex head (Grade 8)
4326A	SCREW 5/16-18 X 2 socket head
4350A	SCREW 3/8-16 X 1-1/2 socket head
4352	SCREW 3/8-16 X 1-1/2 TORX, self-tapping (Grade 8)
43567-92	SCREW 3/8-16 X 1 TORX pan head, with lockpatch
4358A	SCREW No. 10-32 X 5.250 hex head (zinc plate)
4411	BOLT 3/8-24 X 1-3/4 hex head (Grade 5)
4416	BOLT 3/8-24 X 1 hex head (Grade 5)
4453	BOLT 1/4-20 X 7/8 hex head SPECIAL WITH TAPPED HOLE
45405-75A	SCREW M8 X 1.25 x 27 hex socket head
45717-63	LOCKWASHER 1 X 2 X 0.035 keyed special
45718-60	NUT 1-24 X 1.5 X 0.47
4713W	BOLT 3/8-16 X 3/4 hex head (Grade 5)
4716W	SCREW 3/8-16 X 1-1/4 hex head (Grade 5)
4717A	SCREW 1/4-20 X 2-1/4 knurled head, with lockpatch
4718A	SCREW 1/4-20 X 1-1/2 knurled head, with lockpatch
4719W	BOLT 3/8-16 X 2-1/2 hex head (Grade 5)
4721	BOLT 3/8-16 X 1-1/2 hex head (Grade 5)
4722	BOLT 3/8-16 X 2-1/4 hex head (Grade 5)
4724	BOLT 3/8-24 X 1-1/2 hex head (Grade 5)
4726	BOLT 7/16-20 X 1-1/2 hex head (Grade 5)
4729	BOLT 7/16-20 X 1-1/4 hex head (Grade 5)
4739A	BOLT 5/16-18 X 1-3/4 hex head
4740A	SCREW 1/4-20 X 1-1/4 knurled head, with lockpatch (Grade 8)
4741A	SCREW 1/4-20 X 1 socket head, with lockpatch
4742A	SCREW 1/4-20 X 2-1/4 knurled head, with lockpatch
4747	SCREW 3/8-16 X 2-5/8 knurled head (Grade 8)
4813A	SCREW 1/4-20 X 1-3/8 knurled head, with lockpatch
4814A	SCREW 1/4-20 X 1-1/8 knurled head, with lockpatch
4816A	SCREW 5/16-18 X 1-1/2 socket head

PART NO.	DESCRIPTION
4820A	SCREW 1/4-20 X 2 socket head
4961	BOLT 3/4-16 X 1-5/8 hex head (Grade 5)
5403B	BOLT 1/4-20 X 3/8 carriage
54321-85	NUT No. 8-32 X 1/2 X 1/8 (brass)
5444	BOLT 3/8-16 X 1 carriage (Grade 5)
5465	BOLT No. 10-24 X 1/2 carriage
5710	WASHER 63/64 X 1-1/2 X 5/64
5756	WASHER 21/32 X 1-5/16 X 5/8
5775	WASHER 11/32 X 1/2 X 31/64
6003	WASHER 1-3/16 X 1-3/8 X 11/16
6016	WASHER 11/32 X 11/16 X 1/16
6019	WASHER 3/8 X 29/32 X 1/16
6035A	WASHER 1/4 X 1-1/4 X 1/8 neoprene
6036	WASHER 17/64 X 1 X 1/16
6040A	WASHER 3/4 X 1-1/2 X 1/16
6042A	WASHER 1 X 1-1/5 X 1/16 layered
6047	WASHER 5/8 X 13/64 X 3/64
6048W	WASHER 1/8 X 1/4 X 1/32
6057	WASHER 1/2 X 7/8 X 3/16, nylon
6072	WASHER 3/8 X 1 1/4 X 5/64
6099	WASHER 1/4 X 7/16 X 1/16
6109	WASHER 5/16 X 11/16 X 1/8
6198	WASHER No. 8 X 1/4 X .06
6220W	WASHER 1/4 X 7/16 X 1/32
6235	WASHER 1/4 X 23/32 X 1/16
6239	WASHER 1/4 X 1/2 X 3/32
6253W	WASHER 1/4 X 3/4 X 3/64
6302	WASHER 5/16 X 11/16 X 19/32
6333	WASHER 5/16 X 7/8 X 5/64
6334	WASHER 7/16 X 29/32 X 1/16
6352	WASHER 5/16 X 7/8 X 3/32 (chrome)

PART NO.	DESCRIPTION
6353	WASHER 3/8 X 13/16 X 1/16 (chrome)
6365	WASHER 17/32 X 1-1/8 X 5/64
6366	WASHER 1/2 X 1-1/4 X 3/32
6371	WASHER 25/64 X 1 X 3/32
6379W	WASHER 3/8 X 5/8 X 3/64
6400HB	WASHER 5/16 X 13/16 X 3/32
6409	WASHER 1/2 X 3/4 X 1/32 plastic
6410	WASHER 1/4 X 9/16 X 1/16 nylon
6474	WASHER 3/8 X 5/16 X 3/16 hardened
6497HW	WASHER 29/64 X 1-1/8 X 1/16
6498	WASHER 9/16 X 13/16 X 1/32 nylon
6506	WASHER 1-13/32 X 2-3/32 X 1/16 (bronze)
6516HW	WASHER 7/16 X 1-1/8 X 1/8
6590HW	WASHER 1/2 X 1-1/8 X 3/32
6639	WASHER 5/8 X 1-5/16 X 3/32 (chrome)
6645	WASHER 11/32 X 1-1/32 X 1/8
6655	WASHER 5/8 X 1-1/2 X 7/64
6701	WASHER 3/8 X 13/16 X 1/16
6702	WASHER 5/16 X 11/16 X 1/16
6703	WASHER 1/4 X 5/8 X 1/16
6716	WASHER No. 10 X 1/2 X 3/64
6724	WASHER 21/32 X 1-1/16 X 1/16
6736	WASHER 9/32 X 5/8 X 1/16
6737	WASHER 57/64 X 1-3/64 X 1/32
6753	WASHER 1/2 X 1-1/4 X 1/8 notched
6756	WASHER 1/2 X 1-1/16 X 3/32
6758	WASHER 3/8 X 37/64 X 7/64
6762B	WASHER 11/16 X 29/32 X 1/32
6771A	WASHER 5/16 X 1/2 X 1/16
6788	WASHER 21/6 X 1/2 X 1/16
6812	WASHER 13/32 X 11/16 X 1/16

PART NO.	DESCRIPTION
7015	LOCKWASHER No. 8
7036	WASHER 1/4 X 31/64 X 1/16
7038	LOCKWASHER 3/8
7039	LOCKWASHER 7/16
7041	LOCKWASHER 5/16
7042	LOCKWASHER 5/16 high collar
7045	LOCKWASHER 3/8 high collar
7068	LOCKWASHER 1/2
7069	LOCKWASHER No. 10
7073	LOCKWASHER 1/4 external tooth
7101	LOCKWASHER 3/8 internal/external tooth
7115	LOCKWASHER No. 8 internal tooth
7118	LOCKWASHER 3/16 internal tooth
7124	LOCKWASHER 1/4 internal tooth
7127	LOCKWASHER 5/16 internal tooth
7129	LOCKWASHER 1/2 internal tooth
7142	LOCKWASHER 3/4 internal tooth
7220	LOCKWASHER No. 10 external tooth
7229W	LOCKWASHER 1/4 internal/external tooth
7230	LOCKWASHER 1/4 external tooth
7232	LOCKWASHER 5/16 internal tooth
7495	NUT M6 flange
7506	NUT No. 4-48 X 3/32 X 1/4 (Grade 2)
7507	ACORN NUT 5/16-18 X 11/16 X 1/2 (Grade 2) (chrome)
7515	JAMNUT 7/16 X 1/4 X 11/16 (Grade 2)
7531	LOCKNUT 5/16-18 X 9/32 X 1/2 flange
7549A	ACORN NUT 5/16-18 X 9/16 X 1/2
7576	NUT 5/16-18 UNC keps flange
7593	NUT 5/16-24 flange
7600	NUT No. 4-40 keps
7601	LOCKNUT 3/8-16 flange

PART NO.	DESCRIPTION
7602	ACORN NUT No. 10-32 nylon
7606	LOCKNUT No. 8-32 X 1/4 X 1/4 hex (chrome)
7624	LOCKNUT No. 10-24 X 1/4 X 3/8
7627	ACORN NUT 1/2-13 X 3/4 (chrome)
7629	NUT No. 10-32 X 3/8 keps
7643W	JAMNUT 3/8-16 X 7-32 X 9/16
7651A	ACORN NUT No. 12-24 (Grade 2) (chrome)
7667	NUT 3/8-16 X 9/32 X 9/16 nylon insert
7669	NUT 5/16-18
7680W	ACORN NUT 3/8-16 X 25/32 X 9/16 (Grade 2) (chrome)
7686	LOCKNUT 1/4-20 X 5/16 X 7/16
7688	NUT 1/4-20 X 7/32 X 7/16 (Grade 2)
7689W	JAMNUT 1/4-20 X 5/32 X 7/16 (Grade 2)
7716	LOCKNUT 1/4-20 X 7/16 flange
7736	ACORN NUT 5/16-24 X 19/32 X 1/2 (Grade 2) (chrome)
7739	LOCKNUT 5/16-18 X 11/32 X 1/2
7740	LOCKNUT 5/16-18 X 1/4 X 1/2
7742	LOCKNUT 1/4-20 X 7/32 X 7/16
7744	JAMNUT 5/16-24 X 3/16 X 1/2 (Grade 2)
7748W	NUT 5/16-18 X 1/4 X 1/2 (Grade 2)
7753	NUT 5/16-24 X 1/4 X 1/2 (Grade 2)
7763W	JAMNUT 5/16-18 X 3/16 X 1/2
7768W	LOCKNUT 1/2-13 X 19/32 X 3/4
7775	LOCKNUT 3/8-24 X 7/16 X 9/16
7778	LOCKNUT 3/8-16 X 7/16 X 9/16
7782	LOCKNUT 3/8-24 X 3/8 X 9/16 (Grade 8)
7783	NUT 3/8-16 X 5/16 X 9/16 (Grade 2)
7792	NUT 1/4-20 X 1/4 (Grade 2)
7800W	NUT 3/8-24 X 5/16 X 9/16 (Grade 2)
7825	LOCKNUT 7/16-20 X 7/16 X 5/8
7827W	LOCKNUT 7/16-14

PART NO.	DESCRIPTION
7838	NUT No. 10-24 keps
7845	NUT 1/2-20 X 7/16 X 3/4 (Grade 2)
7848W	JAMNUT 7/16-20 X 1/4 X 11/16 (Grade 2)
7855W	JAMNUT 3/4-16 X 7/16 X 1-1/8 (Grade 2)
7883	NUT 5/16-24 X 1-1/16
7916A	JAMNUT 5/8-18
7987	NUT 5/8-18 X 15/16 slotted (Grade 8)
7994	LOCKNUT 5/8-18 X 15/16
8108	SPEEDNUT 1/4-20
855B	SCREW 3/8-16 X 2 knurled head
856A	SCREW 5/16-24 X 1 socket head (Grade 8)
858A	BOLT 5/16-18 X 3 hex head (Grade 5)
861A	SCREW 3/8-16 X 1 knurled head (Grade 8)
864A	SCREW 1/4-20 X 3/4 hex socket button head
868A	SCREW 1/2-13 X 3/4 hex socket button head
872A	SCREW 1/2-20 X 3-1/4 knurled head
882	SCREW 1/4-20 X 7/8 knurled head, with washer (Grade 8)
891	SCREW 1/4-20 X 1-3/4 socket head (Grade 8)
90770-79	SCREW No. 8-32 X 3/8 Pozidriv head, self-tapping
923	SCREW 1/4-20 X 3/4 socket pan head
924	SCREW 1/4-20 X 33/64 socket pan head
925	SCREW 1/4-28 X 5/8 socket button head (Grade 8)
927A	SCREW 1/4-20 X 3/4 button head (Grade 8)
928	BOLT M5 X 0.8 X 35.2 hex head
929A	SCREW M4 X 0.7 X 11.8 flange head
933	SCREW No. 10-32 X 15/16 Pozidriv truss head (Grade 2)
939	SCREW 1/4-20 X 1 self-tapping, with washer (Grade 2)
940	SCREW 1/4-20 X 3/4 TORX button head
941	SCREW 1/4-20 X 5/8 socket button head (Grade 8)
94605-98	SCREW 3/8-16 X 1 socket button head (Grade 8)

STARTER MOTOR (1 OF 2)

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
15	10957	O-RING (use 31516-94A)	ALL
21	31514-90	YOKE ASSEMBLY, starter	ALL

STARTER MOTOR (2 OF 2)

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
32	31604-91A	STARTER SOLENOID REPAIR KIT	ALL
45	31516-94A	CLUTCH ASSEMBLY, starter w/ 8879, 10957, 31663-90, 31664-94 & 31692-90	ALL
46	31553-90A	STARTER, complete	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
	31553-94B	STARTER, complete (black texture)	FLSTC 1994, FLSTF 1994, FLSTN 1994, FXSTC 1994, FXSTS 1994
47	31612-09	JACKSHAFT KIT, starter, w/ 6, 16, 17, 18, 19, 30, 41, 42, 43 & 44	ALL
48	31693-90	CLIP, cable	ALL

AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
9	68683-02	HOUSING, lamp (chrome)	FLSTC 1993, FLSTC 1994
17	68000056	BULB, turn signal (used w/ 68414-05)	FLSTC 1993, FLSTC 1994
31	68348-05	AUXILIARY LAMP KIT, w/ 68355-05 & 68414-05A (replaces 68674-69A) (2)	FLSTC 1993, FLSTC 1994

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
35	68414-05A	AUXILIARY LAMP, w/ 68000056 (used w/ 68348-05A) (2)	FLSTC 1993, FLSTC 1994
38	68355-05	WIRE HARNESS (2)	FLSTC 1993, FLSTC 1994

Numerical Index

[View interactive table](#)

10003	ELECTRONIC IGNITION SYSTEM
10006	AIR CLEANER & ENRICHENER ALTERNATOR & REGULATOR THROTTLE CONTROL AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC OIL TANK FRONT TURN SIGNALS HORN MISCELLANEOUS ELECTRICAL
10014	CARBURETOR (1 OF 2) FUEL TANK
10031	FRONT BRAKE CONTROL
10033	TAIL LAMP & REAR TURN SIGNALS
10038A	REAR BRAKE CONTROL - FXST
10039	MISCELLANEOUS ELECTRICAL CALIFORNIA EVAPORATIVE EMISSIONS KIT
10040	FUEL TANK
10059A	FRAME, REAR FORK & JIFFY STAND (2 OF 2)
10065	ELECTRONIC IGNITION SYSTEM HANDLEBAR HEADLAMP (1 OF 2) INSTRUMENTS (1 OF 2) FRONT TURN SIGNALS TAIL LAMP & REAR TURN SIGNALS MISCELLANEOUS ELECTRICAL HANDLEBAR SWITCHES
10067	BATTERY
10073	ELECTRONIC IGNITION SYSTEM MISCELLANEOUS ELECTRICAL
10074	EXHAUST SYSTEM (1 OF 2) EXHAUST SYSTEM (1 OF 2)
10076	FRONT BRAKE CONTROL
10080	OIL TANK OIL FILTERS & MOUNTS
10081	FRONT BRAKE CONTROL

10086	OIL TANK
10112	OIL FILTERS & MOUNTS
10122	REAR BRAKE CONTROL - FXST
10124	CLUTCH CONTROL
10134	SWITCHES & CIRCUIT BREAKERS
1046	FRAME, REAR FORK & JIFFY STAND (1 OF 2)
10957	STARTER MOTOR (1 OF 2)
10998	TRANSMISSION HOUSING
11002	OIL PUMP
11016	GEAR SHIFTER (1 OF 2)
11020	TRANSMISSION HOUSING
11067	TRANSMISSION GEARS
11083	GEAR SHIFTER (1 OF 2)
11096	TRANSMISSION GEARS CLUTCH
11105	CRANKCASE - GEAR SIDE OIL PUMP
11132A	ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION TRANSMISSION HOUSING
11143	CLUTCH CONTROL FRONT BRAKE CONTROL
11145A	ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION
11147B	PRIMARY HOUSING
11150	GEAR SHIFTER (1 OF 2)
11155	THROTTLE CONTROL HANDLEBAR SWITCHES
11157	ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION
11158	FRAME, REAR FORK & JIFFY STAND (2 OF 2)
11160A	CRANKCASE (2 OF 2)
11161	TRANSMISSION HOUSING
11165	TRANSMISSION HOUSING
11173	FRONT WHEEL (1 OF 2)
11175	FRONT WHEEL (1 OF 2)
11177A	CRANKCASE (2 OF 2)

11179	TRANSMISSION HOUSING
11182	STARTER MOTOR (1 OF 2)
11183	STARTER MOTOR (1 OF 2)
11191	GEAR SHIFTER (1 OF 2)
11192	CARBURETOR (1 OF 2)
11218	PISTONS, CONNECTING RODS & FLYWHEELS
11219	PISTONS, CONNECTING RODS & FLYWHEELS CRANKCASE - GEAR SIDE
11241	OIL PUMP
11244	FORK ROCKERS & CALIPER MOUNTING - FXSTS FRONT FENDER - FXSTS
11248	STARTER MOTOR (1 OF 2)
11411	REAR BELT GUARD
11430	REAR FENDER INSTRUMENTS (1 OF 2)
11437	REAR FENDER
11447	FUEL TANK
11451	FRAME, REAR FORK & JIFFY STAND (2 OF 2)
11456	FRAME, REAR FORK & JIFFY STAND (2 OF 2)
11460	AIR CLEANER & ENRICHENER
11473	SADDLEBAGS - FLSTC & FLSTN
11717	FUEL TANK
11729	GEAR SHIFTER (1 OF 2)
11733A	TRANSMISSION HOUSING
12026B	CRANKCASE (2 OF 2)
12035B	TRANSMISSION GEARS
12045	GEAR SHIFTER (1 OF 2)
12050	TRANSMISSION HOUSING
12052A	PRIMARY HOUSING
12053A	PRIMARY HOUSING
12066A	PRIMARY HOUSING
12067B	TRANSMISSION HOUSING
1357W	SEATS & SISSY BAR

14142-86A	FRONT FENDERS
14150-86	FRONT FORK - FLSTC/F/N (1 OF 2)
14228-91	FUEL TANK TRIM
14270-92	GEAR SHIFTER (2 OF 2)
14287-94	FUEL TANK TRIM
14335-90	FUEL TANK TRIM
14338-93	FUEL TANK TRIM
14339-90	FUEL TANK TRIM
14341-93	FUEL TANK TRIM
14353-92	FUEL TANK TRIM
14354-92	FUEL TANK TRIM
14355-92	FUEL TANK TRIM
14356-92	FUEL TANK TRIM
14359-92	FUEL TANK TRIM
14360-92	FUEL TANK TRIM
14384-93	FUEL TANK TRIM
14385-93	FUEL TANK TRIM
14386-93	FUEL TANK TRIM
14387-93	FUEL TANK TRIM
14388-93	FUEL TANK TRIM
14390-93	FUEL TANK TRIM
14397-93	FUEL TANK TRIM
14398-93	FUEL TANK TRIM
15368-01A	OIL TANK BATTERY
1601	CRANKCASE - GEAR SIDE ELECTRONIC IGNITION SYSTEM
16121-93	CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (1 OF 2)
16121-94	CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (1 OF 2)
16122-93	CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (2 OF 2)
16122-94	CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (2 OF 2)
16126-93	CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (1 OF 2)
16126-94	CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (1 OF 2)

16242-90	CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (1 OF 2)
16247-91	CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (1 OF 2)
16284-84	CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (1 OF 2)
16478-85A	CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (1 OF 2)
16480-92A	CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (1 OF 2)
16512-86A	CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (1 OF 2)
16573-83A	CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (1 OF 2)
16692-95	CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (1 OF 2)
16696-92A	CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (1 OF 2)
16715-83	CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (1 OF 2)
16770-84F	CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (1 OF 2)
16774-86D	CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (1 OF 2)
16778-84A	ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION
16779-84A	ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION
16800-84A	ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION
16837-85C	CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (2 OF 2) CRANKCASE (2 OF 2)
17040-92A	CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (2 OF 2)
17041-92A	CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (2 OF 2)
17042-92A	ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION
17355-92A	ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION
17356-92A	ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION
17358-84B	ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION
17360-83A	ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION
17375-83A	ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION
17429-91	ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION
17528-92	ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION
17529-92	ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION
17530-92	ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION
17611-83	ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION
1783C	BELTS, CHAINS & SPROCKETS
17921-83A	ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION

17924-83A	<u>ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION</u>
17927-83A	<u>ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION</u>
17930-83A	<u>ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION</u>
17935-79B	<u>ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION</u>
17938-83	<u>ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION</u>
17945-36B	<u>ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION</u>
17947-36	<u>ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION</u>
17950-66	<u>ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION</u>
1795A	<u>AIR CLEANER & ENRICHENER</u>
18001-83B	<u>CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (2 OF 2)</u>
18011-86	<u>CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (2 OF 2)</u>
18020-83	<u>CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (2 OF 2)</u>
18074-83B	<u>CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (2 OF 2)</u>
18076-83	<u>CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (2 OF 2)</u>
18082-83A	<u>CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (2 OF 2)</u>
18087-83	<u>CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (2 OF 2)</u>
18101-83D	<u>CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (2 OF 2)</u>
18124-83	<u>CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (2 OF 2)</u>
18130-83D	<u>CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (2 OF 2)</u>
18131-83D	<u>CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (2 OF 2)</u>
18133-83B	<u>CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (2 OF 2)</u>
18134-83	<u>CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (2 OF 2)</u>
18201-83	<u>CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (2 OF 2)</u>
18202-83	<u>CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (2 OF 2)</u>
18219-83A	<u>CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (2 OF 2)</u>
18222-83A	<u>CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (2 OF 2)</u>
18229-83A	<u>CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (2 OF 2)</u>
18523-86B	<u>ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION</u>
18622-85B	<u>ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION</u>
18623-85B	<u>ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION</u>
18633-48D	<u>ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION</u>
18634-48C	<u>ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION</u>

2005	REAR FENDER SUPPORTS
21920-83	PISTONS, CONNECTING RODS & FLYWHEELS
21921-83	PISTONS, CONNECTING RODS & FLYWHEELS
21922-83	PISTONS, CONNECTING RODS & FLYWHEELS
21923-83	PISTONS, CONNECTING RODS & FLYWHEELS
21924-83	PISTONS, CONNECTING RODS & FLYWHEELS
21940-83	PISTONS, CONNECTING RODS & FLYWHEELS
21941-83	PISTONS, CONNECTING RODS & FLYWHEELS
21942-83	PISTONS, CONNECTING RODS & FLYWHEELS
21943-83	PISTONS, CONNECTING RODS & FLYWHEELS
21944-83	PISTONS, CONNECTING RODS & FLYWHEELS
2216W	ALTERNATOR & REGULATOR
22589-83B	PISTONS, CONNECTING RODS & FLYWHEELS
22764-83	PISTONS, CONNECTING RODS & FLYWHEELS
239	OIL PUMP
23906-93B	PISTONS, CONNECTING RODS & FLYWHEELS
23928-87	PISTONS, CONNECTING RODS & FLYWHEELS
23961-80A	PISTONS, CONNECTING RODS & FLYWHEELS
23974-87	PISTONS, CONNECTING RODS & FLYWHEELS
23975-87	PISTONS, CONNECTING RODS & FLYWHEELS
23981-98	PISTONS, CONNECTING RODS & FLYWHEELS
24002-70	CRANKCASE (2 OF 2)
24032-70	CRANKCASE (2 OF 2) BELTS, CHAINS & SPROCKETS
24033-70	CRANKCASE (2 OF 2) BELTS, CHAINS & SPROCKETS
24034-70	CRANKCASE (2 OF 2) BELTS, CHAINS & SPROCKETS
24035-70	CRANKCASE (2 OF 2) BELTS, CHAINS & SPROCKETS
24036-70	CRANKCASE (2 OF 2) BELTS, CHAINS & SPROCKETS
24037-70	CRANKCASE (2 OF 2) BELTS, CHAINS & SPROCKETS
24040-93	CRANKCASE - GEAR SIDE

24041-93	<u>CRANKCASE - GEAR SIDE</u>
24042-93	<u>CRANKCASE - GEAR SIDE</u>
24043-93	<u>CRANKCASE - GEAR SIDE</u>
24044-93	<u>CRANKCASE - GEAR SIDE</u>
24045-93	<u>CRANKCASE - GEAR SIDE</u>
24046-93	<u>CRANKCASE - GEAR SIDE</u>
24281-83	<u>PISTONS, CONNECTING RODS & FLYWHEELS</u>
24334-36	<u>PISTONS, CONNECTING RODS & FLYWHEELS</u>
24335-36	<u>PISTONS, CONNECTING RODS & FLYWHEELS</u>
24345-36A	<u>PISTONS, CONNECTING RODS & FLYWHEELS</u>
24346-87A	<u>PISTONS, CONNECTING RODS & FLYWHEELS</u>
24356-36A	<u>PISTONS, CONNECTING RODS & FLYWHEELS</u>
2444	<u>WINDSHIELD - FLSTC</u>
24571-93	<u>CRANKCASE (2 OF 2)</u>
24581-93	<u>CRANKCASE - GEAR SIDE</u>
24586-93	<u>CRANKCASE - GEAR SIDE</u>
24599-93	<u>CRANKCASE (2 OF 2)</u>
24600-58B	<u>CRANKCASE (2 OF 2)</u>
24601-58B	<u>CRANKCASE (2 OF 2)</u>
24626-87A	<u>CRANKCASE (2 OF 2)</u>
24628-87A	<u>CRANKCASE (2 OF 2)</u>
24641-36	<u>CRANKCASE - GEAR SIDE</u>
24641-87A	<u>CRANKCASE (2 OF 2)</u>
24643-87A	<u>CRANKCASE (2 OF 2)</u>
24922-93	<u>AIR CLEANER & ENRICHENER</u>
24981-70	<u>CRANKCASE - GEAR SIDE</u>
24982-70	<u>CRANKCASE - GEAR SIDE</u>
25225-93B	<u>CRANKCASE - GEAR SIDE</u>
25256-93A	<u>CRANKCASE - GEAR SIDE</u>
2531	<u>FRONT FENDERS</u>
25310-82A	<u>CRANKCASE - GEAR SIDE</u>

25320-82	<u>CRANKCASE - GEAR SIDE</u>
25321-82	<u>CRANKCASE - GEAR SIDE</u>
25322-82	<u>CRANKCASE - GEAR SIDE</u>
25323-82	<u>CRANKCASE - GEAR SIDE</u>
25325-82	<u>CRANKCASE - GEAR SIDE</u>
25326-82	<u>CRANKCASE - GEAR SIDE</u>
25327-82	<u>CRANKCASE - GEAR SIDE</u>
25328-82	<u>CRANKCASE - GEAR SIDE</u>
2538	<u>SEATS & SISSY BAR</u>
25416-70A	<u>PRIMARY HOUSING</u>
25452-87A	<u>TRANSMISSION HOUSING</u>
25453-87A	<u>TRANSMISSION HOUSING</u>
25550-57A	<u>CRANKCASE - GEAR SIDE</u>
25581-70	<u>CRANKCASE - GEAR SIDE</u>
25582-93	<u>CRANKCASE - GEAR SIDE</u>
2562	<u>CLUTCH CONTROL</u>
2567	<u>INSTRUMENTS (1 OF 2)</u> <u>SWITCHES & CIRCUIT BREAKERS</u>
2574WA	<u>INSTRUMENTS (1 OF 2)</u> <u>SWITCHES & CIRCUIT BREAKERS</u>
2579A	<u>FRONT BRAKE CONTROL</u>
2582	<u>WIRING</u>
2594A	<u>SWITCHES & CIRCUIT BREAKERS</u>
2602A	<u>SADDLEBAGS - FLSTC & FLSTN</u>
26030-92A	<u>OIL PUMP</u>
2604	<u>FRONT FENDERS</u> <u>REAR FENDER</u>
26050-92	<u>OIL PUMP</u>
2607	<u>SEATS & SISSY BAR</u>
2611C	<u>ELECTRONIC IGNITION SYSTEM</u>
2614	<u>BELTS, CHAINS & SPROCKETS</u>
26207-83	<u>OIL PUMP</u>
26226-92	<u>OIL PUMP</u>

26227-58	OIL PUMP
26262-80	OIL PUMP
26263-80	CRANKCASE - GEAR SIDE OIL PUMP
26267-92	OIL PUMP
26273-92A	OIL PUMP
26276-92A	OIL PUMP
26315-68A	OIL PUMP
26317-68A	OIL PUMP
26326-62A	OIL PUMP
26327-68	OIL PUMP
26328-74	OIL PUMP
26345-73	OIL PUMP
26346-70	OIL PUMP
26348-15	OIL PUMP
26348-36	OIL PUMP
26352-95A	OIL FILTERS & MOUNTS
26354-93	CRANKCASE - GEAR SIDE
26378-92A	OIL FILTERS & MOUNTS
26400-82B	OIL PUMP
26432-76A	CYLINDERS, HEADS & VALVES - V²TM - REAR SHOWN (2 OF 2)
2647B	AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC
26561-84	CRANKCASE - GEAR SIDE
26563-91A	CARBURETOR (1 OF 2)
26566-91	CARBURETOR (1 OF 2)
26570-84	CARBURETOR (2 OF 2)
26571-89	CALIFORNIA EVAPORATIVE EMISSIONS KIT
26856-89A	ROCKER ARMS, COVERS & PUSHRODS - V²TM EVOLUTION
2692WB	TAIL LAMP & REAR TURN SIGNALS
2698A	TAIL LAMP & REAR TURN SIGNALS
26994-90	CARBURETOR (2 OF 2)
26995-86B	CARBURETOR (1 OF 2)

27002-89	CARBURETOR (1 OF 2)
27009-86A	CARBURETOR (1 OF 2)
27010-86A	CARBURETOR (1 OF 2)
27019-89A	CARBURETOR (1 OF 2)
27035-92A	CARBURETOR (1 OF 2)
27038-92A	CARBURETOR (1 OF 2)
27040-88	CARBURETOR (1 OF 2)
27042-84A	CALIFORNIA EVAPORATIVE EMISSIONS KIT
27047-84B	CALIFORNIA EVAPORATIVE EMISSIONS KIT
27093-92A	FUEL TANK
27100-88	CARBURETOR (1 OF 2)
27101-88	CARBURETOR (1 OF 2)
27102-92	FUEL TANK
2711	AIR CLEANER & ENRICHENER
27116-88	CARBURETOR (1 OF 2)
27122-89	CARBURETOR (1 OF 2)
27123-89A	CARBURETOR (1 OF 2)
27124-89	CARBURETOR (1 OF 2)
27125-89	CARBURETOR (1 OF 2)
27126-89	CARBURETOR (1 OF 2)
27127-89	CARBURETOR (1 OF 2)
27128-89	CARBURETOR (1 OF 2)
27129-88	CARBURETOR (1 OF 2)
27130-90	CARBURETOR (1 OF 2)
27136-90A	CARBURETOR (1 OF 2)
27137-81	CARBURETOR (1 OF 2)
27138-90	CALIFORNIA EVAPORATIVE EMISSIONS KIT
27146-89	CARBURETOR (1 OF 2)
27147-89	CARBURETOR (1 OF 2)
27148-89	CARBURETOR (1 OF 2)
27156-89	CARBURETOR (1 OF 2)
27157-89	CARBURETOR (1 OF 2)

27158-89	<u>CARBURETOR (2 OF 2)</u>
27159-92	<u>CARBURETOR (2 OF 2)</u>
27160-89	<u>CARBURETOR (2 OF 2)</u>
27162-89	<u>CARBURETOR (2 OF 2)</u>
27186-92	<u>CARBURETOR (2 OF 2)</u>
2720	<u>ALTERNATOR & REGULATOR</u>
27206-93B	<u>CARBURETOR (1 OF 2)</u>
2723A	<u>FRONT FENDER - FXSTS</u>
27280-92	<u>CARBURETOR (2 OF 2)</u>
27281-92	<u>CARBURETOR (2 OF 2)</u>
27311-76	<u>CARBURETOR (2 OF 2)</u>
27315-88A	<u>CARBURETOR (2 OF 2)</u>
27317-88	<u>CARBURETOR (2 OF 2)</u>
27339-90	<u>CARBURETOR (2 OF 2)</u>
27360-76	<u>CARBURETOR (2 OF 2)</u>
27361-76A	<u>CARBURETOR (2 OF 2)</u>
27362-76	<u>CARBURETOR (2 OF 2)</u>
27368-76	<u>CARBURETOR (2 OF 2)</u>
27369-76	<u>CARBURETOR (2 OF 2)</u>
2737	<u>AIR CLEANER & ENRICHENER</u>
27371-76A	<u>CARBURETOR (2 OF 2)</u>
2738	<u>FRONT FENDER - FXSTS</u>
2739	<u>SEATS & SISSY BAR</u>
275	<u>CRANKCASE - GEAR SIDE</u>
27575-88A	<u>CARBURETOR (2 OF 2)</u>
27576-92	<u>CARBURETOR (2 OF 2)</u>
27577-92	<u>CARBURETOR (2 OF 2)</u>
27579-88A	<u>CARBURETOR (2 OF 2)</u>
27580-88	<u>CARBURETOR (2 OF 2)</u>
27581-88	<u>CARBURETOR (2 OF 2)</u>
27582-88	<u>CARBURETOR (2 OF 2)</u>
27583-88	<u>CARBURETOR (2 OF 2)</u>

27585-88	<u>CARBURETOR (2 OF 2)</u>
27586-88	<u>CARBURETOR (2 OF 2)</u>
27587-88	<u>CARBURETOR (2 OF 2)</u>
2773	<u>FOOTBOARDS</u> <u>LICENSE PLATE BRACKETS</u>
27886-78A	<u>CARBURETOR (1 OF 2)</u>
2818	<u>PRIMARY HOUSING</u> <u>EXHAUST SYSTEM (1 OF 2)</u>
2823	<u>FRONT FORK - FXSTC</u>
2871W	<u>FRAME, REAR FORK & JIFFY STAND (1 OF 2)</u> <u>PRIMARY HOUSING</u>
2879W	<u>CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (1 OF 2)</u> <u>SEATS & SISSY BAR</u>
28823-89	<u>AIR CLEANER & ENRICHENER</u>
2882W	<u>REAR BELT GUARD</u> <u>FRAME, REAR FORK & JIFFY STAND (1 OF 2)</u> <u>SADDLEBAGS - FLSTC & FLSTN</u>
28841-89	<u>AIR CLEANER & ENRICHENER</u>
28842-89	<u>AIR CLEANER & ENRICHENER</u>
28884-92	<u>CALIFORNIA EVAPORATIVE EMISSIONS KIT</u>
29017-92	<u>AIR CLEANER & ENRICHENER</u>
2904A	<u>TAIL LAMP & REAR TURN SIGNALS</u>
29059-88A	<u>AIR CLEANER & ENRICHENER</u>
29068-89	<u>AIR CLEANER & ENRICHENER</u>
2907	<u>HANDLEBAR SWITCHES</u> <u>HANDLEBAR SWITCHES</u>
29070-89B	<u>AIR CLEANER & ENRICHENER</u>
29126-90B	<u>AIR CLEANER & ENRICHENER</u>
29134-92	<u>AIR CLEANER & ENRICHENER</u>
29161-86	<u>AIR CLEANER & ENRICHENER</u>
29165-89	<u>AIR CLEANER & ENRICHENER</u>
29169-84	<u>AIR CLEANER & ENRICHENER</u>
2917	<u>HEADLAMP (1 OF 2)</u>
29181-88	<u>AIR CLEANER & ENRICHENER</u>
2921	<u>WINDSHIELD - FLSTC</u>

29229-88D	<u>AIR CLEANER & ENRICHENER</u>
29252-89	<u>AIR CLEANER & ENRICHENER</u>
29256-90	<u>AIR CLEANER & ENRICHENER</u>
29258-91	<u>AIR CLEANER & ENRICHENER</u>
29259-91A	<u>AIR CLEANER & ENRICHENER</u>
29269-83A	<u>AIR CLEANER & ENRICHENER</u>
29283-93	<u>AIR CLEANER & ENRICHENER</u>
29306-92	<u>CALIFORNIA EVAPORATIVE EMISSIONS KIT</u>
29954-71A	<u>ALTERNATOR & REGULATOR</u>
29957-81B	<u>ALTERNATOR & REGULATOR</u>
29960-91A	<u>BELTS, CHAINS & SPROCKETS</u>
29961-85	<u>ALTERNATOR & REGULATOR</u>
29970-88D	<u>ALTERNATOR & REGULATOR</u>
31342-93	<u>STARTER MOTOR (1 OF 2)</u>
31342-94	<u>STARTER MOTOR (1 OF 2)</u>
31430-93	<u>STARTER MOTOR (1 OF 2)</u>
31430-94	<u>STARTER MOTOR (1 OF 2)</u>
31433-84A	<u>PRIMARY HOUSING</u>
31504-91B	<u>SWITCHES & CIRCUIT BREAKERS</u>
31506-79C	<u>SWITCHES & CIRCUIT BREAKERS</u>
31510-90	<u>STARTER MOTOR (1 OF 2)</u>
31514-90	<u>STARTER MOTOR (1 OF 2)</u>
31515-90	<u>STARTER MOTOR (1 OF 2)</u>
31516-94A	<u>STARTER MOTOR (2 OF 2)</u>
31518-90	<u>STARTER MOTOR (1 OF 2)</u>
31519-90	<u>STARTER MOTOR (1 OF 2)</u>
31525-90	<u>STARTER MOTOR (1 OF 2)</u>
31527-90	<u>STARTER MOTOR (1 OF 2)</u>
31530-90	<u>STARTER MOTOR (1 OF 2)</u>
31535-91	<u>STARTER MOTOR (1 OF 2)</u>
31538-98	<u>STARTER MOTOR (1 OF 2)</u>
31548-90	<u>STARTER MOTOR (1 OF 2)</u>

31553-90A	<u>STARTER MOTOR (2 OF 2)</u>
31553-94B	<u>STARTER MOTOR (2 OF 2)</u>
31600-90	<u>STARTER MOTOR (2 OF 2)</u>
31604-91A	<u>STARTER MOTOR (2 OF 2)</u>
31612-09	<u>STARTER MOTOR (2 OF 2)</u>
31614-83A	<u>ELECTRONIC IGNITION SYSTEM</u>
31660-90	<u>STARTER MOTOR (2 OF 2)</u>
31662-90	<u>STARTER MOTOR (2 OF 2)</u>
31663-90	<u>STARTER MOTOR (2 OF 2)</u>
31664-90	<u>STARTER MOTOR (2 OF 2)</u>
31664-94	<u>STARTER MOTOR (2 OF 2)</u>
31688-90	<u>STARTER MOTOR (2 OF 2)</u>
31689-90	<u>STARTER MOTOR (2 OF 2)</u>
31692-90	<u>STARTER MOTOR (2 OF 2)</u>
31693-90	<u>STARTER MOTOR (2 OF 2)</u>
31695-90	<u>STARTER MOTOR (2 OF 2)</u>
31727-85	<u>ELECTRONIC IGNITION SYSTEM</u>
31800-78A	<u>ELECTRONIC IGNITION SYSTEM</u>
31983-71C	<u>ELECTRONIC IGNITION SYSTEM</u>
31985-91A	<u>ELECTRONIC IGNITION SYSTEM</u>
31998-91A	<u>MISCELLANEOUS ELECTRICAL</u>
3201WA	<u>CARBURETOR (1 OF 2)</u>
3210A	<u>TRANSMISSION HOUSING OIL FILTERS & MOUNTS</u>
3221	<u>AIR CLEANER & ENRICHENER</u>
32311-83	<u>ELECTRONIC IGNITION SYSTEM</u>
32400-80B	<u>ELECTRONIC IGNITION SYSTEM</u>
32402-83	<u>ELECTRONIC IGNITION SYSTEM</u>
32405-91B	<u>ELECTRONIC IGNITION SYSTEM</u>
32442-93	<u>AIR CLEANER & ENRICHENER</u>
32504-80A	<u>CRANKCASE - GEAR SIDE ELECTRONIC IGNITION SYSTEM</u>

32524-83	CRANKCASE - GEAR SIDE ELECTRONIC IGNITION SYSTEM
32591-80	CRANKCASE - GEAR SIDE ELECTRONIC IGNITION SYSTEM
32606-82	CRANKCASE - GEAR SIDE ELECTRONIC IGNITION SYSTEM
33006-93	TRANSMISSION HOUSING
33006-94	TRANSMISSION HOUSING
33040-94	TRANSMISSION HOUSING
33043-80	TRANSMISSION HOUSING SWITCHES & CIRCUIT BREAKERS
33048-72	FOOTRESTS FOOTRESTS
33114-79	TRANSMISSION HOUSING
33119-79B	GEAR SHIFTER (1 OF 2)
33126-93	STARTER MOTOR (2 OF 2)
33126-94	STARTER MOTOR (2 OF 2)
33127-93	STARTER MOTOR (2 OF 2)
33127-94	STARTER MOTOR (2 OF 2)
33189-63	FOOTRESTS FOOTRESTS
33205-80	GEAR SHIFTER (1 OF 2)
33206-80	GEAR SHIFTER (1 OF 2)
33207-80	GEAR SHIFTER (1 OF 2)
33208-80	GEAR SHIFTER (1 OF 2)
33209-80	GEAR SHIFTER (1 OF 2)
33210-80	GEAR SHIFTER (1 OF 2)
33211-80	GEAR SHIFTER (1 OF 2)
33212-80	GEAR SHIFTER (1 OF 2)
33318-85	PRIMARY HOUSING
33320-79D	GEAR SHIFTER (2 OF 2)
33326-79A	GEAR SHIFTER (2 OF 2)
33332-79	GEAR SHIFTER (2 OF 2)
33334-85	TRANSMISSION HOUSING
33344-94	TRANSMISSION HOUSING

33445-89	<u>PRIMARY HOUSING</u>
33445-94A	<u>PRIMARY HOUSING</u>
33446-89	<u>PRIMARY HOUSING</u>
33446-94A	<u>PRIMARY HOUSING</u>
33449-90	<u>STARTER MOTOR (2 OF 2)</u>
33449-94	<u>STARTER MOTOR (2 OF 2)</u>
33519-92A	<u>OIL FILTERS & MOUNTS</u>
33520-92	<u>OIL FILTERS & MOUNTS</u>
33630-90A	<u>FOOTBOARDS</u>
33642-89	<u>GEAR SHIFTER (2 OF 2)</u>
33660-90B	<u>GEAR SHIFTER (2 OF 2)</u>
33668-90C	<u>GEAR SHIFTER (2 OF 2)</u>
33683-90A	<u>FOOTRESTS</u>
337	<u>TRANSMISSION HOUSING</u>
33708-94	<u>FOOTRESTS</u> <u>FOOTBOARDS</u>
33714-90B	<u>GEAR SHIFTER (2 OF 2)</u> <u>FRONT FENDER - FXSTS</u>
33715-85A	<u>GEAR SHIFTER (2 OF 2)</u>
33720-93	<u>FRONT FENDER - FXSTS</u>
33729-82A	<u>GEAR SHIFTER (2 OF 2)</u>
33871-85B	<u>GEAR SHIFTER (2 OF 2)</u>
33895-82D	<u>GEAR SHIFTER (2 OF 2)</u> <u>GEAR SHIFTER (2 OF 2)</u>
33900-59C	<u>TRANSMISSION HOUSING</u> <u>SWITCHES & CIRCUIT BREAKERS</u>
3403	<u>STARTER MOTOR (1 OF 2)</u>
34082-79	<u>GEAR SHIFTER (2 OF 2)</u>
34083-79	<u>GEAR SHIFTER (2 OF 2)</u>
34084-86A	<u>GEAR SHIFTER (2 OF 2)</u>
34085-79A	<u>GEAR SHIFTER (2 OF 2)</u>
34086-79	<u>GEAR SHIFTER (2 OF 2)</u>
34087-79A	<u>GEAR SHIFTER (2 OF 2)</u>
34088-87A	<u>GEAR SHIFTER (2 OF 2)</u>

34089-79	GEAR SHIFTER (2 OF 2)
34091-85A	TRANSMISSION GEARS
3419	FUEL TANK INSTRUMENTS (1 OF 2)
34191-79E	GEAR SHIFTER (2 OF 2)
34193-79E	GEAR SHIFTER (2 OF 2)
34195-79E	GEAR SHIFTER (2 OF 2)
3427	CRANKCASE (1 OF 2)
3430	CRANKCASE (1 OF 2)
3440	FOOTRESTS
3445	FUEL TANK
34468-86A	TRANSMISSION HOUSING
3450	HANDLEBAR
34564-90B	GEAR SHIFTER (2 OF 2)
34611-65A	GEAR SHIFTER (2 OF 2) GEAR SHIFTER (2 OF 2)
3471	HANDLEBAR HANDLEBAR
3473	REAR BRAKE CONTROL - FXST
34732-96	TRANSMISSION HOUSING
3480A	CRANKCASE - GEAR SIDE
3485A	FRONT FENDERS
34904-86D	TRANSMISSION HOUSING
34920-86A	TRANSMISSION HOUSING
3500A	ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION
3501A	ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION
35021-89	TRANSMISSION HOUSING
35025-79B	TRANSMISSION GEARS
35026-79C	TRANSMISSION GEARS
35026-94	TRANSMISSION GEARS
35027-79B	TRANSMISSION GEARS
35027-94	TRANSMISSION GEARS
35028-79B	TRANSMISSION GEARS

35028-94	TRANSMISSION GEARS
35029-91A	TRANSMISSION GEARS
35029-94	TRANSMISSION GEARS
3504	CRANKCASE (1 OF 2)
35042-91	TRANSMISSION GEARS
35051-89A	TRANSMISSION GEARS
3506	CRANKCASE (1 OF 2)
35064-79	TRANSMISSION GEARS
35068-79	GEAR SHIFTER (2 OF 2)
35076-79	TRANSMISSION HOUSING
35078-79	TRANSMISSION HOUSING REAR BRAKE CONTROL - FLST (1 OF 2)
3509	REAR BRAKE CONTROL - FXST
3512	CRANKCASE (1 OF 2)
3514	HEADLAMP (1 OF 2)
3516A	FOOTRESTS
35211-91B	BELTS, CHAINS & SPROCKETS
35258-87D	TRANSMISSION HOUSING
3531A	HANDLEBAR
3533	FRONT FORK - FXSTS
3538	FRONT BRAKE CONTROL FRONT FORK - FXSTS
3540	REAR BELT GUARD
3546	OIL TANK
3549A	FOOTRESTS SADDLEBAGS - FLSTC & FLSTN
3559	STARTER MOTOR (1 OF 2)
3560WA	FRONT FENDERS
3561WC	FRONT FENDERS
3562	FRONT BRAKE CALIPER
35622-79C	TRANSMISSION GEARS
35625-79B	TRANSMISSION GEARS
35625-94	TRANSMISSION GEARS

35626-79B	TRANSMISSION GEARS
35626-94	TRANSMISSION GEARS
35629-79	TRANSMISSION GEARS
35632-79	TRANSMISSION GEARS
35652-79B	TRANSMISSION HOUSING
3574	SEATS & SISSY BAR CALIFORNIA EVAPORATIVE EMISSIONS KIT
3576	TAIL LAMP & REAR TURN SIGNALS
3577	AIR CLEANER & ENRICHENER
358	CRANKCASE (1 OF 2) CRANKCASE - GEAR SIDE
35850-84	CRANKCASE (2 OF 2) BELTS, CHAINS & SPROCKETS
35851-84	CRANKCASE (2 OF 2) BELTS, CHAINS & SPROCKETS
35852-84	CRANKCASE (2 OF 2) BELTS, CHAINS & SPROCKETS
3588	HORN
3594	BELTS, CHAINS & SPROCKETS FRONT BRAKE CONTROL
3602A	ELECTRONIC IGNITION SYSTEM
3655A	FRONT WHEEL (1 OF 2) FRONT WHEEL (1 OF 2)
36801-87C	TRANSMISSION HOUSING
3691	GEAR SHIFTER (1 OF 2)
37069-90A	TRANSMISSION GEARS CLUTCH
37075-87	TRANSMISSION HOUSING
37088-90	TRANSMISSION GEARS CLUTCH
37090-84A	TRANSMISSION GEARS CLUTCH
37105-87A	TRANSMISSION HOUSING
3730A	REAR WHEEL (1 OF 2)
37312-75	TRANSMISSION GEARS CLUTCH
37313-80	TRANSMISSION GEARS CLUTCH

3739	FRONT FORK - FLSTC/F/N (1 OF 2)
37496-90A	CLUTCH
375	TRANSMISSION HOUSING PRIMARY HOUSING
37503-41	REAR BRAKE CONTROL - FXST
37550-90A	CLUTCH
3769	REAR WHEEL (1 OF 2)
3770	ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION
37707-90	CLUTCH
37707-94	CLUTCH
3784	GEAR SHIFTER (1 OF 2)
3787	REAR BRAKE CONTROL - FLST (1 OF 2) FRAME, REAR FORK & JIFFY STAND (1 OF 2)
37871-90	CLUTCH
37872-90	CLUTCH
37903-90	CLUTCH
37904-90	CLUTCH
37905-90	CLUTCH
37906-90	CLUTCH
37908-90	CLUTCH
37909-90	CLUTCH
37911-90	CLUTCH
37912-91	CLUTCH
37913-90	CLUTCH
3793A	SEATS & SISSY BAR
37971-90	CLUTCH
37977-90	CLUTCH
3849	ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION
38607-87A	CLUTCH CONTROL
38608-82B	CLUTCH CONTROL
38622-87	FRONT FENDERS
38630-88	CLUTCH CONTROL
38711-93	ELECTRONIC IGNITION SYSTEM

38712-68	REAR FENDER
3945	HEADLAMP (1 OF 2)
3953W	FRONT FORK - FLSTC/F/N (1 OF 2)
3960W	AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC
3974HW	FRAME, REAR FORK & JIFFY STAND (1 OF 2) SEATS & SISSY BAR
3987	REAR BELT GUARD FRAME, REAR FORK & JIFFY STAND (1 OF 2) FUEL TANK OIL TANK
3991	FRAME, REAR FORK & JIFFY STAND (1 OF 2)
3993	ELECTRONIC IGNITION SYSTEM GEAR SHIFTER (1 OF 2) SWITCHES & CIRCUIT BREAKERS
3996	FRAME, REAR FORK & JIFFY STAND (1 OF 2)
39976-65B	BELTS, CHAINS & SPROCKETS
39990-65	BELTS, CHAINS & SPROCKETS
39992-65C	BELTS, CHAINS & SPROCKETS
39993-65	BELTS, CHAINS & SPROCKETS
39996-65	BELTS, CHAINS & SPROCKETS
39998-65A	BELTS, CHAINS & SPROCKETS
40007-36B	BELTS, CHAINS & SPROCKETS
40012-90	BELTS, CHAINS & SPROCKETS BELTS, CHAINS & SPROCKETS
40017-94	BELTS, CHAINS & SPROCKETS
40023-86	BELTS, CHAINS & SPROCKETS
4014W	FRAME, REAR FORK & JIFFY STAND (1 OF 2) AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC FUEL TANK
4015	CLUTCH CONTROL FRONT BRAKE CONTROL
4017	GEAR SHIFTER (1 OF 2) GEAR SHIFTER (1 OF 2) EXHAUST SYSTEM (1 OF 2) SADDLEBAGS - FLSTC & FLSTN
40210-85D	BELTS, CHAINS & SPROCKETS
40217-79A	BELTS, CHAINS & SPROCKETS REAR WHEEL (1 OF 2)
40221-85A	BELTS, CHAINS & SPROCKETS

	REAR WHEEL (1 OF 2)
40236-88A	BELTS, CHAINS & SPROCKETS BELTS, CHAINS & SPROCKETS REAR WHEEL (1 OF 2) REAR WHEEL (2 OF 2)
40237-88A	BELTS, CHAINS & SPROCKETS BELTS, CHAINS & SPROCKETS REAR WHEEL (1 OF 2) REAR WHEEL (2 OF 2)
40250-94C	BELTS, CHAINS & SPROCKETS
40251-92A	BELTS, CHAINS & SPROCKETS
40266-85	BELTS, CHAINS & SPROCKETS
40269-85A	BELTS, CHAINS & SPROCKETS
40299-83A	BELTS, CHAINS & SPROCKETS
40308-94	BELTS, CHAINS & SPROCKETS
40311-94	BELTS, CHAINS & SPROCKETS REAR WHEEL (2 OF 2)
40312-94	BELTS, CHAINS & SPROCKETS REAR WHEEL (2 OF 2)
4036	AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC
40384-91	BELTS, CHAINS & SPROCKETS
40392-91	BELTS, CHAINS & SPROCKETS
4044	FRAME, REAR FORK & JIFFY STAND (1 OF 2)
4068A	REAR BRAKE CONTROL - FLST (1 OF 2) PRIMARY HOUSING
4074A	SHOCK ABSORBERS
40903-87	REAR BRAKE CONTROL - FXST
4091	WIRING
40910-84B	FRONT WHEEL (1 OF 2)
40918-87	REAR BRAKE CONTROL - FXST
40920-87	REAR BRAKE CONTROL - FXST
40922-87A	REAR BRAKE CONTROL - FXST REAR BRAKE CONTROL - FLST (1 OF 2)
40957-87C	REAR BRAKE CONTROL - FLST (1 OF 2)
40975-86	REAR WHEEL (1 OF 2)
40976-86A	REAR WHEEL (1 OF 2)
41038-92A	FRONT WHEEL (1 OF 2)

41040-88B	FORK ROCKERS & CALIPER MOUNTING - FXSTS
41042-93	FRONT FENDER - FXSTS
41043-89	FRONT WHEEL (1 OF 2)
41043-89A	FRONT WHEEL (1 OF 2)
4105	FRONT FORK - FLSTC/F/N (1 OF 2)
41058-87B	REAR WHEEL (1 OF 2)
41109-88A	FRONT WHEEL (1 OF 2)
41110-79A	REAR WHEEL (1 OF 2)
41123-79	FRONT WHEEL (1 OF 2) REAR WHEEL (1 OF 2)
41584-86A	FRONT WHEEL (1 OF 2)
41595-86	REAR WHEEL (1 OF 2)
4163	FOOTRESTS
41713-86	FRONT BRAKE CONTROL REAR BRAKE CONTROL - FLST (1 OF 2)
41731-88A	FRONT BRAKE CONTROL REAR BRAKE CONTROL - FXST REAR BRAKE CONTROL - FLST (1 OF 2)
41733-88	FRONT BRAKE CONTROL
41739-84A	FRONT BRAKE CONTROL
41745-79	REAR BRAKE CONTROL - FLST (1 OF 2)
41747-82A	FRONT BRAKE CONTROL REAR BRAKE CONTROL - FXST REAR BRAKE CONTROL - FLST (1 OF 2)
41789-92	REAR WHEEL (1 OF 2)
41804-84A	REAR BRAKE CONTROL - FXST
42269-30	REAR BRAKE CONTROL - FLST (2 OF 2)
42301-87A	REAR BRAKE CONTROL - FLST (2 OF 2)
42303-89B	FRONT BRAKE CONTROL
42305-86B	FRONT BRAKE CONTROL
42375-87	REAR BRAKE CONTROL - FLST (2 OF 2)
42382-87C	REAR BRAKE CONTROL - FXST REAR BRAKE CONTROL - FLST (2 OF 2)
42407-87C	REAR BRAKE CONTROL - FLST (2 OF 2)
42416-83	REAR BRAKE CONTROL - FLST (2 OF 2)

42431-87A	REAR BRAKE CONTROL - FLST (2 OF 2) FOOTBOARDS
42446-87B	REAR BRAKE CONTROL - FXST
42448-87	REAR BRAKE CONTROL - FXST
42452-87	REAR BRAKE CONTROL - FXST
42455-80	REAR BRAKE CONTROL - FXST
42460-80B	REAR BRAKE CONTROL - FXST
42468-87E	REAR BRAKE CONTROL - FLST (2 OF 2)
42473-87	REAR BRAKE CONTROL - FLST (2 OF 2)
42479-90	REAR BRAKE CONTROL - FLST (2 OF 2)
42507-89A	REAR BRAKE CONTROL - FXST FOOTRESTS
42515-82	REAR BRAKE CONTROL - FXST
42522-87A	REAR BRAKE CONTROL - FXST
42524-82A	REAR BRAKE CONTROL - FXST
42531-87	REAR BRAKE CONTROL - FXST
42532-82	REAR BRAKE CONTROL - FXST
42533-91A	TRANSMISSION HOUSING
42534-90	REAR BRAKE CONTROL - FXST
43005-86	FRONT WHEEL (1 OF 2)
43053-86	FRONT WHEEL (1 OF 2)
43067-86	FRONT WHEEL (1 OF 2)
43085-81	FRONT WHEEL (1 OF 2) REAR WHEEL (1 OF 2)
43157-83A	FRONT WHEEL (1 OF 2) REAR WHEEL (2 OF 2)
43239-05	FRONT WHEEL (1 OF 2)
43241-05	FRONT WHEEL (1 OF 2) REAR WHEEL (1 OF 2)
4325	STARTER MOTOR (1 OF 2)
4326A	STARTER MOTOR (1 OF 2)
43283-86	FRAME, REAR FORK & JIFFY STAND (2 OF 2)
43290-82	FRONT WHEEL (1 OF 2) REAR WHEEL (2 OF 2)
43291-82	FRONT WHEEL (1 OF 2)

	REAR WHEEL (2 OF 2)
43292-82	FRONT WHEEL (1 OF 2) REAR WHEEL (2 OF 2)
43293-82	FRONT WHEEL (1 OF 2) REAR WHEEL (2 OF 2)
43294-82	FRONT WHEEL (1 OF 2) REAR WHEEL (2 OF 2)
43346-83B	FRONT WHEEL (2 OF 2)
4350A	FRONT FORK - FXSTS
4352	FRONT FORK - FLSTC/F/N (1 OF 2)
43567-92	REAR WHEEL (2 OF 2)
4358A	STARTER MOTOR (1 OF 2)
43608-82	REAR WHEEL (2 OF 2)
43612-92	FRONT WHEEL (2 OF 2)
43650-82	FRONT WHEEL (2 OF 2) REAR WHEEL (2 OF 2)
43654-86A	FRONT WHEEL (2 OF 2) REAR WHEEL (2 OF 2)
43657-89	FRONT WHEEL (1 OF 2)
43662-80B	FRONT WHEEL (2 OF 2)
43668-82	FRONT WHEEL (2 OF 2) REAR WHEEL (2 OF 2)
43671-84C	FRONT WHEEL (2 OF 2)
43672-84	FRONT WHEEL (2 OF 2)
43676-88C	FRONT WHEEL (2 OF 2)
43677-88A	FRONT WHEEL (2 OF 2)
43946-86A	REAR BRAKE CALIPER
43960-86	REAR BRAKE CALIPER
44020-83A	FRONT BRAKE CALIPER
44021-83	FRONT BRAKE CALIPER
44022-83	FRONT BRAKE CALIPER
44029-88	FRONT WHEEL (2 OF 2) FORK ROCKERS & CALIPER MOUNTING - FXSTS
44030-88A	FORK ROCKERS & CALIPER MOUNTING - FXSTS
44035-86A	REAR BRAKE CALIPER

44039-86	REAR BRAKE CALIPER
44044-88B	FORK ROCKERS & CALIPER MOUNTING - FXSTS
44045-87A	REAR BRAKE CALIPER
44046-84C	FRONT BRAKE CALIPER
44047-83	FRONT BRAKE CALIPER
44048-83	FRONT BRAKE CALIPER REAR BRAKE CALIPER
44050-87	REAR BRAKE CALIPER
44053-83B	FRONT BRAKE CALIPER
44053-92A	FRONT BRAKE CALIPER
44054-83	FRONT BRAKE CALIPER
44059-83	FRONT BRAKE CALIPER
44061-83	FRONT BRAKE CALIPER
44062-83	FRONT BRAKE CALIPER
44063-83C	FRONT BRAKE CALIPER
44072-92A	FRONT BRAKE CALIPER
44074-88B	FRONT BRAKE CALIPER
44077-88F	FRONT BRAKE CALIPER
4411	HEADLAMP (1 OF 2)
44126-87	REAR BRAKE CONTROL - FXST REAR BRAKE CONTROL - FLST (2 OF 2)
44136-92	FRONT WHEEL (2 OF 2)
44147-87A	REAR BRAKE CALIPER
44152-77	REAR BRAKE CALIPER
4416	CRANKCASE (1 OF 2)
44190-88A	FRONT BRAKE CALIPER
44197-77	FRONT BRAKE CALIPER
44198-87	REAR BRAKE CALIPER
44199-79	REAR BRAKE CALIPER
44207-87	REAR BRAKE CALIPER
44209-87C	REAR BRAKE CALIPER
44447-89	FRONT WHEEL (2 OF 2)
44447-92	FRONT WHEEL (2 OF 2)

4453	FRONT FORK - FLSTC/F/N (1 OF 2)
45004-85	FRONT BRAKE CONTROL REAR BRAKE CONTROL - FLST (2 OF 2)
45005-85	FRONT BRAKE CONTROL REAR BRAKE CONTROL - FLST (2 OF 2)
45015-96	CLUTCH CONTROL
45016-93	FRONT BRAKE CONTROL
45019-93	FRONT BRAKE CONTROL
45021-86	CLUTCH CONTROL
45031-82A	FRONT BRAKE CONTROL
45032-82	CLUTCH CONTROL FRONT BRAKE CONTROL
45036-88	CLUTCH CONTROL
45042-82	FRONT BRAKE CONTROL REAR BRAKE CONTROL - FLST (2 OF 2)
45044-82	CLUTCH CONTROL FRONT BRAKE CONTROL
45051-82	FRONT BRAKE CONTROL
45057-82	REAR BRAKE CONTROL - FXST
45072-87	FRONT BRAKE CONTROL
45085-88A	FRONT FENDERS FRONT FENDER - FXSTS
45110-88C	FRONT BRAKE CONTROL
45112-84B	FRONT BRAKE CONTROL
45156-89E	REAR BRAKE CONTROL - FXST
45405-75A	FRONT FORK - FXSTC FRONT FORK - FLSTC/F/N (1 OF 2)
45417-84	FRONT FORK - FXSTC
45418-84	FRONT FORK - FXSTC
45419-80	FRONT FORK - FXSTC FRONT FORK - FLSTC/F/N (1 OF 2)
45420-80	FRONT FORK - FXSTC
45423-92	CLUTCH CONTROL FRONT BRAKE CONTROL
45456-86B	FRONT FORK - FLSTC/F/N (1 OF 2)
45473-88	FRONT FORK - FXSTS

45544-88	HANDLEBAR
45567-88	FRONT FORK - FXSTS
45569-88B	FRONT FORK - FXSTS
45605-88	FRONT FORK - FLSTC/F/N (1 OF 2)
45607-93	FRONT FORK - FXSTS
45611-86	FRONT FORK - FXSTC FRONT FORK - FLSTC/F/N (1 OF 2) FRONT FORK - FXSTS
45628-92	FRONT FORK - FXSTS
45640-88B	FRONT FORK - FXSTC
45648-85A	FRONT FORK - FXSTC
45649-91	FORK ROCKERS & CALIPER MOUNTING - FXSTS
45651-91	FORK ROCKERS & CALIPER MOUNTING - FXSTS
45655-88	FORK ROCKERS & CALIPER MOUNTING - FXSTS
45659-88	FORK ROCKERS & CALIPER MOUNTING - FXSTS
45660-88A	FORK ROCKERS & CALIPER MOUNTING - FXSTS
45662-88	FORK ROCKERS & CALIPER MOUNTING - FXSTS
45663-88A	FORK ROCKERS & CALIPER MOUNTING - FXSTS
45670-80A	FRONT FORK - FXSTC FRONT FORK - FLSTC/F/N (1 OF 2)
45672-80B	FRONT FORK - FXSTC
45717-63	FRONT FORK - FXSTC
45718-60	FRONT FORK - FXSTC
45733-48	FRONT FORK - FXSTC FRONT FORK - FLSTC/F/N (1 OF 2)
45830-48	OIL PUMP
45832-77A	FRONT FORK - FXSTC FRONT FORK - FLSTC/F/N (1 OF 2)
45834-77	FRONT FORK - FXSTC FRONT FORK - FLSTC/F/N (1 OF 2)
45838-77	FRONT FORK - FXSTC FRONT FORK - FLSTC/F/N (1 OF 2)
45842-77A	FRONT FORK - FXSTC FRONT FORK - FLSTC/F/N (1 OF 2)
45845-77	FRONT FORK - FXSTC FRONT FORK - FLSTC/F/N (1 OF 2)

45855-77	FRONT FORK - FXSTC
45858-77	FRONT FORK - FXSTC FRONT FORK - FLSTC/F/N (1 OF 2)
45859-77A	FRONT FORK - FXSTC FRONT FORK - FLSTC/F/N (2 OF 2)
45865-84	FRONT FORK - FXSTC FRONT FORK - FLSTC/F/N (2 OF 2)
45866-84	FRONT FORK - FXSTC FRONT FORK - FLSTC/F/N (2 OF 2)
45873-91A	FRONT FORK - FXSTC
45874-91	FRONT FORK - FXSTC
45875-84A	FRONT FORK - FXSTC FRONT FORK - FLSTC/F/N (2 OF 2)
45915-86	FRONT FORK - FLSTC/F/N (2 OF 2)
45916-86	FRONT FORK - FLSTC/F/N (2 OF 2)
45917-86	FRONT FORK - FLSTC/F/N (2 OF 2)
45918-86	FRONT FORK - FLSTC/F/N (2 OF 2)
45930-86	FRONT FORK - FLSTC/F/N (2 OF 2)
45931-86	FRONT FORK - FLSTC/F/N (2 OF 2)
45932-86	FRONT FORK - FLSTC/F/N (2 OF 2)
45933-86	FRONT FORK - FLSTC/F/N (2 OF 2)
45934-86	FRONT FORK - FXSTC FRONT FORK - FLSTC/F/N (2 OF 2)
45935-88	FRONT FORK - FXSTS
45936-88	FRONT FORK - FXSTS
45937-88	FRONT FORK - FXSTS
45940-84	FRONT FORK - FXSTC FRONT FORK - FLSTC/F/N (2 OF 2)
45964-86	FRONT FORK - FLSTC/F/N (2 OF 2)
45998-73	FRONT FORK - FXSTC FRONT FORK - FLSTC/F/N (2 OF 2)
46004-91A	FRONT FORK - FXSTC
46006-91A	FRONT FORK - FXSTC
46008-93	FRONT FORK - FXSTS
46020-84	FRONT FORK - FXSTC
46048-84	FRONT FORK - FXSTC

46053-88	FRONT FORK - FXSTS
46054-88	FRONT FORK - FXSTS
46055-88	FRONT FORK - FXSTS
46056-88	FRONT FORK - FXSTS
46057-88	FRONT FORK - FXSTS
46059-90	HANDLEBAR
46060-88	FRONT FORK - FXSTS
46062-88	FRONT FORK - FXSTS
47008-92B	FRAME, REAR FORK & JIFFY STAND (2 OF 2)
4713W	AIR CLEANER & ENRICHENER REAR BRAKE CONTROL - FLST (1 OF 2)
4716W	CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (1 OF 2) FOOTRESTS REAR FENDER SUPPORTS REAR FENDER SUPPORTS
4717A	TRANSMISSION HOUSING
4718A	ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION CRANKCASE - GEAR SIDE ELECTRONIC IGNITION SYSTEM
4719W	SADDLEBAGS - FLSTC & FLSTN
4721	SEATS & SISSY BAR FOOTRESTS FOOTBOARDS REAR FENDER SUPPORTS
4722	EXHAUST SYSTEM (1 OF 2)
4724	HEADLAMP (1 OF 2)
4726	CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (1 OF 2)
4729	FRONT FORK - FXSTC FRONT FORK - FLSTC/F/N (1 OF 2)
4739A	INSTRUMENTS (1 OF 2)
4740A	CRANKCASE - GEAR SIDE PRIMARY HOUSING
4741A	GEAR SHIFTER (1 OF 2) TRANSMISSION HOUSING
4742A	OIL PUMP
4747	FORK ROCKERS & CALIPER MOUNTING - FXSTS
47519-83A	FRONT WHEEL (2 OF 2) REAR WHEEL (2 OF 2)

47573-89B	FRAME, REAR FORK & JIFFY STAND (2 OF 2)
47577-86	FRAME, REAR FORK & JIFFY STAND (2 OF 2)
47579-93	FRAME, REAR FORK & JIFFY STAND (2 OF 2)
47698-86B	FRAME, REAR FORK & JIFFY STAND (2 OF 2)
47712-91	FRAME, REAR FORK & JIFFY STAND (2 OF 2)
48031-89A	FRAME, REAR FORK & JIFFY STAND (2 OF 2)
48130-92B	FRAME, REAR FORK & JIFFY STAND (2 OF 2)
4813A	CRANKCASE - GEAR SIDE
48140-84A	FRONT FORK - FXSTC FRONT FORK - FLSTC/F/N (2 OF 2) FRONT FORK - FXSTS FRAME, REAR FORK & JIFFY STAND (2 OF 2)
4814A	TRANSMISSION HOUSING
4816A	HANDLEBAR
4820A	PRIMARY HOUSING
48300-60	FRONT FORK - FXSTC FRONT FORK - FLSTC/F/N (2 OF 2) FRONT FORK - FXSTS
48306-88	FRONT FORK - FXSTS
48315-60	FRONT FORK - FXSTC FRONT FORK - FLSTC/F/N (2 OF 2) FRAME, REAR FORK & JIFFY STAND (2 OF 2)
48330-48A	FRONT FORK - FXSTC
48332-48C	FRONT FORK - FXSTC
48361-80	FRONT FORK - FXSTC FRONT FORK - FLSTC/F/N (2 OF 2) FRONT FORK - FXSTS
48365-48A	FRONT FORK - FXSTC FRONT FORK - FLSTC/F/N (2 OF 2) FRONT FORK - FXSTS
49377-09A	FRONT FORK - FXSTC FRONT FORK - FLSTC/F/N (2 OF 2)
4961	FRAME, REAR FORK & JIFFY STAND (1 OF 2)
50005-85A	FRAME, REAR FORK & JIFFY STAND (2 OF 2)
50015-74A	FRAME, REAR FORK & JIFFY STAND (2 OF 2)
50018-85	FRAME, REAR FORK & JIFFY STAND (2 OF 2)
50025-84	FRAME, REAR FORK & JIFFY STAND (2 OF 2)
50027-84	FRAME, REAR FORK & JIFFY STAND (2 OF 2)

50028-91	FRAME, REAR FORK & JIFFY STAND (2 OF 2)
50034-84	FRAME, REAR FORK & JIFFY STAND (2 OF 2)
50087-89B	FRAME, REAR FORK & JIFFY STAND (2 OF 2)
50100-70	PRIMARY HOUSING
50614-91A	FOOTBOARDS
50621-79A	FOOTBOARDS
50635-82A	FOOTBOARDS
50900-72	FOOTRESTS
50912-72	FOOTRESTS
50972-75	REAR BRAKE CONTROL - FLST (2 OF 2) FRAME, REAR FORK & JIFFY STAND (2 OF 2) FOOTRESTS
50989-86	FOOTBOARDS
50990-86B	FOOTBOARDS
50991-86	FRONT FORK - FLSTC/F/N (2 OF 2)
50992-87A	REAR BRAKE CONTROL - FLST (2 OF 2)
510	REAR WHEEL (1 OF 2)
51184-88A	SEATS & Sissy BAR
51185-90	SEATS & Sissy BAR
51186-89B	SEATS & Sissy BAR
51188-86	SEATS & Sissy BAR
51190-92	SEATS & Sissy BAR
515	REAR BRAKE CONTROL - FXST REAR BRAKE CONTROL - FLST (1 OF 2)
51652-83B	SEATS & Sissy BAR
51923-86	SADDLEBAGS - FLSTC & FLSTN
5207	ELECTRONIC IGNITION SYSTEM
52092-77	LICENSE PLATE BRACKETS
52103-31	EXHAUST SYSTEM (2 OF 2)
52191-86	SEATS & Sissy BAR
52203-93B	SEATS & Sissy BAR
52204-93	SEATS & Sissy BAR
52209-90C	SEATS & Sissy BAR

52217-90C	SEATS & SISSY BAR
52236-86E	SEATS & SISSY BAR
52283-94A	SEATS & SISSY BAR
52285-94B	SEATS & SISSY BAR
52503-88E	SEATS & SISSY BAR
52541-87A	SEATS & SISSY BAR
52735-85	SEATS & SISSY BAR
52771-82	SEATS & SISSY BAR
52787-92	SEATS & SISSY BAR
52788-92	SEATS & SISSY BAR
52912-00	SEATS & SISSY BAR
53156-86	HANDLEBAR
534	FRONT BRAKE CALIPER FORK ROCKERS & CALIPER MOUNTING - FXSTS
53438-92	HEADLAMP (2 OF 2)
53439-79	FRONT FENDERS REAR FENDER
5403B	LICENSE PLATE BRACKETS
54321-85	FRONT WHEEL (2 OF 2) REAR WHEEL (2 OF 2)
5444	BELTS, CHAINS & SPROCKETS
54485-97	FRONT FORK - FXSTS
54508-89A	SHOCK ABSORBERS
5465	LICENSE PLATE BRACKETS
55919-82	HANDLEBAR
56073-83	HANDLEBAR MISCELLANEOUS ELECTRICAL HANDLEBAR SWITCHES
56081-82A	HANDLEBAR
56093-88A	HANDLEBAR
56105-84	HANDLEBAR
56119-77A	HANDLEBAR
56122-77	HANDLEBAR
56124-77	HANDLEBAR

56153-73	HANDLEBAR
56159-73	HANDLEBAR
56206-94A	THROTTLE CONTROL
56220-94A	THROTTLE CONTROL
56305-90	THROTTLE CONTROL
56306-90	THROTTLE CONTROL
56342-90	THROTTLE CONTROL
56343-90	THROTTLE CONTROL
56394-74	THROTTLE CONTROL HANDLEBAR SWITCHES
56396-74A	THROTTLE CONTROL HANDLEBAR SWITCHES
56397-74C	THROTTLE CONTROL HANDLEBAR SWITCHES
56402-83A	THROTTLE CONTROL HANDLEBAR SWITCHES
56508-76	THROTTLE CONTROL
56538-88	HANDLEBAR
56540-88	HANDLEBAR
56541-86A	HANDLEBAR
56542-86A	HANDLEBAR
56567-86B	HANDLEBAR
56569-86	HANDLEBAR
5710	FRONT FORK - FXSTC FRONT FORK - FLSTC/F/N (1 OF 2)
57215-75	REAR BRAKE CONTROL - FLST (2 OF 2)
5756	REAR WHEEL (1 OF 2)
5774	MIRRORS
5775	FUEL TANK
57852-02A	AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC
5787	SADDLEBAGS - FLSTC & FLSTN
58018-86A	WINDSHIELD - FLSTC
58075-86	WINDSHIELD - FLSTC
58078-49	WINDSHIELD - FLSTC

58079-49	WINDSHIELD - FLSTC
58183-78	WINDSHIELD - FLSTC
58406-75A	WINDSHIELD - FLSTC
58408-75A	WINDSHIELD - FLSTC
58411-76A	WINDSHIELD - FLSTC
58412-76A	WINDSHIELD - FLSTC
58416-77A	WINDSHIELD - FLSTC
58417-77	WINDSHIELD - FLSTC
5885	AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC
59043-93	FRONT FENDER - FXSTS
59082-79	FRONT FENDERS
59129-86A	FRONT FENDERS
59139-89	FRONT FENDERS
59144-87A	REAR FENDER
59176-93	FRONT FENDER - FXSTS
59180-80	FRONT FENDERS
59181-80	FRONT FENDERS
59182-84	FRONT FENDERS
59197-87	FRONT FENDERS
59211-74A	FRONT FENDERS
59235-86	FRONT FENDERS
59251-90	REAR FENDER
59254-91	SEATS & SISSY BAR REAR FENDER
59255-91	SEATS & SISSY BAR REAR FENDER
59258-91	FRAME, REAR FORK & JIFFY STAND (2 OF 2)
59259-90	REAR FENDER
59262-90B	LICENSE PLATE BRACKETS
59265-90	FRAME, REAR FORK & JIFFY STAND (2 OF 2)
59287-92	REAR FENDER
59288-92	REAR FENDER
59289-92	REAR FENDER

59290-92	REAR FENDER
59596-89	REAR FENDER
59626-84	LICENSE PLATE BRACKETS
59648-84A	REAR FENDER
59658-79A	REAR FENDER
59710-84	TAIL LAMP & REAR TURN SIGNALS
59914-86A	REAR FENDER
59924-80B	FRONT FENDERS
59954-86A	REAR FENDER SUPPORTS
59955-86A	REAR FENDER SUPPORTS
59959-86	TAIL LAMP & REAR TURN SIGNALS
59964-86A	REAR FENDER SUPPORTS REAR FENDER SUPPORTS
59969-86A	REAR FENDER SUPPORTS REAR FENDER SUPPORTS
59971-80	LICENSE PLATE BRACKETS
59983-75	LICENSE PLATE BRACKETS
59984-73	LICENSE PLATE BRACKETS
59986-75	LICENSE PLATE BRACKETS
59988-72A	LICENSE PLATE BRACKETS
59993-80B	LICENSE PLATE BRACKETS
60001-55	LICENSE PLATE BRACKETS
60005-77	LICENSE PLATE BRACKETS
6003	TRANSMISSION GEARS
601	GEAR SHIFTER (1 OF 2)
6016	ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION CRANKCASE (1 OF 2) GEAR SHIFTER (1 OF 2) TRANSMISSION HOUSING PRIMARY HOUSING
6019	CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (1 OF 2) CRANKCASE (1 OF 2) FRONT BRAKE CALIPER SADDLEBAGS - FLSTC & FLSTN
6035A	SWITCHES & CIRCUIT BREAKERS
6036	SWITCHES & CIRCUIT BREAKERS

60362-86B	REAR BELT GUARD
60363-86C	FRAME, REAR FORK & JIFFY STAND (2 OF 2)
6040A	FORK ROCKERS & CALIPER MOUNTING - FXSTS
60415-89C	REAR BELT GUARD REAR BELT GUARD
6042A	FORK ROCKERS & CALIPER MOUNTING - FXSTS
6047	SWITCHES & CIRCUIT BREAKERS SWITCHES & CIRCUIT BREAKERS
6048W	AIR CLEANER & ENRICHENER
60533-86	REAR BELT GUARD
60537-89	REAR BELT GUARD REAR BELT GUARD
60539-94B	PRIMARY HOUSING
60543-89	PRIMARY HOUSING
60543-94	PRIMARY HOUSING
60567-90C	PRIMARY HOUSING
6057	GEAR SHIFTER (1 OF 2)
60572-86	PRIMARY HOUSING
60630-94B	PRIMARY HOUSING
60647-90	STARTER MOTOR (2 OF 2)
60647-94	STARTER MOTOR (2 OF 2)
60668-84B	PRIMARY HOUSING
60678-85	PRIMARY HOUSING
6072	AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC
609	TRANSMISSION HOUSING
6099	OIL PUMP CLUTCH CONTROL FRONT BRAKE CONTROL REAR BRAKE CONTROL - FXST FRONT FENDER - FXSTS PRIMARY HOUSING
6109	AIR CLEANER & ENRICHENER AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC
61095-92	AIR CLEANER & ENRICHENER
61103-83B	FUEL TANK
61109-85D	FUEL TANK

61131-92	FUEL TANK
61155-84B	FUEL TANK
61157-87	FUEL TANK
61165-89B	FUEL TANK
61228-84C	FUEL TANK
61272-92C	FUEL TANK
61290-97	FUEL TANK
61291-97	FUEL TANK
61366-92	FUEL TANK TRIM
61366-94	FUEL TANK TRIM
61367-92	FUEL TANK TRIM
61367-94	FUEL TANK TRIM
61426-85C	FUEL TANK
61640-84	FUEL TANK
61641-84	FUEL TANK
61648-85	LICENSE PLATE BRACKETS
61660-85	FUEL TANK
61667-90A	FUEL TANK
6198	INSTRUMENTS (1 OF 2)
6199	SWITCHES & CIRCUIT BREAKERS
62043-81A	FUEL TANK INSTRUMENTS (1 OF 2)
62123-66A	FRAME, REAR FORK & JIFFY STAND (2 OF 2)
62150-85	FUEL TANK
62161-02	FUEL TANK
62166-81A	FUEL TANK
62167-81	FUEL TANK
6217	STARTER MOTOR (1 OF 2)
62172-02	FUEL TANK
6220W	REAR BRAKE CONTROL - FLST (1 OF 2) FRONT FENDERS
6235	SADDLEBAGS - FLSTC & FLSTN SADDLEBAGS - FLSTC & FLSTN

62375-57A	TRANSMISSION HOUSING
6239	OIL PUMP
62498-91	OIL TANK
6253W	AIR CLEANER & ENRICHENER
62555-95	CARBURETOR (2 OF 2) FUEL TANK WIRING
62563-65	OIL TANK
62634-84A	OIL TANK
62704-84A	OIL TANK
62707-84	OIL TANK
62725-90	OIL TANK
6302	GEAR SHIFTER (1 OF 2)
6333	SEATS & SISSY BAR
6334	REAR BRAKE CONTROL - FLST (1 OF 2)
634	TRANSMISSION HOUSING
63497-89	OIL TANK
63501-68B	CARBURETOR (2 OF 2) FUEL TANK
63515-92	OIL TANK
6352	REAR BRAKE CONTROL - FLST (1 OF 2)
63523-92A	OIL FILTERS & MOUNTS
63525-92	OIL FILTERS & MOUNTS
63528-92	OIL FILTERS & MOUNTS
6353	FRONT FORK - FXSTS
63530-92	OIL FILTERS & MOUNTS
63533-41A	CRANKCASE (2 OF 2) OIL PUMP
63546-87	REAR BRAKE CONTROL - FXST
63553-91	OIL TANK
63556-87	OIL TANK
63556-92	OIL FILTERS & MOUNTS
63572-86	OIL TANK
6365	FUEL TANK

6366	REAR BRAKE CONTROL - FXST REAR BRAKE CONTROL - FLST (1 OF 2)
6371	FORK ROCKERS & CALIPER MOUNTING - FXSTS
63796-77A	OIL FILTERS & MOUNTS
6379W	SEATS & SISSY BAR HEADLAMP (1 OF 2) REAR FENDER SUPPORTS REAR FENDER SUPPORTS REAR FENDER SUPPORTS SADDLEBAGS - FLSTC & FLSTN
63858-49	ROCKER ARMS, COVERS & PUSHRODS - V²TM EVOLUTION
6400HB	BELTS, CHAINS & SPROCKETS FOOTBOARDS
6409	FRONT FENDER - FXSTS
6410	SEATS & SISSY BAR
6474	FRAME, REAR FORK & JIFFY STAND (1 OF 2)
6497HW	GEAR SHIFTER (1 OF 2)
6498	FORK ROCKERS & CALIPER MOUNTING - FXSTS
6506	PISTONS, CONNECTING RODS & FLYWHEELS
6516HW	CYLINDERS, HEADS & VALVES - V²TM - REAR SHOWN (1 OF 2) REAR WHEEL (1 OF 2)
65190-84	EXHAUST SYSTEM (2 OF 2)
65276-62	EXHAUST SYSTEM (1 OF 2)
653	CRANKCASE (1 OF 2) CRANKCASE - GEAR SIDE
65324-83B	EXHAUST SYSTEM (1 OF 2)
65325-83A	EXHAUST SYSTEM (1 OF 2)
65328-83A	EXHAUST SYSTEM (1 OF 2)
65380-85	EXHAUST SYSTEM (1 OF 2)
65380-90	EXHAUST SYSTEM (1 OF 2) EXHAUST SYSTEM (1 OF 2)
65381-89A	EXHAUST SYSTEM (1 OF 2) EXHAUST SYSTEM (1 OF 2)
65382-89C	EXHAUST SYSTEM (2 OF 2) EXHAUST SYSTEM (2 OF 2)
65395-89B	EXHAUST SYSTEM (2 OF 2)
65401-86	EXHAUST SYSTEM (1 OF 2)
65410-83	EXHAUST SYSTEM (1 OF 2)

65411-80A	EXHAUST SYSTEM (1 OF 2)
65432-89	EXHAUST SYSTEM (1 OF 2)
65447-86	EXHAUST SYSTEM (1 OF 2)
65459-84A	EXHAUST SYSTEM (1 OF 2)
65464-89	EXHAUST SYSTEM (1 OF 2)
65475-89	EXHAUST SYSTEM (1 OF 2)
65483-89	EXHAUST SYSTEM (1 OF 2)
65487-89	EXHAUST SYSTEM (1 OF 2)
65492-91	EXHAUST SYSTEM (2 OF 2)
65522-91	EXHAUST SYSTEM (2 OF 2)
65603-86	EXHAUST SYSTEM (1 OF 2)
65689-89	EXHAUST SYSTEM (2 OF 2)
65699-86	EXHAUST SYSTEM (2 OF 2)
65699-90	EXHAUST SYSTEM (2 OF 2)
65702-86	EXHAUST SYSTEM (2 OF 2)
65714-91	EXHAUST SYSTEM (2 OF 2) EXHAUST SYSTEM (2 OF 2)
65716-91	EXHAUST SYSTEM (2 OF 2)
65732-86	EXHAUST SYSTEM (2 OF 2)
65781-82	EXHAUST SYSTEM (2 OF 2)
65782-82	EXHAUST SYSTEM (2 OF 2)
65813-91	EXHAUST SYSTEM (2 OF 2) EXHAUST SYSTEM (2 OF 2)
65814-91	EXHAUST SYSTEM (2 OF 2)
65821-90	EXHAUST SYSTEM (2 OF 2)
65866-91	EXHAUST SYSTEM (2 OF 2)
65867-91	EXHAUST SYSTEM (2 OF 2) EXHAUST SYSTEM (2 OF 2)
6590HW	FRONT WHEEL (1 OF 2)
65989-90B	BATTERY
66000-80	BATTERY
66030-88	FRONT FORK - FXSTS
66105-77	BATTERY

66109-93	<u>BATTERY</u>
66111-93	<u>BATTERY</u>
66210-85B	<u>BATTERY</u>
66308-80	<u>BATTERY</u>
6639	<u>FRONT WHEEL (1 OF 2)</u>
6645	<u>WINDSHIELD - FLSTC</u> <u>AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC</u> <u>FUEL TANK</u>
6655	<u>FRONT FORK - FLSTC/F/N (1 OF 2)</u>
6701	<u>FRAME, REAR FORK & JIFFY STAND (1 OF 2)</u> <u>SEATS & SISSY BAR</u> <u>HEADLAMP (1 OF 2)</u> <u>REAR FENDER SUPPORTS</u> <u>REAR FENDER SUPPORTS</u> <u>SADDLEBAGS - FLSTC & FLSTN</u>
67011-91	<u>INSTRUMENTS (1 OF 2)</u>
6702	<u>REAR BELT GUARD</u> <u>REAR BRAKE CONTROL - FLST (1 OF 2)</u> <u>FRONT FORK - FXSTC</u> <u>FRONT FORK - FLSTC/F/N (1 OF 2)</u> <u>FRAME, REAR FORK & JIFFY STAND (1 OF 2)</u> <u>FRONT FENDERS</u> <u>EXHAUST SYSTEM (1 OF 2)</u> <u>SADDLEBAGS - FLSTC & FLSTN</u>
67024-84A	<u>INSTRUMENTS (1 OF 2)</u>
6703	<u>BELTS, CHAINS & SPROCKETS</u> <u>REAR BELT GUARD</u> <u>FRONT BRAKE CONTROL</u> <u>FRAME, REAR FORK & JIFFY STAND (1 OF 2)</u> <u>LICENSE PLATE BRACKETS</u>
67030-91A	<u>INSTRUMENTS (2 OF 2)</u>
67067-76	<u>INSTRUMENTS (1 OF 2)</u>
67068-76	<u>INSTRUMENTS (1 OF 2)</u>
67069-76	<u>INSTRUMENTS (1 OF 2)</u>
67070-76	<u>INSTRUMENTS (1 OF 2)</u>
67075-57A	<u>ELECTRONIC IGNITION SYSTEM</u>
67079-86A	<u>INSTRUMENTS (1 OF 2)</u>
67098-87	<u>INSTRUMENTS (1 OF 2)</u>
67115-91	<u>INSTRUMENTS (1 OF 2)</u>
67117-85	<u>INSTRUMENTS (1 OF 2)</u>
67118-87	<u>INSTRUMENTS (1 OF 2)</u>

67120-84B	INSTRUMENTS (1 OF 2)
67125-86A	INSTRUMENTS (1 OF 2)
6716	ELECTRONIC IGNITION SYSTEM REAR BRAKE CONTROL - FXST LICENSE PLATE BRACKETS
67166-88	INSTRUMENTS (1 OF 2)
67212-93	INSTRUMENTS (1 OF 2)
67215-89	INSTRUMENTS (2 OF 2)
67239-83	CALIFORNIA EVAPORATIVE EMISSIONS KIT
6724	SHOCK ABSORBERS
6736	ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION GEAR SHIFTER (1 OF 2)
6737	ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION
6753	HANDLEBAR
6756	FRONT FORK - FXSTS
6758	FRONT BRAKE CALIPER
67601-94A	HEADLAMP (2 OF 2)
67603-94A	HEADLAMP (2 OF 2)
67615-89A	AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC
6762B	ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION
67685-92	HEADLAMP (1 OF 2)
67698-81D	HEADLAMP (1 OF 2)
67705-92	HEADLAMP (1 OF 2)
6771A	OIL FILTERS & MOUNTS
67748-87	HEADLAMP (1 OF 2)
67757-92	HEADLAMP (1 OF 2)
67763-93	HEADLAMP (2 OF 2)
67768-86	HEADLAMP (1 OF 2)
67769-82	HEADLAMP (1 OF 2)
67769-93	HEADLAMP (1 OF 2)
67772-80	HEADLAMP (1 OF 2)
67773-80A	FRONT FORK - FXSTC HEADLAMP (2 OF 2)
67777-80A	HEADLAMP (2 OF 2)

67781-92A	HEADLAMP (2 OF 2)
67789-91B	HEADLAMP (2 OF 2)
67790-82	HEADLAMP (2 OF 2)
67790-93A	HEADLAMP (2 OF 2)
67793-92A	HEADLAMP (2 OF 2)
67798-92	HEADLAMP (2 OF 2)
67801-92A	HEADLAMP (2 OF 2)
67808-86	FRONT FORK - FLSTC/F/N (2 OF 2)
67814-86	FRONT FORK - FLSTC/F/N (2 OF 2)
67816-86	FRONT FORK - FLSTC/F/N (2 OF 2)
67819-86	FRONT FORK - FLSTC/F/N (2 OF 2)
67821-87	FRONT FORK - FLSTC/F/N (2 OF 2)
67822-88	FRONT TURN SIGNALS
67823-92A	HEADLAMP (2 OF 2)
67827-88A	FRONT TURN SIGNALS
67828-88A	FRONT TURN SIGNALS
67829-88	FRONT TURN SIGNALS
67841-93	HEADLAMP (2 OF 2)
67846-70	AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC
67849-93	HEADLAMP (2 OF 2)
67858-89	AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC
67872-89B	HEADLAMP (2 OF 2)
6788	SADDLEBAGS - FLSTC & FLSTN
67892-93	HEADLAMP (1 OF 2)
67894-93A	HEADLAMP (2 OF 2)
68000056	AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC
68008-73B	TAIL LAMP & REAR TURN SIGNALS
68010-90	TAIL LAMP & REAR TURN SIGNALS
68026-73	TAIL LAMP & REAR TURN SIGNALS
68027-90	TAIL LAMP & REAR TURN SIGNALS
68032-90	TAIL LAMP & REAR TURN SIGNALS
68033-90	TAIL LAMP & REAR TURN SIGNALS

68036-91	<u>TAIL LAMP & REAR TURN SIGNALS</u>
68046-79	<u>REAR FENDER</u>
68047-79	<u>REAR FENDER</u>
68050-93A	<u>HEADLAMP (2 OF 2)</u>
68051-93A	<u>HEADLAMP (2 OF 2)</u>
68052-93	<u>HEADLAMP (2 OF 2)</u>
6812	<u>FRONT FORK - FXSTS</u> <u>FORK ROCKERS & CALIPER MOUNTING - FXSTS</u>
68123-73	<u>TAIL LAMP & REAR TURN SIGNALS</u>
68163-84	<u>FRONT TURN SIGNALS</u> <u>TAIL LAMP & REAR TURN SIGNALS</u>
68168-89A	<u>AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC</u> <u>FRONT TURN SIGNALS</u> <u>TAIL LAMP & REAR TURN SIGNALS</u>
68169-90A	<u>TAIL LAMP & REAR TURN SIGNALS</u>
68329-03	<u>HEADLAMP (1 OF 2)</u>
68348-05	<u>AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC</u>
68355-05	<u>AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC</u>
68392-91A	<u>TAIL LAMP & REAR TURN SIGNALS</u>
68401-90	<u>AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC</u>
68402-86	<u>TAIL LAMP & REAR TURN SIGNALS</u>
68403-86A	<u>TAIL LAMP & REAR TURN SIGNALS</u>
68406-86C	<u>FRONT TURN SIGNALS</u>
68407-86	<u>TAIL LAMP & REAR TURN SIGNALS</u>
68408-86D	<u>FRONT TURN SIGNALS</u>
68410-87B	<u>TAIL LAMP & REAR TURN SIGNALS</u>
68414-05A	<u>AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC</u>
68440-86	<u>AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC</u> <u>TAIL LAMP & REAR TURN SIGNALS</u>
68452-86	<u>AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC</u> <u>FRONT TURN SIGNALS</u> <u>TAIL LAMP & REAR TURN SIGNALS</u>
68457-86	<u>TAIL LAMP & REAR TURN SIGNALS</u>
68462-64	<u>INSTRUMENTS (2 OF 2)</u>
68480-73	<u>TAIL LAMP & REAR TURN SIGNALS</u>

68493-90	<u>TAIL LAMP & REAR TURN SIGNALS</u>
68505-90	<u>AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC</u>
68506-92	<u>TAIL LAMP & REAR TURN SIGNALS</u>
68507-90	<u>TAIL LAMP & REAR TURN SIGNALS</u>
68510-74C	<u>TAIL LAMP & REAR TURN SIGNALS</u>
68519-68A	<u>AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC</u>
68537-89G	<u>SWITCHES & CIRCUIT BREAKERS</u>
68566-90	<u>FRONT TURN SIGNALS</u>
68572-64B	<u>TAIL LAMP & REAR TURN SIGNALS</u>
68594-84	<u>FRONT FENDERS</u>
68619-83	<u>AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC</u>
68654-92	<u>HEADLAMP (2 OF 2)</u>
68661-87	<u>AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC</u>
68668-87	<u>AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC</u>
68671-69D	<u>AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC</u>
68672-38	<u>AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC</u>
68674-69A	<u>AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC</u>
68683-02	<u>AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC</u>
68690-69	<u>AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC</u>
68720-62	<u>AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC</u>
68721-62	<u>AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC</u>
68725-62A	<u>AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC</u>
69012-93A	<u>HORN</u>
69060-90H	<u>HORN</u>
69062-91	<u>HORN</u>
69120-91	<u>HORN</u>
69125-65	<u>HORN</u>
69126-92	<u>AIR CLEANER & ENRICHENER</u>
70005-70	<u>MISCELLANEOUS ELECTRICAL</u>
70043-81	<u>MISCELLANEOUS ELECTRICAL</u>
70047-82	<u>HANDLEBAR SWITCHES</u>
70060-92B	<u>WIRING</u>

7007	REAR BRAKE CONTROL - FLST (1 OF 2)
70078-91A	WIRING
70082-82	HANDLEBAR SWITCHES
7012	FORK ROCKERS & CALIPER MOUNTING - FXSTS
7015	SWITCHES & CIRCUIT BREAKERS
70191-73A	HANDLEBAR WIRING
70196-86	FRONT FENDERS
70197-86	HANDLEBAR
70216-93B	WIRING
70218-87A	HANDLEBAR SWITCHES
70219-87	HANDLEBAR SWITCHES
70292-89	AIR CLEANER & ENRICHENER
70293-87A	MISCELLANEOUS ELECTRICAL
70321-89	WIRING
7036	ELECTRONIC IGNITION SYSTEM FRONT FENDERS
7038	REAR BRAKE CONTROL - FLST (1 OF 2) FOOTBOARDS HEADLAMP (1 OF 2) HEADLAMP (1 OF 2) EXHAUST SYSTEM (1 OF 2)
7039	CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (1 OF 2) FRONT FORK - FXSTC FRONT FORK - FLSTC/F/N (1 OF 2)
7041	ELECTRONIC IGNITION SYSTEM STARTER MOTOR (1 OF 2) GEAR SHIFTER (1 OF 2) FRONT FORK - FXSTC FRONT FORK - FLSTC/F/N (1 OF 2) FRAME, REAR FORK & JIFFY STAND (1 OF 2) AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC FRONT FENDERS FUEL TANK EXHAUST SYSTEM (1 OF 2) INSTRUMENTS (1 OF 2) SADDLEBAGS - FLSTC & FLSTN
7042	TAIL LAMP & REAR TURN SIGNALS
7045	TAIL LAMP & REAR TURN SIGNALS
70504-81	THROTTLE CONTROL
70551-69	WIRING

70552-69	WIRING
70553-69	WIRING
70554-69	WIRING
70555-69	WIRING
70556-71	WIRING
70558-71	WIRING
70559-71	WIRING
70578-89	MISCELLANEOUS ELECTRICAL
70579-65	INSTRUMENTS (2 OF 2) MISCELLANEOUS ELECTRICAL
70585-93	MISCELLANEOUS ELECTRICAL
70586-93	MISCELLANEOUS ELECTRICAL
70587-93	MISCELLANEOUS ELECTRICAL
7068	FRONT WHEEL (1 OF 2) SEATS & SISSY BAR FOOTRESTS HANDLEBAR
7069	AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC
7073	WINDSHIELD - FLSTC
70933-90	CALIFORNIA EVAPORATIVE EMISSIONS KIT
70936-91B	INSTRUMENTS (2 OF 2)
70939-84A	INSTRUMENTS (2 OF 2)
70941-84A	INSTRUMENTS (2 OF 2)
7101	TAIL LAMP & REAR TURN SIGNALS
71090-64	INSTRUMENTS (2 OF 2)
71092-68A	INSTRUMENTS (2 OF 2)
71134-68	INSTRUMENTS (2 OF 2)
71141-68	INSTRUMENTS (2 OF 2)
71143-90	INSTRUMENTS (2 OF 2)
71144-75A	INSTRUMENTS (2 OF 2)
71145-75	INSTRUMENTS (2 OF 2)
7115	FRAME, REAR FORK & JIFFY STAND (1 OF 2)
71150-92	INSTRUMENTS (2 OF 2)
71151-92	INSTRUMENTS (2 OF 2)

71152-92	INSTRUMENTS (2 OF 2)
71158-86B	INSTRUMENTS (2 OF 2)
7118	REAR FENDER
71182-47A	INSTRUMENTS (2 OF 2)
7124	ALTERNATOR & REGULATOR FRONT FORK - FLSTC/F/N (1 OF 2) FRAME, REAR FORK & JIFFY STAND (1 OF 2)
71241-91	INSTRUMENTS (2 OF 2)
7127	FRONT FENDERS FRONT TURN SIGNALS MIRRORS
7129	HANDLEBAR
71295-68	INSTRUMENTS (2 OF 2)
71297-68	INSTRUMENTS (2 OF 2)
71300-79	INSTRUMENTS (2 OF 2)
71300-94	INSTRUMENTS (2 OF 2)
7142	FRAME, REAR FORK & JIFFY STAND (1 OF 2)
71501-73A	SWITCHES & CIRCUIT BREAKERS
71501-94	SWITCHES & CIRCUIT BREAKERS
71506-84	SWITCHES & CIRCUIT BREAKERS
71506-94	SWITCHES & CIRCUIT BREAKERS
71541-84	SWITCHES & CIRCUIT BREAKERS
71557-93	HANDLEBAR SWITCHES
71560-84	SWITCHES & CIRCUIT BREAKERS
71563-82A	HANDLEBAR SWITCHES
71564-82A	HANDLEBAR SWITCHES
71567-82	HANDLEBAR SWITCHES
71568-82A	HANDLEBAR SWITCHES
71580-84	SWITCHES & CIRCUIT BREAKERS
71583-85	SWITCHES & CIRCUIT BREAKERS
71589-92	HANDLEBAR SWITCHES
71590-92A	HANDLEBAR SWITCHES
71591-92	HANDLEBAR SWITCHES
71597-92	HANDLEBAR SWITCHES

71598-92	HANDLEBAR SWITCHES
71600-93	SWITCHES & CIRCUIT BREAKERS
71795-63A	REAR FENDER
720	CRANKCASE (1 OF 2)
72023-51E	REAR BRAKE CONTROL - FXST REAR BRAKE CONTROL - FLST (2 OF 2) SWITCHES & CIRCUIT BREAKERS
72034-71	MISCELLANEOUS ELECTRICAL
72035-71	MISCELLANEOUS ELECTRICAL
72037-71	MISCELLANEOUS ELECTRICAL
72038-71A	AIR CLEANER & ENRICHENER MISCELLANEOUS ELECTRICAL HANDLEBAR SWITCHES
72039-71A	AIR CLEANER & ENRICHENER AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC FRONT TURN SIGNALS TAIL LAMP & REAR TURN SIGNALS MISCELLANEOUS ELECTRICAL HANDLEBAR SWITCHES
72043-71A	AIR CLEANER & ENRICHENER MISCELLANEOUS ELECTRICAL HANDLEBAR SWITCHES
72044-71A	MISCELLANEOUS ELECTRICAL
72046-79	MISCELLANEOUS ELECTRICAL
72051-77A	ELECTRONIC IGNITION SYSTEM MISCELLANEOUS ELECTRICAL
7220	FRONT FENDERS WIRING
72275-74	MISCELLANEOUS ELECTRICAL
72276-74	MISCELLANEOUS ELECTRICAL
72277-74	MISCELLANEOUS ELECTRICAL
72278-74A	MISCELLANEOUS ELECTRICAL
7229W	INSTRUMENTS (1 OF 2)
7230	GEAR SHIFTER (1 OF 2) FRAME, REAR FORK & JIFFY STAND (1 OF 2) FOOTBOARDS WIRING
7232	FRONT FORK - FXSTS INSTRUMENTS (1 OF 2)
728	FRAME, REAR FORK & JIFFY STAND (1 OF 2)

73152-96BK	AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC
73191-96	AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC
739A	TRANSMISSION HOUSING PRIMARY HOUSING
74412-91	MISCELLANEOUS ELECTRICAL
74519-88A	ALTERNATOR & REGULATOR
74521-77A	ELECTRONIC IGNITION SYSTEM MISCELLANEOUS ELECTRICAL
74536-77A	ELECTRONIC IGNITION SYSTEM MISCELLANEOUS ELECTRICAL
74539-77A	ELECTRONIC IGNITION SYSTEM MISCELLANEOUS ELECTRICAL
74589-73	SWITCHES & CIRCUIT BREAKERS
74599-77B	SWITCHES & CIRCUIT BREAKERS
7495	HORN
7501	TAIL LAMP & REAR TURN SIGNALS
7506	CRANKCASE (1 OF 2)
7507	GEAR SHIFTER (1 OF 2) REAR BELT GUARD FRAME, REAR FORK & JIFFY STAND (1 OF 2) FRONT FENDERS EXHAUST SYSTEM (1 OF 2) HORN SADDLEBAGS - FLSTC & FLSTN
75101-82	OIL TANK BATTERY
7515	GEAR SHIFTER (1 OF 2)
7531	FRONT BRAKE CONTROL FRONT FENDERS FRONT FENDER - FXSTS OIL TANK EXHAUST SYSTEM (1 OF 2)
7549A	INSTRUMENTS (1 OF 2)
7576	HORN
7588	FORK ROCKERS & CALIPER MOUNTING - FXSTS
7593	CRANKCASE (1 OF 2) EXHAUST SYSTEM (1 OF 2)
7600	FRONT FENDERS
7601	CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (1 OF 2) AIR CLEANER & ENRICHENER SADDLEBAGS - FLSTC & FLSTN

7602	SWITCHES & CIRCUIT BREAKERS
7606	HEADLAMP (1 OF 2)
7613A	FRONT FENDERS
7624	FRONT FENDERS LICENSE PLATE BRACKETS
7627	FRONT FORK - FXSTS FORK ROCKERS & CALIPER MOUNTING - FXSTS
7629	CRANKCASE - GEAR SIDE ELECTRONIC IGNITION SYSTEM FRONT FENDERS REAR FENDER SWITCHES & CIRCUIT BREAKERS
7643W	SEATS & SISSY BAR REAR FENDER SUPPORTS
7651A	WINDSHIELD - FLSTC
7667	FORK ROCKERS & CALIPER MOUNTING - FXSTS FOOTRESTS
7669	REAR BELT GUARD
7680W	FRONT FORK - FXSTS SEATS & SISSY BAR REAR FENDER SUPPORTS REAR FENDER SUPPORTS REAR FENDER SUPPORTS
7686	ELECTRONIC IGNITION SYSTEM FRONT BRAKE CONTROL OIL TANK
7688	ALTERNATOR & REGULATOR
7689W	FRONT FENDERS
7716	FOOTBOARDS
7736	FRAME, REAR FORK & JIFFY STAND (1 OF 2) MIRRORS
7739	FRONT WHEEL (1 OF 2)
7740	REAR BRAKE CONTROL - FLST (1 OF 2)
7742	REAR BRAKE CONTROL - FXST FRAME, REAR FORK & JIFFY STAND (1 OF 2)
7744	REAR BRAKE CONTROL - FXST FRONT TURN SIGNALS
7748W	REAR BRAKE CONTROL - FLST (1 OF 2) FRONT FORK - FXSTC FRONT FORK - FLSTC/F/N (1 OF 2) FRAME, REAR FORK & JIFFY STAND (1 OF 2) EXHAUST SYSTEM (1 OF 2)
7753	ELECTRONIC IGNITION SYSTEM

	FRAME, REAR FORK & JIFFY STAND (1 OF 2)
7763W	INSTRUMENTS (1 OF 2)
7768W	HANDLEBAR
7775	REAR FENDER SUPPORTS
7778	BELTS, CHAINS & SPROCKETS REAR WHEEL (1 OF 2) FRAME, REAR FORK & JIFFY STAND (1 OF 2) FOOTRESTS AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC SADDLEBAGS - FLSTC & FLSTN
7782	FRAME, REAR FORK & JIFFY STAND (1 OF 2)
7783	FRAME, REAR FORK & JIFFY STAND (1 OF 2) SADDLEBAGS - FLSTC & FLSTN
7792	LICENSE PLATE BRACKETS
7800W	HEADLAMP (1 OF 2) TAIL LAMP & REAR TURN SIGNALS
7825	REAR BRAKE CONTROL - FLST (1 OF 2)
7827W	REAR WHEEL (1 OF 2)
7838	STARTER MOTOR (1 OF 2)
7845	FRONT WHEEL (1 OF 2)
7848W	CLUTCH
7855W	REAR BRAKE CONTROL - FXST
7868	SADDLEBAGS - FLSTC & FLSTN
7883	CRANKCASE (1 OF 2)
7916A	CRANKCASE - GEAR SIDE
7987	REAR WHEEL (1 OF 2)
7994	FRONT WHEEL (1 OF 2)
8099	SADDLEBAGS - FLSTC & FLSTN CALIFORNIA EVAPORATIVE EMISSIONS KIT
8108	REAR BRAKE CONTROL - FLST (1 OF 2) FRONT FORK - FLSTC/F/N (1 OF 2) FRAME, REAR FORK & JIFFY STAND (1 OF 2) FUEL TANK HORN
8155	INSTRUMENTS (1 OF 2)
83162-51	CRANKCASE - GEAR SIDE ELECTRONIC IGNITION SYSTEM
8476	FUEL TANK

8483A	REAR FENDER LICENSE PLATE BRACKETS SWITCHES & CIRCUIT BREAKERS
8505	FRONT FENDERS FRONT FENDER - FXSTS
8535	AIR CLEANER & ENRICHENER
855B	FRONT BRAKE CALIPER FRONT FORK - FXSTS
856A	GEAR SHIFTER (1 OF 2)
858A	PRIMARY HOUSING
861A	HEADLAMP (1 OF 2)
8625	AIR CLEANER & ENRICHENER
864A	AIR CLEANER & ENRICHENER
868A	SEATS & SISSY BAR
8699	CRANKCASE - GEAR SIDE ELECTRONIC IGNITION SYSTEM
872A	FOOTRESTS
882	ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION
8871	STARTER MOTOR (1 OF 2)
8873	OIL PUMP TRANSMISSION HOUSING
8876A	TRANSMISSION GEARS
8879	STARTER MOTOR (1 OF 2)
8883	STARTER MOTOR (1 OF 2)
891	OIL PUMP
89579-91	HORN
8977	TRANSMISSION HOUSING
8996A	TRANSMISSION HOUSING
8998	TRANSMISSION HOUSING
9028	CRANKCASE (1 OF 2)
90346-90	SADDLEBAGS - FLSTC & FLSTN
90346-94	SADDLEBAGS - FLSTC & FLSTN
90361-90	SADDLEBAGS - FLSTC & FLSTN
90361-94A	SADDLEBAGS - FLSTC & FLSTN
90470-90	SADDLEBAGS - FLSTC & FLSTN

90471-90	SADDLEBAGS - FLSTC & FLSTN
90473-94	SADDLEBAGS - FLSTC & FLSTN
90476-93	SADDLEBAGS - FLSTC & FLSTN
90477-93	SADDLEBAGS - FLSTC & FLSTN
9052	FRONT WHEEL (1 OF 2) REAR WHEEL (1 OF 2)
9058A	CRANKCASE - GEAR SIDE
9076	FRAME, REAR FORK & JIFFY STAND (1 OF 2)
9077	STARTER MOTOR (1 OF 2)
90770-79	CLUTCH CONTROL
90785-90	SADDLEBAGS - FLSTC & FLSTN
90785-94	SADDLEBAGS - FLSTC & FLSTN
90787-90	SADDLEBAGS - FLSTC & FLSTN
90787-94	SADDLEBAGS - FLSTC & FLSTN
90804-92	SADDLEBAGS - FLSTC & FLSTN
90804-94	SADDLEBAGS - FLSTC & FLSTN
90806-92	SADDLEBAGS - FLSTC & FLSTN
90806-94	SADDLEBAGS - FLSTC & FLSTN
9110	CRANKCASE (1 OF 2)
9114	GEAR SHIFTER (1 OF 2)
9115	GEAR SHIFTER (1 OF 2)
9120	CRANKCASE (1 OF 2)
9121	CRANKCASE (1 OF 2)
9122	CRANKCASE (1 OF 2)
9123	CRANKCASE (1 OF 2)
9124	CRANKCASE (1 OF 2)
9125	CRANKCASE (1 OF 2)
9126	CRANKCASE (1 OF 2)
9127	CRANKCASE (1 OF 2)
9128	CRANKCASE (1 OF 2)
9129	CRANKCASE (1 OF 2)
9130	CRANKCASE (1 OF 2)

9131	CRANKCASE (1 OF 2)
9132	CRANKCASE (1 OF 2)
9133	CRANKCASE (1 OF 2)
9134	CRANKCASE (1 OF 2)
9135	PRIMARY HOUSING
9139	FORK ROCKERS & CALIPER MOUNTING - FXSTS
9140	FORK ROCKERS & CALIPER MOUNTING - FXSTS
9141	FORK ROCKERS & CALIPER MOUNTING - FXSTS
91768-96	SEATS & SISSY BAR
91791-87	SADDLEBAGS - FLSTC & FLSTN
91792-87	SADDLEBAGS - FLSTC & FLSTN
91850-87A	SEATS & SISSY BAR
91875-88A	MIRRORS
91892-88A	MIRRORS
923	FRONT BRAKE CONTROL FRONT FORK - FLSTC/F/N (1 OF 2)
924	FUEL TANK
925	STARTER MOTOR (1 OF 2)
927A	OIL PUMP
928	STARTER MOTOR (1 OF 2)
929A	STARTER MOTOR (1 OF 2)
933	ELECTRONIC IGNITION SYSTEM
939	FRAME, REAR FORK & JIFFY STAND (1 OF 2)
940	PRIMARY HOUSING
941	PRIMARY HOUSING
94605-98	REAR FENDER SUPPORTS
95578-41	FRONT WHEEL (2 OF 2) REAR WHEEL (2 OF 2)
95581-47	FRONT WHEEL (2 OF 2) REAR WHEEL (2 OF 2)
95582-47	FRONT WHEEL (2 OF 2) REAR WHEEL (2 OF 2)
95595-84B	FRONT WHEEL (2 OF 2) REAR WHEEL (2 OF 2)

9852	MISCELLANEOUS ELECTRICAL
9856	MISCELLANEOUS ELECTRICAL
9857	HEADLAMP (1 OF 2) MISCELLANEOUS ELECTRICAL
9858	AIR CLEANER & ENRICHENER
9860	MISCELLANEOUS ELECTRICAL
9862	MISCELLANEOUS ELECTRICAL
9863	MISCELLANEOUS ELECTRICAL
9864	MISCELLANEOUS ELECTRICAL
9866	ALTERNATOR & REGULATOR MISCELLANEOUS ELECTRICAL
9871	MISCELLANEOUS ELECTRICAL
9875	MISCELLANEOUS ELECTRICAL HANDLEBAR SWITCHES
9881	ELECTRONIC IGNITION SYSTEM
9890	FUEL TANK
9894	AIR CLEANER & ENRICHENER
9898	MISCELLANEOUS ELECTRICAL HANDLEBAR SWITCHES
9900	AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC MISCELLANEOUS ELECTRICAL
99000-77	SEATS & SISSY BAR
9905	MISCELLANEOUS ELECTRICAL
9908	ELECTRONIC IGNITION SYSTEM
9928	AIR CLEANER & ENRICHENER
9952	SWITCHES & CIRCUIT BREAKERS
9955	EXHAUST SYSTEM (1 OF 2) EXHAUST SYSTEM (1 OF 2)
9969	OIL TANK
9988	THROTTLE CONTROL CALIFORNIA EVAPORATIVE EMISSIONS KIT

Component Types and Introduction Dates

[View interactive table](#)

101A1 - Generic Nuts

7736

1949

7739	Unknown
7588	Unknown
7845	Unknown
7643W	Unknown
7576	1990
7838	Unknown
7624	Unknown
7629	1990
7627	Unknown
7792	2012
7515	Unknown
7680W	Unknown
7689W	Unknown
7782	2013
7778	Unknown
7763W	Unknown
7775	Unknown
7916A	Unknown
7613A	1959
7501	2010
7827W	1976
7748W	Unknown
7825	Unknown
3403	Unknown
37503-41	1941
7506	Unknown
7768W	Unknown
11192	2000
35078-79	1979
7987	Unknown
67846-70	1970
7495	1994
7994	1988

7883	Unknown
8099	Unknown
7753	Unknown
8108	Unknown
40392-91	1991
7744	1943
7740	Unknown
7593	1991
7742	Unknown
7549A	Unknown
7601	1990
7602	Unknown
102A1 - Generic Screws	
2917	2000
3533	Unknown
3730A	Unknown
1795A	Unknown
3991	2009
2582	2003
3549A	Unknown
68052-93	1993
4961	Unknown
882	2000
3987	Unknown
33119-79B	1979
42375-87	1987
3546	2013
2907	Unknown
2005	1980
3849	Unknown
2567	Unknown
2579A	Unknown

2562	2003
2602A	Unknown
2574WA	Unknown
4741A	1994
68672-38	1938
2692WB	Unknown
3655A	Unknown
4718A	1994
3953W	2009
3485A	Unknown
3512	Unknown
3793A	Unknown
4742A	Unknown
43567-92	1992
4014W	2009
3514	Unknown
2698A	Unknown
47579-93	1993
941	Unknown
3201WA	Unknown
4350A	Unknown
940	Unknown
3561WC	Unknown
4747	Unknown
94605-98	1998
2921	Unknown
4044	Unknown
4091	Unknown
891	2013
4326A	1990
864A	Unknown
2773	Unknown
68452-86	1986

2723A	Unknown
4740A	1994
45405-75A	1975
1046	Unknown
933	Unknown
2871W	2017
37090-84A	1984
67117-85	1985
939	1991
3560WA	Unknown
2647B	Unknown
4729	Unknown
4724	2009
2818	2009
90770-79	1979
4726	2009
4722	2009
4721	2009
3577	1996
2711	Unknown
3576	2013
3594	1992
45838-77	1977
27129-88	1988
42534-90	1990
928	Unknown
925	Unknown
923	Unknown
924	Unknown
861A	Unknown
4816A	Unknown
3996	2009

3993	Unknown
2607	Unknown
2604	Unknown
3531A	1990
4416	1985
2594A	1996
4719W	2009
2904A	Unknown
4411	2009
2720	2012
3419	2009
868A	Unknown
45858-77	1977
3588	1990
2882W	2009
4017	2009
3562	Unknown
929A	Unknown
2614	2000
29283-93	1993
4015	Unknown
29269-83A	1983
3430	1979
2538	Unknown
3509	Unknown
2737	1986
4713W	2009
2739	Unknown
2531	Unknown
3960W	2009
3210A	Unknown
3516A	Unknown
3602A	Unknown

4820A	Unknown
50635-82A	1982
2611C	Unknown
3559	Unknown
4352	Unknown
3427	2009
56402-83A	1983
27317-88	1988
2216W	1963
27146-89	1989
4358A	Unknown
3480A	Unknown
3945	2003
872A	Unknown
1601	1999
3739	Unknown
4717A	Unknown
927A	Unknown
3574	Unknown
3440	2009
855B	2014
3784	Unknown
1357W	Unknown
3787	Unknown
3501A	Unknown
4716W	2009
3450	2018
16478-85A	1985
4105	Unknown
44190-88A	1988
856A	1990
1783C	Unknown

2879W	2009
3445	Unknown
56397-74C	1974
2823	Unknown
3500A	Unknown
3691	Unknown
3770	Unknown
4813A	1990
3974HW	2009
4163	Unknown
5403B	Unknown
3769	1978
4068A	Unknown
67748-87	1987
4325	1999
4453	1986
3540	Unknown
5444	Unknown
3473	Unknown
858A	Unknown
16480-92A	1992
2444	Unknown
4814A	Unknown
3538	Unknown
3471	2009
103A1 - Generic Washers	
25323-82	1982
6019	Unknown
6639	2006
6758	1988
61641-84	1984
6756	1988
6302	Unknown

7229W	Unknown
33212-80	1980
45662-88	1988
6016	2013
6474	Unknown
6040A	2000
56159-73	1973
27125-89	1989
6497HW	2010
6771A	Unknown
43650-82	1982
25550-57A	1957
6035A	Unknown
27148-89	1989
6220W	Unknown
6352	Unknown
25325-82	1982
6366	1987
6365	2014
6379W	Unknown
7118	Unknown
6371	Unknown
6788	Unknown
6333	Unknown
6057	1991
6334	Unknown
45717-63	1963
6099	2011
27127-89	1989
25320-82	1982
6109	1980
6047	Unknown

7129	Unknown
31689-90	1990
6072	Unknown
6048W	1975
6590HW	Unknown
7230	Unknown
7232	1954
6253W	Unknown
6516HW	Unknown
6036	Unknown
6812	Unknown
6042A	Unknown
25327-82	1982
65782-82	1982
7220	Unknown
25326-82	1982
27137-81	1981
7068	Unknown
6498	Unknown
7038	1998
7039	Unknown
6724	1984
6410	Unknown
25322-82	1982
25321-82	1982
6409	Unknown
7073	Unknown
6198	Unknown
6199	Unknown
25328-82	1982
6762B	Unknown
6736	Unknown
6753	Unknown

6737	Unknown
7042	Unknown
6655	1979
7041	1958
7015	Unknown
6703	1970
6701	Unknown
6702	Unknown
6235	Unknown
42531-87	1987
6645	Unknown
33043-80	1980
7045	Unknown
6400HB	Unknown
71182-47A	1947
6716	Unknown
104A1 - Custom Nuts	
7868	1993
23981-98	1998
8155	2002
54321-85	1985
7606	1983
105A1 - Custom Screws	
27158-89	1989
3504	Unknown
27130-90	1990
5465	2003
4074A	2006
106A1 - Custom Washers	
6003	2010
7124	Unknown
6506	Unknown

108A1 - Hose Clamps

10067	2006
10038A	1994
65411-80A	1980
10031	2010
60005-77	1977
65276-62	1962
10014	Unknown
10059A	2010
9955	Unknown
10086	Unknown
10080	Unknown
10074	Unknown

108B1 - P Clamps

10122	Unknown
10033	2010
10003	2010
510	Unknown
71795-63A	1965
10076	2010
10112	1999

109A1 - Studs

42301-87A	1997
16715-83	1983
56105-84	1984
45998-73	1973
16837-85C	1985
11733A	Unknown
3506	Unknown
11729	Unknown
45544-88	1988

110A1 - Bearing Dust Seals

24628-87A	1987
-----------	------

24626-87A	1987
110B1 - Plain Bushings	
31430-93	1993
9058A	2014
31430-94	1994
33211-80	1980
57215-75	1975
42524-82A	1982
33446-89	1989
33445-89	1989
48330-48A	1948
8996A	1996
17429-91	1991
90361-94A	1996
33446-94A	1994
33714-90B	2011
33207-80	1980
9139	1988
53156-86	1986
8998	1996
46020-84	1984
44030-88A	1988
24600-58B	1958
25582-93	1993
33205-80	1980
24601-58B	1958
8876A	Unknown
33445-94A	1994
33708-94	1994
45934-86	1986
33209-80	1980
45866-84	1984

9076	1984
9141	1988
33208-80	1980
8883	Unknown
33206-80	1980
8879	Unknown
44035-86A	1986
25581-70	1970
33210-80	1980
24641-36	1936
110C1 - Radial Shaft Seals	
83162-51	1951
26227-58	1958
12050	Unknown
12066A	Unknown
67098-87	1987
12045	Unknown
12035B	Unknown
12026B	Unknown
12052A	2003
12067B	2002
110D1 - Rolling Element Bearings	
9115	Unknown
9114	Unknown
24643-87A	1987
8977	Unknown
9135	Unknown
24346-87A	1987
24641-87A	1987
9140	1988
8871	Unknown
9052	Unknown
9028	2009

33720-93	1993
111A1 - Adhesive	
9871	Unknown
58417-77	1977
74521-77A	1977
9852	Unknown
9862	Unknown
111B1 - Tape	
61157-87	1987
111C1 - Insulating Tape	
61640-84	1984
111F1 - Protective Tape	
65716-91	1991
65714-91	1991
116A1 - Banjo Bolts	
41739-84A	1984
41747-82A	1982
117A1 - Coil Springs	
56396-74A	1974
27162-89	1989
119A1 - O-Rings	
11165	Unknown
11241	Unknown
26432-76A	1976
11105	Unknown
10957	2006
11145A	2007
11157	1983
27577-92	1992
11147B	2006
45845-77	1977
11132A	2007

11191	1989
44059-83	1983
31695-90	1990
11173	1999
11179	1986
27157-89	1989
120A1 - Pins	
601	Unknown
609	Unknown
51923-86	1986
239	2009
634	Unknown
16573-83A	1983
534	Unknown
42460-80B	1980
337	Unknown
515	Unknown
42269-30	1930
375	Unknown
358	Unknown
275	1992
121A1 - Grommets	
11717	2004
11447	1984
67067-76	1976
11437	Unknown
11430	1994
11460	1992
121B1 - Press-Fit Plugs	
26263-80	1980
739A	Unknown
653	Unknown
70292-89	1989

121C1 - Threaded Plugs

728 1998

720 2013

122A1 - Retaining Rings

10998 1985

41713-86 1986

10124 1992

17945-36B 1936

11016 Unknown

26348-36 1936

45021-86 1986

10040 1982

44021-83 1983

11002 Unknown

9890 Unknown

65325-83A 1983

45611-86 1986

27368-76 1976

9894 Unknown

11150 1984

11155 Unknown

11020 1979

11158 Unknown

9988 1992

31530-90 1990

11143 Unknown

11177A 1996

11096 2010

11067 Unknown

11182 Unknown

11183 2000

11160A 1990

11083	Unknown
27124-89	1989
60678-85	1985
11175	1989
35021-89	1989
67069-76	1976
11248	Unknown
11161	Unknown
9952	1973
123A1 - Sealing Washers	
26262-80	1980
123B1 - Spring Washers	
7007	1989
7101	1989
7115	Unknown
7127	Unknown
7142	1999
7069	Unknown
124A1 - Spacers	
43290-82	1982
43283-86	1986
44029-88	1988
35852-84	1984
75101-82	1982
29961-85	1985
24002-70	1970
24033-70	1970
33344-94	1994
43294-82	1982
5775	1984
52103-31	1931
5756	Unknown
33114-79	1979

35850-84	1984
5885	Unknown
43293-82	1982
35851-84	1984
5774	Unknown
62043-81A	1981
24037-70	1970
35629-79	1979
33334-85	1985
5710	Unknown
11244	Unknown
125A1 - Tie Straps	
10065	1985
70191-73A	1975
10039	1981
10006	1960
10081	1984
10073	1985
126A1 - Miscellaneous Hardware	
42479-90	1990
50972-75	1975
31692-90	1990
42473-87	1987
46057-88	1988
47698-86B	1986
9881	Unknown
44126-87	1987
60647-90	1990
46053-88	1988
27136-90A	1990
45567-88	1988
50027-84	1984

11456	Unknown
46056-88	1988
46060-88	1988
61095-92	1992
41042-93	1993
33126-94	1994
59710-84	1984
33126-93	1993
11219	Unknown
11218	Unknown
63530-92	1992
33318-85	1985
45628-92	1992
45935-88	1988
46059-90	1990
27040-88	1988
45937-88	1988
50025-84	1984
33449-94	1994
44045-87A	2013
33449-90	1990
56394-74	1974
46062-88	1988
8873	1984
38711-93	1993
44061-83	1983
126B1 - Rivets Fasteners	
8476	1991
8625	Unknown
8535	Unknown
8699	1980
8483A	Unknown
8505	Unknown

127B1 - Generic Mounting Bracket	
57852-02A	2002
33519-92A	1992
51652-83B	1983
38608-82B	1982
59959-86	1986
140A1 - Battery Warning Label	
70043-81	1981
15368-01A	2001
140A2 - General Warning Label	
29126-90B	1990
44197-77	1977
140A3 - Other Special Warning Label	
14150-86	1986
141A1 - Medallion	
14387-93	1993
90470-90	1990
14270-92	1992
14360-92	1992
14341-93	1993
71300-94	1994
14353-92	1992
14356-92	1992
14359-92	1992
14338-93	1993
14397-93	1993
14384-93	1993
14388-93	1993
61367-92	1992
61367-94	1994
14385-93	1993
66030-88	1988

14228-91	1991
14339-90	1990
14398-93	1993
14287-94	1994
14386-93	1993
14335-90	1990
14390-93	1993
61366-94	1994
14355-92	1992
162D1 - Engine Assembly	
16121-93	1993
16121-94	1994
16122-94	1994
16122-93	1993
16126-94	1994
16126-93	1993
163B1 - Engine Isolator Mount	
90473-94	1994
164A1 - Engine Mount Bracket	
16247-91	1991
164B1 - Engine Mount Bracket sub-component	
7600	Unknown
7716	1990
7783	Unknown
7531	1980
16242-90	1990
7669	Unknown
7667	Unknown
7688	2000
7686	Unknown
5207	1980
7507	Unknown
7848W	Unknown

7855W	Unknown
7800W	Unknown
16284-84	1984
165A1 - Cylinder Head	
16692-95	1995
18011-86	1986
16696-92A	1992
165B1 - Cylinder Head and Base Gaskets	
16774-86D	1986
16770-84F	1984
16778-84A	1984
16779-84A	1984
167A1 - PT Assembly Miscellaneous Component	
37971-90	1990
179A1 - Lifters	
18523-86B	1986
179B1 - Push Rod	
17921-83A	1983
17930-83A	1983
17924-83A	1983
17927-83A	1983
180A1 - Valves	
18076-83	1983
18101-83D	1999
18074-83B	2007
18082-83A	1983
18087-83	1983
181B1 - Valve Seals	
18133-83B	1983
18130-83D	1983
18219-83A	1983
18020-83	1983

18134-83	1983
18131-83D	1983
18124-83	1983
18001-83B	1983
181C1 - Valve Collars	
18229-83A	1984
17947-36	1936
17950-66	1966
184A1 - PT Camdrive and Valvetrain Miscellaneous Component	
17355-92A	2010
17356-92A	2010
17358-84B	2010
219A1 - Piston	
16512-86A	1986
21942-83	1983
21944-83	1983
21940-83	1983
21941-83	1983
21943-83	1983
220A1 - Piston Ring	
21921-83	1983
21923-83	1983
21924-83	1983
21920-83	1983
21922-83	1983
221A1 - Piston Pin	
22589-83B	1983
22764-83	1983
237A1 - Connecting Rod	
24281-83	1983
237B1 - Connecting Rod sub-component	
24356-36A	1936
24335-36	1936

24334-36	1936
239A1 - PT Lower End Miscellaneous Component	
23928-87	1987
24345-36A	1936
48365-48A	1981
241A1 - Flywheel	
23906-93B	1999
23961-80A	1981
244A1 - Crankcase	
24571-93	1993
244D1 - Crankcase sub-component	
24032-70	1970
24034-70	1970
24035-70	1970
24046-93	1993
24043-93	1993
24044-93	1993
24045-93	1993
24042-93	1993
24040-93	1993
24041-93	1993
24599-93	1993
244E1 - Transmission Access Door	
23974-87	1987
23975-87	1987
245A1 - PT Cases Miscellaneous Component	
24036-70	1970
254B1 - Camshaft	
24581-93	1993
24586-93	1993
254C1 - Camshaft Sprocket	
40299-83A	1983

254D1 - Camshaft Support	
34085-79A	1979
255C1 - Camdrive Chain Tensioner	
39990-65	1965
39976-65B	1965
255D1 - Camdrive Chain Tensioner sub-component	
39993-65	1965
256A1 - Timer Cover	
32524-83	1983
257A1 - Cam Cover	
25256-93A	1993
257B1 - Clutch Cover	
60668-84B	1984
257D1 - Clutch Inspection Cover	
60572-86	1986
257E1 - Cover Gaskets	
29252-89	1989
65324-83B	2009
31433-84A	1984
34904-86D	1986
71295-68	1968
16800-84A	1984
61109-85D	1985
67601-94A	1994
17041-92A	1992
42455-80	1980
41733-88	1988
35652-79B	1979
12053A	Unknown
45005-85	1985
45733-48	1948
60567-90C	1990
18633-48D	1948

25416-70A	1970
60539-94B	1994
36801-87C	1987
63858-49	1949
41731-88A	1988
25225-93B	1993
17042-92A	1992
32591-80	1980
47519-83A	1983
18634-48C	1948
17040-92A	1992
257G1 - Ignition Cover	
71506-84	1984
71506-94	1994
257L1 - Primary Cover	
60630-94B	1994
60543-94	1994
60543-89	1989
257M1 - Push Rod Cover	
17935-79B	1979
17938-83	1983
257N1 - Rocker-Arm / Valve Cover	
17529-92	1992
17375-83A	1983
17611-83	1983
17360-83A	1983
17530-92	1992
17528-92	1992
257P1 - Tappet Cover	
18622-85B	1985
18623-85B	1985
258A1 - PT Covers Miscellaneous Component	

34468-86A	1986
265A1 - Vent / Breather Line	
27093-92A	1996
270A1 - Carburetor	
27280-92	1992
27361-76A	1976
27339-90	1990
27035-92A	1992
27360-76	1976
27362-76	1976
27147-89	1989
27159-92	1992
27583-88	1988
27156-89	1989
27186-92	1992
27369-76	1976
29059-88A	1988
27371-76A	1976
27582-88	1988
27587-88	1988
27206-93B	1993
27311-76	1976
27101-88	1988
27038-92A	1992
27585-88	1988
27586-88	1988
27116-88	1988
27281-92	1992
27575-88A	1988
27100-88	1988
27128-89	1989
27126-89	1989
27315-88A	1988

27576-92	1992
271C1 - Intercooler Gasket	
65781-82	1982
271D1 - Intercooler Hose	
63546-87	1987
63515-92	1992
272B1 - Throttle Body / Intake Manifold	
26994-90	1990
273A1 - Intake Manifold	
27019-89A	1989
273C1 - Throttle Body/Intake Manifold sub-component	
27102-92	1992
273K1 - Throttle Body to Manifold Seal	
26995-86B	1986
273N1 - Throttle Cable Retention Bracket	
56508-76	1976
275A1 - PT Upper End Miscellaneous Component	
37313-80	1980
290A1 - Airbox Baseplate	
29134-92	1992
29017-92	1992
290C1 - Airbox Baseplate sub-component	
29256-90	1990
29068-89	1989
29169-84	1984
28823-89	1989
29161-86	1986
292B1 - Air Duct Bezel	
29181-88	1988
294A1 - Air Filter Element	
29259-91A	1991
294B1 - Breather Bolt	

25310-82A	1982
294C1 - Breather Hose	
63572-86	1986
294G1 - Air Cleaner	
27010-86A	1986
27009-86A	1986
295A1 - Intake Miscellaneous Component	
27579-88A	1988
27002-89	1989
27886-78A	1978
29258-91	1991
28842-89	1989
29229-88D	1988
29070-89B	1989
299C1 - Charging Rotor	
29957-81B	1981
32402-83	1983
299F1 - Stator Assembly	
29970-88D	2007
314E1 - Starter Friction Clutch	
31516-94A	2010
9077	Unknown
314F1 - Starter Motor	
31514-90	1990
31518-90	1990
31510-90	1990
31515-90	1990
31553-90A	1990
31553-94B	1994
31612-09	2009
314G1 - Starter Motor sub-component	
31660-90	1990
31535-91	1991

31727-85	1985
27581-88	1988
31548-90	1990
31527-90	1990
31342-93	1993
31664-94	1994
31664-90	1990
31600-90	1990
31688-90	1990
33127-93	1993
314H1 - Starter Solenoid	
28841-89	1989
31604-91A	1991
314L1 - Starter Motor Drive	
33189-63	1963
316A1 - Ignition Coil	
31800-78A	1978
31614-83A	1983
316B1 - Spark Plug Cable	
31985-91A	1991
31983-71C	1971
67075-57A	1957
336A1 - Shift Linkage Rod Assembly	
33630-90A	1990
33895-82D	2010
336C1 - Shift Linkage Rod End	
33871-85B	1985
336F1 - Toepeg	
34611-65A	1965
339A1 - Shift Lever	
33715-85A	1985
34564-90B	1990

33668-90C	1990
339B1 - Gearshift Shaft	
33642-89	1989
339D1 - Shifter Fork	
34195-79E	1979
34088-87A	1987
34193-79E	1979
34191-79E	1979
339E1 - Shifter Fork Shaft	
34084-86A	1986
339F1 - Shifter Index Lever	
34086-79	1979
339H1 - Shifter Mechanism Components (internal)	
34083-79	1979
34082-79	1979
34091-85A	1985
33332-79	1979
33326-79A	1980
33683-90A	1992
33729-82A	1982
33320-79D	1982
33660-90B	1990
34087-79A	1979
33127-94	1994
34089-79	1979
347A1 - Transmission Assembly	
33006-94	1994
33006-93	1993
34732-96	1996
35076-79	1979
33040-94	1994
37105-87A	1987
35064-79	1979

350A1 - Transmission Output Sprocket

40210-85D	1985
40250-94C	1994

350E1 - Transmission Gear

31525-90	1990
31342-94	1994
35028-79B	1979

350F1 - Transmission Mainshaft

35027-79B	1979
35029-94	1994
35027-94	1994
35026-79C	1979
35025-79B	1981
35028-94	1994
35042-91	1991
35029-91A	1991

350G1 - Transmission Shim / Spacer

9110	2013
9123	2013
9122	2013
9125	2013
9124	2013
9127	2013
9126	2013
9129	Unknown
9128	Unknown
9121	2013
9120	Unknown
9134	2013
9133	2013
9132	2013
9131	Unknown

9130	Unknown
29960-91A	1991
356A1 - Transmission Countershaft	
35026-94	1994
35626-94	1994
35626-79B	1979
35632-79	1979
35625-94	1994
35622-79C	1979
35625-79B	1981
363A1 - PT Driveline Miscellaneous Component	
42533-91A	1991
35258-87D	1992
35051-89A	1989
35068-79	1979
35211-91B	1991
40266-85	1985
37069-90A	2010
365A1 - Primary Chain	
40007-36B	1936
365B1 - Primary Chain Tensioner	
39998-65A	1970
39996-65	1965
39992-65C	1990
365C1 - Primary Drive Assembly	
40308-94	1994
40384-91	1991
40251-92A	1992
367A1 - Clutch Lever	
45015-96	1996
367H1 - Clutch Lever sub-component	
37312-75	1975
34920-86A	1986

37904-90	1990
37906-90	1990
37871-90	1990
38630-88	1988
37872-90	1990
37905-90	1990
37909-90	1990
37977-90	1990
37908-90	1990
370A1 - Clutch Assembly	
45036-88	1988
37496-90A	1990
370B1 - Clutch Friction Plate	
37911-90	1990
370C1 - Clutch Hub	
37550-90A	1990
370E1 - Clutch Metal Plate	
37903-90	1990
37088-90	1990
370F1 - Clutch Pressure Plate	
37912-91	1991
37913-90	1990
370G1 - Clutch Shell	
37707-90	1990
37707-94	1994
372D1 - Clutch Cable	
38607-87A	1988
372K2 - Clutch Ramp	
25452-87A	1987
25453-87A	1987
372N1 - Clutch Vacuum Hose	
26563-91A	1991

26570-84	1984
400A1 - Drive-Belt	
40017-94	1994
40012-90	1990
40023-86	1986
401A1 - Engine Sprocket	
40269-85A	1985
40237-88A	1988
409A1 - Rear Wheel	
41058-87B	1987
40975-86	1986
410D1 - Electronic Control Module (ECM)	
32400-80B	2010
32504-80A	1982
32405-91B	1991
32606-82	1982
410E1 - Lighting / Siren Control Module	
68537-89G	1989
413A1 - Brake Caliper	
44074-88B	1995
44077-88F	1988
44053-92A	1995
44046-84C	1984
44050-87	1987
413B1 - Brake Bleeder Screw	
44048-83	1983
413C1 - Brake Caliper sub-component	
45420-80	1980
44044-88B	1998
44054-83	1983
44147-87A	1987
44022-83	1983
48361-80	1980

413D1 - Brake Pad	
43960-86	1986
413E1 - Brake Pad Pin	
44053-83B	1983
413G1 - Brake Caliper Piston Set	
44020-83A	2013
43946-86A	2013
415B1 - Brake Rotor	
44136-92	1992
41789-92	1992
416A1 - Brakes Miscellaneous Component	
40918-87	1987
45031-82A	1982
40903-87	1987
40920-87	1987
72023-51E	2012
41040-88B	1988
416B1 - Brake Mounting Bracket	
44072-92A	1995
44207-87	1987
417A1 - Brake Master Cylinder Assembly	
42446-87B	1987
45057-82	1982
417B1 - Brake Master Cylinder	
45019-93	1993
42468-87E	1987
45044-82	1982
417C1 - Brake Master Cylinder Piston Set	
42382-87C	2000
44152-77	1977
45072-87	1987
417D1 - Brake Master Cylinder sub-Component	

44199-79	1979
44447-89	1989
41745-79	1979
50992-87A	1987
44047-83	1983
45004-85	1985
42448-87	1987
40922-87A	1987
45032-82	1982
45423-92	1992
45042-82	1982
44198-87	1987
44039-86	1986
417F1 - Brake Master Cylinder Reservoir	
42452-87	1987
41804-84A	1984
417G1 - Front Brake Lever	
45016-93	1993
42515-82	1982
418B1 - Brake Line	
45110-88C	1988
45112-84B	1987
45156-89E	2008
42303-89B	1991
42305-86B	1990
40957-87C	1990
420A1 - Wheel Rim	
43662-80B	1983
43085-81	1981
421A1 - Wheel Spoke with Nipple	
43239-05	2005
43241-05	2005
422B1 - Wheel Sprocket	

40221-85A	1985
40236-88A	1988
40311-94	1994
40312-94	1994
40217-79A	1979
423G1 - Valve Stem	
43157-83A	1983
423H1 - Valve Stem Cap	
41123-79	1979
423K1 - Wheel Weights	
95578-41	1941
95595-84B	2014
95581-47	1947
95582-47	1947
424A1 - Wheels, Tires and Final Drive Miscellaneous Component	
47577-86	1986
44062-83	1983
425A1 - Wheel sub-component	
43668-82	1982
430D1 - Front Axle	
41584-86A	1986
41109-88A	1988
43346-83B	1983
430E1 - Rear Axle	
41110-79A	1979
45832-77A	1977
433A1 - Front Wheel	
40976-86A	1986
43005-86	1986
41038-92A	1992
41043-89A	1990
41043-89	1989

433B1 - Front Wheel Bearing Spacer

40910-84B	1987
43676-88C	1988
43657-89	1989
43608-82	1982
43671-84C	1984
43291-82	1982
43654-86A	1986
41595-86	1986
43292-82	1982
56153-73	1973
43612-92	1992

433C1 - Front Wheel Hub

43677-88A	1988
43067-86	1986
44447-92	1992
43672-84	1984
43053-86	1986

454A1 - Front Telescopic Fork

46006-91A	1992
46004-91A	1992

454B1 - Springer Fork

45917-86	1986
45569-88B	1999
45651-91	1991
45649-91	1991
46008-93	1993
45607-93	1993

455A1 - Front Telescopic Fork Slider

45964-86	1986
45918-86	1986
45915-86	1986
45874-91	1991

45417-84	1984
45916-86	1986
45873-91A	1991
45930-86	1986
455B1 - Front Telescopic Fork Spring	
46054-88	1988
45855-77	1977
46055-88	1988
45931-86	1986
46048-84	1984
455C1 - Front Telescopic Fork sub-component	
45660-88A	1988
45418-84	1984
49377-09A	2011
45865-84	1984
45940-84	1984
45419-80	1980
45834-77	1977
2738	Unknown
45933-86	1986
45663-88A	1988
7012	1988
45936-88	1988
456A1 - Fork Protector	
45859-77A	1977
457D1 - Steering Stem	
45605-88	1988
457E1 - Steering Stem Bearing Insert Cup	
48140-84A	1993
48315-60	1960
48300-60	1960
457F1 - Steering Stem Nut	

45718-60	1960
458A1 - Front Suspension and Steering Miscellaneous Component	
45659-88	1988
6353	Unknown
45875-84A	1984
45842-77A	1977
48306-88	1988
48332-48C	1948
45670-80A	1980
45655-88	1988
67819-86	1986
45648-85A	1985
458B1 - Front Suspension and Steering Mounting Bracket	
45640-88B	1988
459A1 - Upper Triple Clamp	
45456-86B	1986
45672-80B	1980
45473-88	1988
459B1 - Lower Triple Clamp	
67814-86	1986
67816-86	1986
67821-87	1987
67808-86	1986
50991-86	1986
470A1 - Frame	
31519-90	1990
47008-92B	1992
48130-92B	1992
472A1 - Frame sub-component	
7036	Unknown
472D1 - Chassis Structure Miscellaneous Component	
59043-93	1993
472D2 - Chassis Structure Mounting Bracket	

59969-86A	1987
59954-86A	1993
62563-65	1965
61667-90A	1991
59955-86A	1993
59964-86A	1987
474C1 - Swingarm	
47573-89B	1996
474E1 - Swingarm Assembly sub-component	
48031-89A	1990
500A1 - Sidestand Assembly	
50087-89B	1989
500B1 - Sidestand Bracket	
50018-85	1985
500E1 - Sidestand Leg sub-component	
50034-84	1984
62123-66A	2013
50015-74A	1974
50100-70	1970
50028-91	1991
50005-85A	1985
505B1 - Footpeg Mount Bracket	
42431-87A	1994
50990-86B	1986
33048-72	1972
50989-86	1986
505D1 - Passenger Footpeg	
50621-79A	1979
505G1 - Rider or Common Footpeg	
50900-72	1972
505H1 - Footpeg Insert	
50614-91A	1991

506A1 - Brake Pedal	
42522-87A	1988
45051-82	1982
42416-83	1983
42407-87C	1987
50912-72	1972
42532-82	1982
42507-89A	1989
520A1 - Rider Seat or Full Seat	
52217-90C	1993
52236-86E	1999
91768-96	1996
52503-88E	1988
52283-94A	1994
52203-93B	1995
521C1 - Seat Suspension Damper	
45932-86	1986
523B1 - Back Rest Pad	
52191-86	1986
52541-87A	1987
523C1 - Back Rest Support Structure	
52787-92	1992
52788-92	1992
52771-82	1982
52735-85	1985
524A1 - Passenger Grab Handle	
51190-92	1992
51186-89B	1989
51188-86	1986
51184-88A	1989
524B1 - Passenger Seat	
52285-94B	1994
52912-00	2000

52209-90C	1993
52204-93	1993
540B1 - Rear Shock	
54508-89A	1989
54485-97	1997
540L2 - Rear Suspension Mounting Bracket	
44063-83C	1983
44209-87C	1987
558A1 - Handlebar	
56093-88A	1989
56569-86	1986
55919-82	1982
56081-82A	1983
559D1 - Lower Handlebar Clamp	
56542-86A	1986
56538-88	1988
56541-86A	1986
56124-77	1977
56122-77	1977
56540-88	1988
559E1 - Upper Handlebar Clamp	
56119-77A	1977
56567-86B	1986
560A1 - Mirror	
91875-88A	1989
91892-88A	1989
561A1 - Throttle Cable	
56343-90	1990
56342-90	1990
56305-90	1990
56306-90	1990
561B1 - Left Hand Grip	

56206-94A	1994
561E1 - Throttle Grip	
56220-94A	1994
571B1 - Fairing Lower sub-component	
60362-86B	1994
59971-80	1980
572E1 - Side Cover	
91850-87A	1987
573A1 - Bodywork Miscellaneous Component	
4036	2009
7651A	Unknown
573B1 - Bodywork Mounting Bracket	
59993-80B	1980
574B1 - Windscreen / Windshield	
58078-49	1949
58411-76A	1976
58183-78	1978
58079-49	1949
58075-86	1986
58416-77A	1977
58406-75A	1975
58018-86A	1988
58412-76A	1976
58408-75A	1975
589A1 - Front Fender	
59129-86A	1986
59924-80B	1980
59139-89	1989
59176-93	1993
595D1 - Rear Fender	
59914-86A	1992
59144-87A	1991
59596-89	1989

596A1 - Tire Mud Flap	
59648-84A	1984
60363-86C	1986
596B1 - Fender Tip	
68046-79	1979
603B1 - Belt / Chain Guard	
60537-89	1989
60415-89C	1996
60533-86	1986
608A1 - Carbon Canister	
27042-84A	1995
608B1 - Carbon Canister Hose	
28884-92	1992
609A1 - Fuel Miscellaneous Component	
11473	Unknown
4739A	Unknown
61660-85	1985
5787	Unknown
89579-91	1991
27047-84B	1984
610A1 - Fuel Tank	
61426-85C	1985
61228-84C	1984
61290-97	1997
61291-97	1997
611B1 - Fuel Cap	
61103-83B	1983
61272-92C	1992
611F1 - Fuel Tank Vapor Vent Hose	
63497-89	1989
27138-90	1990
62555-95	1995

63501-68B	1968
612B2 - Fuel Valve	
62166-81A	1981
62161-02	2002
62167-81	1981
62172-02	2002
62150-85	1985
613A1 - Trim Panel	
61155-84B	1984
61648-85	1985
613B1 - Horn Cover	
69012-93A	1993
613K1 - Airbox Cover	
29165-89	1989
614A1 - Headlight Bezel	
67769-82	1982
614C1 - Trim	
59211-74A	1974
99000-77	1977
14142-86A	1986
59235-86	1986
71300-79	1979
61165-89B	1989
624A1 - Oil Pump Assembly	
26050-92	1992
624B1 - Oil Pump Assembly sub-component	
26378-92A	1992
26207-83	1983
26561-84	1984
26276-92A	1992
26348-15	1915
26327-68	1968
45830-48	1948

6239	Unknown
26400-82B	1982
26273-92A	1992
26267-92	1992
26226-92	1992
624C1 - Oil Pump Driven Gear	
26326-62A	1962
26317-68A	1968
26315-68A	1968
624D1 - Oil Pump Drive Gear	
26345-73	1973
26346-70	1970
26328-74	1974
26354-93	1993
624G1 - Oil Screen	
24981-70	1970
625B1 - Oil Tank	
62498-91	1991
627B1 - Oil Drain Plug	
62725-90	1990
627E1 - Oil Filler Plug / Dipstick	
62634-84A	1984
37075-87	1987
627F1 - Oil Filter	
63796-77A	1977
63556-87	1987
627H1 - Oil Line	
33520-92	1992
63556-92	1992
63553-91	1991
26571-89	1989
9969	Unknown

627K1 - Oil Line Fitting

26352-95A 1995

63523-92A 1992

62375-57A 1957

63533-41A 1941

627M1 - Oil Pressure Regulator Valve

26856-89A 1989

628A1 - PT Lubrication and Cooling Miscellaneous Component

61131-92 1992

63528-92 1992

62707-84 1984

63525-92 1992

62704-84A 1992

648K1 - Exhaust Miscellaneous Component

65487-89 1989

65483-89 1989

649A1 - Muffler

65699-90 1990

65190-84 1984

65380-90 1990

65380-85 1985

65395-89B 1989

65382-89C 1989

65381-89A 1989

653A1 - Muffler sub-component

65459-84A 1984

65699-86 1986

65492-91 1991

654A1 - Exhaust Shield

65464-89 1989

65432-89 1989

65447-86 1986

65702-86 1986

65821-90	1990
65475-89	1989
65732-86	1986
65813-91	1991
65814-91	1991
65410-83	1983
655A1 - Muffler Mount	
65522-91	1991
656C1 - Header	
65603-86	1986
65401-86	1986
658A1 - Exhaust Catalyst	
65689-89	1989
65867-91	1991
65866-91	1991
659B1 - Exhaust Flange	
65328-83A	2010
660A1 - Battery	
65989-90B	1990
660B1 - Battery Pad	
70933-90	1990
660C1 - Battery Pan	
66210-85B	1985
660D1 - Battery Strap	
66105-77	2013
66111-93	1993
660E1 - Ground Strap	
70060-92B	1992
660G1 - Positive Battery Cable	
70078-91A	1991
660H1 - Positive Battery Cable Boot	
31662-90	1990

670A1 - Tachometer	
67070-76	1976
677A1 - Headlight	
67757-92	1992
67603-94A	1994
67894-93A	1993
67823-92A	1992
67769-93	1993
68051-93A	1993
67790-93A	1993
67781-92A	1993
67705-92	1992
67892-93	1993
67789-91B	1991
67849-93	1993
67841-93	1993
68725-62A	1962
67872-89B	1989
67698-81D	2001
68050-93A	1993
67685-92	1992
67793-92A	2001
67801-92A	1993
67773-80A	1985
67790-82	1982
67772-80	1980
67768-86	1986
677B1 - Headlight sub-component	
67798-92	1992
678A1 - Taillight	
68033-90	1990
68123-73	1973
68026-73	1973

68008-73B	1975
68032-90	1990
68457-86	1986
68010-90	1990
68027-90	1990
68440-86	1986
68036-91	1991
678C1 - Taillight Lens	
71144-75A	1975
71145-75	1975
678D1 - Turnsignal	
68668-87	1987
67822-88	1988
68401-90	1990
68392-91A	1991
68410-87B	1987
68510-74C	1974
68407-86	1986
68403-86A	1986
68408-86D	1986
67828-88A	1988
68480-73	1973
68671-69D	1969
67827-88A	1988
68493-90	1990
68402-86	1986
67829-88	1988
68406-86C	1986
68661-87	1987
71591-92	1992
678E1 - Turnsignal Lens	
68506-92	1992

68566-90	1990
68507-90	1990
68505-90	1990
679B1 - Reflector	
59254-91	1991
59258-91	1991
59265-90	1990
59287-92	1992
59259-90	1990
59290-92	1992
59262-90B	1990
59289-92	1992
59288-92	1992
59988-72A	1972
59255-91	1991
59251-90	1990
679C1 - Reflector Mount Bracket / Holder	
71141-68	1968
679D1 - License Plate Bracket	
59983-75	1975
59626-84	1984
60001-55	1955
59986-75	1975
59984-73	1973
680A1 - Decorative Light	
68674-69A	1969
59181-80	1980
59082-79	1979
59182-84	1984
68414-05A	2014
59658-79A	1979
68683-02	2002
68721-62	1962

68047-79	1979
59180-80	1980
68594-84	1984
68355-05	2005
68720-62	1962
680C1 - Incandescent Bulb	
68572-64B	1964
68169-90A	1990
68168-89A	1989
71092-68A	1968
68462-64	1964
68000056	2012
68163-84	1984
53439-79	1979
68329-03	2003
71090-64	1964
53438-92	1992
690C1 - Horn	
69060-90H	2014
690D1 - Horn Bracket	
69062-91	1991
692C1 - Electrical Miscellaneous Component	
71150-92	1992
71143-90	1990
70939-84A	1984
11411	2013
72051-77A	1977
71152-92	1992
71151-92	1992
33900-59C	1959
71297-68	1968
68348-05	2005

70579-65	1965
692C2 - Electrical Mounting Bracket	
71134-68	1968
11451	2013
69120-91	1991
68519-68A	1968
69125-65	1965
70936-91B	1991
38622-87	1987
31998-91A	1992
69126-92	1992
67115-91	1991
66109-93	1993
66308-80	1980
692D1 - Fuse	
74589-73	1973
74599-77B	1977
692F1 - Wire Harness	
70216-93B	1993
74412-91	1991
70197-86	1986
59197-87	1987
67777-80A	1981
67615-89A	1989
32442-93	1993
70321-89	1989
692G1 - Conduit / Sheathing / Sleeving	
70558-71	1971
70556-71	1971
70555-69	1969
70554-69	1969
70552-69	1969
70551-69	1969

70553-69	1969
692G2 - Wire Guide	
27580-88	1988
67239-83	1983
692H1 - Connector	
73152-96BK	1996
70586-93	1993
29306-92	1992
74536-77A	1977
24922-93	1993
72277-74	1974
70293-87A	1989
29954-71A	1971
72276-74	1974
70587-93	1993
68654-92	1992
72035-71	1971
72275-74	1974
692H2 - Terminal	
9875	1985
9908	1993
9898	Unknown
9905	Unknown
66000-80	1980
9860	Unknown
9864	1986
9863	Unknown
9856	Unknown
9857	Unknown
9858	Unknown
9866	Unknown
692K1 - Connector / Terminal Seal	

72039-71A	1971
72278-74A	1974
692L1 - Wire Harness sub-component	
72037-71	1971
68690-69	1969
74539-77A	1979
70585-93	1993
70504-81	1981
9900	Unknown
72044-71A	1971
70196-86	1986
72038-71A	1971
72043-71A	1971
72034-71	1971
73191-96	1996
38712-68	1968
56073-83	1983
70578-89	1989
72046-79	1979
692M1 - Electrical Component / Wire Cover	
47712-91	1991
709B1 - Instrument Cluster or Speedometer	
67079-86A	1986
67125-86A	1986
67212-93	1993
67011-91	1991
70941-84A	1984
71158-86B	1986
71241-91	1991
45085-88A	1989
67068-76	1976
67024-84A	1985
67118-87	1987

67166-88	1988
70005-70	1970
67030-91A	1991
67120-84B	1986
714A1 - Ignition Switch	
71501-73A	1973
71501-94	1994
71580-84	1984
714B1 - Mechanical Switch	
26566-91	1991
68619-83	1983
714D1 - Relay	
31504-91B	2000
31506-79C	1979
71600-93	1993
715A1 - Hand Control	
71590-92A	1992
71598-92	1992
70218-87A	1987
71541-84	1984
71597-92	1992
71568-82A	1982
71557-93	1993
67215-89	1989
71564-82A	1982
70219-87	1987
71560-84	1984
71563-82A	1982
67858-89	1989
71567-82	1982
71589-92	1992
747A1 - Voltage Regulator	

74519-88A	1988
902A1 - Saddlebag	
90806-94	1994
90806-92	1992
90476-93	1993
90346-90	1990
90804-94	1994
90804-92	1992
91792-87	1987
90477-93	1993
902E1 - Saddlebag Bottom	
90346-94	1994
91791-87	1987
90361-90	1990
90787-90	1990
90785-90	1990
90785-94	1994
90787-94	1994

Common Service Parts

BEARINGS, SEALS & HARDWARE

[View interactive table](#)

PART NO.	DESCRIPTION	PART AND MODEL(S)
10014	CLAMP	CARBURETOR (1 OF 2): All Models FUEL TANK: All Models
10038A	CLAMP	REAR BRAKE CONTROL - FXST: FXSTC FXSTS FXSTC FXSTS
10080	CLAMP	OIL TANK: All Models OIL FILTERS & MOUNTS: All Models
11105	O-RING	CRANKCASE - GEAR SIDE: All Models OIL PUMP: All Models
11132A	O-RING	ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION: All Models TRANSMISSION HOUSING: All Models

PART NO.	DESCRIPTION	PART AND MODEL(S)
11143	RETAINING RING	<u>CLUTCH CONTROL: All Models</u> <u>FRONT BRAKE CONTROL: All Models</u>
11145A	O-RING	<u>ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION: All Models</u>
11147B	O-RING	<u>PRIMARY HOUSING: All Models</u>
11150	RETAINING RING	<u>GEAR SHIFTER (1 OF 2): All Models</u>
11157	O-RING	<u>ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION: All Models</u>
11165	QUAD SEAL	<u>TRANSMISSION HOUSING: All Models</u>
11447	GROMMET	<u>FUEL TANK: All Models</u>
12035B	OIL SEAL	<u>TRANSMISSION GEARS: All Models</u>
12045	SEAL	<u>GEAR SHIFTER (1 OF 2): All Models</u>
12052A	OIL SEAL	<u>PRIMARY HOUSING: All Models</u>
12066A	OIL SEAL	PRIMARY HOUSING: <u>FLSTC</u> <u>FXSTC</u> <u>FXSTS</u> <u>FLSTF</u> <u>FLSTN</u>
12067B	OIL SEAL	TRANSMISSION HOUSING: <u>FLSTC</u> <u>FXSTC</u> <u>FXSTS</u> <u>FLSTF</u> <u>FLSTN</u>
16715-83	STUD	<u>CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (1 OF 2): All Models</u>
16800-84A	GASKET, rocker cover/cylinder head, valve & pushrod sides (replaces 16778-84A & 16779-84A)	<u>ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION: All Models</u>
17358-84B	GASKET	<u>ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION: All Models</u>
2531	SCREW	FRONT FENDERS: <u>FLSTC</u> <u>FLSTN</u> <u>FLSTC</u> <u>FLSTN</u>
25416-70A	O-RING	<u>PRIMARY HOUSING: All Models</u>
26995-86B	SEAL	<u>CARBURETOR (1 OF 2): All Models</u>
2720	SCREW	<u>ALTERNATOR & REGULATOR: All Models</u>

PART NO.	DESCRIPTION	PART AND MODEL(S)
31430-94	WASHER	STARTER MOTOR (1 OF 2): FLSTC FXSTC FXSTS FLSTF FLSTN
31433-84A	WASHER	PRIMARY HOUSING: All Models
33126-94	LOCKPLATE	STARTER MOTOR (2 OF 2): FLSTC FXSTC FXSTS FLSTF FLSTN
33318-85	LOCKING TAB	PRIMARY HOUSING: All Models
3655A	SCREW	FRONT WHEEL (1 OF 2): FLSTC FXSTC FLSTN FLSTC FXSTC FLSTN FRONT WHEEL (1 OF 2): FLSTF FLSTF
36801-87C	GASKET	TRANSMISSION HOUSING: All Models
41731-88A	GASKET	FRONT BRAKE CONTROL: All Models REAR BRAKE CONTROL - FXST: FXSTC FXSTS FXSTC FXSTS REAR BRAKE CONTROL - FLST (1 OF 2): FLSTC FLSTF FLSTN FLSTC FLSTF FLSTN
41733-88	GASKET	FRONT BRAKE CONTROL: All Models
43567-92	SCREW	REAR WHEEL (2 OF 2): All Models
45405-75A	SCREW	FRONT FORK - FXSTC: FXSTC FXSTC FRONT FORK - FLSTC/F/N (1 OF 2): FLSTC FLSTF FLSTN FLSTC FLSTF FLSTN

PART NO.	DESCRIPTION	PART AND MODEL(S)
45733-48	OIL SEAL	<p>FRONT FORK - FXSTC: FXSTC FXSTC FRONT FORK - FLSTC/F/N (1 OF 2): FLSTC FLSTF FLSTN FLSTC FLSTF FLSTN</p>
45845-77	O-RING	<p>FRONT FORK - FXSTC: FXSTC FXSTC FRONT FORK - FLSTC/F/N (1 OF 2): FLSTC FLSTF FLSTN FLSTC FLSTF FLSTN</p>
45858-77	DRAIN SCREW	<p>FRONT FORK - FXSTC: FXSTC FXSTC FRONT FORK - FLSTC/F/N (1 OF 2): FLSTC FLSTF FLSTN FLSTC FLSTF FLSTN</p>
4740A	SCREW	<p>CRANKCASE - GEAR SIDE: All Models PRIMARY HOUSING: All Models</p>
47519-83A	OIL SEAL	<p>FRONT WHEEL (2 OF 2): All Models REAR WHEEL (2 OF 2): All Models</p>
48300-60	ROLLER BEARING	<p>FRONT FORK - FXSTC: FXSTC FXSTC FRONT FORK - FLSTC/F/N (2 OF 2): FLSTC FLSTF FLSTN FLSTC FLSTF FLSTN FRONT FORK - FXSTS: FXSTS FXSTS</p>
5207	WELL NUT	<p>ELECTRONIC IGNITION SYSTEM: All Models</p>
53156-86	BUSHING	<p>HANDLEBAR: All Models</p>
60539-94B	GASKET	<p>PRIMARY HOUSING: All Models</p>
60567-90C	GASKET	<p>PRIMARY HOUSING: All Models</p>
60678-85	RETAINING RING	<p>PRIMARY HOUSING: All Models</p>

PART NO.	DESCRIPTION	PART AND MODEL(S)
63858-49	GASKET	<u>ROCKER ARMS, COVERS & PUSHRODS - V²™ EVOLUTION: All Models</u>
6516HW	WASHER	<u>CYLINDERS, HEADS & VALVES - V²™ - REAR SHOWN (1 OF 2): All Models</u> <u>REAR WHEEL (1 OF 2): All Models</u>
65324-83B	GASKET	<u>EXHAUST SYSTEM (1 OF 2): All Models</u>
65325-83A	RETAINING RING	<u>EXHAUST SYSTEM (1 OF 2): All Models</u>
6702	WASHER	<u>REAR BELT GUARD: All Models</u> REAR BRAKE CONTROL - FLST (1 OF 2): <u>FLSTC</u> <u>FLSTF</u> <u>FLSTN</u> <u>FLSTC</u> <u>FLSTF</u> <u>FLSTN</u> FRONT FORK - FXSTC: <u>FXSTC</u> <u>FXSTC</u> FRONT FORK - FLSTC/F/N (1 OF 2): <u>FLSTC</u> <u>FLSTF</u> <u>FLSTN</u> <u>FLSTC</u> <u>FLSTF</u> <u>FLSTN</u> <u>FRAME, REAR FORK & JIFFY STAND (1 OF 2): All Models</u> FRONT FENDERS: <u>FXSTC</u> <u>FXSTC</u> <u>EXHAUST SYSTEM (1 OF 2): All Models</u> SADDLEBAGS - FLSTC & FLSTN: <u>FLSTC</u>

PART NO.	DESCRIPTION	PART AND MODEL(S)
7041	LOCKWASHER	<u>ELECTRONIC IGNITION SYSTEM: All Models</u> <u>STARTER MOTOR (1 OF 2): All Models</u> GEAR SHIFTER (1 OF 2): <u>FXSTC</u> <u>FXSTS</u> <u>FXSTC</u> <u>FXSTS</u> FRONT FORK - FXSTC: <u>FXSTC</u> <u>FXSTC</u> FRONT FORK - FLSTC/F/N (1 OF 2): <u>FLSTC</u> <u>FLSTF</u> <u>FLSTN</u> <u>FLSTC</u> <u>FLSTF</u> <u>FLSTN</u> <u>FRAME, REAR FORK & JIFFY STAND (1 OF 2): All Models</u> AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC: <u>FLSTC</u> <u>FLSTC</u> FRONT FENDERS: <u>FXSTC</u> <u>FXSTC</u> <u>FUEL TANK: All Models</u> <u>EXHAUST SYSTEM (1 OF 2): All Models</u> <u>INSTRUMENTS (1 OF 2): All Models</u> SADDLEBAGS - FLSTC & FLSTN: <u>FLSTC</u>
739A	PLUG	<u>TRANSMISSION HOUSING: All Models</u> <u>PRIMARY HOUSING: All Models</u>
7593	NUT	<u>CRANKCASE (1 OF 2): All Models</u> <u>EXHAUST SYSTEM (1 OF 2): All Models</u>
7600	NUT	FRONT FENDERS: <u>FLSTC</u> <u>FLSTN</u> <u>FLSTC</u> <u>FLSTN</u>
7613A	PUSHNUT	FRONT FENDERS: <u>FLSTC</u> <u>FLSTN</u> <u>FLSTC</u> <u>FLSTN</u>
7716	LOCKNUT	FOOTBOARDS: <u>FLSTC</u> <u>FLSTF</u> <u>FLSTN</u> <u>FLSTC</u> <u>FLSTF</u> <u>FLSTN</u>
856A	SCREW	<u>GEAR SHIFTER (1 OF 2): All Models</u>
9052	ROLLER BEARING	<u>FRONT WHEEL (1 OF 2): All Models</u> <u>REAR WHEEL (1 OF 2): All Models</u>
933	SCREW	<u>ELECTRONIC IGNITION SYSTEM: All Models</u>

PART NO.	DESCRIPTION	PART AND MODEL(S)
----------	-------------	-------------------

9955	CLAMP	EXHAUST SYSTEM (1 OF 2): FXSTC FXSTS FXSTC FXSTS EXHAUST SYSTEM (1 OF 2): FLSTC FLSTF FLSTN FLSTC FLSTF FLSTN
------	-------	--

BRAKING & SUSPENSION

[View interactive table](#)

PART NO.	DESCRIPTION	PART AND MODEL(S)
44063-83C	PAD SET	FRONT BRAKE CALIPER: All Models
45875-84A	OIL SEAL	FRONT FORK - FXSTC: FXSTC FXSTC FRONT FORK - FLSTC/F/N (2 OF 2): FLSTC FLSTF FLSTN FLSTC FLSTF FLSTN

CHASSIS & COMPONENTS

[View interactive table](#)

PART NO.	DESCRIPTION	PART AND MODEL(S)
50005-85A	SPRING	FRAME, REAR FORK & JIFFY STAND (2 OF 2): All Models

ELECTRICAL

[View interactive table](#)

PART NO.	DESCRIPTION	PART AND MODEL(S)
----------	-------------	-------------------

PART NO.	DESCRIPTION	PART AND MODEL(S)
72023-51E	STOPLAMP SWITCH	REAR BRAKE CONTROL - FXST: FXSTC FXSTS FXSTC FXSTS REAR BRAKE CONTROL - FLST (2 OF 2): FLSTC FLSTF FLSTN FLSTC FLSTF FLSTN SWITCHES & CIRCUIT BREAKERS: All Models

ENGINE, TRANSMISSION & PRIMARY

[View interactive table](#)

PART NO.	DESCRIPTION	PART AND MODEL(S)
37909-90	RETAINING RING	CLUTCH: All Models
37911-90	FRICITION PLATE	CLUTCH: All Models

FOOT CONTROLS

[View interactive table](#)

PART NO.	DESCRIPTION	PART AND MODEL(S)
33895-82D	SHIFTER LEVER	GEAR SHIFTER (2 OF 2): FXSTC FXSTS FXSTS FXSTC GEAR SHIFTER (2 OF 2): FLSTC FLSTC FLSTF FLSTF FLSTN FLSTN
34611-65A	PEG	GEAR SHIFTER (2 OF 2): FXSTC FXSTS FXSTS FXSTC GEAR SHIFTER (2 OF 2): FLSTC FLSTC FLSTF FLSTF FLSTN FLSTN

INTAKE, EXHAUST & FUEL MGMT

[View interactive table](#)

PART NO.	DESCRIPTION	PART AND MODEL(S)
27002-89	SEAL RING	CARBURETOR (1 OF 2): All Models
27361-76A	DIAPHRAGM	CARBURETOR (2 OF 2): All Models
29229-88D	CABLE	AIR CLEANER & ENRICHENER: All Models

LIGHTING

View interactive table

PART NO.	DESCRIPTION	PART AND MODEL(S)
68000056	BULB	AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC: FLSTC FLSTC
68168-89A	BULB	AUXILIARY/FOG LAMPS & FRONT TURN SIGNALS - FLSTC: FLSTC FLSTC FRONT TURN SIGNALS: FXSTC FXSTS FLSTF FXSTC FXSTS FLSTF FLSTN FLSTN TAIL LAMP & REAR TURN SIGNALS: All Models
68329-03	BULB	HEADLAMP (1 OF 2): FXSTC FXSTS FXSTC FXSTS
68572-64B	BULB	TAIL LAMP & REAR TURN SIGNALS: All Models

MAINTENANCE & TOOLS

View interactive table

PART NO.	DESCRIPTION	PART AND MODEL(S)
63796-77A	OIL FILTER	OIL FILTERS & MOUNTS: All Models
95582-47	WEIGHT	FRONT WHEEL (2 OF 2): FXSTC FXSTS FLSTN FXSTC FXSTS FLSTN REAR WHEEL (2 OF 2): FLSTC FXSTS FLSTN FLSTC FXSTS FLSTN

PART NO.	DESCRIPTION	PART AND MODEL(S)
95595-84B	WEIGHT	<p><i>FRONT WHEEL (2 OF 2):</i></p> <p>FLSTF</p> <p>FLSTF</p> <p><i>REAR WHEEL (2 OF 2):</i></p> <p>FXSTC</p> <p>FLSTF</p> <p>FXSTC</p> <p>FLSTF</p>

TIRES

View interactive table

PART NO.	DESCRIPTION	PART AND MODEL(S)
43157-83A	VALVE STEM	<p><i>FRONT WHEEL (1 OF 2):</i></p> <p>FLSTF</p> <p>FLSTF</p> <p>REAR WHEEL (2 OF 2): All Models</p>