

2003 Softail Models Parts Catalog

Alphabetical List

Parts

Hardware List

New Parts List

Numerical Index

Component Types and Introduction Dates

Common Service Parts

READER'S COMMENTS

The Harley-Davidson Service Communications Department maintains a continuous effort to improve the quality and usefulness of its publications. To do this effectively, we need user feedback - your critical evaluation of this manual.

Please comment on the completeness, accuracy, organization, usability, and readability of this manual.

Please list the page, item, and part number(s) of any errors you find in this manual.

Please tell us how we can improve this manual.

Name	Document 99455-03B
Occupation	Dealership
Street	Department

GENERAL INFORMATION

THIS IS NOT AN ASSEMBLY MANUAL AND SHOULD NOT BE USED AS SUCH.

About this Manual

This Parts Catalog has been prepared to make it easier for you to order parts for your motorcycles. The numbers shown in the illustrations correspond to the numbers in the "INDEX NO." column in the parts lists. Consult the illustrations when ordering parts to make sure that you receive all the required parts. The number in parentheses following the part description is the quantity needed for complete assembly. If there is no number in parentheses, only one is used. Prices of parts in this catalog are published separately.

When ordering parts, the following instructions should be followed carefully.

- Make sure to specify the correct part number for each item. The part numbers appear under the "PART NO." column in the parts lists.
- Orders may be placed via your computer for all parts. Review your system documentation on placing orders electronically. All non-warranty replacement crankcase orders require return of the complete left crankcase half with vehicle identification number (VIN). All non-warranty replacement frame orders require return of the steering neck with vehicle identification number (VIN). Non-compliance will result in a fine. See non-warranty frame and crankcase policy or contact Dealer Services.
- The sale or use of these parts or accessories does not grant the purchaser a license or other right under any Harley-Davidson patent.
- For all 2008 and later painted parts, refer to the Service Section of h-dnet.com which features a listing of painted part numbers, except CVO (Custom Vehicle Operations) models which are located in their own respective catalogs.
- All parts that were added for the new model year will have the entire line shaded on the parts list page. This can be used to identify any new parts that are unique to a specific model, and help distinguish new and previous model year parts.
- Parts marked "**RESTRICTED SALE PART**" are limited edition items and can only be ordered as direct replacements.
- Orientation symbols are used when the illustration is not in the standard "Right-Front" orientation. The symbol is a motorcycle with an arrow in the front indicating the direction of view. The symbol is at the bottom left or right side of the illustration page.
- To request a missing or loose part, simply submit a Return Material Authorization (RMA) claim on h-dnet.com with code "T-part not included with vehicle" for all vehicle missing parts claims. Then place an order for the missing item on your next Parts and Accessories order. Upon filing the RMA claim, your dealership will be credited for the dealer net cost of the part. The Vehicle Identification Number must be

included on the RMA claim in order for you to receive credit. This process is to be used for vehicles manufactured at all plants.

To the best knowledge of Harley-Davidson Motor Company, the material contained herein is accurate as of the date this publication was approved for printing. Harley-Davidson Motor Company reserves the right to change specifications, equipment or designs at any time without notice and without incurring obligation.

©2018 H-D.

GENERAL INFORMATION

LOOSE PARTS

The Loose Parts section is located at the back of this parts catalog. This section lists the parts which are shipped unfastened with the vehicles covered in this catalog.

HARDWARE LIST

The Hardware List is located at the back of this parts catalog. This section contains the information for each piece of hardware found in each parts list.

NEW PARTS LIST

The New Parts List is located at the back of this parts catalog. This list serves as a summary of new parts.

NUMERICAL INDEX

The Numerical Index is located at the back of this parts catalog. This index includes all part numbers used in this catalog and the page numbers of where they can be found.

COMPONENT TYPES AND INTRODUCTION DATES

The Component Types and Introduction Dates section is located at the back of this parts catalog. This section contains a list of component part numbers and year of introduction.

COMMON SERVICE PARTS

The Common Service Parts section is located at the back of this parts catalog. This section contains the most commonly ordered parts for service on vehicles covered in this catalog. These parts are ordered through the normal ordering process.

SIP (SERVICE INFORMATION PORTAL)

For the latest updates to these manuals, see the Service Information Portal.

VEHICLE IDENTIFICATION NUMBER

See Figure 1. A unique 17-digit serial, or vehicle identification number (VIN), is assigned to each motorcycle. For a description of each digit in the vehicle identification number (VIN), refer to Table 1.

For all models except V-Rod the full 17-digit serial, or vehicle identification number (VIN), is stamped on the right side of the frame backbone at the rear of the steering head. The vehicle identification number (VIN) is also printed on a label on the right front downtube. An abbreviated vehicle identification number (VIN) is stamped on the left side crankcase between the front and rear cylinders.

For V-Rod models only the full 17-digit serial, or vehicle identification number (VIN), is stamped on the right side of the steering head. The vehicle identification number (VIN) is also printed on a label on the left frame tube above the front engine cylinder. An abbreviated vehicle identification number (VIN) is stamped on the left side crankcase below the rear cylinder head.

Always give the full 17-digit vehicle identification number (VIN) when ordering parts or making any inquiry about your motorcycle.

2003 SOFTAIL MODELS

VIN Model Codes

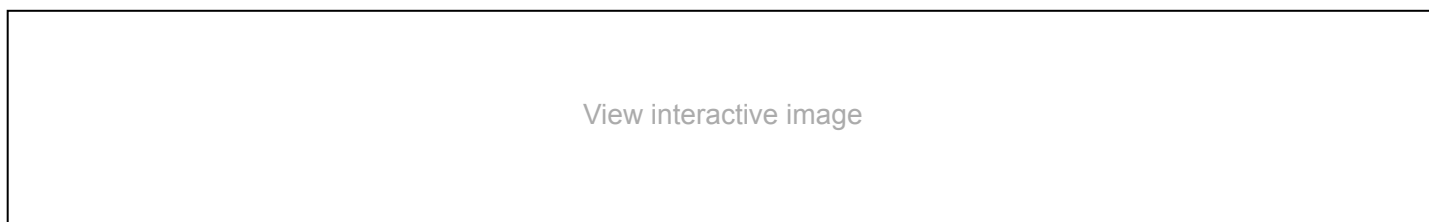 


Figure 1. Typical Harley-Davidson VIN

Table 2. Harley-Davidson VIN Breakdown

POSITION	DESCRIPTION	POSSIBLE VALUES
1	Market designation	1=Domestic 5=International
2	Manufacturer	HD=Harley-Davidson
3	Motorcycle type	1=Heavyweight motorcycle (901 cc and larger) 4=Middleweight motorcycle (351-900 cc)
4	Model	See model table
5	Engine type	Y=Twin Cam 88B™ carbureted, balanced B=Twin Cam 88B™ fuel injected, balanced
6	Introduction date	1=Regular 2=Mid-year 3=California 4=Special Edition 5=Special Edition Cal. Only
7	V.I.N. check digit	Can be 0-9 or X
8	Model year	3=2003
9	Assembly plant	Y=York, PA
10	Sequential number	varies

Table 3. VIN Model Codes

CODE	MODEL	CODE	MODEL	CODE	MODEL
BH	FXST	BW	FLSTCI	BR	FLSTS

CODE	MODEL	CODE	MODEL	CODE	MODEL
BZ	FXSTSI	BS	FXSTD	BV	FXSTI
BM	FLSTF	BY	FLSTSI	BT	FXSTB
JB	FXSTDI	BJ	FLSTC	BX	FLSTFI
BL	FXSTS	JA	FXSTBI		

NOTES

AIR CLEANER & ENRICHENER - CARBURETED MODELS
 AIR CLEANER - FUEL INJECTED MODELS
 ALTERNATOR & REGULATOR
 AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I
 AXLE, FRONT
 BATTERY
 BATTERY CABLES
 BELT GUARD
 BELTS, CHAINS & SPROCKETS
 BRACKET, ELECTRONIC CONTROL MODULE - FUEL INJECTED MODELS
 BRACKET, IGNITION MODEL - CARBURETED MODELS
 BRACKET, LICENSE PLATE
 BRAKE CONTROL, FRONT
 BRAKE CONTROL, REAR
 BRAKE DISC, FRONT
 BRAKE DISC, REAR
 BRAKE LINES, FRONT
 BRAKE LINES, REAR
 CABLE, CLUTCH CONTROL
 CALIFORNIA EVAPORATIVE EMISSIONS
 CALIPER, FRONT
 CALIPER, REAR
 CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)
 CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (2 OF 2)
 CARBURETOR (1 OF 2)
 CARBURETOR (2 OF 2)
 CHAIN, PRIMARY
 CHAIN, TENSIONER KIT
 CLAMPS, HANDLEBAR - UPPER & LOWER
 CLUTCH
 CLUTCH CONTROL
 COMPLETE ENGINE - Twin Cam 88B™
 CONNECTING RODS
 COVER, ELECTRICAL CADDY
 COVER, ROCKER ARM
 CRANKCASE AND ENGINE OIL FILTER - Twin Cam 88B™
 CYLINDERS, HEADS & VALVES - Twin Cam 88B™
 DECALS, FUEL TANK
 ELECTRICAL MOUNTING BRACKETS

ELECTRONIC CONTROL MODULE & COIL - FUEL INJECTED
ENGINE BALANCER - Twin Cam 88B™
ENGINE MOUNTS
ENGINE SENSORS AND SWITCHES
EXHAUST SYSTEM - FLSTF/I & FXSTD/I
EXHAUST SYSTEM - FLSTS/I
EXHAUST SYSTEM - FXST/I, FLSTC/I, FXSTS/I & FXSTB/I
FILTER, ENGINE AIR - CARBURETED MODELS
FILTER, ENGINE AIR - FUEL INJECTED MODELS
FOOTRESTS & FOOTBOARDS
FORK ROCKERS & CALIPER MOUNTING - FLSTS/I
FORK ROCKERS & CALIPER MOUNTING - FXSTS/I
FRAME & JIFFY STAND
FRONT BRAKE CALIPER
FRONT BRAKE CALIPER - SPRINGER MODELS
FRONT BRAKE CONTROL
FRONT FENDER - FLSTS/I
FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I
FRONT FENDER - FXSTS/I
FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2)
FRONT FORK - FLSTC/I & FLSTF/I (2 OF 2)
FRONT FORK - FLSTS/I
FRONT FORK - FXST/I & FXSTB/I
FRONT FORK - FXSTD/I
FRONT FORK - FXSTS/I
FRONT TURN SIGNALS
FRONT WHEEL (1 OF 2)
FRONT WHEEL (2 OF 2)
FUEL INJECTOR
FUEL PUMP - FUEL INJECTED
FUEL TANK
FUEL TANK - FUEL INJECTED
FUEL TANK - FXSTD
FUEL TANK - FXSTD - FUEL INJECTED
FUEL TANK TRIM
FUSES
GASKET KIT, CAM SERVICE
GASKET KIT, CAM SERVICE
GASKET KIT, ENGINE OVERHAUL
GASKET KIT, INNER PRIMARY
GASKET KIT, TOP END
GEAR SHIFTER
GEARS, TRANSMISSION
HAND LEVER, CLUTCH CONTROL
HANDLEBAR
HANDLEBAR GRIPS
HANDLEBAR SWITCHES
HEADLAMP (1 OF 2)
HEADLAMP (2 OF 2)
HEADLAMP - FLSTC/I & FLSTF/I
HORN
IGNITION MODULE & COIL - CARBURETED
INDICATOR LAMPS
INDUCTION MODULE - FUEL INJECTED
INSTRUMENTS (1 OF 2)

INSTRUMENTS (2 OF 2)
INSTRUMENTS - FXSTD/I
JIFFY STAND
LICENSE PLATE BRACKETS
LICENSE PLATE LIGHT - FXSTD/I
MASTER CYLINDER ASSEMBLY
MEDALLION, FUEL TANK
MIRRORS
MODULE, SECURITY SYSTEM
MUFFLER - FLSTF/I & FXSTD/I
MUFFLER - FLSTS/I
MUFFLER - FXST/I, FLSTC/I, FXSTS/I & FXSTB/I
OIL PUMP
OIL TANK & LINES
PISTONS AND FLYWHEEL ASSEMBLY - Twin Cam 88B™
PRIMARY COVER
PRIMARY HOUSING
PUSH RODS
REAR BELT GUARD
REAR BRAKE CALIPER
REAR BRAKE CONTROL
REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I
REAR FENDER & SUPPORTS - FXST/I, FXSTS/I & FXSTB/I
REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I
REAR FORK AND SHOCK ABSORBERS
REAR TURN SIGNALS
REAR WHEEL
REGULATOR, VOLTAGE
RELAY, STARTER
RELIEF VALVE, OIL PUMP
REMOTE CONTROL FOB
ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™
SADDLEBAGS - FLSTC/I
SADDLEBAGS - FLSTS/I
SEATS
SEATS - FLSTS/I
SENDING UNITS - CARBURETED MODELS
SENSOR, CRANKSHAFT POSITION
SENSOR, ENGINE OIL PRESSURE
SENSOR, INTAKE AIR TEMPERATURE
SENSOR, MANIFOLD AIR PRESSURE
SENSOR, MANIFOLD AIR PRESSURE
SENSOR, THROTTLE POSITION
SENSOR, VEHICLE SPEED
SIREN
SISSY BAR - FLSTC/I
SPARK PLUG
SPROCKET, REAR 70T
STARTER MOTOR
SWITCH, IGNITION
SWITCH, IGNITION
SWITCH, IGNITION
SWITCH, NEUTRAL INDICATOR
SWITCHES & CIRCUIT BREAKERS
TAIL LAMP (1 OF 2)

TAIL LAMP (2 OF 2)
 TAIL LAMP - FXST, FXSTB, FXSTC, FLSTC, FLSTF
 TAIL LAMP - FXSTD/I
 THROTTLE CONTROL
 TRANSMISSION BEARINGS
 TRANSMISSION GEARS
 TRANSMISSION HOUSING (1 OF 2)
 TRANSMISSION HOUSING (2 OF 2)
 TURN SIGNAL CANCELLER
 TURN SIGNALS, FRONT
 TURN SIGNALS, REAR
 WHEEL, FRONT
 WHEEL, REAR
 WINDSHIELD - FLSTC/I
 WIRING HARNESS, MAIN - CARBURETED (1 OF 2)
 WIRING HARNESS, MAIN - CARBURETED (2 OF 2)
 WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
 WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)
 Parts

COMPLETE ENGINE - Twin Cam 88B™

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	16118-03	ENGINE ASSEMBLY, complete (polished & silver)	FXST
	16119-03	ENGINE ASSEMBLY, complete (polished & silver) (California only)	FXST
	16121-03	ENGINE ASSEMBLY, complete (chrome & black texture)	FLSTC, FLSTF, FLSTS, FXSTS
	16126-03	ENGINE ASSEMBLY, complete (chrome & black texture) (California only)	FLSTC, FLSTF, FLSTS, FXSTS
	16128-03	ENGINE ASSEMBLY, complete (chrome & black texture)	FXSTD
	16129-03	ENGINE ASSEMBLY, complete (chrome & black texture) (California only)	FXSTD
	16132-03	ENGINE ASSEMBLY, complete (black wrinkle) (California only)	FXSTB
	16155-03	ENGINE ASSEMBLY, complete (black wrinkle)	FXSTB
	16113-03	ENGINE ASSEMBLY, complete, w/ EFI (black wrinkle)	FXSTBI
	16114-03	ENGINE ASSEMBLY, complete, w/ EFI (polished & silver) (use 19223-03)	FXSTI
	16142-03	ENGINE ASSEMBLY, complete, w/ EFI (chrome & black texture)	FLSTCI, FLSTFI, FLSTSI, FXSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	16184-03	ENGINE ASSEMBLY, complete, w/ EFI (chrome & black)	FXSTDI
	19223-03	ENGINE ASSEMBLY, complete, shortblock (silver) (replaces 16114-03)	FXSTI
INTERNATIONAL MODELS ONLY			

CYLINDERS, HEADS & VALVES - Twin Cam 88B™

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	4175	SCREW (plugs temperature sensor hole on front cylinder head)	ALL
2	11256	O-RING, cylinder base (2)	ALL
3	16478-85A	SCREW, internal thread, 3-3/16 inch long (4)	ALL
4	16480-92A	SCREW, internal thread, 1-7/8 inch long (4)	ALL
5	16525-99	CYLINDER ASSEMBLY, w/ piston, rings, piston pin & retaining rings (silver) (2)	FXST, FXSTI
	16526-99	CYLINDER ASSEMBLY, w/ piston, rings, piston pin & retaining rings (black) (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTS, FXSTSI
6	16595-99A	DOWEL, cylinder to head (4)	ALL
7	16715-83	STUD, exhaust port (4)	ALL
8	16716-99	CYLINDER HEAD, front, w/ 18011-86, 18020-83 & 18101-83D (silver)	FXST, FXSTI
	16717-99	CYLINDER HEAD, rear, w/ 18011-86, 18020-83 & 18101-83D (silver)	FXST, FXSTI
	16722-99	CYLINDER HEAD, front, w/ 18011-86, 18020-83 & 18101-83D (black)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTS, FXSTSI
	16724-99	CYLINDER HEAD, rear, w/ 18011-86, 18020-83 & 18101-83D (black)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTS, FXSTSI
9	16775-99B	GASKET, cylinder head (2)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
10	16834-99A	STUD, cylinder (8)	ALL
11	17052-99C	GASKET KIT, top end	ALL
	17053-99C	GASKET KIT, engine overhaul	ALL
12	18001-83B	SEAL, valve (4)	ALL
13	18011-86	INSERT, exhaust valve seat (2)	ALL
	18124-83	INSERT, exhaust valve seat, 0.005 O.S. (2)	ALL
14	18020-83	INSERT, intake valve seat (2)	ALL
	18134-83	INSERT, intake valve seat, 0.005 O.S. (2)	ALL
15	18074-83B	INTAKE VALVE (2)	ALL
	18076-83	INTAKE VALVE, 0.03 inch short (2)	ALL
16	18082-83A	EXHAUST VALVE (2)	ALL
17	18101-83D	VALVE GUIDE, intake & exhaust (4)	ALL
	18130-83D	VALVE GUIDE, intake & exhaust, 0.001 O.S. (4)	ALL
	18131-83D	VALVE GUIDE, intake & exhaust, 0.003 O.S. (4)	ALL
	18133-83B	VALVE GUIDE, intake & exhaust, 0.002 O.S. (4)	ALL
18	18201-83	VALVE SPRING, outer (4)	ALL
19	18202-83	VALVE SPRING, inner (4)	ALL
20	18219-83A	COLLAR, valve spring, upper (4)	ALL
21	18222-83A	COLLAR, valve spring, lower (4)	ALL
22	18229-83A	RETAINER, valve collar (8)	ALL

ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	1039	SCREW (8)	ALL
2	3692A	SCREW (6)	ALL
3	3693A	SCREW (10)	ALL
4	3736A	SCREW (8)	ALL
5	3746A	SCREW (used w/ 17907-01) (4)	ALL
6	4400	BOLT (used w/ 17025-03A) (4)	ALL
7	4741A	SCREW (8)	ALL
8	6762B	WASHER (4)	ALL
9	11132A	O-RING, push rod cover (4)	ALL
10	11145A	O-RING, push rod cover (4)	ALL
11	11270	O-RING (2)	ALL
12	11293	O-RING (4)	ALL
13	16719-99B	GASKET, rocker housing (2)	ALL
14	17025-03A	BREATHER ASSEMBLY KIT, w/ 4400 & 26500002 (replaces 17907-01) (2)	ALL
15	17045-99D	GASKET KIT, cam service	ALL
16	17360-83A	ROCKER ARM, front intake, rear exhaust, w/ 17429-91 (2)	ALL
17	17375-83A	ROCKER ARM, rear intake, front exhaust, w/ 17429-91 (2)	ALL
18	17386-99A	GASKET, rocker cover (2)	ALL
19	17429-91	BEARING, rocker arm (8)	ALL
20	17572-99	ROCKER COVER, chrome (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXSTD, FXSTDI, FXSTS, FXSTSI
	17575-99	ROCKER COVER, polished (2)	FXST, FXSTI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	17620-99	ROCKER COVER, black texture (2)	FXSTB, FXSTBI
21	17573-99A	ROCKER HOUSING, chrome (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXSTD, FXSTDI, FXSTS, FXSTSI
	17574-99A	ROCKER HOUSING, polished (2)	FXST, FXSTI
	17618-99A	ROCKER HOUSING, black texture (2)	FXSTB, FXSTBI
22	17576-99	LIFTER COVER, front, polished	FXST, FXSTI
	17577-99	LIFTER COVER, rear, polished	FXST, FXSTI
	17964-99	LIFTER COVER, front, chrome	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTS, FXSTSI
	17966-99	LIFTER COVER, rear, chrome	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTS, FXSTSI
23	17594-99	SUPPORT, rocker arm (2)	ALL
24	17611-83	SHAFT, rocker arm (4)	ALL
25	17907-01	BREATHER ASSEMBLY, engine (use 17025-03A) (2)	ALL
26	17922-99	PUSHROD, exhaust, 10.536 inch long (black oxide finish) (2)	ALL
	17923-99	PUSHROD, intake, 10.418 inch long (plain finish) (2)	ALL
27	17939-99	COVER, pushrod, lower (4)	ALL
28	17945-36B	CAP, cover spring (4)	ALL
29	17947-36	SPRING, pushrod cover (4)	ALL
30	17948-99	COVER, pushrod, upper (4)	ALL
31	17968-99	RETAINER, spring cap (4)	ALL
32	18535-99	PIN, anti-rotation (2)	ALL
33	18538-99C	HYDRAULIC LIFTER (4)	ALL
34	18635-99B	GASKET, lifter cover (2)	ALL
35	63815-99	FILTER ELEMENT, breather (used w/ 17907-01) (2)	ALL
36	26500002	BAFFLE ASSEMBLY, breather, w/ breather valve & filter (used w/ 17025-03A)	ALL

PISTONS AND FLYWHEEL ASSEMBLY - Twin Cam 88B™

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	11177A	RETAINING RING	ALL
2	21930-99	PISTON AND RINGS ASSEMBLY, standard, w/ 21936-99, 22097-99 & 22132-99 (2)	ALL
	21931-99	PISTON AND RINGS ASSEMBLY, 0.005 inch O.S., w/ 21937-99, 22097-99 & 22132-99 (2)	ALL
	21933-99	PISTON AND RINGS ASSEMBLY, 0.010 inch O.S., w/ 21938-99, 22097-99 & 22132-99 (2)	ALL
3	21936-99	PISTON RING SET, standard (2)	ALL
	21937-99	PISTON RING SET, 0.005 inch O.S. (2)	ALL
	21938-99	PISTON RING SET, 0.010 inch O.S. (2)	ALL
4	22097-99	LOCK RING, piston pin (4)	ALL
5	22132-99	PISTON PIN (2)	ALL
6	23912-00D	FLYWHEEL ASSEMBLY, w/ 11177A, thrust washer, expansion plug, crankpin, connecting rods, bearings & flywheels	ALL
7	24316-99	BUSHING, piston pin, 0.002 inch O.S. (2)	ALL

CRANKCASE AND ENGINE OIL FILTER - Twin Cam 88B™

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	765	PLUG	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	895	SCREW (12)	ALL
3	8972	WASHER, thrust	ALL
4	9198	NEEDLE BEARING, left side of camshafts (2)	ALL
5	11140	O-RING (2)	ALL
6	11273	O-RING (2)	ALL
7	12068	OIL SEAL	ALL
8	16574-99A	DOWEL RING (2)	ALL
9	16589-99A	DOWEL RING (2)	ALL
10	16595-99A	DOWEL RING (4)	ALL
11	22307-99	PISTON COOLING JET, w/ 11140 (2)	ALL
12	24004-03B	BEARING KIT, w/ 8972, 24605-07 & 35114-02	ALL
13	24039-03	SPACER, sprocket shaft	ALL
14	24605-07	ROLLER BEARING (2)	ALL
15	24678-03	SET OF CRANKCASES, w/ 100th medallion (black) **RESTRICTED SALES PART**	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTS, FXSTSI
	24679-03	SET OF CRANKCASES, w/ 100th medallion (silver) **RESTRICTED SALES PART**	FXST, FXSTI
16	24709-03	MEDALLION KIT, crankcase **RESTRICTED SALES PART**	ALL
17	26352-95A	ADAPTOR, oil filter	ALL
18	26432-76A	O-RING (2)	ALL
19	35114-02	RETAINING RING	ALL
20	63731-99A	OIL FILTER (black)	FXSTB, FXSTBI
	63798-99A	OIL FILTER (chrome)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
21	68042-99	SCREW (4)	ALL

ENGINE BALANCER - Twin Cam 88B™

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	956	SCREW (6)	ALL
2	6852	WASHER (2)	ALL
3	7974	JAM NUT (2)	ALL
4	8991	BEARING (2)	ALL
5	8989	BEARING (2)	ALL
6	14716-00	SUPPORT, front balance shaft	ALL
7	14717-00	SUPPORT, rear balance shaft	ALL
8	14728-00	SUPPORT ASSEMBLY, chain guide, w/ tensioner pistons	ALL
9	14761-00	GUIDE KIT, chain tensioner, w/ lower, front & rear guides	ALL
10	14762-00	CHAIN DRIVE KIT, w/ chain, front & rear sprockets	ALL
11	14764-00	PISTON ASSEMBLY KIT, chain tensioner (2)	ALL
12	14780-00	SPACER, 0.130 inch thick	ALL
	14781-00	SPACER, 0.140 inch thick	ALL
	14782-00	SPACER, 0.150 inch thick	ALL
	14783-00	SPACER, 0.160 inch thick	ALL
	14784-00	SPACER, 0.170 inch thick	ALL
	14785-00	SPACER, 0.180 inch thick	ALL
	14786-00	SPACER, 0.190 inch thick	ALL
	14787-00	SPACER, 0.200 inch thick	ALL
	14788-00	SPACER, 0.210 inch thick	ALL
13	14789-00	BALANCE SHAFT KIT, front, w/ balance shaft & sprocket	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
14	14790-00	BALANCE SHAFT KIT, rear, w/ balance shaft & sprocket	ALL
15	16583-00A	DOWEL (4)	ALL
16	45359-00	SEAL, oil interconnect	ALL

CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	601	ROLL PIN	ALL
2	3290	PLUG, cam support plate	ALL
3	4740A	SCREW (10)	ALL
4	4741A	SCREW (10)	ALL
5	6294	WASHER	ALL
6	8983	BEARING ASSEMBLY	ALL
7	8990A	BALL BEARING	ALL
8	11031	RETAINING RING (2)	ALL
9	11157	O-RING	ALL
10	11286	O-RING	ALL
11	11298	O-RING, viton	ALL
12	11301	O-RING (2)	ALL
13	11494	RETAINING RING	ALL
14	17045-99D	GASKET KIT, cam service	ALL
15	24983-00	SCREEN, oil	ALL
16	25244-99A	GASKET, cam cover	ALL
17	25267-99B	CAM SUPPORT ASSEMBLY, w/ bearings, retaining plate, tensioners & bypass valve	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	25344-99	BUSHING, crankshaft	ALL
19	25364-01B	CAM COVER (black texture)	FXSTB, FXSTBI
	25367-01B	CAM COVER (silver)	FXST, FXSTI
	25369-01B	CAM COVER (chrome)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXSTD, FXSTDI, FXSTS, FXSTSI
20	25533-99A	CAM DRIVE SPROCKET RETENTION KIT, w/ screws & washers	ALL
21	25534-99	CAMSHAFT, front (stamped A)	ALL
22	25544-00	CAMSHAFT, rear (stamped A)	ALL
23	25607-99	CHAIN, secondary cam drive	ALL
24	25609-99	SPROCKET, cam drive on crankshaft, 17T	ALL
25	25610-99	CHAIN, primary cam drive	ALL
26	25716-99	SPROCKET, cam drive, 34T	ALL
27	25938-00	SPACER KIT	ALL
	25717-00	SPACER, cam drive sprocket alignment, 0.327 inch thick (use as required)	ALL
	25719-00	SPACER, cam drive sprocket alignment, 0.317 inch thick (use as required)	ALL
	25721-00	SPACER, cam drive sprocket alignment, 0.307 inch thick (use as required)	ALL
	25722-00	SPACER, cam drive sprocket alignment, 0.287 inch thick (use as required)	ALL
	25723-00	SPACER, cam drive sprocket alignment, 0.297 inch thick (use as required)	ALL
	25725-00	SPACER, cam drive sprocket alignment, 0.337 inch thick (use as required)	ALL

CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (2 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
28	26035-99B	OIL PUMP ASSEMBLY, w/ 11286, 26248-00, 26255-00, 26464-99 & 40323-00	ALL
29	26210-99	SPRING, relief valve	ALL
30	26248-00	SEPARATOR PLATE, gerotor (2)	ALL
31	26255-00	GEROTOR ASSEMBLY, scavenge	ALL
32	26400-82B	RELIEF VALVE, oil pump	ALL
33	26464-99	GEROTOR ASSEMBLY, pressure	ALL
34	32543-99	TIMER COVER (silver)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
	32727-00	TIMER COVER (black)	FXSTB, FXSTBI
	32536-03	TIMER COVER **RESTRICTED SALES PART**	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXSTD, FXSTDI
35	35060-00	PLATE, bearing retaining	ALL
36	39954-99A	CHAIN TENSIONER, primary cam drive chain	ALL
37	39964-99A	CHAIN TENSIONER, secondary cam drive chain	ALL
38	39965-99	CHAIN GUIDE	ALL
39	40323-00	SPRING, separator	ALL
40	68042-99	SCREW (4)	ALL
41	68120-00	SCREW (5)	ALL

ENGINE MOUNTS

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	4716W	SCREW (2)	ALL
2	4726	BOLT	ALL
3	6019	WASHER (2)	ALL
4	6516HW	WASHER	ALL
5	6530	WASHER (4)	ALL
6	7039	LOCKWASHER	ALL
7	7601	LOCKNUT (3)	ALL
8	7879	NUT (2)	ALL
9	16247-00	BRACKET, top engine mount	ALL
10	24603-00	SPACER (4)	ALL
11	48054-00	BOLT	ALL
12	48093-00	BOLT	ALL
13	48094-00	SPACER, engine mount (3)	ALL
14	69046-01	BRACKET, EFI, top engine mount, horn	FLSTCI, FLSTFI, FXSTBI, FXSTDI, FXSTI, FXSTSI
	69047-01	BRACKET, EFI, top engine mount, switch & enrichener cable	FLSTSI
	69136-00	BRACKET, top engine mount, horn	FLSTC, FLSTF, FXST, FXSTB, FXSTD, FXSTS
	69137-00	BRACKET, top engine mount, switch & enrichener cable	FLSTS

CARBURETOR (1 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
-----------	----------	-------------	----------

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3275	SCREW (4)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
2	10014	CLAMP (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
3	26995-86B	SEAL, intake manifold (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
4	27002-89	SEAL RING	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
5	27009-86A	FLANGE, mounting, front	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
6	27010-86A	FLANGE, mounting, rear	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
7	27100-88	NEEDLE JET	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
8	27101-88	NEEDLE JET HOLDER	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
9	27122-89	ROD	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
10	27123-89A	SPRING	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
11	27124-89	E-CLIP	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
12	27125-89	WASHER	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
13	27126-89	LEVER	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
14	27127-89	WASHER	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
15	27128-89	PIN (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
16	27130-90	IDLE SCREW	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
17	27136-90A	SPRING	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
18	27137-81	WASHER	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
19	27146-89	SCREW, w/ washer (3)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
20	27147-89	COLLAR	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
21	27148-89	WASHER	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
22	27156-89	ROD	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
23	27162-89	SPRING	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
24	27170-89	SLOW JET	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
25	27231-98	COLLAR	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
26	27243-95	MAIN JET	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
27	27260-00	PUMP HOUSING	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
28	27261-96	TOP, carburetor	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
	27267-00	TOP, carburetor (chrome)	FXSTD
29	27262-96	SCREW, top (3)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
30	27263-96	COLLAR, carb top	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
31	27311-76	BOOT, accelerator pump	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
32	27315-88A	SPRING	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
33	27317-88	SCREW	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS

CARBURETOR (2 OF 2)


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
34	27339-90	BRACKET, throttle cables	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
35	27360-76	O-RING	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
36	27361-76A	DIAPHRAGM, accelerator pump	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
37	27362-76	SPRING, diaphragm	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
38	27371-76A	FITTING	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
39	27405-00	CHAMBER ASSEMBLY, carburetor float	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
40	27414-99C	CARBURETOR (California only)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
	27421-99C	CARBURETOR	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
	27428-00B	CARBURETOR (California only)	FXSTD
	27429-00B	CARBURETOR	FXSTD
41	27575-88A	PIN	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
42	27576-92	FLOAT	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
43	27577-92	O-RING, float chamber	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
44	27579-88A	SCREW (4)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
45	27580-88	CABLE GUIDE	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
46	27581-88	STARTER CAP	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
47	27582-88	CABLE SEALING CAP	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
48	27583-88	STARTER VALVE	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
49	27585-88	VACUUM PISTON	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
50	27586-88	SPRING SEAT	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
51	27587-88	SCREW	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
52	27613-99	MANIFOLD	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
53	27886-78A	VALVE, w/ clip	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
54	28025-03	JET NEEDLE, N9E	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
NOTE: Hose or insulator is sold in bulk length under the following part numbers. Cut to length.			
55	62555-95	INSULATOR, 5/8 inch I.D. (nylon) (8 feet)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
56	63501-68B	HOSE, 1/4 inch I.D. x 5/8 inch O.D. (rubber) (25 feet)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS

 INDUCTION MODULE - FUEL INJECTED

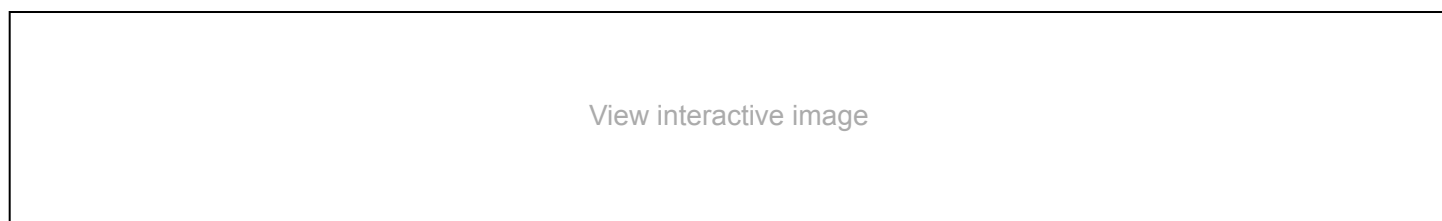

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
-----------	----------	-------------	----------

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3275	SCREW (4)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
2	11291	SEAL, manifold air pressure sensor	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
3	26995-86B	SEAL, intake manifold (2)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
4	27009-86A	FLANGE, mounting, front	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
	27010-86A	FLANGE, mounting, rear	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
5	27270-95	INTAKE AIR TEMPERATURE KIT	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
6	27600-01A	INDUCTION MODULE ASSEMBLY, complete	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
7	27603-01	THROTTLE BODY ASSEMBLY	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
8	27604-01A	THROTTLE HOUSING, stop	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
9	27608-01A	FUEL RAIL	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
10	27609-01B	INJECTOR, fuel (2)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
11	27612-01	TUBE, fuel supply	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
12	27628-01A	IDLE KIT, air control	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
13	27629-01A	THROTTLE KIT, position sensor	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
14	27630-01	INTAKE MANIFOLD	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
15	27635-01A	INDUCTION MODULE HARDWARE KIT	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
16	32416-10	SENSOR, manifold air pressure, w/ 11291	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI

AIR CLEANER & ENRICHENER - CARBURETED MODELS


View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	946	SCREW (3)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
2	11292	O-RING (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
3	29062-95B	GASKET, carburetor to backplate (California only)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
4	29075-99	COVER, air cleaner (chrome) (California only)	FLSTC, FLSTF, FLSTS, FXST, FXSTD, FXSTS
	29089-99	COVER, air cleaner (black wrinkle) (California only)	FXSTB
	29809-03	COVER, air cleaner (California only) **RESTRICTED SALES PART**	FLSTC, FLSTF, FLSTS, FXSTD
5	29094-01	COVER, air cleaner (black wrinkle)	FXSTB
	29121-01	COVER, air cleaner (chrome)	FLSTC, FLSTF, FLSTS, FXST, FXSTD, FXSTS
	29808-03	COVER, air cleaner **RESTRICTED SALES PART**	FLSTC, FLSTF, FLSTS, FXSTD
6	29126-90B	SAFETY LABEL (California only)	FLSTC, FLSTF, FLSTS, FXST, FXSTD, FXSTS
	29449-98B	SAFETY LABEL (California only)	FXSTB
7	29127-95B	SAFETY LABEL	FLSTC, FLSTF, FLSTS, FXST, FXSTD, FXSTS
8	29161-00	TRIM, air cleaner, "Heritage Softail"	FLSTC
	29169-00	TRIM, air cleaner, "Softail"	FXST, FXSTD
	29181-00	TRIM, air cleaner, "Springer Softail"	FXSTS
	29256-00	TRIM, air cleaner, "Fat Boy"	FLSTF
	29366-00	TRIM, air cleaner, "Heritage Springer"	FLSTS
	29482-00	TRIM, air cleaner, "Softail" (black)	FXSTB
9	29229-88D	CABLE, enrichment	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
10	29269-83A	SCREW	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
11	29313-95	GASKET, filter element	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
12	29338-99	SEAL, air cleaner cover (California only)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
13	29342-99	GROMMET, backplate (California only)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
14	29404-01A	SAFETY LABEL	FXSTB
15	29456-99	BACKPLATE ASSEMBLY, w/ 29342-99 (California only)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
16	29461-99	FILTER ELEMENT, w/ 29313-95	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
17	29465-99	SCREW, breather (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
18	29474-99A	BRACKET, air cleaner cover	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
19	29476-99	BREATHER TUBE (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
20	29581-01B	BACKPLATE ASSEMBLY	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
21	29583-01A	GASKET, carburetor to backplate	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
22	29584-01	SEAL, air cleaner cover	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
23	29788-03	BOLT, socket head (used w/ anniversary cover)	FLSTC, FLSTF, FLSTS, FXSTD
24	29811-03	WASHER (used w/ anniversary cover)	FLSTC, FLSTF, FLSTS, FXSTD
INTERNATIONAL MODELS ONLY			
25	29582-01B	BACKPLATE (HDI only)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS

 AIR CLEANER - FUEL INJECTED MODELS

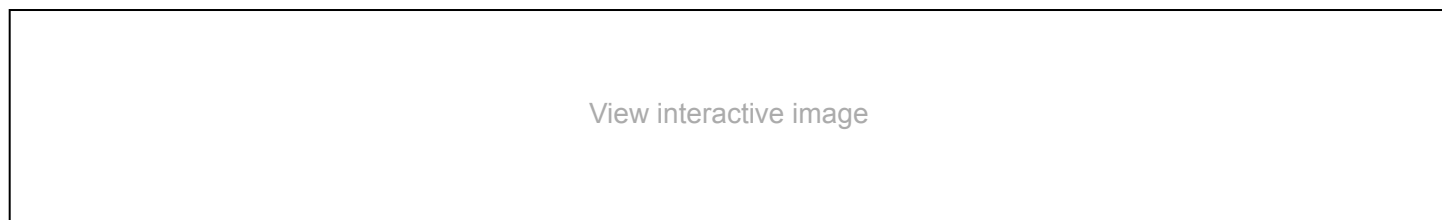

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
-----------	----------	-------------	----------

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	946	SCREW (3)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
2	11292	O-RING (2)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
3	29094-01	COVER, air cleaner (black wrinkle)	FXSTBI
	29121-01	COVER, air cleaner (chrome)	FLSTCI, FLSTFI, FLSTSI, FXSTDI, FXSTI, FXSTSI
	29808-03	COVER, air cleaner **RESTRICTED SALES PART**	FLSTCI, FLSTFI, FLSTSI, FXSTDI
4	29127-95B	SAFETY LABEL	FLSTCI, FLSTFI, FLSTSI, FXSTDI, FXSTI, FXSTSI
5	29269-83A	SCREW	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
6	29313-95	GASKET, filter element	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
7	29404-01A	SAFETY LABEL	FXSTBI
8	29461-99	FILTER ELEMENT, w/ 29313-95	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
9	29465-99	SCREW, breather (2)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
10	29474-99A	BRACKET, air cleaner cover	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
11	29476-99	BREATHER TUBE (2)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
12	29581-01B	BACKPLATE ASSEMBLY	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
13	29583-01A	GASKET, backplate	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
14	29584-01	SEAL, air cleaner cover	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
15	29658-01	TRIM, sequential port injection, "Softail"	FXSTDI, FXSTI
	29660-01	TRIM, sequential port injection, "Softail" (black)	FXSTBI
	29662-01	TRIM, sequential port injection, "Springer Softail"	FXSTSI
	29664-01	TRIM, sequential port injection, "Heritage Softail"	FLSTCI
	29666-01	TRIM, sequential port injection, "Fat Boy"	FLSTFI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	29668-01	TRIM, sequential port injection, "Heritage Springer"	FLSTSI
16	29788-03	BOLT (used w/ anniversary cover)	FLSTCI, FLSTFI, FLSTSI, FXSTDI
17	29811-03	WASHER (used w/ anniversary cover)	FLSTCI, FLSTFI, FLSTSI, FXSTDI
INTERNATIONAL MODELS ONLY			
18	29582-01B	BACKPLATE (HDI only)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI

ALTERNATOR & REGULATOR

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2720	SCREW (4)	ALL
2	2941	SCREW (2)	ALL
3	4814A	SCREW (2)	ALL
4	9843	TERMINAL, #10 ring, 10-12 AWG	ALL
5	10006	CABLE STRAP (4)	ALL
6	10177	RETAINER	ALL
7	29923-01A	SPACER	ALL
8	29981-95	ROTOR ASSEMBLY	ALL
9	30017-01B	STATOR	ALL
10	48127-01	BRACKET, regulator mounting	ALL
11	72195-94	SEAL PIN	ALL
12	72199-94	ANCHOR, T-stud	ALL
13	72242-94	TERMINAL, 1/4 inch ring, 10-12 AWG	ALL
14	72249-94	SHRINK TUBE (black)	ALL
15	72366-95	SHRINK TUBE (yellow)	ALL
16	72604-01BK	PIN HOUSING, 4-way (black)	ALL
17	72614-01BK	SOCKET HOUSING, 4-way (black)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	72644-01	SECONDARY LOCK, pin housing	ALL
19	72654-01	SECONDARY LOCK, socket housing	ALL
20	72690-01	TERMINAL, pin (3)	ALL
21	72691-01	TERMINAL, socket (3)	ALL
22	74540-01	VOLTAGE REGULATOR	ALL

IGNITION MODULE & COIL - CARBURETED

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	960	SCREW (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
2	3602A	SCREW, w/ washer	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
3	4741A	SCREW (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
4	6099	WASHER (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
	6716	WASHER (2)	FXSTD
5	7629	NUT (2)	FXSTD
6	10177	CABLE STRAP, w/ plug-in retainer (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
7	31655-99	IGNITION COIL, dual	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
8	31606-00	COIL COVER ASSEMBLY, w/ 31742-00 (chrome)	FLSTC, FLSTF, FLSTS, FXST, FXSTS
	31725-00	COIL COVER ASSEMBLY, w/ 31742-00 (black wrinkle)	FXSTB
9	31682-00	COIL COVER ASSEMBLY, w/ 31742-00 (chrome)	FXSTD
10	31742-00	PAD, coil cover	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
11	31981-99C	SPARK PLUG CABLE, front cylinder	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
12	31983-00C	SPARK PLUG CABLE, rear cylinder	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
13	32362-04	SPARK PLUG, 6R12 (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
14	32568-00C	IGNITION MODULE	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS

ELECTRONIC CONTROL MODULE & COIL - FUEL INJECTED

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3601	SCREW (4)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
2	3602A	SCREW, w/ washer	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
3	4717A	SCREW (2)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
4	6099	WASHER (4)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
	6716	WASHER (4)	FXSTDI
5	7629	NUT (4)	FXSTDI
6	10177	CABLE STRAP, w/ plug-in retainer (4)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
7	30202-01	COIL COVER ASSEMBLY, w/ 31742-00 (chrome)	FXSTDI
8	31742-00	PAD, coil cover	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
9	31743-01	IGNITION COIL, dual	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
10	31772-01	COIL COVER ASSEMBLY, w/ 31742-00 (chrome)	FLSTCI, FLSTFI, FLSTSI, FXSTI, FXSTSI
	31773-01	COIL COVER ASSEMBLY, w/ 31742-00 (black wrinkle)	FXSTBI
11	31981-99C	SPARK PLUG CABLE, front cylinder	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
12	31983-00C	SPARK PLUG CABLE, rear cylinder	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
13	32362-04	SPARK PLUG, 6R12 (2)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
14	32534-11	ELECTRONIC CONTROL MODULE, base level, blank (Note: Requires digital tech programming.)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI

ENGINE SENSORS AND SWITCHES

[View interactive image](#)

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	4741A	SCREW	ALL
2	11289A	O-RING	ALL
3	11291	SEAL, manifold air pressure sensor	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
4	26561-99	OIL PRESSURE SWITCH	ALL
5	32416-10	SENSOR, manifold air pressure, w/ 11291	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
6	32446-99	SENSOR, engine temperature	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
7	32707-01C	SENSOR, crankshaft position, w/ 11289A, 72199-94 & 74194-98	ALL
8	38712-68	CLAMP	ALL
9	38723-99	RETAINING CLIP, manifold air pressure sensor	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
10	68042-99	SCREW	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
	68042-99	SCREW (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
11	72199-94	ANCHOR, T-stud	ALL
12	74102-98BK	PIN HOUSING, 2-place	ALL
13	74142-98	SECONDARY LOCK, 2-place pin housing	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
14	74194-98	TERMINAL PIN, #20-24 AWG (2)	ALL

STARTER MOTOR

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	925	SCREW, cover	ALL
2	929A	SCREW (2)	ALL
3	3403	LOCKNUT, flange	ALL
4	3559	BOLT, starter (2)	ALL
5	4326A	SCREW (2)	ALL
6	4358A	SCREW	ALL
7	7041	LOCKWASHER (2)	ALL
8	7838	NUT, w/ washer (2)	ALL
9	8871	BALL BEARING	ALL
10	8879	BALL	ALL
11	8883	BALL BEARING	ALL
12	9077	CLUTCH ROLLER (5)	ALL
13	10957	O-RING	ALL
14	11182	RETAINING RING	ALL
15	11248	RETAINING RING	ALL
16	31342-94	PINION GEAR	ALL
17	31430-94	WASHER, thrust	ALL
18	31510-90	HOUSING, starter	ALL
19	31515-90	ARMATURE ASSEMBLY, w/ 8871 & 8883	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
20	31516-94A	CLUTCH ASSEMBLY, starter, w/ 8879, 10957, 31664-94, 31692-90 & return spring	ALL
21	31518-90	BRUSH HOLDER ASSEMBLY	ALL
22	31519-90	FRAME, starter end	ALL
23	31527-90	BRACKET, cover	ALL
24	31530-90	RETAINER, idler gear	ALL
25	31535-91	COVER (chrome) (used w/ 31553-94B)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
	31703-98	COVER (black wrinkle) (used w/ 37102-98)	FXSTB, FXSTBI
26	31538-98	SWITCH ASSEMBLY, magnetic	ALL
27	31548-90	COUPLING	ALL
28	31553-94B	STARTER, complete (black texture) (replaces 31702-98 BT & JA)	ALL
	31702-98	STARTER, complete (black wrinkle) (use 31553-94B)	FXSTB, FXSTBI
29	31604-91A	STARTER SOLENOID REPAIR KIT	ALL
30	31612-09	JACKSHAFT KIT, starter	ALL
31	31662-90	BOOT, insulating	ALL
32	31664-94	SHAFT, output	ALL
33	31688-90	COVER, solenoid	ALL
34	31689-90	BOLT, w/ washer (3)	ALL
35	31692-90	SPRING	ALL
36	31695-90	O-RING (2)	ALL
37	33126-94	LOCKPLATE	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
38	33127-94	SHAFT, extension	ALL
39	33449-94	SPRING, pinion gear	ALL

GEAR SHIFTER

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	609	PIN (4)	ALL
2	856A	SCREW	ALL
3	3275	SCREW (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
4	3784	SET SCREW, shift fork shaft, left	ALL
5	3909	SCREW (4)	ALL
6	4017	BOLT	FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
7	6057	WASHER, nylon	ALL
8	6497HW	WASHER	ALL
9	6702	WASHER	ALL
10	7041	LOCKWASHER	FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
11	7736	ACORN NUT	ALL
12	9837	BALL BEARING (2)	ALL
13	11150	RETAINING RING	ALL
14	11191	O-RING (2)	ALL
15	11319A	RETAINING RING (2)	ALL
16	11342	RETAINING RING	ALL
17	12045	SEAL	ALL
18	33301-00A	SUPPORT ASSEMBLY, shifter cam, left, w/ 9837 & 11319A	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
19	33304-00	SUPPORT ASSEMBLY, shifter cam, right, w/ 9837 & 11319A	ALL
20	33364-00A	DETENT FOLLOWER ASSEMBLY	ALL
21	33374-00	SPRING, detent arm	ALL
22	33375-00A	SLEEVE, detent arm spring	ALL
23	33376-00	PIVOT SCREW, detent arm	ALL
24	33383-02	SHIFTER CAM	ALL
25	33660-90B	SHIFT LEVER (chrome)	FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
	33668-90C	SHIFT LEVER (chrome)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
26	33708-94	BEARING SLEEVE (2)	ALL
27	33719-79B	SHIFTER ROD	ALL
28	33849-97	LEVER, shifter rod	ALL
29	33895-82D	SHIFT LEVER KIT, w/ 3275 (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
30	34064-00C	SPRING, shift lever centering	ALL
31	34088-87A	SHAFT, shifter fork	ALL
32	34191-79E	SHIFTER FORK	ALL
33	34193-79E	SHIFTER FORK	ALL
34	34195-79E	SHIFTER FORK	ALL
35	34564-90B	SHIFT LEVER (chrome)	FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
36	34611-65A	PEG, shift lever	FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
	34611-65A	PEG, shift lever (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
37	34972-02B	LEVER ASSEMBLY, shifter pawl, w/ 34064-00C & 34977-02A	ALL
38	34977-02A	SPRING, shifter shaft lever	ALL
39	34978-00A	CENTERING PIN	ALL
40	34979-00	SLEEVE, shift lever pivot	ALL

TRANSMISSION HOUSING (1 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	337	DOWEL PIN	ALL
2	375	DOWEL PIN	ALL
3	609	PIN (6)	ALL
4	634	PIN	ALL
5	3249	SCREW (2)	FLSTF, FLSTFI, FLSTS, FLSTSI, FXSTD, FXSTDI
	3249	SCREW (4)	FLSTC, FLSTCI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
6	3300	SCREW (2)	FLSTF, FLSTFI, FLSTS, FLSTSI, FXSTD, FXSTDI
7	3594	SCREW	ALL
8	3699D	SCREW (4)	ALL
9	4168	SCREW (2)	ALL
10	4313	SCREW (2)	ALL
11	4717A	SCREW (5)	ALL
12	4740A	SCREW (4)	ALL
13	4814A	SCREW (4)	ALL
14	6532	WASHER (4)	ALL
15	8873	BALL (3)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
16	8977	NEEDLE BEARING	ALL
17	8992A	BALL BEARING (2)	ALL
18	8996A	BALL BEARING, mainshaft, left side	ALL
19	10998	RETAINING RING	ALL
20	11105	O-RING, drain plug	ALL
21	11132A	O-RING, filler plug	ALL
22	11161	RETAINING RING, ball bearing	ALL
23	11165	QUAD SEAL, ball bearing	ALL
24	11179	O-RING, clutch cable	ALL
25	11289A	O-RING	ALL
26	11290	O-RING	ALL
27	12067B	OIL SEAL, mainshaft, left side	ALL
28	16574-99A	DOWEL (2)	ALL
29	25604-00A	INNER RAMP	ALL
30	25605-00A	OUTER RAMP	ALL
31	33005-03	TRANSMISSION ASSEMBLY (silver)	FXST, FXSTI
	33006-03	TRANSMISSION ASSEMBLY (chrome & black)	FLSTC, FLSTCI, FXSTS, FXSTSI
	33007-03	TRANSMISSION ASSEMBLY (chrome & black)	FLSTF, FLSTFI, FLSTS, FLSTSI
	33051-03	TRANSMISSION ASSEMBLY (black wrinkle)	FXSTB, FXSTBI
	33052-03	TRANSMISSION ASSEMBLY (chrome & black)	FXSTD, FXSTDI
32	33344-94	SPACER, sprocket	ALL
33	33904-00A	SWITCH, neutral indicator, w/ 11290	ALL
34	34541-00	COVER, upper (chrome) (replaces silver BH & BV)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	34544-00	COVER, upper (black wrinkle)	FXSTB, FXSTBI

TRANSMISSION HOUSING (2 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
35	34732-00A	TRANSMISSION HOUSING ASSEMBLY (black)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTS, FXSTSI
	34774-00A	TRANSMISSION HOUSING ASSEMBLY (silver)	FXST, FXSTI
36	34904-86D	GASKET, upper cover	ALL
37	34920-86A	COUPLING	ALL
38	35076-79	SPACER (2)	ALL
39	35078-79	NUT, mainshaft & countershaft (2)	ALL
40	35087-99A	RETAINING RING, bearing (2)	ALL
41	35251-93C	BEARING HOUSING ASSEMBLY, w/ 609, 8992A & 35087-99A (silver)	FXST, FXSTI
	35252-93B	BEARING HOUSING ASSEMBLY, w/ 609, 8992A & 35087-99A (black)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTS, FXSTSI
42	35653-98A	GASKET, bearing housing	ALL
43	36801-87C	GASKET, right side cover	ALL
44	37075-87	FILLER PLUG (chrome)	ALL
45	37105-99	CLUTCH RELEASE COVER (chrome)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXSTD, FXSTDI, FXSTS, FXSTSI
	37189-99	CLUTCH RELEASE COVER (black wrinkle)	FXSTB, FXSTBI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	37232-00	CLUTCH RELEASE COVER (silver)	FXST, FXSTI
46	42533-91A	VENT HOSE	ALL
47	48052-00A	BRACKET, transmission mounting, right	ALL
	48053-00	BRACKET, transmission mounting, left	ALL
48	60328-98B	DRAIN PLUG, w/ 11105	ALL
49	62375-57A	FITTING, upper cover	ALL
50	72143-94	SECONDARY LOCK, 3-way receptacle	ALL
51	72163-94BK	RECEPTACLE, 3-way pin	ALL
52	72194-94	TERMINAL, pin (3)	ALL
53	74430-00D	SENSOR, speedometer, w/ 11289A, 72143-94, 72163-94BK & 72194-94	ALL

TRANSMISSION GEARS

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	6003	WASHER (5)	ALL
2	8876A	BEARING (4)	ALL
3	11067	RETAINING RING (6)	ALL
4	12035B	OIL SEAL, mainshaft fifth gear	ALL
5	34091-85A	BEARING, inner race	ALL
6	35025-79B	FIRST GEAR, mainshaft	ALL
7	35026-94	GEAR, mainshaft second & countershaft third (2)	ALL
8	35027-94	GEAR, mainshaft third & countershaft second (2)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
9	35028-94	FOURTH GEAR, mainshaft	ALL
10	35029-94	FIFTH GEAR, mainshaft	ALL
11	35042-91	MAINSHAFT	ALL
12	35051-89A	NEEDLE BEARING (2)	ALL
13	35064-79	SPACER, mainshaft	ALL
14	35622-79C	FIRST GEAR, countershaft	ALL
15	35625-94	FOURTH GEAR, countershaft	ALL
16	35626-94	FIFTH GEAR, countershaft	ALL
17	35629-79	SPACER	ALL
18	35632-79	COUNTERSHAFT	ALL

CLUTCH

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2980	SCREW (6)	ALL
2	7848W	JAM NUT	ALL
3	11096	RETAINING RING	ALL
4	37069-90A	OIL SLINGER ASSEMBLY	ALL
5	37088-90	PUSH ROD, clutch release	ALL
6	37090-98A	END, push rod, left	ALL
7	37312-75	BEARING, push rod	ALL
8	37313-80	THRUST WASHER (2)	ALL
9	37496-90	NUT, mainshaft	ALL
10	37550-98	CLUTCH HUB	ALL
11	37707-98A	CLUTCH SHELL & SPROCKET, w/ 37905-00 & 37906-90	ALL
12	37802-98B	CLUTCH ASSEMBLY, w/ 1, 9, 10, 11, 13, 14, 15, 16, 17, 18, 21, 22, 23 & 24	ALL
13	37871-98A	SPRING, diaphragm (white)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
14	37872-00	SEAT, clutch spring	ALL
15	37883-98	SEAT, damper spring	ALL
16	37884-98	DAMPER SPRING	ALL
17	37903-90	RELEASE PLATE	ALL
18	37904-90	RETAINING RING, internal	ALL
19	37905-00	RETAINING RING, internal	ALL
20	37906-90	BEARING, ball, double row	ALL
21	37909-90	RETAINING RING, internal	ALL
22	37912-00	PRESSURE PLATE	ALL
23	37913-98	CLUTCH PLATE (8)	ALL
24	37932-98	FRICTION PLATE KIT, includes all 9 friction plates	ALL

PRIMARY HOUSING

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	375	PIN	ALL
2	739A	PLUG, magnetic	ALL
3	858A	BOLT (4)	ALL
4	941	SCREW (2)	ALL
5	945	SCREW (2)	ALL
6	961	SCREW (5)	ALL
7	2887WA	SCREW (4)	ALL
8	4740A	SCREW, w/ washer (7)	ALL
9	4820A	SCREW, w/ washer (5)	ALL
10	6016	WASHER (2)	ALL
11	9135	BEARING	ALL
12	11147B	O-RING, housing cover	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
13	12052A	OIL SEAL	ALL
14	12066A	OIL SEAL	ALL
15	25414-99	COVER, clutch (polished)	FXST, FXSTI
	60668-99	COVER, clutch (chrome)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXSTD, FXSTDI, FXSTS, FXSTSI
	60713-99	COVER, clutch (black wrinkle)	FXSTB, FXSTBI
	60743-03	COVER, clutch **RESTRICTED SALES PART**	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXSTD, FXSTDI
16	25416-99C	SEAL, clutch cover	ALL
17	33318-85	LOCKING TAB (6)	ALL
18	33445-94A	BUSHING	ALL
19	33446-94A	BUSHING	ALL
20	60539-94B	GASKET, primary cover	ALL
21	60543-99B	COVER ASSEMBLY, primary (chrome)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXSTD, FXSTDI, FXSTS, FXSTSI
	60715-99B	COVER ASSEMBLY, primary (black wrinkle)	FXSTB, FXSTBI
	60721-99B	COVER ASSEMBLY, primary (silver)	FXST, FXSTI
22	60567-90C	GASKET, inspection cover	ALL
23	60572-86	COVER, primary chain inspection (chrome) (replaces black wrinkle BT & JA)	ALL
24	60586-99A	PRIMARY HOUSING ASSEMBLY (silver)	FXST, FXSTI
	60630-94B	PRIMARY HOUSING ASSEMBLY (black texture)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXSTD, FXSTDI, FXSTS, FXSTSI
	60724-98A	PRIMARY HOUSING ASSEMBLY (black wrinkle)	FXSTB, FXSTBI
25	60678-85	RETAINING RING (2)	ALL
26	63859-95B	GASKET (2)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
27	25700225	GASKET KIT, inner primary w/ 12, 13, 14, 16, 17, 22, 26 and 11324, 31430-94, 33126-94, 34906-85D, 37909-90, 63859-95B	ALL
INTERNATIONAL MODELS ONLY			
28	14270-92	DECAL, shift pattern (Japan only)	ALL

BELTS, CHAINS & SPROCKETS

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	1783C	SCREW (2)	ALL
2	3594	SCREW (2)	ALL
3	3737A	SCREW (5)	ALL
4	5416	BOLT	ALL
5	6400HB	WASHER	ALL
6	6516HW	WASHER (5)	ALL
7	7778	LOCKNUT	ALL
8	11085	RETAINING RING	ALL
9	35211-91B	NUT, sprocket	ALL
10	39976-01	PAD, chain tensioner	ALL
11	39990-01	CHAIN TENSIONER	ALL
12	39998-65A	ANCHOR PLATE, chain tensioner	ALL
13	40007-36B	PRIMARY CHAIN	ALL
14	40307-00B	REAR BELT, 135T	ALL
15	40250-94C	SPROCKET, transmission, 32T	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
16	40251-92A	LOCKPLATE	ALL
17	40266-85	SHAFT EXTENSION	ALL
18	40289-00	SPROCKET, rear, 70T (black)	FLSTC, FLSTCI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	40295-00	SPROCKET, rear, 70T (silver)	FLSTF, FLSTFI
	40303-00	SPROCKET, rear, 70T (silver)	FXSTD, FXSTDI
19	40299-83A	SLIDING CAM	ALL
20	40308-94	COMPENSATING SPROCKET, 25T	ALL
21	40384-91	COVER ASSEMBLY, w/ springs	ALL
22	40392-91	NUT	ALL
23	43727-00	SEAL RING	FXSTD, FXSTDI

CLUTCH CONTROL

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2566	SCREW	ALL
2	4132	SCREW (2)	ALL
3	6101	WASHER (2)	ALL
4	10124	CLAMP	ALL
5	11143	RETAINING RING	ALL
6	11179	O-RING	ALL
7	38608-96	BRACKET, hand lever	ALL
8	38630-88	BOOT, clutch cable	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
9	38664-00	CABLE, clutch control, w/ 11179, 38630-88 & 45036-88	FXSTD, FXSTDI
	38665-00	CABLE, clutch control, w/ 11179, 38630-88 & 45036-88	FXSTB, FXSTBI
	38666-00	CABLE, clutch control, w/ 11179, 38630-88 & 45036-88	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTI, FXSTS, FXSTSI
10	45015-96	HAND LEVER, clutch	ALL
11	45021-86	SPRING, anti-rattle	ALL
12	45032-82	PIN, hand lever pivot	ALL
13	45036-88	ANCHOR PIN	ALL
14	45044-96A	CLAMP, lever bracket	ALL
15	45423-92	BUSHING	ALL
16	90770-79	SCREW	ALL

REAR BELT GUARD

[View interactive image](#)

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3987	BOLT	ALL
2	4383	SCREW	ALL
3	6702	WASHER	ALL
4	7507	ACORN NUT	ALL
5	7669	NUT	ALL
6	7899A	BOLT, acorn (2)	ALL
7	11413	GROMMET	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
8	60362-00	DEBRIS DEFLECTOR	ALL
9	60533-00A	BELT GUARD (chrome)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
	60564-00A	BELT GUARD (black wrinkle)	FXSTB, FXSTBI

FRONT BRAKE CONTROL

[View interactive image](#)

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	923	SCREW (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
	3538	SCREW	FLSTS, FLSTSI, FXSTS, FXSTSI
2	2579A	SCREW (2)	ALL
3	3594	SCREW	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
4	4091	SCREW	FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI
5	4132	SCREW (2)	ALL
6	6101	WASHER (2)	ALL
7	6703	WASHER	FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
8	7220	LOCKWASHER, external tooth	FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI
9	10031	CLAMP	FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI
10	10053	CLAMP	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI
11	10065	CABLE STRAP (3)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI
12	10076	CLAMP	FLSTS, FLSTSI, FXSTS, FXSTSI
13	10209	CLAMP (used w/ 45209-97B) (2)	FLSTS, FLSTSI
14	11143	RETAINING RING	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
15	41713-86	CLAMP (3)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXSTS, FXSTSI
16	41731-01	GASKET (2)	ALL
	41731-88A	GASKET (used w/ 45209-97B) (2)	FLSTS, FLSTSI
17	41733-88	GASKET, master cylinder (2)	ALL
18	41739-84A	FITTING, master cylinder	ALL
19	41747-82A	FITTING	ALL
20	42303-00A	BRAKE LINE, front (use 42317-06A)	FLSTF, FLSTFI
	42305-00	BRAKE LINE, front (use 42317-06A)	FLSTC, FLSTCI
	45091-97	BRAKE LINE, front (use 45209-97B)	FLSTS, FLSTSI
	45110-96	BRAKE LINE, front	FXSTS, FXSTSI
	45119-00	BRAKE LINE, front (use 45119-00B)	FXSTD, FXSTDI
	45199-99	BRAKE LINE, front (use 45199-99B)	FXST, FXSTI
	45250-98	BRAKE LINE, front (use 45250-98B)	FXSTB, FXSTBI
21	42317-06A	BRAKE LINE KIT, w/ 10065, 41731-01, 41733-88 & 68562-84	FLSTC, FLSTCI, FLSTF, FLSTFI
	45119-00B	BRAKE LINE KIT, w/ 10065, 41731-01, 41733-88, 68562-84 & 71795-63A	FXSTD, FXSTDI
	45199-99B	BRAKE LINE KIT, w/ 10065, 41731-01, 41733-88, 68562-84 & 71795-63A	FXST, FXSTI
	45209-97B	BRAKE LINE KIT, w/ 10065, 10209, 41731-88A, 41733-88 & 68562-84	FLSTS, FLSTSI
	45250-98B	BRAKE LINE KIT, w/ 10065, 41731-01, 41733-88, 68562-84 & 71795-63A	FXSTB, FXSTBI
22	45006-96C	REPAIR KIT, master cylinder (9/16 inch bore)	ALL
23	45016-96	HAND LEVER, front brake control, w/ 45423-96	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
24	45019-96D	MASTER CYLINDER ASSEMBLY, front, w/ 11143, 45006-96C, 45016-96, 45030-03C & 45032-82 (9/16 inch bore)	ALL
25	45030-03C	COVER KIT, reservoir, w/ 2579A	ALL
26	45032-82	PIVOT PIN	ALL
27	45044-96A	CLAMP, handlebar control	ALL
28	45423-96	BUSHING, lever pivot	ALL
29	68562-84	CLAMP (used w/ 45119-00B, 45199-99B, 45209-97B & 45250-98B)	FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI
	68562-84	CLAMP (used w/ 42317-06A) (3)	FLSTC, FLSTCI, FLSTF, FLSTFI
30	71795-63A	CLAMP (used w/ 45119-00B, 45199-99B & 45250-98B)	FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI

REAR BRAKE CONTROL

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	515	COTTER PIN	ALL
2	2579A	SCREW (2)	ALL
3	3588	SCREW	ALL
4	3655A	SCREW	ALL
5	6099	WASHER	ALL
6	6237	WASHER	ALL
7	7742	LOCKNUT	FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
8	7951	JAM NUT	ALL
9	10108	CLIP, engine harness	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
10	11364	O-RING (2)	ALL
11	11688	RETAINING RING	ALL
12	40918-87	RETAINING RING	ALL
13	40920-87	SPRING, brake return	ALL
14	40922-87A	BOOT, push rod	ALL
15	41731-01	GASKET (4)	ALL
16	41747-82A	BOLT (2)	ALL
17	41755-99D	MASTER CYLINDER ASSEMBLY, w/ 2, 12, 13, 14, 18, 19, 21 & 30	ALL
18	41957-97A	PUSH ROD KIT, w/ 11688	ALL
19	42382-87C	REBUILD KIT, master cylinder	ALL
20	42416-83	PAD, brake lever (used w/ 42597-00A)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
21	42454-99A	RESERVOIR, master cylinder, w/o O-rings	ALL
22	42455-99	GASKET, master cylinder reservoir (use 46458-05)	ALL
	42568-05A	GASKET, master cylinder reservoir (used w/ 46458-05)	ALL
23	42460-80B	CLEVIS PIN	ALL
24	42515-00A	LEVER, foot brake, w/ 57217-02 (chrome)	FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
	42597-00A	LEVER, foot brake, w/ 57217-02 (chrome) (not shown)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
25	42532-82	PAD, brake lever (used w/ 42515-00A)	FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
26	45042-96	SIGHT GLASS	ALL
27	45108-04	BRACKET, brake line (used w/ 45133-04B)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
28	45133-04B	BRAKE LINE KIT, rear, w/ 3588, 41731-01 & 45108-04	ALL
29	45156-00	BRAKE LINE, rear (use 45133-04B)	ALL
30	46458-05	COVER KIT, reservoir, w/ 42568-05A	ALL
31	57217-02	BUSHING, brake lever (2)	ALL
32	72023-51E	STOP LAMP SWITCH, rear	ALL
33	72463-00A	BRACKET, brake line	ALL

FRONT BRAKE CALIPER - SPRINGER MODELS

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	509	SPRING PIN	FLSTS, FLSTSI
2	534	COTTER PIN	FXSTS, FXSTSI
3	3562	SCREW	FLSTS, FLSTSI, FXSTS, FXSTSI
4	6019	WASHER	FLSTS, FLSTSI, FXSTS, FXSTSI
5	6758	WASHER	FXSTS, FXSTSI
6	44020-83	PISTON REBUILD KIT, w/ 44021-83, 44022-83 & 44047-83	FLSTS, FLSTSI, FXSTS, FXSTSI
7	44021-83	RETAINING RING, piston	FLSTS, FLSTSI, FXSTS, FXSTSI
8	44022-83	DUST BOOT, piston	FLSTS, FLSTSI, FXSTS, FXSTSI
9	44047-83	SEAL, piston	FLSTS, FLSTSI, FXSTS, FXSTSI
10	44048-83	BLEEDER FITTING	FLSTS, FLSTSI, FXSTS, FXSTSI
11	44053-83B	GUIDE PIN KIT, w/ 44054-83 & 44059-83	FLSTS, FLSTSI, FXSTS, FXSTSI
12	44054-83	PIN BOOT	FLSTS, FLSTSI, FXSTS, FXSTSI
13	44059-83	O-RING (3)	FLSTS, FLSTSI, FXSTS, FXSTSI
14	44061-83	SPRING CLIP	FLSTS, FLSTSI, FXSTS, FXSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
15	44062-83	RETAINING PAD	FLSTS, FLSTSI, FXSTS, FXSTSI
16	44063-83C	BRAKE PAD SET, front	FLSTS, FLSTSI, FXSTS, FXSTSI
17	44074-88B	BRACKET, caliper mounting	FXSTS, FXSTSI
	44097-97	BRACKET, caliper mounting	FLSTS, FLSTSI
18	44077-88F	CALIPER ASSEMBLY, front brake, right	FXSTS, FXSTSI
	44079-97C	CALIPER ASSEMBLY, front brake, left	FLSTS, FLSTSI
19	44190-88A	SCREW, flange	FXSTS, FXSTSI
20	44197-77	LABEL	FLSTS, FLSTSI, FXSTS, FXSTSI
21	44215-97A	SCREW, flange	FLSTS, FLSTSI

FRONT BRAKE CALIPER

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	44046-00D	CALIPER ASSEMBLY, left	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI
2	44048-83	BLEEDER FITTING	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI
3	44082-00D	PAD KIT	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI
4	44147-87A	CAP, bleeder	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI
5	44160-00	BOLT, caliper mounting, lower	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI
6	44163-00	BOLT, caliper mounting, upper	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI
7	44177-00	BOLT, bridge (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI
8	44313-01	PISTON KIT (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI
9	44314-00	PAD PIN KIT (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
10	44315-00	SEAL KIT (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI
11	44337-00B	SPRING KIT, anti-rattle	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI
12	44338-00	DECAL	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI

REAR BRAKE CALIPER

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	44016-00D	CALIPER ASSEMBLY, rear brake	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	44441-00D	CALIPER ASSEMBLY, rear brake	FXSTD, FXSTDI
2	44048-83	SCREW, bleeder	ALL
3	44082-00D	PAD KIT	ALL
4	44147-87A	CAP, bleeder screw	ALL
5	44177-00	BOLT, bridge (3)	ALL
6	44313-01	PISTON KIT	ALL
7	44314-00	PAD PIN KIT	ALL
8	44315-00	SEAL KIT	ALL
9	44337-00B	SPRING KIT, anti-rattle	ALL
10	44338-00	DECAL	ALL
11	44351-00	BUMPER	ALL

FRONT WHEEL (1 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	508	RETAINING PIN	FLSTS, FLSTSI
2	3655A	SCREW (5)	FLSTC, FLSTCI, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
	3655A	SCREW (10)	FLSTF
3	6590HW	WASHER	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI
4	6639	WASHER	FXSTS, FXSTSI
5	7068	LOCKWASHER	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI
6	7956	NUT	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTDI, FXSTI
	7987	NUT	FLSTS, FLSTSI
	7994	LOCKNUT	FXSTS, FXSTSI
7	8001	ACORN NUT (2)	FXSTD, FXSTDI
8	9267	SEALED BALL BEARING (2)	ALL
9	11280	SNAP RING	FLSTC, FLSTCI
10	40910-00A	SPACER, right side of wheel	FXST, FXSTB, FXSTBI, FXSTI
	43617-00A	SPACER, right side of wheel	FLSTF, FLSTFI
	44029-00	SPACER, right side of wheel	FXSTS, FXSTSI
11	41038-00	WHEEL, front, 16 inch, solid cast disc, w/o bearings & sleeve	FLSTF, FLSTFI
12	41109-88A	AXLE, front	FXSTS, FXSTSI
	41116-97	AXLE, front	FLSTS, FLSTSI
	41584-86A	AXLE, front	FLSTC, FLSTCI, FLSTF, FLSTFI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	43346-83B	AXLE, front	FXST, FXSTB, FXSTBI, FXSTI
13	41123-79	VALVE CAP	ALL
14	43005-05A	WHEEL, front, 16 inch, laced, w/ 43085-97, 43241-05 & hub, w/o bearings & sleeve	FLSTC, FLSTCI
	43016-00B	WHEEL, front, 16 inch, laced, w/ 43085-97, 43241-05 & hub, w/o bearings & sleeve	FLSTS, FLSTSI
	43671-05A	WHEEL, front, 21 inch, laced, w/ 43239-05, 43662-80B & hub, w/o bearings & sleeve	FXSTB, FXSTBI, FXSTD, FXSTDI
	43676-05A	WHEEL, front, 21 inch, laced, w/ 43239-05, 43662-80B & hub, w/o bearings & sleeve	FXSTS, FXSTSI
	43700-05A	WHEEL, front, 21 inch, laced, w/ 43239-05, 43662-80B & hub, w/o bearings & sleeve	FXST, FXSTI
15	43067-97	CAP, hub (chrome)	FLSTC, FLSTCI
16	43085-97	RIM, 16 inch (chrome)	FLSTC, FLSTCI, FLSTS, FLSTSI
	43662-80B	RIM, 21 inch (chrome)	FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
17	43155-00	HUB CAP ASSEMBLY, w/ 11280, 43067-97 & 43614-00	FLSTC, FLSTCI
18	43157-83A	VALVE STEM	FLSTF, FLSTFI
19	43241-05	SPOKE & NIPPLE SET, 16 inch (set of 40)	FLSTC, FLSTCI, FLSTS, FLSTSI
	43239-05	SPOKE & NIPPLE SET, 21 inch (set of 40)	FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
20	43354-00	AXLE, front	FXSTD, FXSTDI
21	43360-00	SPACER, left side of wheel	FLSTS, FLSTSI
	43683-00A	SPACER, left side of wheel	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
22	43608-00	SLEEVE	ALL
23	43614-00	HUB SPACER	FLSTC, FLSTCI
24	43623-00	SPACER, right side of wheel	FXSTD, FXSTDI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	43624-00	SPACER, right side of wheel	FLSTS, FLSTSI
25	43672-00	HUB, w/ 9267 & 43608-00 (use 43005-05A, 43016-00B, 43671-05A, 43676-05A) (chrome plated)	FLSTC, FLSTCI, FLSTS, FLSTSI, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTS, FXSTSI
	43701-00	HUB, w/ 9267 & 43608-00 (use 43700-05A) (polished)	FXST, FXSTI

FRONT WHEEL (2 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
26	44156-00	BRAKE DISC, front	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI
	44260-00	BRAKE DISC, front	FLSTS, FLSTSI, FXSTS, FXSTSI
27	44447-00	COVER, disc wheel	FLSTF, FLSTFI
28	54321-85	NUT, valve stem	FXSTB, FXSTBI, FXSTD, FXSTDI
	54321-85	NUT, valve stem (2)	FLSTC, FLSTCI, FLSTS, FLSTSI, FXST, FXSTI, FXSTS, FXSTSI
29	95578-41	WEIGHT, 1/2 oz., 0.275 inch I.D., round	FLSTC, FLSTCI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
	95581-47	WEIGHT, 3/4 oz., 0.275 inch I.D., round	FLSTC, FLSTCI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
	95582-47	WEIGHT, 1 oz., 0.275 inch I.D., round	FLSTC, FLSTCI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
30	95595-84A	WEIGHT, 5 grams (for cast wheel) (silver)	FLSTF, FLSTFI

REAR WHEEL

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	508	RETAINING PIN	ALL
2	3737A	SCREW (5)	ALL
3	5756	WASHER	ALL
4	6516HW	WASHER (5)	ALL
5	7987	NUT	ALL
6	9267	SEALED BALL BEARING (2)	ALL
7	40295-00	SPROCKET, rear, 70T (silver)	FLSTF, FLSTFI
	40289-00	SPROCKET, rear, 70T (black)	FLSTC, FLSTCI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	40303-00	SPROCKET, rear, 70T, w/ 43727-00 (silver)	FXSTD, FXSTDI
8	40700-05A	WHEEL, rear, 16 inch, laced, w/ 43085-97, 43241-05 & hub, w/o bearings & sleeve (chrome)	FLSTC, FLSTCI, FLSTS, FLSTSI, FXST, FXSTI, FXSTS, FXSTSI
9	40976-00	HUB ASSEMBLY, w/ 9267 & 43608-00 (use 40700-05A)	FLSTC, FLSTCI, FLSTS, FLSTSI, FXST, FXSTI, FXSTS, FXSTSI
10	41074-00	WHEEL, rear, 17 inch, disc, w/o bearings & sleeve (silver)	FXSTD, FXSTDI
11	41092-03	WHEEL, rear, 16 inch, disc, w/o bearings & sleeve (silver)	FLSTF, FLSTFI
	41095-03	WHEEL, rear, 16 inch, disc, w/o bearings & sleeve (black)	FXSTB, FXSTBI
12	41110-79A	AXLE KIT, w/ 5756, 7987, spring pin & cotter pin	ALL
13	41123-79	VALVE CAP	ALL
14	41595-00B	SPACER, rear axle, left	ALL
15	41797-00	BRAKE DISC, rear	ALL
16	43085-97	RIM, 16 inch (chrome)	FLSTC, FLSTCI, FLSTS, FLSTSI, FXST, FXSTI, FXSTS, FXSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
17	43157-83A	VALVE STEM ASSEMBLY	FLSTF, FLSTFI, FXSTB, FXSTBI, FXSTD, FXSTDI
18	43241-05	SPOKE & NIPPLE SET, 16 inch rim (set of 40)	FLSTC, FLSTCI, FLSTS, FLSTSI, FXST, FXSTI, FXSTS, FXSTSI
19	43567-92	SCREW (5)	ALL
20	43608-00	SLEEVE	ALL
21	43654-00A	SPACER, wheel	ALL
22	43727-00	SEAL RING	FXSTD, FXSTDI
23	54321-85	NUT, valve stem	FLSTC, FLSTCI, FLSTS, FLSTSI, FXST, FXSTI, FXSTS, FXSTSI
24	95578-41	WEIGHT, 1/2 oz., 0.275 inch I.D., round	FLSTC, FLSTCI, FLSTS, FLSTSI, FXST, FXSTI, FXSTS, FXSTSI
	95581-47	WEIGHT, 3/4 oz., 0.275 inch I.D., round	FLSTC, FLSTCI, FLSTS, FLSTSI, FXST, FXSTI, FXSTS, FXSTSI
	95582-47	WEIGHT, 1 oz., 0.275 inch I.D., round	FLSTC, FLSTCI, FLSTS, FLSTSI, FXST, FXSTI, FXSTS, FXSTSI
25	95595-84A	WEIGHT, 5 grams (silver)	FLSTF, FLSTFI, FXSTB, FXSTBI, FXSTD, FXSTDI
INTERNATIONAL MODELS ONLY			
26	40964-00	COVER, axle nut (HDI only)	FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI

FRONT FORK - FXST/I & FXSTB/I

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2823	SCREW (2)	FXST, FXSTB, FXSTBI, FXSTI
2	4729	BOLT (2)	FXST, FXSTB, FXSTBI, FXSTI
3	5710	WASHER (2)	FXST, FXSTB, FXSTBI, FXSTI
4	6702	WASHER, right slider (2)	FXST, FXSTB, FXSTBI, FXSTI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
5	7039	LOCKWASHER (2)	FXST, FXSTB, FXSTBI, FXSTI
6	7041	LOCKWASHER, right slider (2)	FXST, FXSTB, FXSTBI, FXSTI
7	7962	NUT, right slider (2)	FXST, FXSTB, FXSTBI, FXSTI
8	45405-75A	SCREW, w/ washer (2)	FXST, FXSTB, FXSTBI, FXSTI
9	45417-00	SLIDER TUBE (2)	FXST, FXSTB, FXSTBI, FXSTI
10	45418-00	DAMPER TUBE, complete (2)	FXST, FXSTB, FXSTBI, FXSTI
11	45419-80	CAP, slider tube (2)	FXST, FXSTB, FXSTBI, FXSTI
12	45420-80	DUST COVER (2)	FXST, FXSTB, FXSTBI, FXSTI
13	45611-86	RETAINING RING	FXST, FXSTB, FXSTBI, FXSTI
14	45640-00A	STEM & BRACKET, w/ 45648-85A & 48365-48A	FXST, FXSTB, FXSTBI, FXSTI
15	45648-85A	PAD (felt) (2)	FXST, FXSTB, FXSTBI, FXSTI
16	45670-80A	CAP, fork stem	FXST, FXSTB, FXSTBI, FXSTI
17	45672-80B	BRACKET, upper (chrome)	FXST, FXSTB, FXSTBI, FXSTI
18	45685-93	COVER, fork bracket (chrome)	FXST, FXSTB, FXSTBI, FXSTI
19	45717-63	LOCKWASHER, fork stem nut	FXST, FXSTB, FXSTBI, FXSTI
20	45718-60	NUT, fork stem	FXST, FXSTB, FXSTBI, FXSTI
21	45733-48	OIL SEAL, fork tube plug (2)	FXST, FXSTB, FXSTBI, FXSTI
22	45803-97	LOWER STOP (2)	FXST, FXSTB, FXSTBI, FXSTI
23	45832-77A	AXLE CAP, right slider	FXST, FXSTB, FXSTBI, FXSTI
24	45838-77	PLUG, fork tube (2)	FXST, FXSTB, FXSTBI, FXSTI
25	45842-77A	RETAINING RING, oil seal (2)	FXST, FXSTB, FXSTBI, FXSTI
26	45845-77	O-RING, slider tube plug (2)	FXST, FXSTB, FXSTBI, FXSTI
27	45858-77	DRAIN SCREW, w/ washer (2)	FXST, FXSTB, FXSTBI, FXSTI
28	45859-77A	RING, damper tube (2)	FXST, FXSTB, FXSTBI, FXSTI
29	45865-84	WASHER, slider (2)	FXST, FXSTB, FXSTBI, FXSTI
30	45866-84	BUSHING, slider tube (2)	FXST, FXSTB, FXSTBI, FXSTI
31	45873-00	SLIDER, left	FXST, FXSTB, FXSTBI, FXSTI
	45874-91	SLIDER, right	FXST, FXSTB, FXSTBI, FXSTI
32	45875-84A	OIL SEAL, slider (2)	FXST, FXSTB, FXSTBI, FXSTI
33	45933-86	SPRING, damper tube (2)	FXST, FXSTB, FXSTBI, FXSTI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
34	45940-84	BUSHING, slider (2)	FXST, FXSTB, FXSTBI, FXSTI
35	45998-73	STUD (2)	FXST, FXSTB, FXSTBI, FXSTI
36	46004-00	FORK SLIDER & TUBE ASSEMBLY, left	FXST, FXSTB, FXSTBI, FXSTI
37	46006-00	FORK SLIDER & TUBE ASSEMBLY, right	FXST, FXSTB, FXSTBI, FXSTI
38	46048-00	SPRING (2)	FXST, FXSTB, FXSTBI, FXSTI
39	48300-60	ROLLER BEARING, w/ 48315-60 (2)	FXST, FXSTB, FXSTBI, FXSTI
40	48315-60	BEARING CUP (2)	FXST, FXSTB, FXSTBI, FXSTI
41	48330-48A	BEARING & SHIELD KIT, w/ 48332-48C & 48361-80	FXST, FXSTB, FXSTBI, FXSTI
42	48332-48C	ADJUSTING NUT, upper	FXST, FXSTB, FXSTBI, FXSTI
43	48361-80	DUST SHIELD, bearing, upper	FXST, FXSTB, FXSTBI, FXSTI
44	48365-48A	DUST SHIELD, bearing, lower	FXST, FXSTB, FXSTBI, FXSTI
45	59481-00	REFLECTOR, right (amber)	FXST, FXSTB, FXSTBI, FXSTI
46	59482-00	REFLECTOR, left (amber)	FXST, FXSTB, FXSTBI, FXSTI

FRONT FORK - FXSTD/I

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	992	SCREW (2)	FXSTD, FXSTDI
2	4213	SCREW (2)	FXSTD, FXSTDI
3	5710	WASHER (2)	FXSTD, FXSTDI
4	7039	LOCKWASHER (2)	FXSTD, FXSTDI
5	7062	LOCKWASHER (2)	FXSTD, FXSTDI
6	45066-00	AXLE HOLDER, right	FXSTD, FXSTDI
7	45405-75A	SCREW, w/ washer (2)	FXSTD, FXSTDI
8	45417-00	SLIDER TUBE (2)	FXSTD, FXSTDI
9	45419-80	CAP, slider tube (2)	FXSTD, FXSTDI
10	45475-00A	STEM & BRACKET, w/ 48365-48A	FXSTD, FXSTDI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
11	45611-86	RETAINING RING	FXSTD, FXSTDI
12	45670-80A	CAP, fork stem	FXSTD, FXSTDI
13	45717-63	LOCKWASHER, fork stem nut	FXSTD, FXSTDI
14	45718-60	NUT, fork stem	FXSTD, FXSTDI
15	45733-48	OIL SEAL, fork tube plug (2)	FXSTD, FXSTDI
16	45769-00	BRACKET, upper	FXSTD, FXSTDI
17	45790-80	SCREW (2)	FXSTD, FXSTDI
18	45803-97	LOWER STOP (2)	FXSTD, FXSTDI
19	45838-77	PLUG, fork tube (2)	FXSTD, FXSTDI
20	45842-77A	RETAINING RING, oil seal (2)	FXSTD, FXSTDI
21	45845-77	O-RING, slider tube plug (2)	FXSTD, FXSTDI
22	45859-77A	RING, damper tube (2)	FXSTD, FXSTDI
23	45865-84	WASHER, slider (2)	FXSTD, FXSTDI
24	45866-84	BUSHING, slider tube (2)	FXSTD, FXSTDI
25	45875-84A	OIL SEAL, slider (2)	FXSTD, FXSTDI
26	45933-86	SPRING, damper tube (2)	FXSTD, FXSTDI
27	45940-84	BUSHING, slider (2)	FXSTD, FXSTDI
28	46000-00	CAP FORK, slider (2)	FXSTD, FXSTDI
29	46048-00	SPRING (2)	FXSTD, FXSTDI
30	46064-00	FORK ASSEMBLY, left	FXSTD, FXSTDI
31	46066-00	FORK ASSEMBLY, right	FXSTD, FXSTDI
32	46067-00	SLIDER, left	FXSTD, FXSTDI
	46068-00	SLIDER, right	FXSTD, FXSTDI
33	46175-00	DUST SHIELD (2)	FXSTD, FXSTDI
34	46176-00	DAMPER TUBE, complete tube (2)	FXSTD, FXSTDI
35	48300-60	ROLLER BEARING, w/ 48315-60 (2)	FXSTD, FXSTDI
36	48315-60	BEARING CUP (2)	FXSTD, FXSTDI
37	48324-00	SEAT, upper head cone	FXSTD, FXSTDI
38	48361-80	DUST SHIELD, bearing, upper	FXSTD, FXSTDI
39	48365-48A	DUST SHIELD, bearing, lower	FXSTD, FXSTDI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
40	59481-00	REFLECTOR, right (amber)	FXSTD, FXSTDI
41	59482-00	REFLECTOR, left (amber)	FXSTD, FXSTDI

FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	941	SCREW (4)	FLSTC, FLSTCI, FLSTF, FLSTFI
2	3538	SCREW (4)	FLSTF, FLSTFI
3	3892	SCREW (4)	FLSTC, FLSTCI, FLSTF, FLSTFI
4	3953W	BOLT (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
5	4350A	SCREW	FLSTC, FLSTCI, FLSTF, FLSTFI
6	4453	BOLT	FLSTC, FLSTCI, FLSTF, FLSTFI
7	4729	BOLT (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
8	5710	WASHER (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
9	6655	WASHER	FLSTC, FLSTCI, FLSTF, FLSTFI
10	6702	WASHER (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
11	7039	LOCKWASHER (4)	FLSTC, FLSTCI, FLSTF, FLSTFI
12	7041	LOCKWASHER (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
13	7124	LOCKWASHER (4)	FLSTC, FLSTCI, FLSTF, FLSTFI
14	7686	LOCKNUT (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
15	7748W	NUT (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
16	8108	SPEEDNUT (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
17	14150-86	WARNING LABEL	FLSTC, FLSTCI, FLSTF, FLSTFI
18	41713-86	CLAMP (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
19	45405-75A	SCREW, w/ washer (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
20	45419-80	CAP, slider tube (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
21	45456-86B	BRACKET, upper	FLSTC, FLSTCI, FLSTF, FLSTFI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
22	45605-00A	STEM & BRACKET ASSEMBLY, w/ 48365-48A	FLSTC, FLSTCI, FLSTF, FLSTFI
23	45611-86	RETAINING RING, fork stem	FLSTC, FLSTCI, FLSTF, FLSTFI
24	45670-80A	CAP, fork stem	FLSTC, FLSTCI, FLSTF, FLSTFI
25	45733-48	OIL SEAL, fork tube plug (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
26	45803-97	LOWER STOP (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
27	45832-77A	AXLE CAP, right slider	FLSTC, FLSTCI, FLSTF, FLSTFI
28	45838-77	PLUG, fork tube (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
29	45842-77A	RETAINING RING, oil seal (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
30	45845-77	O-RING, slider tube plug (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
31	45858-77	DRAIN SCREW, w/ washer (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
32	45859-77A	RING, damper tube (2)	FLSTC, FLSTCI, FLSTF, FLSTFI

FRONT FORK - FLSTC/I & FLSTF/I (2 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
33	45865-84	WASHER, slider (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
34	45866-84	BUSHING, slider tube (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
35	45875-84A	OIL SEAL (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
36	45915-00	FORK SLIDER & TUBE ASSEMBLY, right	FLSTC, FLSTCI, FLSTF, FLSTFI
37	45916-00	FORK SLIDER & TUBE ASSEMBLY, left	FLSTC, FLSTCI, FLSTF, FLSTFI
38	45917-86	SLIDER, right	FLSTC, FLSTCI, FLSTF, FLSTFI
39	45918-00	SLIDER, left	FLSTC, FLSTCI, FLSTF, FLSTFI
40	45930-00	SLIDER TUBE (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
41	45931-00	SPRING (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
42	45932-00	DAMPER TUBE (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
43	45933-86	SPRING, damper tube (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
44	45940-84	BUSHING, slider (2)	FLSTC, FLSTCI, FLSTF, FLSTFI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
45	45964-86	COVER, slider (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
46	45998-73	STUD (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
47	48300-60	ROLLER BEARING, w/ 48315-60 (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
48	48315-60	BEARING CUP (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
49	48361-80	DUST SHIELD, bearing, upper	FLSTC, FLSTCI, FLSTF, FLSTFI
50	48365-48A	DUST SHIELD, bearing, lower	FLSTC, FLSTCI, FLSTF, FLSTFI
51	50991-86	BRACKET, front panel (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
52	59481-00	REFLECTOR, right (amber)	FLSTC, FLSTCI, FLSTF, FLSTFI
53	59482-00	REFLECTOR, left (amber)	FLSTC, FLSTCI, FLSTF, FLSTFI
54	67808-86	FRONT PANEL (buffed stainless steel)	FLSTC, FLSTCI, FLSTF, FLSTFI
55	67814-86	BACK PANEL, right, rear	FLSTC, FLSTCI, FLSTF, FLSTFI
56	67816-86	BACK PANEL, left, rear	FLSTF, FLSTFI
	67821-87	BACK PANEL, left, rear, w/ switch hole	FLSTC, FLSTCI
57	67819-86	TRIM STRIP, front panel (2)	FLSTF, FLSTFI

FRONT FORK - FXSTS/I

[View interactive image](#)

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	855B	SCREW, shock absorber mounting (2)	FXSTS, FXSTSI
2	3533	SCREW, spring reaction bracket, right	FXSTS, FXSTSI
3	3538	SCREW, spring reaction bracket, left	FXSTS, FXSTSI
4	4350A	SCREW, upper triple clamp	FXSTS, FXSTSI
5	6353	WASHER, spring rod (2)	FXSTS, FXSTSI
6	6812	WASHER, shock absorber mounting (4)	FXSTS, FXSTSI
7	6829	WASHER, rubber	FXSTS, FXSTSI
8	7232	LOCKWASHER, spring reaction bracket	FXSTS, FXSTSI
9	7680W	ACORN NUT (4)	FXSTS, FXSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
10	7959	ACORN NUT, w/ washer	FXSTS, FXSTSI
11	11456	BUMPER	FXSTS, FXSTSI
12	45473-88	UPPER TRIPLE CLAMP	FXSTS, FXSTSI
13	45567-88	ACORN NUT, lower spring rod (2)	FXSTS, FXSTSI
14	45569-00	RIGID FORK ASSEMBLY, w/ 45611-86 & 48365-48A	FXSTS, FXSTSI
15	45607-93	SPRING FORK	FXSTS, FXSTSI
16	45611-86	RETAINING RING, fork stem	FXSTS, FXSTSI
17	45628-92	SPRING ROD ASSEMBLY (2)	FXSTS, FXSTSI
18	45935-88	BUSHING, spring rod (2)	FXSTS, FXSTSI
19	45936-88	TRAVEL BUMPER (4)	FXSTS, FXSTSI
20	45937-88	SPRING SEAT (4)	FXSTS, FXSTSI
21	46053-88	SPRING, rebound, top (2)	FXSTS, FXSTSI
22	46054-88	SPRING, compression, inner (4)	FXSTS, FXSTSI
23	46055-88	SPRING, compression, outer (2)	FXSTS, FXSTSI
24	46056-88	SPRING CUP, compression spring (2)	FXSTS, FXSTSI
25	46057-88	SPRING CUP, rebound spring (2)	FXSTS, FXSTSI
26	46060-88	SPRING RESTRAINT, upper (2)	FXSTS, FXSTSI
27	46062-88	SPRING BRIDGE	FXSTS, FXSTSI
28	48300-60	ROLLER BEARING, w/ 48315-60 (2)	FXSTS, FXSTSI
29	48306-88	BEARING RETAINER, steering head	FXSTS, FXSTSI
30	48315-60	BEARING CUP (2)	FXSTS, FXSTSI
31	48361-80	DUST SHIELD, bearing, upper	FXSTS, FXSTSI
32	48365-48A	DUST SHIELD, bearing, lower	FXSTS, FXSTSI
33	54485-97	FRONT SHOCK ABSORBER	FXSTS, FXSTSI
34	59289-92	REFLECTOR, right (amber)	FXSTS, FXSTSI
35	59290-92	REFLECTOR, left (amber)	FXSTS, FXSTSI
36	66030-88	DECAL, shock absorber	FXSTS, FXSTSI

FRONT FORK - FLSTS/I

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	855B	SCREW	FLSTS, FLSTSI
2	3533	SCREW	FLSTS, FLSTSI
3	3538	SCREW	FLSTS, FLSTSI
4	4029A	SCREW	FLSTS, FLSTSI
5	4350A	SCREW, upper triple clamp	FLSTS, FLSTSI
6	6353	WASHER, spring rod (2)	FLSTS, FLSTSI
7	6812	WASHER (4)	FLSTS, FLSTSI
8	6829	WASHER, rubber	FLSTS, FLSTSI
9	7232	LOCKWASHER	FLSTS, FLSTSI
10	7680W	ACORN NUT (4)	FLSTS, FLSTSI
11	7959	ACORN NUT, w/ washer	FLSTS, FLSTSI
12	45491-97	UPPER TRIPLE CLAMP	FLSTS, FLSTSI
13	45567-88	ACORN NUT, lower spring rod (2)	FLSTS, FLSTSI
14	45619-97	SPRING FORK	FLSTS, FLSTSI
15	45628-92	SPRING ROD ASSEMBLY (2)	FLSTS, FLSTSI
16	45633-00	RIGID FORK ASSEMBLY, w/ 48365-48A & retaining ring	FLSTS, FLSTSI
17	45935-88	BUSHING, spring rod (2)	FLSTS, FLSTSI
18	45936-88	TRAVEL BUMPER (4)	FLSTS, FLSTSI
19	45937-88	SPRING SEAT (4)	FLSTS, FLSTSI
20	46053-88	SPRING, rebound, top (2)	FLSTS, FLSTSI
21	46054-88	SPRING, compression, inner (4)	FLSTS, FLSTSI
22	46055-88	SPRING, compression, outer (2)	FLSTS, FLSTSI
23	46056-88	SPRING CUP, compression spring (2)	FLSTS, FLSTSI
24	46057-88	SPRING CUP, rebound spring (2)	FLSTS, FLSTSI
25	46060-88	SPRING RESTRAINT, upper (2)	FLSTS, FLSTSI
26	46062-88	SPRING BRIDGE	FLSTS, FLSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
27	48300-60	ROLLER BEARING, w/ 48315-60 (2)	FLSTS, FLSTSI
28	48306-88	BEARING RETAINER, steering head	FLSTS, FLSTSI
29	48315-60	BEARING CUP (2)	FLSTS, FLSTSI
30	48361-80	DUST SHIELD, bearing, upper	FLSTS, FLSTSI
31	48365-48A	DUST SHIELD, bearing, lower	FLSTS, FLSTSI
32	54484-97	FRONT SHOCK ABSORBER	FLSTS, FLSTSI
33	59289-92	REFLECTOR, right (amber)	FLSTS, FLSTSI
34	59290-92	REFLECTOR, left (amber)	FLSTS, FLSTSI

FORK ROCKERS & CALIPER MOUNTING - FXSTS/I

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	534	COTTER PIN, brake reaction link (2)	FXSTS, FXSTSI
2	4747	SCREW, brake link to bracket	FXSTS, FXSTSI
3	6040A	WASHER, front axle, outside right	FXSTS, FXSTSI
4	6042A	WASHER, front axle, inside right	FXSTS, FXSTSI
5	6371	WASHER	FXSTS, FXSTSI
6	6498	WASHER	FXSTS, FXSTSI
7	6812	WASHER, brake reaction link	FXSTS, FXSTSI
8	7012	WAVE WASHER, front axle, right	FXSTS, FXSTSI
9	7588	NUT, shaft	FXSTS, FXSTSI
10	7627	ACORN NUT, rockers to forks (4)	FXSTS, FXSTSI
11	7667	NUT, brake reaction link (2)	FXSTS, FXSTSI
12	9139	BEARING, spherical, fork to rocker (2)	FXSTS, FXSTSI
13	9140	RACE, spherical bearing, fork to rocker (4)	FXSTS, FXSTSI
14	9141	BALL, spherical bearing, fork to rocker (4)	FXSTS, FXSTSI
15	11244	SPACER (rubber)	FXSTS, FXSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
16	41040-88B	BRAKE REACTION LINK	FXSTS, FXSTSI
17	44029-00	SPACER, right	FXSTS, FXSTSI
18	44030-88A	BUSHING, caliper mounting	FXSTS, FXSTSI
19	44044-00	BRACKET, caliper mounting	FXSTS, FXSTSI
20	45649-91	ROCKER, left	FXSTS, FXSTSI
	45651-91	ROCKER, right	FXSTS, FXSTSI
21	45655-88	BEARING RETAINER, rigid fork (2)	FXSTS, FXSTSI
22	45659-88	JAM NUT, bearing retainer (2)	FXSTS, FXSTSI
23	45660-88A	PIVOT STUD, spring fork to rocker (2)	FXSTS, FXSTSI
24	45662-88	WASHER, rocker to fork leg (4)	FXSTS, FXSTSI
25	45663-88A	PIVOT STUD, rigid fork to rocker (2)	FXSTS, FXSTSI

FORK ROCKERS & CALIPER MOUNTING - FLSTS/I

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	4163	SCREW (2)	FLSTS, FLSTSI
2	4164	SCREW	FLSTS, FLSTSI
3	4165	SCREW	FLSTS, FLSTSI
4	6042A	WASHER, front axle	FLSTS, FLSTSI
5	6812	WASHER (2)	FLSTS, FLSTSI
6	7862	ACORN NUT (2)	FLSTS, FLSTSI
7	7880	NUT (4)	FLSTS, FLSTSI
8	9139	BEARING, spherical, fork to rocker (2)	FLSTS, FLSTSI
9	9140	RACE, spherical bearing, fork to rocker (4)	FLSTS, FLSTSI
10	9141	BALL, spherical bearing, fork to rocker (4)	FLSTS, FLSTSI
11	11260	RUBBER SPACER	FLSTS, FLSTSI
12	41047-97	BRAKE REACTION LINK	FLSTS, FLSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
13	44031-97	PIVOT SLEEVE, left	FLSTS, FLSTSI
14	44086-97	BUSHING, caliper mounting	FLSTS, FLSTSI
15	44235-97	BRACKET ASSEMBLY, caliper	FLSTS, FLSTSI
16	44236-97	BRACKET, caliper mounting	FLSTS, FLSTSI
17	45629-97	FORK ROCKER, right	FLSTS, FLSTSI
	45631-97	FORK ROCKER, left	FLSTS, FLSTSI
18	45655-88	BEARING RETAINER, rigid fork (2)	FLSTS, FLSTSI
19	45656-97	FORK LEG BRACKET	FLSTS, FLSTSI
20	45659-88	JAM NUT, bearing retainer (2)	FLSTS, FLSTSI
21	45660-88A	PIVOT STUD KIT, spring fork to rocker (2)	FLSTS, FLSTSI
22	45662-88	WASHER, rocker to fork leg (4)	FLSTS, FLSTSI
23	45663-88A	PIVOT STUD KIT, rigid fork to rocker (2)	FLSTS, FLSTSI

FRAME & JIFFY STAND

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	939	SCREW (2)	ALL
2	2882W	SCREW	ALL
3	3233	SCREW	ALL
4	4163	SCREW (3)	ALL
5	4311	SCREW	ALL
6	6400HB	WASHER	ALL
7	6702	WASHER	ALL
8	6812	WASHER (3)	ALL
9	7041	LOCKWASHER (4)	ALL
10	10006	CABLE STRAP (3)	ALL
	10065	CABLE STRAP, keys	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	10081	CABLE STRAP, clutch cable to frame	FXSTD, FXSTDI
11	10040	PLUG (2)	FLSTS, FLSTSI
	10040	PLUG (4)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
12	10193	WIRE CLAMP	ALL
13	31741-00	PLUG, seat post	ALL
14	33630-00A	BRACKET, jiffy stand, shift lever & footboard, w/ shifter bushings	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
	33683-00	BRACKET, jiffy stand, shift lever & footrest, w/ shifter bushings	FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
15	45680-90	FORK LOCK (specify key code)	ALL
16	47008-00C	FRAME	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	48887-00B	FRAME	FXSTD, FXSTDI
17	48315-60	BEARING CUP (2)	ALL
18	48868-00	POST, seat	ALL
19	50005-85A	SPRING, jiffy stand leg	ALL
20	50015-74A	LEG STOP	ALL
21	50087-89B	LEG, jiffy stand (chrome)	ALL
22	50972-75	FITTING, lubrication	ALL
23	61081-92	COVER, key head set (2)	ALL
24	62123-66	BUMPER	ALL
25	71450-04	LOCKSET, w/ 10065, 45680-90, 61081-92, 71452-91A & ignition switch	ALL
26	71452-91A	KEY (specify key code) (2)	ALL
27	90469-94	PLUG, frame (2)	FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI

REAR FORK AND SHOCK ABSORBERS

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3574	SCREW (2)	ALL
2	4074A	BOLT (2)	ALL
3	6534	WASHER, hardened, right side	ALL
4	6535	WASHER, hardened, left side	ALL
5	6724	WASHER (2)	ALL
6	7479	NUT	ALL
7	7783	NUT, rear axle adjustment (2)	ALL
8	8108	SPEEDNUT (2)	ALL
9	9270A	BEARING, rear fork pivot (2)	ALL
10	11282	RETAINING RING, fork bearing (2)	ALL
11	11514	BUMPER, rear fork	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	11565	BUMPER, rear fork	FXSTD, FXSTDI
12	45764-00	LOCKNUT, flange (2)	ALL
13	47573-00A	REAR FORK, w/ 9270A & 11282	ALL
14	47577-00	SPACER, rear axle adjustment (2)	ALL
15	47579-00	ADJUSTING SCREW, rear axle (2)	ALL
16	47610-00	PIVOT SHAFT	ALL
17	48048-00A	BUSHING, rear fork (2)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	48049-00A	SPACER, rear fork (2)	ALL
19	54508-00B	SHOCK ABSORBER, complete (2)	ALL
20	56182-00A	BUSHING (2)	ALL
21	56183-00	WASHER, w/ grommet (4)	ALL
22	60363-00B	SPLASH GUARD	ALL

SEATS

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	1001	SCREW (4)	FLSTC, FLSTCI
2	2534	SCREW (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
3	2538	SCREW (2)	FLSTC, FLSTCI
4	3574	SCREW (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
5	3767B	BOLT	FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
6	4180	SCREW (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
7	5244	RETAINER CLIP (6)	FLSTC, FLSTCI
8	6019	WASHER	FLSTC, FLSTCI, FLSTF, FLSTFI
9	6036	WASHER	FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
10	6333	WASHER (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
11	6379W	WASHER	FLSTC, FLSTCI, FLSTF, FLSTFI
12	6409	WASHER (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
13	7601	LOCKNUT (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
14	11294	SPRING RING, seat strap	FLSTC, FLSTCI, FLSTF, FLSTFI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
15	51184-00	PASSENGER STRAP	FXSTB, FXSTBI, FXSTS, FXSTSI
	51188-00	PASSENGER STRAP	FXST, FXSTD, FXSTDI, FXSTI
16	51185-00	PASSENGER STRAP	FLSTC, FLSTCI
	51186-00	PASSENGER STRAP	FLSTF, FLSTFI
17	52097-00	SEAT BRACKET KIT, w/ 3574	FXSTD, FXSTDI
	52467-00	SEAT BRACKET KIT, w/ 3574	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
18	52189-00	BACKREST PAD	FLSTC, FLSTCI
19	52210-00	SEAT, passenger, w/ textured panel	FLSTF, FLSTFI
	53073-03	SEAT, passenger, w/ logo **RESTRICTED SALES PART**	FLSTF, FLSTFI
20	52218-00	SEAT, front, w/ textured panel	FLSTF, FLSTFI
	51043-03	SEAT, front, 100th anniversary	FLSTF, FLSTFI
21	52506-00	SEAT, solo, front	FLSTC, FLSTCI
22	52507-00	SEAT, pillion passenger	FLSTC, FLSTCI
	52906-03	SEAT, pillion passenger **RESTRICTED SALES PART**	FLSTC, FLSTCI
23	52560-00	SEAT	FXSTS, FXSTSI
24	52602-00	SEAT	FXSTB, FXSTBI
25	52720-00A	NUT, seat retention (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
26	52731-00	SISSY BAR UPRIGHT	FLSTC, FLSTCI
27	52444-03	MEDALLION, sissy bar backrest **RESTRICTED SALES PART**	FLSTC, FLSTCI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
28	52771-82	BRACKET, backrest	FLSTC, FLSTCI
29	52787-00	SIDE PLATE, right	FLSTC, FLSTCI
	52788-00	SIDE PLATE, left	FLSTC, FLSTCI
30	59255-91	REFLECTOR (red) (2)	FLSTC, FLSTCI
31	59768-97	SEAT NUT KIT	FLSTC, FLSTCI, FLSTF, FLSTFI
	59768-97	SEAT NUT KIT (2)	FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
32	61657-00	BUSHING, seat strap	FLSTC, FLSTCI, FLSTF, FLSTFI
33	91710-00	SEAT	FXST, FXSTI
34	91806-00A	SEAT ASSEMBLY	FXSTD, FXSTDI
	51032-03A	SEAT ASSEMBLY **RESTRICTED SALES PART**	FXSTD, FXSTDI
35	91850-00	CONCHO KIT (3)	FLSTC, FLSTCI
INTERNATIONAL MODELS ONLY			
36	59256-84A	REFLECTOR (amber) (HDI only) (2)	FLSTC, FLSTCI

 SEATS - FLSTS/I

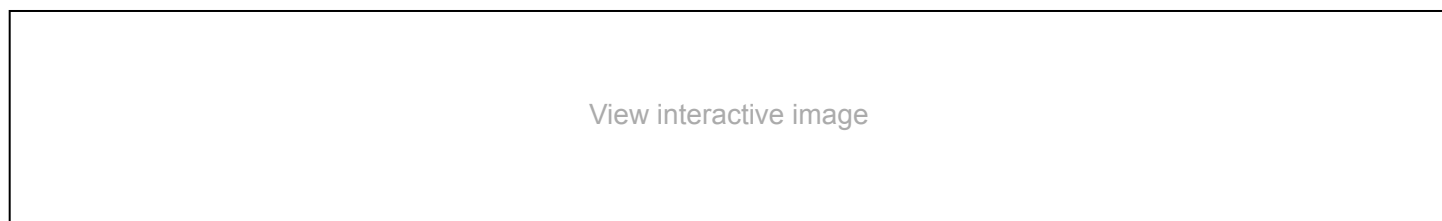

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	762	CAP, plastic (chrome)	FLSTS, FLSTSI
2	2927	SCREW	FLSTS, FLSTSI
3	3574	SCREW (2)	FLSTS, FLSTSI
4	3633	NUT, seat mounting (2)	FLSTS, FLSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
5	6036	WASHER (2)	FLSTS, FLSTSI
6	7434	WASHER (2)	FLSTS, FLSTSI
7	7686	LOCKNUT (2)	FLSTS, FLSTSI
8	51792-01	SEAT ASSEMBLY, w/ 2, 5, 7, 9, 13 & 16	FLSTS, FLSTSI
	51033-03	SEAT ASSEMBLY **RESTRICTED SALES PART**	FLSTS, FLSTSI
9	51793-01	SEAT, w/o rail (black trim)	FLSTS, FLSTSI
10	51796-00	PASSENGER SEAT (black trim)	FLSTS, FLSTSI
11	52015-97A	BRACKET KIT, seat mounting	FLSTS, FLSTSI
12	52467-00	BRACKET, passenger seat mounting, rear	FLSTS, FLSTSI
13	52687-97	GRAB RAIL, seat	FLSTS, FLSTSI
14	59174-99	STUD PLATE	FLSTS, FLSTSI
15	59768-97	SEAT NUT KIT	FLSTS, FLSTSI
16	91877-97	CONCHO (2)	FLSTS, FLSTSI

FOOTRESTS & FOOTBOARDS

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	4163	SCREW (12)	ALL
2	4314	SCREW, left	FLSTS, FLSTSI
3	4315	SCREW, right rear footpeg	FLSTF, FLSTFI, FXSTD, FXSTDI
4	4355B	SCREW	FLSTF, FLSTFI, FLSTS, FLSTSI, FXSTD, FXSTDI
	4355B	SCREW (2)	FLSTC, FLSTCI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
5	4716W	SCREW, left	FLSTS, FLSTSI
	4721	BOLT, right	FLSTS, FLSTSI
	4721	BOLT (2)	FLSTC, FLSTCI, FLSTF, FLSTFI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	4721	BOLT (4)	FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
6	6812	WASHER (12)	ALL
7	7667	NUT, left	FLSTS, FLSTSI
	7778	LOCKNUT, right	FLSTS, FLSTSI
	7778	LOCKNUT (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
	7778	LOCKNUT (4)	FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
8	7716	LOCKNUT (4)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
9	10866	CLIP, retention (used w/ 50600026)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
10	33048-72	FOOTREST, w/ 33189-63 (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
	33048-72	FOOTREST, w/ 33189-63 (4)	FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
11	33189-63	COVER, footrest (black) (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
	33189-63	COVER, footrest (black) (4)	FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
12	33630-00A	BRACKET, jiffy stand, shift lever & footboard, w/ shifter bushings	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
13	33683-00	BRACKET, jiffy stand, shift lever & footrest, w/ shifter bushings	FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
14	33708-94	BEARING SLEEVE (2)	ALL
15	42431-00	SUPPORT ASSEMBLY, right footboard & brake (use 50600026)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
	42431-11	SUPPORT ASSEMBLY, right footboard & brake (used w/ 50600026)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
	50600026	SUPPORT BRACKET KIT, right footboard & brake, w/ 10866 & 42431-11 (replaces 42431-00)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
16	42507-00B	BRACKET, brake lever & footrest	FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
17	49166-00	SUPPORT, passenger footrest, left	FLSTS, FLSTSI
18	50614-91A	PAD (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
19	50621-79A	FOOTBOARD, w/ 50614-91A (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
20	50635-82A	BOLT, footboard hinge (4)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
21	50912-72	SPRING WASHER (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
	50912-72	SPRING WASHER (4)	FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
22	50942-00	SUPPORT, passenger footrest	FLSTS, FLSTSI
	50942-00	SUPPORT, passenger footrest (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI

HANDLEBAR

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3471	BOLT (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI
2	3494A	BOLT (4)	FLSTS, FLSTSI, FXSTD, FXSTDI, FXSTS, FXSTSI
3	4816A	SCREW (4)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI
4	6590HW	WASHER (2)	FXSTD, FXSTDI
5	6753	WASHER (2)	FXSTS, FXSTSI
	6756	WASHER (2)	FLSTS, FLSTSI
6	7068	LOCKWASHER (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI
7	7129	LOCKWASHER, right side only	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI
8	7768W	LOCKNUT (2)	FLSTS, FLSTSI, FXSTS, FXSTSI
9	10039	CABLE STRAP (2)	FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
10	45544-88	STUD, rigid fork leg (2)	FXSTS, FXSTSI
	56550-97	STUD, rigid fork leg (2)	FLSTS, FLSTSI
11	46058-97	SPRING, right side only	FLSTS, FLSTSI
	46059-90	SPRING	FXSTS, FXSTSI
12	53156-86	BUSHING (rubber) (4)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	53157-97	BUSHING (rubber) (4)	FLSTS, FLSTSI
13	55919-01	HANDLEBAR	FLSTF, FLSTFI
	55933-97	HANDLEBAR	FLSTS, FLSTSI
	56224-99A	HANDLEBAR, drag style	FXSTB, FXSTBI
	56569-86	HANDLEBAR	FLSTC, FLSTCI
14	56018-98A	HANDLEBAR RISER, right (chrome)	FXSTB, FXSTBI
	56019-98A	HANDLEBAR RISER, left (chrome)	FXSTB, FXSTBI
15	56093-88A	HANDLEBAR	FXSTS, FXSTSI
	56102-99	HANDLEBAR	FXST, FXSTI
16	56119-77A	CLAMP, upper	FXST, FXSTI
	56567-86B	CLAMP, upper (chrome)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXSTB, FXSTBI
17	56122-77	CLAMP, lower, left	FXST, FXSTI
	56124-77	CLAMP, lower, right	FXST, FXSTI
18	56133-00A	CLAMP, upper (2)	FXSTD, FXSTDI
19	56135-00A	CLAMP, lower (2)	FXSTD, FXSTDI
20	56153-73	SPACER (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI
21	56159-73	CUP WASHER (4)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI
22	56188-00	HANDLEBAR	FXSTD, FXSTDI
23	56538-88	CLAMP (2)	FLSTS, FLSTSI, FXSTS, FXSTSI
24	56540-88	RISER (2)	FXSTS, FXSTSI
	56548-97	RISER (2)	FLSTS, FLSTSI
25	56541-86A	CLAMP, lower, left (chrome)	FLSTC, FLSTCI, FLSTF, FLSTFI
	56542-86A	CLAMP, lower, right (chrome)	FLSTC, FLSTCI, FLSTF, FLSTFI
26	70197-86	CABLE, ground, w/ ring terminals	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
27	70345-84	RETAINER (4)	ALL

THROTTLE CONTROL

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	10006	CABLE STRAP	ALL
2	10190	WIRE GUIDE, throttle cables	FLSTS, FLSTSI
3	10263A	CLAMP, throttle cables	FXSTS, FXSTSI
4	11155	RETAINING RING	ALL
5	11271	RETAINING RING, idle control	ALL
6	11272	RETAINING RING, throttle control	ALL
7	38653-01	BOOT, throttle cable	ALL
8	56206-96	GRIP, left	ALL
9	56220-94A	GRIP & SLEEVE, throttle, right	ALL
10	56305-96	IDLE CONTROL ASSEMBLY, w/ 11271 & 56508-76	FXSTS, FXSTSI
	56342-01	IDLE CONTROL ASSEMBLY, w/ 11271 & 56508-76	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTD, FXSTDI, FXSTI
	56433-98	IDLE CONTROL ASSEMBLY, w/ 11271 & 56508-76	FXSTB, FXSTBI
11	56306-96	THROTTLE CONTROL ASSEMBLY, w/ 11272, 38653-01 & 56508-76	FXSTS, FXSTSI
	56343-01	THROTTLE CONTROL ASSEMBLY, w/ 11272, 38653-01 & 56508-76	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTD, FXSTDI, FXSTI
	56432-98	THROTTLE CONTROL ASSEMBLY, w/ 11272, 38653-01 & 56508-76	FXSTB, FXSTBI
12	56394-74	SPRING, adjusting screw	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
13	56396-74A	FRICTION SPRING, throttle	ALL
14	56397-74C	ADJUSTING SCREW KIT	ALL
15	56402-83A	ADJUSTING SCREW	ALL
16	56508-76	FERRULE, control wire (2)	ALL
17	70504-81	CLIP, throttle cables	ALL

WINDSHIELD - FLSTC/I

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2452	SCREW (2)	FLSTC, FLSTCI
2	2921	SCREW (7)	FLSTC, FLSTCI
3	3589	SCREW (2)	FLSTC, FLSTCI
	4482	SCREW (used w/ 91800025) (2)	FLSTC, FLSTCI
4	4343	SCREW (2)	FLSTC, FLSTCI
5	6400HB	WASHER (8)	FLSTC, FLSTCI
6	6703	WASHER (2)	FLSTC, FLSTCI
7	7651A	ACORN NUT (9)	FLSTC, FLSTCI
8	57062-00A	BRACKET, windshield, right	FLSTC, FLSTCI
	57063-00A	BRACKET, windshield, left	FLSTC, FLSTCI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
9	58241-95	WINDSHIELD, replacement, w/ 58416-77A & 58417-77	FLSTC, FLSTCI
10	58252-95	RETAINER, windshield, left	FLSTC, FLSTCI
	58253-95	RETAINER, windshield, right	FLSTC, FLSTCI
11	58272-95	BUSHING, nylon (4)	FLSTC, FLSTCI
12	58406-75A	BRACKET, windshield, outer right	FLSTC, FLSTCI
13	58408-75A	BRACKET, windshield, outer left	FLSTC, FLSTCI
14	58416-77A	TAPE, windshield, horizontal (2)	FLSTC, FLSTCI
15	58417-77	TAPE, windshield, vertical (2)	FLSTC, FLSTCI
16	58428-94	HORIZONTAL BRACE, windshield, outer	FLSTC, FLSTCI
17	58431-94	HORIZONTAL BRACE, windshield, inner	FLSTC, FLSTCI
18	67621-94	BUSHING (4)	FLSTC, FLSTCI
19	94004-90T	ACORN NUT (2)	FLSTC, FLSTCI
20	94426-95	SCREW (2)	FLSTC, FLSTCI
21	57400112	WINDSHIELD ASSEMBLY, complete, w/ 1, 2, 6, 7, 8, 10, 11, 12, 13, 14, 15, 16, 17, 19, 20 & 22	FLSTC, FLSTCI
22	91800025	HARDWARE KIT, windshield, w/ 4343, 4482, 6400HB & 67621-94 (used w/ 57400112)	FLSTC, FLSTCI
INTERNATIONAL MODELS ONLY			
23	57060-00	WINDSHIELD ASSEMBLY, complete w/ 1, 2, 6, 7, 8, 10, 11, 12, 13, 14, 15, 16, 17, 19 & 20	FLSTC, FLSTCI
24	58213-00	WINDSHIELD, replacement, w/ 58416-77A & 58417-77	FLSTC, FLSTCI

HEADLAMP (1 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2917	SCREW (2)	FLSTS, FLSTSI, FXSTS, FXSTSI
2	3214	SCREW	FLSTS, FLSTSI, FXSTS, FXSTSI
3	3509	BOLT	FXSTD, FXSTDI
	4724	BOLT	FXST, FXSTB, FXSTBI, FXSTI
4	3514	SCREW	FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
5	3775	SCREW	FXSTD, FXSTDI
	4722	BOLT	FXST, FXSTB, FXSTBI, FXSTI
6	6379W	WASHER (2)	FLSTS, FLSTSI, FXSTS, FXSTSI
7	6474	WASHER (2)	FXSTD, FXSTDI
	6701	WASHER (2)	FXST, FXSTB, FXSTBI, FXSTI
8	7038	LOCKWASHER	FXST, FXSTB, FXSTBI, FXSTI
9	7130W	LOCKWASHER	FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI
10	7606	LOCKNUT	FXST, FXSTB, FXSTBI, FXSTI
11	7800W	NUT	FXST, FXSTB, FXSTBI, FXSTI
12	7862	ACORN NUT	FXSTD, FXSTDI
13	9847	WIRE TERMINAL, female spade, right	FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
	9848	WIRE TERMINAL, female spade, left (2)	FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
14	10065	CABLE STRAP	FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
15	45685-93	MOUNTING PLATE	FXST, FXSTB, FXSTBI, FXSTI
16	67601-94A	GASKET, headlamp	FLSTS, FLSTSI, FXSTD, FXSTDI, FXSTS, FXSTSI
17	67603-94A	ADAPTER RING	FLSTS, FLSTSI, FXSTD, FXSTDI, FXSTS, FXSTSI
18	67685-92	CLIP, bulb	FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
19	67698-81D	LENS ASSEMBLY, 5-3/4 inch, w/ 67685-92, 67705-92 & 68329-03	FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
20	67705-92	BOOT, connector	FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
21	67769-93	ADAPTER RING	FXST, FXSTB, FXSTBI, FXSTI
22	67772-97	MOUNTING BLOCK	FXST, FXSTB, FXSTBI, FXSTI
23	67790-93A	TRIM RING (chrome)	FXST, FXSTB, FXSTBI, FXSTI
24	67892-93	MOUNTING BLOCK	FLSTS, FLSTSI, FXSTS, FXSTSI
25	67894-93A	TRIM RING (chrome)	FLSTS, FLSTSI, FXSTD, FXSTDI, FXSTS, FXSTSI
26	68329-03	BULB, HB2/H4	FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
27	68705-93A	CONNECTOR ASSEMBLY, headlamp, w/ 9847, 9848, 70586-93 & 72056-92	FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
28	69163-00	MOUNTING BLOCK	FXSTD, FXSTDI
29	69609-00	BUMPER	FXST, FXSTB, FXSTBI, FXSTI
30	69696-05	HEADLAMP SHELL ASSEMBLY, 5-3/4 inch	FXST, FXSTB, FXSTBI, FXSTI
31	69715-05A	HEADLAMP SHELL ASSEMBLY, 5-3/4 inch	FXSTD, FXSTDI
32	69717-05A	HEADLAMP SHELL ASSEMBLY, 5-3/4 inch	FXSTS, FXSTSI
	69769-05A	HEADLAMP SHELL ASSEMBLY, 5-3/4 inch	FLSTS, FLSTSI

HEADLAMP (2 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
-----------	----------	-------------	----------

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
33	70586-93	CONNECTOR, butt splice, 16-22 gauge (4)	FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
34	72056-92	INSULATOR, spade terminal (3-way)	FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
35	73102-96BK	PIN HOUSING, 2-place	FLSTS, FLSTSI
36	73154-96BK	SOCKET HOUSING, 4-place	FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
37	73190-96	PIN TERMINAL, 16-20 gauge (2)	FLSTS, FLSTSI
38	73191-96	CONTACT SOCKET, 16-20 gauge (4)	FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
INTERNATIONAL MODELS ONLY			
39	9898	TERMINAL, female flag (HDI) (2)	FXSTD, FXSTDI
40	53438-92	BULB, position lamp	FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
41	67602-94	GASKET, headlamp	FLSTS, FLSTSI, FXSTD, FXSTDI, FXSTS, FXSTSI
42	67604-94	ADAPTER RING	FLSTS, FLSTSI, FXSTD, FXSTDI, FXSTS, FXSTSI
43	67691-92	GROMMET, position lamp	FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
44	67763-92A	LENS ASSEMBLY, 5-3/4 inch, right dip, w/ 67691-92, 67705-92 & 68329-03	FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
	67781-92A	LENS ASSEMBLY, 5-3/4 inch, left dip, w/ 67691-92, 67705-92 & 68329-03	FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
45	67769-93	MOUNTING RING (HDI)	FXST, FXSTB, FXSTBI, FXSTI
46	67894-93A	TRIM RING	FLSTS, FLSTSI, FXSTD, FXSTDI, FXSTS, FXSTSI
47	68650-92	SOCKET, position lamp	FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
48	69696-05	HEADLAMP SHELL ASSEMBLY, 5-3/4 inch	FXST, FXSTB, FXSTBI, FXSTI
49	69715-05A	HEADLAMP SHELL ASSEMBLY, 5-3/4 inch	FXSTD, FXSTDI
50	69717-05A	HEADLAMP SHELL ASSEMBLY, 5-3/4 inch	FLSTS, FLSTSI, FXSTS, FXSTSI

HEADLAMP - FLSTC/I & FLSTF/I

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3514	SCREW	FLSTC, FLSTCI, FLSTF, FLSTFI
2	4722	BOLT	FLSTC, FLSTCI, FLSTF, FLSTFI
3	4411	BOLT	FLSTC, FLSTCI, FLSTF, FLSTFI
4	6400HB	WASHER (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
5	7038	LOCKWASHER	FLSTC, FLSTCI, FLSTF, FLSTFI
6	7130W	LOCKWASHER	FLSTC, FLSTCI, FLSTF, FLSTFI
7	7800W	NUT	FLSTC, FLSTCI, FLSTF, FLSTFI
8	10065	CABLE STRAP	FLSTC, FLSTCI, FLSTF, FLSTFI
9	67713-86	SEALED BEAM UNIT, 7 inch	FLSTC, FLSTCI, FLSTF, FLSTFI
10	67768-97	MOUNTING BLOCK	FLSTC, FLSTCI, FLSTF, FLSTFI
11	68050-93A	RETAINING RING	FLSTC, FLSTCI, FLSTF, FLSTFI
12	68051-93A	TRIM RING (chrome)	FLSTC, FLSTCI, FLSTF, FLSTFI
13	68052-93	SCREW (3)	FLSTC, FLSTCI, FLSTF, FLSTFI
14	69748-05B	HEADLAMP SHELL ASSEMBLY, 7 inch	FLSTC, FLSTCI, FLSTF, FLSTFI
15	73102-96BK	PIN HOUSING, 2-place	FLSTC, FLSTCI, FLSTF, FLSTFI
16	73154-96BK	SOCKET HOUSING, 4-place	FLSTC, FLSTCI, FLSTF, FLSTFI
17	73190-96	PIN TERMINAL, 16-20 gauge (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
18	73191-96	CONTACT SOCKET, 16-20 gauge (4)	FLSTC, FLSTCI, FLSTF, FLSTFI
INTERNATIONAL MODELS ONLY			
19	53438-92	BULB, position lamp	FLSTC, FLSTCI, FLSTF, FLSTFI
20	67691-92	GROMMET, position lamp	FLSTC, FLSTCI, FLSTF, FLSTFI
21	67793-92A	LENS ASSEMBLY, 7 inch, right dip, w/ 67798-92 & 68329-03	FLSTC, FLSTCI, FLSTF, FLSTFI
	67801-92A	LENS ASSEMBLY, 7 inch, left dip, w/ 67798-92 & 68329-03	FLSTC, FLSTCI, FLSTF, FLSTFI
22	67798-92	BOOT	FLSTC, FLSTCI, FLSTF, FLSTFI
23	68329-03	BULB, HB2/H4	FLSTC, FLSTCI, FLSTF, FLSTFI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
24	68654-92	SOCKET, position lamp	FLSTC, FLSTCI, FLSTF, FLSTFI
25	69750-05B	HEADLAMP SHELL ASSEMBLY, 7 inch	FLSTC, FLSTCI, FLSTF, FLSTFI

AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2647B	SCREW (4)	FLSTC, FLSTCI
2	3514	SCREW (2)	FLSTC, FLSTCI, FLSTS, FLSTSI
3	3538	SCREW (2)	FLSTS, FLSTSI
4	5885	SPACER (2)	FLSTC, FLSTCI
5	6072	WASHER, belleville (2)	FLSTC, FLSTCI
6	7601	LOCKNUT (2)	FLSTC, FLSTCI
7	7606	LOCKNUT (2)	FLSTC, FLSTCI, FLSTS, FLSTSI
8	7892	NUT, auxiliary lamp (2)	FLSTS, FLSTSI
9	10065	CABLE STRAP	FLSTC, FLSTCI, FLSTS, FLSTSI
10	11410	GROMMET (2)	FLSTS, FLSTSI
11	58082-02A	BRACKET, auxiliary lamps	FLSTC, FLSTCI
12	58089-97	BRACKET, auxiliary lamps	FLSTS, FLSTSI
13	67615-96	WIRING HARNESS, auxiliary lamps	FLSTC, FLSTCI
	67915-00	WIRING HARNESS, auxiliary lamps, w/ 67858-89 (not shown)	FLSTS, FLSTSI
14	67846-70	NUT, toggle switch	FLSTC, FLSTCI, FLSTS, FLSTSI
15	67858-89	TOGGLE SWITCH, auxiliary lamps	FLSTC, FLSTCI, FLSTS, FLSTSI
16	68168-89A	BULB, turn signal (2)	FLSTC, FLSTCI
17	68331-02	RING, auxiliary/fog lamps (2)	FLSTC, FLSTCI, FLSTS, FLSTSI
18	68440-86	LENS, turn signal (amber) (2)	FLSTC, FLSTCI
19	68452-86	SCREW (4)	FLSTC, FLSTCI
20	68519-68A	MOUNTING BRACKET (2)	FLSTC, FLSTCI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
21	68619-83	LABEL, auxiliary lamp switch	FLSTC, FLSTCI
	68798-97A	LABEL, auxiliary lamp switch	FLSTS, FLSTSI
22	68671-69D	AUXILIARY LAMP ASSEMBLY, w/ 2, 7, 17, 23, 24 & 27 (2)	FLSTC, FLSTCI, FLSTS, FLSTSI
23	68674-69A	SEALED UNIT, auxiliary lamps (2)	FLSTC, FLSTCI, FLSTS, FLSTSI
24	68683-02	HOUSING	FLSTC, FLSTCI, FLSTS, FLSTSI
25	68720-62	CLAMP BLOCK, auxiliary lamps (2)	FLSTC, FLSTCI, FLSTS, FLSTSI
26	68721-62	SWIVEL BLOCK, auxiliary lamps (2)	FLSTC, FLSTCI
27	68725-62A	RING BEZEL, auxiliary/fog lamps (2)	FLSTC, FLSTCI, FLSTS, FLSTSI
28	68766-94	TURN SIGNAL, front (2)	FLSTC, FLSTCI
29	73191-96	SOCKET CONTACT, 16-20 gauge (8)	FLSTC, FLSTCI, FLSTS, FLSTSI
30	73152-96BK	SOCKET HOUSING, 2-place (black)	FLSTC, FLSTCI
31	73152-96WE	SOCKET HOUSING, 2-place (white)	FLSTS, FLSTSI
32	73156-96BK	SOCKET HOUSING, 6-place	FLSTC, FLSTCI
INTERNATIONAL MODELS ONLY			
33	68163-84	BULB, turn signal (HDI) (2)	FLSTC, FLSTCI
34	68505-90	LENS, turn signal (amber) (HDI) (2)	FLSTC, FLSTCI
35	68730-98	LABEL, fog lamp switch (HDI)	FLSTS, FLSTSI
36	68767-94	TURN SIGNAL (HDI) (2)	FLSTC, FLSTCI
37	68846-98C	FOGLAMP ASSEMBLY, w/ 2, 7, 17, 24, 27 & 38 (HDI) (2)	FLSTC, FLSTCI, FLSTS, FLSTSI
38	68847-98A	SEALED UNIT, fog lamps (HDI) (2)	FLSTC, FLSTCI, FLSTS, FLSTSI

FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Refer to Painted Parts Book for painted part numbers.			
1	755	HOLE PLUG	FLSTC, FLSTCI
2	994	SCREW (4)	FXSTD, FXSTDI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
3	2531	SCREW (8)	FLSTC, FLSTCI
4	2604	SCREW (2)	FLSTC, FLSTCI
5	3485A	SCREW (4)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTDI, FXSTI
6	3560WA	BOLT (2)	FLSTC, FLSTCI
7	3561WC	BOLT (2)	FLSTC, FLSTCI
8	6702	WASHER (4)	FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI
9	7507	ACORN NUT (4)	FXST, FXSTB, FXSTBI, FXSTI
10	7531	LOCKNUT (4)	FLSTC, FLSTCI, FLSTF, FLSTFI
11	7600	NUT (8)	FLSTC, FLSTCI
12	7613A	PUSH NUT (6)	FLSTC, FLSTCI
13	7624	LOCKNUT (4)	FLSTC, FLSTCI
14	7629	NUT (2)	FLSTC, FLSTCI
15	10065	CABLE STRAP (2)	FLSTC, FLSTCI
16	10102	CLIP	FLSTC, FLSTCI
17	11437	GROMMET	FLSTC, FLSTCI
18	14142-86A	TRIM, "Heritage Softail" (2)	FLSTC, FLSTCI
19	45323-01	WASHER (2)	FXSTD, FXSTDI
	45323-01	WASHER (4)	FXST, FXSTB, FXSTBI, FXSTI
20	59129-86A	FENDER (prime)	FLSTC, FLSTCI
21	59139-00A	FENDER (prime)	FLSTF, FLSTFI
22	59180-80	LENS, fender lamp (amber)	FLSTC, FLSTCI
23	59211-74A	SIDE TRIM (2)	FLSTC, FLSTCI
24	59235-86	TRIM SKIRT, lower	FLSTC, FLSTCI
25	59876-00A	FENDER (prime)	FXSTD, FXSTDI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
26	59924-80B	FENDER (prime)	FXST, FXSTB, FXSTBI, FXSTI
27	68193-95	BULB, fender tip lamp	FLSTC, FLSTCI
28	68706-00	LAMP ASSEMBLY, w/ 59180-80, 68193-95, 73152-96BK & 73191-96	FLSTC, FLSTCI
29	70196-00	HARNESS ASSEMBLY, front fender tip light	FLSTC, FLSTCI
30	73102-96BK	PIN HOUSING, 2-place	FLSTC, FLSTCI
31	73152-96BK	SOCKET HOUSING, 2-place	FLSTC, FLSTCI
32	73190-96	PIN TERMINAL, 16-20 gauge (2)	FLSTC, FLSTCI
33	73191-96	SOCKET CONTACT, 16-20 gauge (4)	FLSTC, FLSTCI
INTERNATIONAL MODELS ONLY			
34	755	HOLE PLUG (HDI only) (2)	FLSTC, FLSTCI
35	59116-96	LAMP ASSEMBLY, fender tip (HDI only)	FLSTC, FLSTCI
36	59201-96	LENS, fender tip (chrome) (HDI only)	FLSTC, FLSTCI

FRONT FENDER - FXSTS/I

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Refer to Painted Parts Book for painted part numbers.			
1	2723A	SCREW, shoulder (2)	FXSTS, FXSTSI
2	2738	PIVOT SHAFT (2)	FXSTS, FXSTSI
3	6409	WASHER (2)	FXSTS, FXSTSI
4	7531	LOCKNUT (2)	FXSTS, FXSTSI
5	11244	SPACER (rubber) (2)	FXSTS, FXSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
6	33714-90B	BUSHING	FXSTS, FXSTSI
7	33720-93	BEARING (4)	FXSTS, FXSTSI
8	41042-93	PIVOT LINK, w/ 33720-93 (2)	FXSTS, FXSTSI
9	59043-93	INSERT, fender (2)	FXSTS, FXSTSI
10	59176-96A	FENDER (prime)	FXSTS, FXSTSI

FRONT FENDER - FLSTS/I

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Refer to Painted Parts Book for painted part numbers.			
1	509	SPRING PIN	FLSTS, FLSTSI
2	2447	SCREW	FLSTS, FLSTSI
3	2448	SCREW	FLSTS, FLSTSI
4	3268	SCREW, w/ hole for spring clip	FLSTS, FLSTSI
5	5216	CRIMP NUT	FLSTS, FLSTSI
6	6109	WASHER	FLSTS, FLSTSI
7	7739	LOCKNUT	FLSTS, FLSTSI
8	7838	NUT	FLSTS, FLSTSI
9	9194	SPHERICAL BEARING (2)	FLSTS, FLSTSI
10	9196	SPACER, right	FLSTS, FLSTSI
	9268	SPACER, left, axle nut (not shown)	FLSTS, FLSTSI
11	9207	NYLON INSERT, w/ 11261 (2)	FLSTS, FLSTSI
12	11261	O-RING (2)	FLSTS, FLSTSI
13	11437	GROMMET	FLSTS, FLSTSI
14	43466-97	FENDER HUB CAP (2)	FLSTS, FLSTSI
15	43467-97	SEAL, fender hub cap (2)	FLSTS, FLSTSI
16	52441-95	BULB, front fender	FLSTS, FLSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
17	59118-00	LAMP ASSEMBLY, front fender	FLSTS, FLSTSI
18	59164-97A	FENDER, w/ 5216 (prime)	FLSTS, FLSTSI
19	59355-97	MOUNTING PAD, fender lamp	FLSTS, FLSTSI
20	59357-00	LENS ASSEMBLY, fender lamp	FLSTS, FLSTSI
21	73191-96	CONTACT SOCKET (2)	FLSTS, FLSTSI
INTERNATIONAL MODELS ONLY			
22	755	PLUG (HDI only)	FLSTS, FLSTSI
23	59122-97	DECORATIVE LENS ASSEMBLY (HDI only)	FLSTS, FLSTSI
24	59355-97	MOUNTING PAD, fender lamp (HDI only)	FLSTS, FLSTSI
25	59358-97	LENS, front fender (chrome) (HDI only)	FLSTS, FLSTSI

REAR FENDER & SUPPORTS - FXST/I, FXSTS/I & FXSTB/I

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Refer to Painted Parts Book for painted part numbers.			
1	4266A	SCREW (6)	FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
2	4267	SCREW (4)	FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
3	6701	WASHER (2)	FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
4	7601	LOCKNUT (2)	FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
5	10184	CLIP, T-stud (2)	FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
6	10228	PLUG	FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
7	58991-03	SUPPORT, right (black wrinkle)	FXSTB, FXSTBI
	59066-03	SUPPORT, left (black wrinkle)	FXSTB, FXSTBI
	59964-03	SUPPORT, right (chrome)	FXST, FXSTI, FXSTS, FXSTSI
	59969-03	SUPPORT, left (chrome)	FXST, FXSTI, FXSTS, FXSTSI
8	59050-03	BRACKET, fender mounting, front (2)	FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
9	59076-03	BRACKET, fender mounting, rear (2)	FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
10	59287-92	REFLECTOR, right (red)	FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	59288-92	REFLECTOR, left (red)	FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
11	59567-00C	PROTECTIVE TAPE, rear fender	FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
12	59768-97	FENDER SEAT NUT KIT (2)	FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
13	59914-00A	FENDER ASSEMBLY (prime)	FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
INTERNATIONAL MODELS ONLY			
14	59289-92	REFLECTOR, right (amber) (HDI)	FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	59290-92	REFLECTOR, left (amber) (HDI)	FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI

REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Refer to Painted Parts Book for painted part numbers.			
1	2604	SCREW (2)	FLSTC, FLSTCI
2	4180	SCREW (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
3	4266A	SCREW (2)	FLSTC, FLSTCI, FLSTS, FLSTSI
	4266A	SCREW (4)	FLSTF, FLSTFI
4	4267	SCREW (4)	FLSTC, FLSTCI, FLSTF, FLSTFI
	4267	SCREW (6)	FLSTS, FLSTSI
5	6019	WASHER	FLSTC, FLSTCI, FLSTF, FLSTFI
6	6379W	WASHER	FLSTC, FLSTCI, FLSTF, FLSTFI
7	6701	WASHER (2)	FLSTF, FLSTFI
8	7601	LOCKNUT (2)	FLSTF, FLSTFI
9	7629	NUT (2)	FLSTC, FLSTCI
10	45550-03	PLATE, wire retainer (2)	FLSTF, FLSTFI
11	59050-03	BRACKET, fender mounting, front (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
12	59088-03	BRACKET, fender mounting, rear (2)	FLSTF, FLSTFI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
13	59119-03	BRACKET, fender mounting, rear (2)	FLSTC, FLSTCI, FLSTS, FLSTSI
14	59144-00A	REAR FENDER KIT (primed)	FLSTC, FLSTCI
15	59155-00B	REAR FENDER KIT (primed)	FLSTS, FLSTSI
16	59255-91	REFLECTOR, rectangular (red) (2)	FLSTC, FLSTCI
17	59287-92	REFLECTOR, right (red)	FLSTF, FLSTFI, FLSTS, FLSTSI
	59288-92	REFLECTOR, left (red)	FLSTF, FLSTFI, FLSTS, FLSTSI
18	59567-00C	PROTECTIVE TAPE	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
19	59596-00A	REAR FENDER KIT (primed)	FLSTF, FLSTFI
20	59672-99	LAMP ASSEMBLY, rear fender tip	FLSTC, FLSTCI
21	59768-97	FENDER SEAT NUT KIT	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
22	59954-03	SUPPORT, left (chrome)	FLSTC, FLSTCI, FLSTS, FLSTSI
	59955-03	SUPPORT, right (chrome)	FLSTC, FLSTCI, FLSTS, FLSTSI
23	59964-03	SUPPORT, right (chrome)	FLSTF, FLSTFI
	59969-03	SUPPORT, left (chrome)	FLSTF, FLSTFI
24	67266-94	GROMMET, turn signal (2)	FLSTC, FLSTCI
25	68046-79	LENS, rear fender lamp	FLSTC, FLSTCI
26	68193-95	BULB, rear fender tip lamp	FLSTC, FLSTCI
27	68446-00	PLUG, button (2)	FLSTC, FLSTCI
28	70345-84	RETAINER, wire	FLSTS, FLSTSI
29	73153-96BK	SOCKET HOUSING, 3-place	FLSTC, FLSTCI
30	73191-96	SOCKET CONTACT, 16-20 gauge (3)	FLSTC, FLSTCI
31	90367-03	STUD, saddlebag (4)	FLSTC, FLSTCI, FLSTS, FLSTSI
INTERNATIONAL MODELS ONLY			
32	59117-96	FENDER TIP ASSEMBLY (HDI)	FLSTC, FLSTCI
33	59251-90	REFLECTOR ASSEMBLY, rear (red) (HDI)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
34	59254-91	REFLECTOR (amber) (HDI) (2)	FLSTC, FLSTCI, FLSTF, FLSTFI
35	59289-92	REFLECTOR, right (amber) (HDI)	FLSTF, FLSTFI, FLSTS, FLSTSI
	59290-92	REFLECTOR, left (amber) (HDI)	FLSTF, FLSTFI, FLSTS, FLSTSI
36	68081-96	LENS, rear fender tip, chrome (HDI)	FLSTC, FLSTCI

REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Refer to Painted Parts Book for painted part numbers.			
1	2646	SCREW (2)	FXSTD, FXSTDI
2	2917	SCREW (4)	FXSTD, FXSTDI
3	3987	BOLT (6)	FXSTD, FXSTDI
4	6296	SPACER (2)	FXSTD, FXSTDI
5	6702	WASHER (8)	FXSTD, FXSTDI
6	6716	WASHER (2)	FXSTD
	6716	WASHER (4)	FXSTDI
7	7601	LOCKNUT (4)	FXSTD, FXSTDI
8	7629	NUT (2)	FXSTD
	7629	NUT (4)	FXSTDI
9	7792	NUT (2)	FXSTD, FXSTDI
10	10228	PLUG (3)	FXSTD, FXSTDI
11	53436-97	BULB, wedge, W5W (2)	FXSTD, FXSTDI
12	56627-00	FENDER REINFORCEMENT, right	FXSTD, FXSTDI
	56628-00	FENDER REINFORCEMENT, left	FXSTD, FXSTDI
13	59053-00	BRACKET, fender mounting (2)	FXSTD, FXSTDI
14	59287-92	REFLECTOR, right (red)	FXSTD, FXSTDI
	59288-92	REFLECTOR, left (red)	FXSTD, FXSTDI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
15	59438-00	BRACKET ASSEMBLY, ECM mounting	FXSTD, FXSTDI
16	59465-00	BRACKET ASSEMBLY, ignition module, carbureted models	FXSTD
17	59543-01	BRACKET ASSEMBLY, electronic control module, fuel injected models	FXSTDI
18	59567-00C	PROTECTIVE TAPE	FXSTD, FXSTDI
19	59759-00	FENDER, prime	FXSTD, FXSTDI
20	59768-97	FENDER SEAT NUT KIT (2)	FXSTD, FXSTDI
21	59988-72A	REFLECTOR (red)	FXSTD, FXSTDI
22	60019-93A	REFLECTOR BRACKET	FXSTD, FXSTDI
23	60028-00	FENDER SUPPORT, right (chrome)	FXSTD, FXSTDI
	60035-00	FENDER SUPPORT, left (chrome)	FXSTD, FXSTDI
24	60120-00A	LICENSE PLATE BRACKET ASSEMBLY, w/ 68889-00, 68890-00A & 68891-00	FXSTD, FXSTDI
25	68889-00	ILLUMINATOR ASSEMBLY, license plate, w/ 2646	FXSTD, FXSTDI
26	68890-00A	BRACKET, license plate	FXSTD, FXSTDI
27	68891-00	HARNESS ASSEMBLY, license plate illuminator, w/ 53436-97, 73154-96WE & 73191-96	FXSTD, FXSTDI
28	73154-96WE	SOCKET HOUSING, 4-way (white) (2)	FXSTD, FXSTDI
29	73191-96	SOCKET CONTACT, 20-16 gauge (4)	FXSTD, FXSTDI
INTERNATIONAL MODELS ONLY			
30	59259-90	REFLECTOR (red) (HDI only)	FXSTD, FXSTDI
31	59289-92	REFLECTOR, right (amber) (HDI only)	FXSTD, FXSTDI
	59290-92	REFLECTOR, left (amber) (HDI only)	FXSTD, FXSTDI
32	60123-02	LICENSE PLATE BRACKET (HDI only)	FXSTD, FXSTDI

LICENSE PLATE BRACKETS

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2604	SCREW (2)	FLSTS, FLSTSI
2	2773	SCREW (2)	FLSTS, FLSTSI
	2773	SCREW (3)	FLSTC, FLSTCI, FLSTF, FLSTFI
3	3440	BOLT (4)	FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
4	5403B	BOLT	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
5	6379W	WASHER (4)	FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
6	6703	WASHER	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
7	7230	LOCKWASHER (2)	FLSTS, FLSTSI
8	7629	NUT (2)	FLSTS, FLSTSI
9	7792	NUT (3)	FLSTS, FLSTSI
	7792	NUT (4)	FLSTC, FLSTCI, FLSTF, FLSTFI
10	59984-73	BRACKET, license plate	FLSTC, FLSTCI, FLSTF, FLSTFI
11	59986-75	SUPPORT, license plate	FLSTC, FLSTCI, FLSTF, FLSTFI
12	59988-72A	REFLECTOR	ALL
13	59995-03	BRACKET, license plate & tail lamp	FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
14	60001-55	CLAMP	FLSTC, FLSTCI, FLSTF, FLSTFI
15	60003-89	CLAMP	FLSTS, FLSTSI
16	60019-93A	REFLECTOR BRACKET	FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
17	60020-97	BRACKET, license plate	FLSTS, FLSTSI
18	60021-97	SUPPORT, license plate	FLSTS, FLSTSI
INTERNATIONAL MODELS ONLY			
19	59259-90	REFLECTOR (red) (HDI)	FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
20	60123-02	LICENSE PLATE BRACKET (HDI)	FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI

FUEL TANK

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Refer to Painted Parts Book for painted part numbers.			
1	758	PLUG, drain	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
2	3017	SCREW	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
3	4197	BOLT	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
4	4763	SCREW	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
5	5818A	BUSHING, front tank mount (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
6	6400HB	WASHER (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
7	6702	WASHER	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
8	6716	WASHER	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
9	7862	ACORN NUT	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
10	7965	TEE NUT	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
11	10014	CLAMP, fuel hose (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
12	10038A	CLAMP, fuel crossover hose (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
13	10226	PUSH-IN FASTENER	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
14	10236	TY-WRAP, double	FLSTS, FXSTS
15	11529	RUBBER TRIM, fuel tank	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
16	11533	RETAINING RING (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
17	26567-99	VACUUM HOSE ASSEMBLY	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	27016-00	HOSE REDUCER	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
19	27072-00	HOSE, valve to atmosphere	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
20	28838-00	VENT LINE ASSEMBLY, fuel tank to vapor valve	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
21	60993-00	TRIM PANEL, fuel tank (black leather)	FLSTS
	61155-00	TRIM PANEL, fuel tank (rubber)	FLSTC, FXST, FXSTB, FXSTS
	61165-00	TRIM PANEL, fuel tank (laced leather)	FLSTF
22	61109-85D	GASKET	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
23	61272-92C	CAP, fuel filler, right	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
24	61338-02	FUEL VALVE, vacuum actuated, w/ gasket	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
25	61450-95	FUEL FILLER RESTRICTOR KIT (required w/ catalytic mufflers)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
26	62150-85	VAPOR VALVE	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
27	62161-02	NUT, fuel valve	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
28	62166-02	FILTER, fuel valve	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
29	62172-02	GASKET, fuel valve	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
30	62180-00D	FUEL TANK, 5-gallon (primed)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
31	62880-00	GROMMET, fuel tank, upper rear	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
32	62881-00	GROMMET, fuel tank, lower rear & front (3)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
NOTE: Hose or insulator is sold in bulk length under the following part numbers. Cut to length.			
33	62555-95	INSULATOR, 5/8 inch I.D. (nylon) (8 feet)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
34	63501-68B	HOSE, 1/4 inch I.D. x 5/8 inch O.D. (rubber) (25 feet)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
35	63505-84	INSULATOR, 9/16 inch I.D. (nylon) (8 feet)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
36	63521-95A	HOSE, 5/16 inch I.D. x 5/8 inch O.D. (rubber) (25 feet)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS

FUEL TANK - FUEL INJECTED

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Refer to Painted Parts Book for painted part numbers.			
1	758	PLUG, drain	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
2	3017	SCREW	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
3	4197	BOLT	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
4	4763	SCREW	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
5	5818A	BUSHING, front tank mount (2)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
6	6400HB	WASHER (2)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
7	6702	WASHER	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
8	6716	WASHER	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
9	7862	ACORN NUT	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
10	7965	TEE NUT	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
11	10038A	CLAMP, fuel crossover hose (2)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
12	10222	CLAMP	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
13	10226	PUSH-IN FASTENER	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
14	10236	TY-WRAP, double	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
15	11323	O-RING (2)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
16	11529	RUBBER TRIM, fuel tank	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
17	11533	RETAINING RING (2)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
18	27016-00	HOSE REDUCER	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
19	27072-00	HOSE, valve to atmosphere	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
20	27249-96	CONNECTOR, straight	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
21	28828-00	TUBE, tank to valve	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
22	28838-00	VENT LINE ASSEMBLY, fuel tank to vapor valve, w/ 27249-96 & 28828-00	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
23	60993-00	TRIM PANEL, fuel tank (black leather)	FLSTSI
	61155-00	TRIM PANEL, fuel tank (rubber)	FLSTCI, FXSTBI, FXSTI, FXSTSI
	61165-00	TRIM PANEL, fuel tank (laced leather)	FLSTFI
24	61109-85D	GASKET	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
25	61272-92C	CAP, fuel filler, right	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
26	61450-95	FUEL FILLER RESTRICTOR KIT (required w/ catalytic mufflers)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
27	61625-01D	FUEL TANK, 5-gallon (primed)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
28	62150-85	VAPOR VALVE	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
29	62189-01A	CHECK VALVE, out, w/11323	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
30	62843-00	PLUG, fuel tank	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
31	62880-00	GROMMET, fuel tank, upper rear	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
32	62881-00	GROMMET, fuel tank, lower rear & front (3)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
33	62900-01D	FUEL LINE, from tank to intake	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
NOTE: Hose or insulator is sold in bulk length under the following part numbers. Cut to length.			
34	62555-95	INSULATOR, 5/8 inch I.D. (nylon) (8 feet)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
35	63521-95A	HOSE, 5/16 inch I.D. x 5/8 inch O.D. (rubber) (25 feet)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI

FUEL TANK - FXSTD

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Refer to Painted Parts Book for painted part numbers.			
1	758	PLUG, drain	FXSTD
2	4197	BOLT	FXSTD
3	4763	SCREW	FXSTD
4	5818A	BUSHING, front tank mount (2)	FXSTD
5	6400HB	WASHER (2)	FXSTD
6	6702	WASHER	FXSTD
7	7748W	NUT	FXSTD
8	7862	ACORN NUT	FXSTD
9	7965	TEE NUT	FXSTD
10	10014	CLAMP, fuel hose (2)	FXSTD
11	10038A	CLAMP, fuel crossover hose (2)	FXSTD
12	11323	O-RING (2)	FXSTD
13	26567-99	VACUUM HOSE ASSEMBLY	FXSTD
14	27072-00	HOSE, valve to atmosphere	FXSTD
15	27249-96	CONNECTOR, straight	FXSTD
16	27560-00	HOSE REDUCER	FXSTD

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
17	28828-00	TUBE, tank to valve	FXSTD
18	28838-00	VENT LINE ASSEMBLY, fuel tank to vapor valve, w/ 27249-96 & 28828-00	FXSTD
19	61109-85D	GASKET	FXSTD
20	61272-92C	CAP, fuel filler, right	FXSTD
21	61338-02	FUEL VALVE, vacuum actuated, w/ gasket	FXSTD
22	61450-95	FUEL FILLER RESTRICTOR KIT (required w/ catalytic mufflers)	FXSTD
23	61721-00A	BRACKET ASSEMBLY, rear	FXSTD
24	62082-00D	FUEL TANK (primed)	FXSTD
25	62146-00	FRONT TANK MOUNT (2)	FXSTD
26	62150-85	VAPOR VALVE	FXSTD
27	62161-02	NUT, fuel valve	FXSTD
28	62166-02	FILTER, fuel valve	FXSTD
29	62172-02	GASKET, fuel valve	FXSTD
30	62842-00	ADAPTER, fuel valve	FXSTD
31	62843-00	PLUG, fuel valve	FXSTD
32	62881-00	GROMMET, fuel tank, lower rear & front (3)	FXSTD
33	62919-00	SPACER	FXSTD
NOTE: Hose or insulator is sold in bulk length under the following part numbers. Cut to length.			
34	62555-95	INSULATOR, 5/8 inch I.D. (nylon) (8 feet)	FXSTD
35	63501-68B	HOSE, 1/4 inch I.D. x 5/8 inch O.D. (rubber) (25 feet)	FXSTD
36	63505-84	INSULATOR, 9/16 inch I.D. (nylon) (8 feet)	FXSTD
37	63521-95A	HOSE, 5/16 inch I.D. x 5/8 inch O.D. (rubber) (25 feet)	FXSTD

FUEL TANK - FXSTD - FUEL INJECTED

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Refer to Painted Parts Book for painted part numbers.			

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	758	PLUG, drain	FXSTDI
2	4197	BOLT	FXSTDI
3	4763	SCREW	FXSTDI
4	5818A	BUSHING, front tank mount (2)	FXSTDI
5	6400HB	WASHER	FXSTDI
6	6702	WASHER (2)	FXSTDI
7	7748W	NUT	FXSTDI
8	7862	ACORN NUT	FXSTDI
9	7965	TEE NUT	FXSTDI
10	10038A	CLAMP, fuel crossover hose (2)	FXSTDI
11	10222	CLAMP	FXSTDI
12	11323	O-RING (2)	FXSTDI
13	27016-00	HOSE REDUCER	FXSTDI
14	27072-00	HOSE, valve to atmosphere	FXSTDI
15	27249-96	CONNECTOR, straight	FXSTDI
16	28828-00	TUBE, tank to valve	FXSTDI
17	28838-00	VENT LINE ASSEMBLY, fuel tank to vapor valve, w/ 27249-96 & 28828-00	FXSTDI
18	61109-85D	GASKET	FXSTDI
19	61272-92C	CAP, fuel filler, right	FXSTDI
20	61450-95	FUEL FILLER RESTRICTOR KIT (required w/ catalytic mufflers)	FXSTDI
21	61721-00A	BRACKET ASSEMBLY, rear	FXSTDI
22	62082-00D	FUEL TANK (primed)	FXSTDI
23	62146-00	FRONT TANK MOUNT (2)	FXSTDI
24	62150-85	VAPOR VALVE	FXSTDI
25	62189-01A	CHECK VALVE, out, w/11323	FXSTDI
26	62190-01D	FUEL LINE, from tank to intake	FXSTDI
27	62843-00	PLUG, fuel tank	FXSTDI
28	62881-00	GROMMET, fuel tank, lower rear & front (3)	FXSTDI
29	62919-00	SPACER	FXSTDI
NOTE: Hose or insulator is sold in bulk length under the following part numbers. Cut to length.			

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
30	62555-95	INSULATOR, 5/8 inch I.D. (nylon) (8 feet)	FXSTDI
31	63521-95A	HOSE, 5/16 inch I.D. x 5/8 inch O.D. (rubber) (25 feet)	FXSTDI

FUEL PUMP - FUEL INJECTED

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	1311D	SCREW (10)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
2	1314	SCREW	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
3	10006	CABLE STRAP (2)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
4	10222	CLAMP (2)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
5	11351	O-RING	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
6	11380	O-RING	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
7	27408-01	REGULATOR	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
8	61001-01	FUEL FILTER KIT, w/ 10222, 11351 & 62357-00	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
9	61192-96A	GASKET, fuel gauge	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
10	61209-01A	BAIL	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
11	61231-01	BAIL BRACKET	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
12	61315-02	GASKET, top plate	FXSTDI
13	61381-02	GASKET, top plate	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
14	61583-02	SPRING	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
15	61960-00	RUBBER CUSHION (used w/ 62897-01A)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
	61960-04	RUBBER CUSHION (used w/ 62897-01B)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
16	61961-00	RUBBER SLEEVE	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
17	62163-01A	HOUSING FUEL PUMP (used w/ 62897-01A)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
	62163-04	HOUSING FUEL PUMP (used w/ 62897-01B)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
18	62165-01	ENDCAP, housing fuel pump	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
19	62188-01	SPACER, rubber (used w/ 62897-01A)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
	62188-04	SPACER, rubber (used w/ 62897-01B)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
20	62357-00	HOSE, fuel pump to filter	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
21	62373-01	REGULATOR HOUSING	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
22	62897-01A	PUMP ASSEMBLY, fuel, w/ 3, 15, 16, 17, 18 & 19 (use 62897-01B)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
	62897-01B	PUMP ASSEMBLY, fuel, w/ 3, 15, 16, 17, 18 & 19 (replaces 62897-01A)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
23	72439-00B	CONNECTOR ASSEMBLY KIT, 3-way, w/ 72458-00	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
24	72458-00	CONNECTOR KIT, w/ 11380	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
25	72904-01BK	PIN HOUSING, 4-way	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
26	72990-01	PIN TERMINAL (3)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
27	74191-98	SOCKET TERMINAL (2)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
28	75099-01A	FUEL GAUGE	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
29	75130-01B	MODULE ASSEMBLY, fuel pump, complete, w/ 2, 7, 8, 10, 11, 14, 21, 22, 23 & 30 (use 75130-01D)	FXSTDI
	75130-01D	MODULE ASSEMBLY, fuel pump, complete, w/ 2, 7, 8, 10, 11, 14, 21, 22 & 30 (replaces 75130-01B)	FXSTDI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	75132-01D	MODULE ASSEMBLY, fuel pump, complete, w/ 2, 7, 8, 10, 11, 14, 21, 22 & 30	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
30	75142-02	FUEL LEVEL SENDER (used w/ 75130-01B)	FXSTDI
	75298-05	FUEL LEVEL SENDER KIT, w/ 72439-00B (used w/ 75130-01D)	FXSTDI
	75300-05	FUEL LEVEL SENDER KIT, w/ 72439-00B (used w/ 75132-01D)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI

SENDING UNITS - CARBURETED MODELS

[View interactive image](#)

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	1311D	SCREW (5)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
	1311D	SCREW (10)	FXSTD
2	10065	CABLE STRAP (2)	FXSTD
3	10102	CLIP, adhesive back	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
	10103	CLIP, adhesive back	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
4	11380	O-RING	FXSTD
5	61192-96A	GASKET, cap gauge	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
6	61315-02	GASKET, top plate	FXSTD
7	61324-01	GASKET, fuel sending unit	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
8	70280-01	HARNESS, fuel gauge to sending unit	FXSTD
9	72439-00B	CONNECTOR ASSEMBLY KIT, 3-way, w/ 72458-00	FXSTD
10	72458-00	CONNECTOR KIT, w/ 11380	FXSTD

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
11	72904-01BK	PIN HOUSING, 4-way (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
12	72914-01BK	SOCKET HOUSING, 4-way	FXSTD
13	72990-01	PIN TERMINAL (7)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
14	72991-01	TERMINAL, socket (3)	FXSTD
15	73165-01	TERMINAL, socket (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
16	73166-01	TERMINAL, pin (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
17	73167-01	TERMINAL, boot, male (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
18	73168-01	TERMINAL, boot, female (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
19	74113-98BK	SOCKET HOUSING, 3-way (black)	FXSTD
20	74153-98	SECONDARY LOCK, 3-way socket	FXSTD
21	74191-98	SOCKET TERMINAL (12)	FXSTD
22	74195-98	SEAL PIN (2)	FXSTD
23	75049-01A	FUEL GAUGE	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
24	75053-01B	FUEL GAUGE	FXSTD
25	75062-01	SENDING UNIT, w/ 61324-01, 73165-01, 73166-01, 73167-01 & 73168-01	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
26	75129-00B	TOP PLATE ASSEMBLY, w/ 10065, 11380, 72439-00B & 75206-01A (use 75129-00C)	FXSTD
	75129-00C	TOP PLATE ASSEMBLY, w/ 10065, 11380, 72439-00B & sending unit (replaces 75129-00B)	FXSTD
27	75206-01A	FUEL LEVEL SENDER KIT (used w/ 75129-00B)	FXSTD

FUEL TANK TRIM

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	62067-03A	MEDALLION, left (gold) (for 2-tone anniversary silver, black tanks) **RESTRICTED SALES PART**	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
	62068-03A	MEDALLION, right (gold) (for 2-tone anniversary silver, black tanks) **RESTRICTED SALES PART**	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
	62234-03A	MEDALLION, left (chrome) (for anniversary gunmetal, black tanks) **RESTRICTED SALES PART**	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	62235-03A	MEDALLION, right (chrome) (for anniversary gunmetal, black tanks) **RESTRICTED SALES PART**	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	62236-03A	MEDALLION, left (gold) (for 2-tone anniversary silver, black tanks) **RESTRICTED SALES PART**	FXSTD, FXSTDI
	62237-03A	MEDALLION, right (gold) (for 2-tone anniversary silver, black tanks) **RESTRICTED SALES PART**	FXSTD, FXSTDI
	62238-03A	MEDALLION, left (chrome) (for anniversary gunmetal, black tanks) **RESTRICTED SALES PART**	FXSTD, FXSTDI
	62239-03A	MEDALLION, right (chrome) (for anniversary gunmetal, black tanks) **RESTRICTED SALES PART**	FXSTD, FXSTDI
	SEE NOTE	DECAL, left/right (for luxury rich red, white pearl, luxury blue tanks) (2) **RESTRICTED SALES PART**	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI

OIL TANK & LINES

View interactive image


View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
-----------	----------	-------------	----------

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	4206	SCREW	ALL
2	4216	SCREW (2)	ALL
3	4217	SCREW (2)	ALL
4	5775	WASHER (3)	ALL
5	8144	LOCKNUT (2)	ALL
6	10080	CLAMP, drain hose (3)	ALL
7	10208	CLAMP (3)	ALL
8	10216	CLIP, oil lines	ALL
9	11105	O-RING	ALL
10	11326	O-RING (3)	ALL
11	11345	O-RING, dipstick	ALL
12	11447	GROMMET (3)	ALL
13	33525-00	OIL LINE, feed	ALL
14	33531-00	OIL LINE, return	ALL
15	45468-00	CONNECTOR ASSEMBLY, vent	ALL
16	45806-00	OIL LINE, vent	ALL
17	60328-98B	DRAIN PLUG, w/ 11105	ALL
18	62492-01A	OIL TANK (also order 8144) (gloss black)	FXST, FXSTI
	62498-01A	OIL TANK (also order 8144) (chrome)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXSTD, FXSTDI, FXSTS, FXSTSI
	62840-00A	OIL TANK (black wrinkle)	FXSTB, FXSTBI
19	62769-00A	BRACKET, oil tank top	ALL
20	62845-00A	FILLER CAP, w/ dipstick	ALL
21	63553-00B	HOSE, oil tank drain	ALL
22	63601-00	CONNECTOR ASSEMBLY, oil line (2)	ALL
23	63611-00	HOSE, oil feed	ALL
24	63628-00	ELBOW, oil drain	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
25	63632-00	OIL LINE RETAINER ASSEMBLY (2)	ALL
26	63783-00	OIL LINE RETAINER ASSEMBLY (3)	ALL

 EXHAUST SYSTEM - FXST/I, FLSTC/I, FXSTS/I & FXSTB/I

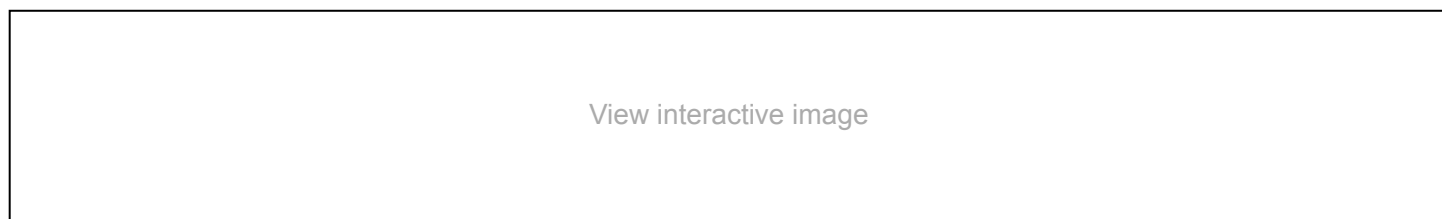

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3728	SCREW (4)	FLSTC, FLSTCI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
2	6701	WASHER (2)	FLSTC, FLSTCI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
3	6703	WASHER (4)	FLSTC, FLSTCI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
4	7593	NUT (4)	FLSTC, FLSTCI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
5	7601	LOCKNUT (2)	FLSTC, FLSTCI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
6	9955	CLAMP, shield (4)	FLSTC, FLSTCI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
7	10074	CLAMP, muffler shield (California) (4)	FLSTC, FXST, FXSTB, FXSTS
8	11860	SPACER STUD (2)	FLSTC, FLSTCI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
9	65296-95A	CLAMP, muffler (2)	FLSTC, FLSTCI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
10	65324-83B	GASKET, exhaust port	FLSTC, FLSTCI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
11	65325-83A	RETAINING RING, exhaust gasket (2)	FLSTC, FLSTCI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
12	65328-83A	CLAMP, exhaust manifold (2)	FLSTC, FLSTCI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
13	65401-00B	EXHAUST PIPE, front	FLSTC, FLSTCI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
14	65413-00	MUFFLER (2)	FLSTC, FLSTCI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	65842-00A	MUFFLER, catalytic (California) (2)	FLSTC, FXST, FXSTB, FXSTS
15	65463-00	SHIELD, muffler (California) (2)	FLSTC, FLSTCI, FXST, FXSTB, FXSTS
16	65603-00A	EXHAUST PIPE, rear	FLSTC, FLSTCI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
17	65702-00A	SHIELD, rear exhaust	FLSTC, FLSTCI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
18	65732-00B	SHIELD, front exhaust	FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	65750-00B	SHIELD, front exhaust	FLSTC, FLSTCI
19	65912-00A	TUBE ASSEMBLY, interconnect	FLSTC, FLSTCI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
20	65927-00	GASKET, exhaust interconnect (2)	FLSTC, FLSTCI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
INTERNATIONAL MODELS ONLY			
21	10074	CLAMP, muffler shield (front muffler) (HDI only) (2)	FLSTC, FLSTCI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
22	65463-00	SHIELD, muffler (on front muffler only) (HDI only)	FLSTC, FLSTCI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
23	65682-00A	MUFFLER, catalytic (HDI only)	FLSTC, FLSTCI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
24	65885-00	MUFFLER (HDI only)	FLSTC, FLSTCI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI

EXHAUST SYSTEM - FLSTF/I & FXSTD/I

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3728	SCREW (6)	FLSTF, FLSTFI, FXSTD, FXSTDI
2	3987	BOLT (2)	FLSTF, FLSTFI, FXSTD, FXSTDI
3	4190	SCREW (2)	FLSTF, FLSTFI, FXSTD, FXSTDI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
4	5416	BOLT	FLSTF, FLSTFI, FXSTD, FXSTDI
5	6702	WASHER (2)	FLSTF, FLSTFI, FXSTD, FXSTDI
6	6703	WASHER (6)	FLSTF, FLSTFI, FXSTD, FXSTDI
7	7593	NUT (4)	FLSTF, FLSTFI, FXSTD, FXSTDI
8	7601	LOCKNUT	FLSTF, FLSTFI, FXSTD, FXSTDI
9	9955	CLAMP (7)	FLSTF, FLSTFI, FXSTD, FXSTDI
10	10074	CLAMP, muffler shield (4)	FLSTF, FLSTFI, FXSTD, FXSTDI
11	65085-00A	SHIELD, front exhaust (chrome)	FXSTD, FXSTDI
	65148-00A	SHIELD, front exhaust	FLSTF, FLSTFI
12	65090-00B	MUFFLER, front, catalytic (California)	FLSTF, FXSTD
	65094-00A	MUFFLER, front	FLSTF, FLSTFI, FXSTD, FXSTDI
13	65296-95A	CLAMP, muffler (2)	FLSTF, FLSTFI, FXSTD, FXSTDI
14	65324-83B	GASKET, exhaust port	FLSTF, FLSTFI, FXSTD, FXSTDI
15	65325-83A	RETAINING RING, exhaust gasket (2)	FLSTF, FLSTFI, FXSTD, FXSTDI
16	65328-83A	CLAMP, exhaust manifold (2)	FLSTF, FLSTFI, FXSTD, FXSTDI
17	65435-00	MUFFLER SUPPORT	FLSTF, FLSTFI, FXSTD, FXSTDI
18	65445-00	HEAT SHIELD, exhaust pipe	FLSTF, FLSTFI, FXSTD, FXSTDI
19	65463-00	HEAT SHIELD, muffler (2)	FLSTF, FLSTFI, FXSTD, FXSTDI
20	65464-00A	HEAT SHIELD, rear exhaust pipe	FLSTFI
21	65499-00A	EXHAUST PIPE, front	FLSTF, FLSTFI, FXSTD, FXSTDI
22	65503-00A	EXHAUST PIPE, rear	FLSTF, FLSTFI, FXSTD, FXSTDI
23	65652-97A	BRACKET, exhaust	FLSTF, FLSTFI, FXSTD, FXSTDI
24	65654-97	CLAMP, exhaust pipe	FLSTF, FLSTFI, FXSTD, FXSTDI
25	65734-95	BRACKET, muffler	FLSTF, FLSTFI, FXSTD, FXSTDI
26	65830-03	SEAL, exhaust interconnect	FLSTF, FLSTFI, FXSTD, FXSTDI
27	65890-00A	MUFFLER, rear	FLSTF, FLSTFI, FXSTD, FXSTDI
	65900-00A	MUFFLER, rear, catalytic (California)	FLSTF, FXSTD
28	65926-00	MUFFLER BRACKET, rear	FLSTF, FLSTFI, FXSTD, FXSTDI
INTERNATIONAL MODELS ONLY			
29	65894-00	MUFFLER, rear (HDI only)	FLSTF, FLSTFI, FXSTD, FXSTDI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
30	65939-00A	MUFFLER, front, catalytic (HDI only)	FLSTF, FLSTFI, FXSTD, FXSTDI

EXHAUST SYSTEM - FLSTS/I

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	861A	SCREW	FLSTS, FLSTSI
2	3728	SCREW (8)	FLSTS, FLSTSI
3	3775	SCREW, left (2)	FLSTS, FLSTSI
4	4017	BOLT (4)	FLSTS, FLSTSI
5	4719W	BOLT, right (2)	FLSTS, FLSTSI
6	5416	BOLT (2)	FLSTS, FLSTSI
7	6701	WASHER	FLSTS, FLSTSI
8	6702	WASHER (4)	FLSTS, FLSTSI
9	6703	WASHER (8)	FLSTS, FLSTSI
10	7038	LOCKWASHER (4)	FLSTS, FLSTSI
11	7041	LOCKWASHER (4)	FLSTS, FLSTSI
12	7593	NUT (4)	FLSTS, FLSTSI
13	7601	LOCKNUT (2)	FLSTS, FLSTSI
14	9955	CLAMP (11)	FLSTS, FLSTSI
15	65081-00A	EXHAUST PIPE, left	FLSTS, FLSTSI
16	65296-95A	CLAMP, muffler (3)	FLSTS, FLSTSI
17	65311-97	SUPPORT TUBE, muffler (2)	FLSTS, FLSTSI
18	65324-83B	GASKET, exhaust port	FLSTS, FLSTSI
19	65325-83A	RETAINING RING, exhaust gasket (2)	FLSTS, FLSTSI
20	65328-83A	CLAMP, exhaust manifold (2)	FLSTS, FLSTSI
21	65364-00A	MUFFLER, right, catalytic (California only)	FLSTS
22	65366-00	MUFFLER, left, catalytic (California only)	FLSTS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
23	65498-00A	EXHAUST PIPE, front	FLSTS, FLSTSI
24	65513-00A	EXHAUST PIPE, right, rear	FLSTS, FLSTSI
25	65652-97A	BRACKET, exhaust	FLSTS, FLSTSI
26	65654-97	CLAMP, exhaust pipe (3)	FLSTS, FLSTSI
27	65655-00	MUFFLER, right	FLSTS, FLSTSI
28	65679-00	MUFFLER, left	FLSTS, FLSTSI
29	65708-97	BRACKET, exhaust	FLSTS, FLSTSI
30	65734-95	BRACKET, muffler (4)	FLSTS, FLSTSI
31	65781-82	GASKET, interconnect	FLSTS, FLSTSI
32	65782-82	WASHER, interconnect	FLSTS, FLSTSI
33	65907-97A	HEAT SHIELD, front	FLSTS, FLSTSI
34	65908-00A	HEAT SHIELD, rear	FLSTS, FLSTSI
35	65909-00	HEAT SHIELD, right, lower, rear	FLSTS, FLSTSI
36	65910-97	HEAT SHIELD, left, front	FLSTS, FLSTSI
37	65911-97	HEAT SHIELD, left, rear	FLSTS, FLSTSI
INTERNATIONAL MODELS ONLY			
38	65793-00	MUFFLER, left (HDI)	FLSTS, FLSTSI
39	65806-00A	MUFFLER, right, catalytic (HDI)	FLSTS, FLSTSI

BATTERY

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	4312C	SCREW (2)	ALL
2	15368-01A	WARNING LABEL	ALL
3	65989-97C	BATTERY, sealed, w/ terminal bolts	ALL
4	66210-00	CUSHION, rubber	ALL
5	70060-92B	CABLE ASSEMBLY, battery negative	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
6	70078-00B	CABLE ASSEMBLY, battery positive, w/ 70584-94	ALL
7	70584-94	BOOT	ALL

INSTRUMENTS (1 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2501A	SCREW (4)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
2	5419	BOLT	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
3	6771A	WASHER	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
4	7549A	ACORN NUT	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
5	10065	CABLE STRAP (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
6	10102	CLIP (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	10103	CLIP	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
7	61081-92	COVER, key head set (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
8	67033-99A	SPEEDOMETER, mph	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
9	67190-89	SEAL, speedometer	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
10	67271-99	BACK CLAMP	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
11	67854-98	SWITCH, odometer reset	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
12	67880-94	BOOT, reset switch	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
13	68112-99A	BEZEL, indicator lamps	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
14	68113-99B	HOUSING ASSEMBLY, indicator lights, w/ 74118-98BK, 74158-98, 74193-98 & 74195-98	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
15	71248-00A	INSTRUMENT PANEL, black	FXSTB, FXSTBI
	71250-00A	INSTRUMENT PANEL, chrome	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTI, FXSTS, FXSTSI
16	71265-95	TRIM, instrument panel	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI

INSTRUMENTS (2 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
17	71302-93A	NAMEPLATE, ignition switch	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	60987-03	NAMEPLATE, ignition switch (non-serial) **RESTRICTED SALES PART**	FLSTF, FLSTFI
	60988-03	NAMEPLATE, ignition switch (non-serial) **RESTRICTED SALES PART**	FLSTS, FLSTSI
	60997-03	NAMEPLATE, ignition switch (non-serial) **RESTRICTED SALES PART**	FLSTC, FLSTCI
	61537-03	NAMEPLATE, ignition switch (non-serial) **RESTRICTED SALES PART**	FXST, FXSTI
	61538-03	NAMEPLATE, ignition switch (non-serial) **RESTRICTED SALES PART**	FXSTS, FXSTSI
	61539-03	NAMEPLATE, ignition switch (non-serial) **RESTRICTED SALES PART**	FXSTB, FXSTBI
18	71313-96A	IGNITION SWITCH (specify key code)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
19	71450-04	LOCKSET, complete, w/ 10065, 61081-92, 71452-91A, fork lock & ignition switch	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
20	71452-91A	KEY (specify key code) (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
21	74118-98BK	SOCKET HOUSING, 8-way (black)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
22	74158-98	SECONDARY LOCK, 8-way socket	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
23	74193-98	SOCKET TERMINAL (7)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
24	74195-98	SEAL PIN	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
INTERNATIONAL MODELS ONLY			
25	67197-99A	SPEEDOMETER, kph	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	67196-99A	SPEEDOMETER, mph/kph	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI

INSTRUMENTS - FXSTD/I

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2501A	SCREW (4)	FXSTD, FXSTDI
2	3008	SCREW	FXSTD, FXSTDI
3	3658	SCREW (2)	FXSTD, FXSTDI
4	4194	SCREW (2)	FXSTD, FXSTDI
5	6716	WASHER (2)	FXSTD, FXSTDI
6	10102	CLIP (2)	FXSTD, FXSTDI
	10103	CLIP	FXSTD, FXSTDI
7	60996-03	NAME PLATE (non-serial) **RESTRICTED SALES PART**	FXSTD, FXSTDI
8	61081-92	COVER, key head set (2)	FXSTD, FXSTDI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
9	67223-00A	SEAL, speedometer	FXSTD, FXSTDI
10	67423-00	BRACKET, instrument panel mounting	FXSTD, FXSTDI
11	67854-98	RESET, switch speedometer	FXSTD, FXSTDI
12	67880-94	BOOT, reset switch	FXSTD, FXSTDI
13	68892-00A	HOUSING ASSEMBLY, indicator lights, w/ 74118-98BK, 74158-98, 74193-98 & 74195-98	FXSTD, FXSTDI
14	68893-00A	BEZEL, indicator lights	FXSTD, FXSTDI
15	68894-00	BACK CLAMP	FXSTD, FXSTDI
16	68901-00A	SPEEDOMETER, mph	FXSTD, FXSTDI
17	71313-96A	IGNITION SWITCH (specify key code)	FXSTD, FXSTDI
18	71439-00	INSTRUMENT PANEL	FXSTD, FXSTDI
19	71450-04	LOCKSET, complete, w/ 61081-92, 71452-91A, cable strap, fork lock & ignition switch	FXSTD, FXSTDI
20	71452-91A	KEY (specify key code) (2)	FXSTD, FXSTDI
21	71464-00	TRIM, instrument panel	FXSTD, FXSTDI
22	74118-98BK	SOCKET HOUSING, 8-way (black)	FXSTD, FXSTDI
23	74158-98	SECONDARY LOCK, 8-way socket	FXSTD, FXSTDI
24	74193-98	SOCKET TERMINAL (12)	FXSTD, FXSTDI
25	74195-98	SEAL PIN (2)	FXSTD, FXSTDI
INTERNATIONAL MODELS ONLY			
26	68902-00A	SPEEDOMETER, kph	FXSTD, FXSTDI
	68903-00A	SPEEDOMETER, mph/kph	FXSTD, FXSTDI

FRONT TURN SIGNALS

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	927A	SCREW (4)	FXSTB, FXSTBI
2	4391	BOLT (2)	FXSTB, FXSTBI
3	7744	JAM NUT (2)	FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
4	7753	NUT (2)	FXSTB, FXSTBI
5	10006	CABLE STRAP (2)	FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTDI, FXSTI, FXSTS, FXSTSI
	10006	CABLE STRAP (4)	FXSTD
	10065	CABLE STRAP	FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
	10181	CABLE STRAP (2)	FXSTB, FXSTBI
6	58060-93	MOUNTING CLAMP, front turn signal (2)	FXSTB, FXSTBI
7	67822-88	BALL STUD (2)	FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
8	67827-88A	CLAMP, ball stud (2)	FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
9	67828-88A	RETAINER, right	FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
10	67829-88	BALL RECEPTACLE, left	FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
11	68168-89A	BULB, front turn signal (2)	FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
12	68904-00	SOCKET ASSEMBLY (2)	FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
13	68972-00	TURN SIGNAL ASSEMBLY, front, w/ 68168-89A, 68904-00 & 68973-00 (2)	FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
14	68973-00	LENS (2)	FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
15	68989-98	STANDOFF, front turn signal (2)	FXSTB, FXSTBI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
16	73191-96	SOCKET CONTACT, 16-20 gauge (6)	FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
17	73156-96BK	SOCKET HOUSING, 6-place	FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
INTERNATIONAL MODELS ONLY			
18	68163-84	BULB (HDI) (2)	FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
19	68906-00	SOCKET ASSEMBLY (use 68975-00) (HDI) (2)	FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
20	68973-00	LENS (2)	FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
21	68975-00	TURN SIGNAL ASSEMBLY, front, w/ 68163-84, 68973-00 & socket assembly (HDI) (2)	FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI

REAR TURN SIGNALS

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2692WB	SCREW (4)	FLSTC, FLSTCI
2	3987	BOLT (2)	FLSTC, FLSTCI
3	4232	SCREW (2)	FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
4	6336B	WASHER (2)	FLSTC, FLSTCI
5	6702	WASHER (2)	FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
6	68440-86	LENS, rear turn signal (2)	FLSTC, FLSTCI
7	68452-86	SCREW (4)	FLSTC, FLSTCI
8	68480-02	SUPPORT, rear lamp mounting (2)	FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
9	68510-74C	BRACKET, rear turn signal	FLSTC, FLSTCI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
10	68572-64B	BULB, rear turn signal (2)	ALL
11	68713-94A	TURN SIGNAL ASSEMBLY, rear, w/ 68440-86, 68452-86 & 68572-64B (2)	FLSTC, FLSTCI
12	68821-00	SUPPORT, rear lamp mounting (2)	FXSTD, FXSTDI
13	68905-00	SOCKET ASSEMBLY (2)	FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
14	68977-00	TURN SIGNAL ASSEMBLY, rear, w/ 68572-64B, 68905-00 & 68973-00 (2)	FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
15	68973-00	LENS (2)	FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
16	73152-96BK	SOCKET HOUSING, 2-place (black) (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	73152-96BK	SOCKET HOUSING, 2-place, right (black)	FXSTD, FXSTDI
	73152-96WE	SOCKET HOUSING, 2-place, left (white)	FXSTD, FXSTDI
17	73191-96	CONTACT SOCKET, 16-20 gauge (4)	ALL
INTERNATIONAL MODELS ONLY			
18	68163-84	BULB (HDI) (2)	FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
19	68452-86	SCREW (4)	FLSTC, FLSTCI
20	68506-92	LENS, turn signal (amber) (HDI) (2)	FLSTC, FLSTCI
21	68765-94A	TURN SIGNAL ASSEMBLY, rear, w/ 68163-84, 68452-06 & 68506-92 (HDI) (2)	FLSTC, FLSTCI
22	68907-00	SOCKET ASSEMBLY (use 68978-00) (2)	FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
23	68973-00	LENS (2)	FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
24	68978-00	TURN SIGNAL ASSEMBLY, rear, w/ 68163-84, 689793-00 & socket assembly (HDI) (2)	FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI

TAIL LAMP (1 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3022A	SCREW	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
2	4166	SCREW (3)	FLSTS, FLSTSI
3	6701	WASHER	FLSTC, FLSTCI, FLSTF, FLSTFI
4	7792	NUT (3)	FLSTS, FLSTSI
5	7964	J-NUT	FLSTC, FLSTCI, FLSTF, FLSTFI
6	10113	CLIP, double (2)	FLSTC, FLSTCI
	10113	CLIP, double (4)	FLSTS, FLSTSI
7	10115	CABLE STRAP	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
8	10183	CLIP, T-stud	FLSTS, FLSTSI
9	10184	CLIP, T-stud (3)	FLSTS, FLSTSI
10	52441-95	BULB, license lamp	FLSTS, FLSTSI
11	68026-99	SCREW, tail lamp (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
12	68066-99A	BASE ASSEMBLY, chrome	FLSTC, FLSTCI, FLSTF, FLSTFI
13	68167-88	BULB, tail lamp, wedge mount (Late Model Year) (used w/ 68370-03)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	68167-04	BULB, tail lamp, wedge mount (used w/ 68370-03A)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	68168-89A	BULB, tail lamp (Early Model Year)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
14	68168-89A	BULB, tail lamp (used w/ 68233-97)	FLSTS, FLSTSI
15	68226-97	GASKET, lens	FLSTS, FLSTSI
16	68233-97	TAIL LAMP ASSEMBLY, w/ 2, 10, 14, 15, 17, 18, 19, 20 & 34	FLSTS, FLSTSI
17	68235-97	GASKET, license plate lens	FLSTS, FLSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	68236-97	LENS, license plate	FLSTS, FLSTSI
19	68237-97	PAD, mounting	FLSTS, FLSTSI
20	68238-97	LENS	FLSTS, FLSTSI
21	68296-99A	TAIL LIGHT CHROME	FLSTC, FLSTCI, FLSTF, FLSTFI
22	68368-03	LIGHT ASSEMBLY, tail lamp, w/ 68369-03 & 68370-03 (Late Model Year) (use 68140-04)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	68140-99A	LIGHT ASSEMBLY, tail lamp, w/ 68026-99 (Early Model Year) (use 68140-04)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	68140-04	LIGHT ASSEMBLY, tail lamp, w/ 68369-03 & 68370-03A (replaces 68140-99A & 68368-03)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
23	68369-03	LENS, tail lamp, w/ 68026-99	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
24	68370-03	SOCKET ASSEMBLY, w/ 68167-88 (Late Model Year) (used w/ 68368-03)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	68370-03A	SOCKET ASSEMBLY, w/ 68167-04 (used w/ 68140-04)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
25	68818-03A	HARNESS, rear lamps, w/ 10115, 70523-06, 73156-96BK, 73158-96BK & 73191-96	FLSTC, FLSTCI, FLSTF, FLSTFI
	68819-03	HARNESS, rear lamps, w/ 10115, 73156-96BK, 73158-96BK & 73191-96	FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
26	68830-99A	CIRCUIT BOARD AND COVER	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
27	68832-99	BULB & SOCKET ASSEMBLY, w/ 73154-96BK & 73191-96 (Early Model Year) (use 68140-04)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI

TAIL LAMP (2 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
28	69062-91A	CLIP, "J"	FLSTC, FLSTCI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
29	70347-84	CLIP, wire retainer	FLSTC, FLSTCI
30	70523-06	CONDUIT (used w/ 68818-03A) (use 69200018)	FLSTC, FLSTCI, FLSTF, FLSTFI
	70540-02	CONDUIT KIT	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	69200018	CONDUIT, cut to length	FLSTC, FLSTCI, FLSTF, FLSTFI
31	73154-96BK	SOCKET HOUSING, 4-place	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
32	73156-96BK	SOCKET HOUSING, 6-place	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
33	73158-96BK	SOCKET HOUSING, 8-place	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
34	73191-96	CONTACT SOCKET, 16-20 gauge (16)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
INTERNATIONAL MODELS ONLY			
35	53436-97	BULB, license lamp (HDI)	FLSTS, FLSTSI
36	68167-88	BULB, tail lamp, wedge mount (Late Model Year) (used w/ 69187-03) (HDI)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	68167-04	BULB, tail lamp, wedge mount (used w/ 69187-03A) (HDI)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	68169-90A	BULB, tail lamp (Early Model Year) (HDI)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
37	68169-90A	BULB, tail lamp (used w/ 68234-97) (HDI)	FLSTS, FLSTSI
38	68234-97	TAIL LAMP ASSEMBLY, w/ 2, 15, 17, 18, 19, 34, 35, 37 & 39 (HDI)	FLSTS, FLSTSI
39	68239-97	LENS, tail lamp (red) (HDI)	FLSTS, FLSTSI
40	68371-03	LIGHT ASSEMBLY, tail lamp, w/ 68372-03 & 69187-03 (Late Model Year) (use 68141-04) (HDI)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	68141-99A	LIGHT ASSEMBLY, tail lamp, w/ 68026-99 (Early Model Year) (use 68141-04) (HDI)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	68141-04	LIGHT ASSEMBLY, tail lamp, w/ 68372-03 & 69187-03A (replaces 68371-03 & 68141-99A) (HDI)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	68142-04	LIGHT ASSEMBLY, tail lamp, w/ 68558-03 & 69187-03A (replaces 68833-99) (HDI)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
41	68372-03	LENS, tail lamp, w/ 68026-99 (HDI)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	68558-03	LENS, tail lamp, w/ 68026-99 (red) (used w/ 68142-04) (HDI)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
42	68833-99	BULB & SOCKET ASSEMBLY, w/ 73154-96BK & 73191-96 (Early Model Year) (use 68142-04) (HDI)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
43	69187-03	SOCKET ASSEMBLY, w/ 68167-88 (Late Model Year) (used w/ 68371-03) (HDI)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	69187-03A	SOCKET ASSEMBLY, w/ 68167-04 (Late Model Year) (used w/ 68141-04 & 68142-04) (HDI)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI

TAIL LAMP - FXSTD/I

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	68168-89A	BULB, tail lamp	FXSTD, FXSTDI
2	68353-00	HARNESS, rear lamp, w/ 72412-97, 73154-96BK & 73191-96	FXSTD, FXSTDI
3	68354-00A	TAIL LAMP LENS ASSEMBLY	FXSTD, FXSTDI
4	68817-00	HARNESS, rear lighting	FXSTD, FXSTDI
5	68931-00A	TAIL LAMP ASSEMBLY, w/ 68168-89A, 68353-00 & 68354-00A	FXSTD, FXSTDI
6	72266-94	SHRINK TUBE	FXSTD, FXSTDI
7	72412-97	SEAL, cable, #12-14 AWG (3)	FXSTD, FXSTDI
8	73102-96BK	PIN HOUSING, 2-way (black)	FXSTD, FXSTDI
9	73102-96WE	PIN HOUSING, 2-way (white)	FXSTD, FXSTDI
10	73104-96BK	PIN HOUSING, 4-way (black)	FXSTD, FXSTDI
11	73104-96WE	PIN HOUSING, 4-way (white)	FXSTD, FXSTDI
12	73154-96BK	SOCKET HOUSING, 4-place	FXSTD, FXSTDI
13	73158-96BK	SOCKET HOUSING, 8-place	FXSTD, FXSTDI
14	73190-96	TERMINAL, pin (12)	FXSTD, FXSTDI
15	73191-96	CONTACT SOCKET, 16-20 gauge (11)	FXSTD, FXSTDI
INTERNATIONAL MODELS ONLY			
16	68169-90A	BULB, tail lamp (HDI)	FXSTD, FXSTDI
17	68356-00A	TAIL LAMP LENS ASSEMBLY, w/ clips & gasket (HDI)	FXSTD, FXSTDI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	68381-00	HARNESS, rear lamp, w/ 72412-97, 73154-96BK & 73191-96 (HDI)	FXSTD, FXSTDI
19	68932-00A	TAIL LAMP ASSEMBLY, w/ 68169-90A, 68356-00A & 68381-00 (HDI)	FXSTD, FXSTDI

HORN

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2447	SCREW (2)	FLSTS, FLSTSI
2	3563	SCREW (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
3	6109	WASHER	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
4	7481	ACORN NUT	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
5	7495	NUT	ALL
6	7624	LOCKNUT (2)	FLSTS, FLSTSI
7	8108	SPEEDNUT (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
8	32617-00Y	SCREW (3)	FLSTS, FLSTSI
9	68385-97	PAD, horn mounting	FLSTS, FLSTSI
10	69012-93A	COVER, horn (chrome)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
	69039-09	COVER, horn (black wrinkle)	FXSTB, FXSTBI
11	69060-90F	HORN ASSEMBLY	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
12	69062-91A	CLAMP	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
13	69069-97	HORN COVER	FLSTS, FLSTSI
14	69070-97B	HORN ASSEMBLY	FLSTS, FLSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
15	69120-91	BRACKET, horn	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
16	69123-92A	MOUNT, horn (rubber)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI

WIRING HARNESS, MAIN - CARBURETED (1 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	70216-03	MAIN WIRING HARNESS	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
NOTE: Includes the following parts.			
1	9840	TERMINAL, ring type	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
2	10065	CABLE STRAP (17)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
3	10136	ANCHOR (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
4	27667-00A	FUSE BLOCK COVER	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
5	31522-00C	RELAY	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
6	70974-00B	SHIELD, loom	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
7	72033-93	TERMINAL, socket (6)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
8	72039-71A	TERMINAL, pin	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
9	72043-71A	PIN HOUSING, 1-way	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
10	72106-94BK	PIN HOUSING, 6-way (black)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
11	72106-94BK	PIN HOUSING, 6-way (black) (replaces gray connector)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
12	72113-94BK	SOCKET HOUSING, 3-way (black)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
13	72119-94BK	SOCKET HOUSING, 12-way (black)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
14	72124-94GY	PIN HOUSING, 4-way (gray)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
15	72139-94GY	SOCKET HOUSING, 12-way (gray) (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
16	72144-94	SECONDARY LOCK, 4-way	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
17	72146-94	SECONDARY LOCK, 6-way (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
18	72153-94	SECONDARY LOCK, 3-way	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
19	72159-94	SECONDARY LOCK, 12-way (3)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
20	72164-94A	PLUG, 4-pin connector	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
21	72190-94	TERMINAL, pin (15)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
22	72191-94	TERMINAL, socket (30)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
23	72195-94	SEAL PIN (9)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
24	72199-94	ANCHOR, T-stud (3)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
25	72213-94	TERMINAL, socket (3)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
26	72214-94	CABLE SEAL, #14-16 wire (3)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
27	72230-98	SOCKET HOUSING, 3-way	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
28	72231-98	SECONDARY LOCK, 3-way	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
29	72242-94	TERMINAL, ring (3)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
30	72280-95	SOCKET HOUSING (black) (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
31	72290-94	TERMINAL, female (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
32	72291-94	TERMINAL, female spade, 14-16 gauge (3)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS

WIRING HARNESS, MAIN - CARBURETED (2 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	70216-03	MAIN WIRING HARNESS (Continued)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
NOTE: Includes the following parts.			
33	72292-94	TERMINAL, female, 12 gauge	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
34	72295-94	HOUSING, starter connection, female	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
35	72327-03A	CONNECTOR, 3-way	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
36	72330-95	FUSE, 15 amp (7)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
37	72366-95	HEAT SHRINK TUBE (yellow)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
38	72369-00	BRACKET, fuse block mounting	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
39	72405-98BK	TERMINAL, push on (black) (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
40	72428-00	TERMINAL, female (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
41	72429-00	TERMINAL, female, #12-16 wire (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
42	72430-00	FUSE BLOCK, type 0	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
43	72432-00	FUSE BLOCK, type 2	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
44	72434-00	TERMINAL (12)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
45	72516-01	DUST CAP	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
46	72914-01BK	SOCKET HOUSING, 4-way (black)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
47	72991-01	SOCKET TERMINAL, #14-16 wire (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
48	73104-96BK	PIN HOUSING, 4-way (black)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
49	73106-96BK	PIN HOUSING, 6-way (black)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
50	73108-96BK	PIN HOUSING, 8-way (black)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
51	73190-96	TERMINAL, pin, 20-16 gauge (18)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
52	73196-96	ANCHOR, T-stud (3)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
53	74108-98BK	PIN HOUSING, 8-way (black)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
54	74112-98BK	HOUSING SOCKET, 2-way (black)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
55	74119-98BK	HOUSING SOCKET, 12-way (black)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
56	74148-98	SECONDARY LOCK, pin, 8-way	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
57	74152-98	SECONDARY LOCK, socket, 2-way	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
58	74159-98	SECONDARY LOCK, socket, 12-way	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
59	74190-98	TERMINAL, pin (7)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
60	74191-98	TERMINAL, socket (10)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
61	74195-98	SEAL PIN, plug (3)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS

WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	70431-03	MAIN WIRING HARNESS	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
NOTE: Includes the following parts.			
1	9840	TERMINAL, ring type	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
2	9937	TERMINAL, female, #14-16 wire (4)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
3	10006	CABLE STRAP (4)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
4	10065	CABLE STRAP (15)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
5	27667-00A	FUSE BLOCK COVER	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
6	31511-01B	RELAY, black	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
7	31522-00C	RELAY	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
8	70598-99	BOOT, engine temperature sensor	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
9	70974-00B	SHIELD, loom	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
10	72033-93	TERMINAL, socket (18)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
11	72039-71A	TERMINAL, pin	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
12	72043-71A	PIN HOUSING, 1-way	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
13	72076-00	SOCKET TERMINAL, #18 wire (27)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
14	72077-00	SEAL PIN (9)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
15	72078-00	CONNECTOR KIT, 36-way	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
16	72106-94BK	PIN HOUSING, 6-way pin (black)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
17	72106-94BK	PIN HOUSING, 6-way (replaces gray connector) (black)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
18	72113-94BK	SOCKET HOUSING, 3-way (black)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
19	72124-94GY	PIN HOUSING, 4-way (gray)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
20	72139-94GY	SOCKET HOUSING, 12-way (gray)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
21	72144-94	SECONDARY LOCK, 4-way	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
22	72146-94	SECONDARY LOCK, 6-way (2)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
23	72153-94	SECONDARY LOCK, 3-way	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
24	72159-94	SECONDARY LOCK, 12-way	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
25	72164-94A	PLUG, 4-way connector	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
26	72190-94	TERMINAL, pin (15)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
27	72191-94	TERMINAL, socket (14)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
28	72199-94	ANCHOR, T-stud (3)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
29	72213-94	TERMINAL, socket (3)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
30	72214-94	CABLE SEAL, #14-16 wire (3)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
31	72230-98	SOCKET HOUSING, 3-way	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
32	72231-98	SECONDARY LOCK, 3-way	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
33	72242-94	TERMINAL, ring (3)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
34	72244-95	SOCKET HOUSING, 2-way (2)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
35	72245-95	SOCKET TERMINAL, #16-18 wire (4)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
36	72247-95	SOCKET HOUSING, 2-way	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
37	72263-95	SOCKET HOUSING, 4-way (2)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
38	72273-95	SOCKET HOUSING, 2-way	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
39	72280-95	SOCKET HOUSING (black) (2)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
40	72290-94	TERMINAL, female (2)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
41	72291-94	TERMINAL, female spade, 14-16 gauge (3)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI

WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	70431-03	MAIN WIRING HARNESS (Continued)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: Includes the following parts.			
42	72292-94	TERMINAL, female, 12 gauge	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
43	72295-94	HOUSING, starter connection, female	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
44	72327-03A	HOUSING, female, 3-way	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
45	72330-95	FUSE, 15 amp (8)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
46	72366-95	HEAT SHRINK TUBE (yellow)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
47	72369-00	BRACKET, fuse block mounting	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
48	72405-98BK	TERMINAL, push on (black) (2)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
49	72428-00	TERMINAL, female (4)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
50	72430-00	FUSE BLOCK, type 0	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
51	72432-00	FUSE BLOCK, type 2	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
52	72434-00	TERMINAL (16)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
53	72516-01	DUST CAP	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
54	72914-01BK	SOCKET HOUSING, 4-way (black)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
55	72991-01	SOCKET TERMINAL, #14-16 wire (3)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
56	73104-96BK	PIN HOUSING, 4-way (black)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
57	73106-96BK	PIN HOUSING, 6-way (black)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
58	73108-96BK	PIN HOUSING, 8-way (black)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
59	73190-96	TERMINAL, pin, 20-16 gauge (18)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
60	73196-96	ANCHOR, T-stud (3)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
61	74108-98BK	PIN HOUSING, 8-way (black)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
62	74112-98BK	HOUSING SOCKET, 2-way (black)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
63	74113-98BK	HOUSING SOCKET, 3-way (black)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
64	74119-98BK	HOUSING SOCKET, 12-way (black)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
65	74148-98	SECONDARY LOCK, pin, 8-way	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
66	74152-98	SECONDARY LOCK, socket, 2-way	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
67	74153-98	SECONDARY LOCK, socket, 3-way	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
68	74159-98	SECONDARY LOCK, socket, 12-way	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
69	74190-98	TERMINAL, pin (7)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
70	74191-98	TERMINAL, socket (15)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
71	74195-98	SEAL PIN, plug (3)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI

HANDLEBAR SWITCHES

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2955	SCREW (4)	ALL
2	3658	SCREW (4)	ALL
3	10181	CABLE STRAP (as required)	ALL
4	70345-84	RETAINER, wiring (2)	ALL
5	71563-96	HOUSING, lower, right	ALL
6	71564-96	HOUSING, upper, right	ALL
7	71567-96	HOUSING, upper, left	ALL
8	71568-96A	HOUSING, lower, left	ALL
9	71587-04	CLIP	ALL
10	71621-08	STOP LAMP SWITCH KIT, front, w/ 10181 & 72266-94	ALL
11	71682-06A	SWITCH KIT, dimmer & horn, w/ 10181 & 72266-94	ALL
12	71683-06A	SWITCH KIT, right turn signal, w/ 10181 & 72266-94	ALL
13	71684-06A	SWITCH KIT, engine stop/start, w/ 10181 & 72266-94	ALL
14	71685-06A	SWITCH KIT, left turn signal, w/ 10181 & 72266-94	ALL
15	72116-94BK	PLUG, 6-way socket (2)	ALL
16	72156-94	SOCKET LOCK, secondary, 6-way (2)	ALL
17	72176-94	FRONT SEAL, 6-way plug (2)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	72191-94	TERMINAL, socket (as required)	ALL
19	72266-94	HEAT SHRINK TUBE, dual wall, 0.3 x 2 inch (as required)	ALL

SWITCHES & CIRCUIT BREAKERS

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2501A	SCREW (4)	ALL
2	3574	SCREW (2)	ALL
3	3892	SCREW (2)	ALL
4	7629	NUT (2)	ALL
5	8483A	RIVET (2)	ALL
6	9842	TERMINAL	ALL
7	9843	TERMINAL	ALL
8	10065	CABLE STRAP	ALL
9	10108	CLIP (5)	ALL
10	10149	CLIP, T-stud (2)	FLSTC, FLSTCI, FLSTS, FLSTSI, FXSTD, FXSTDI
11	10224	CLIP, T-stud	ALL
12	10226	FASTENER, nylon	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
13	11290	O-RING, neutral indicator switch	ALL
14	31522-00C	STARTER RELAY	ALL
15	33904-00A	SWITCH, neutral indicator, w/ 11290	ALL
16	61081-92	COVER, key head set (2)	ALL
17	66373-06	BATTERY, 3V CR2032	ALL
18	68921-01D	MODULE, turn signal canceller	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	68923-00D	MODULE, security system	ALL
19	68926-00	REMOTE CONTROL FOB, w/ 66373-06	ALL
20	70048-03	WIRE ASSEMBLY, circuit breaker to starter	ALL
21	70354-03	BRACKET, electrical	ALL
22	71313-96A	IGNITION SWITCH (specify key code)	ALL
23	71450-04	LOCKSET, complete, w/ 10065, 61081-92, 71452-91A, fork lock & ignition switch	ALL
24	71452-91A	KEY (specify key code) (2)	ALL
25	72023-51E	STOP LAMP SWITCH, rear	ALL
26	72249-94	SHRINK TUBE	ALL
27	72330-95	FUSE, 15 amp (6)	ALL
28	72368-00	ELECTRICAL BOX	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
29	72369-00	BRACKET, fuse block	ALL
30	72374-00	WIRE TROUGH	ALL
31	72380-00	BRACKET, electrical connectors (located behind steering head) (used w/ 47008-00A & 48887-00)	ALL
32	72380-07	BRACKET, electrical connectors (located behind steering head) (used w/ 47008-00C & 48887-00B)	ALL
33	72456-01	ELECTRICAL BOX, EFI	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
34	74599-77B	CIRCUIT BREAKER, 30 amp, battery	ALL
INTERNATIONAL MODELS ONLY			
35	68921-01D	MODULE, turn signal canceller (HDI)	ALL
	68925-00D	MODULE, security system & turn signal canceller (HDI)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
36	68927-00	REMOTE CONTROL FOB, w/ 66373-06 (HDI)	ALL
37	68958-07C	SIREN (for siren vehicles) (HDI)	ALL
38	69309-10	BATTERY, siren (HDI)	ALL

SADDLEBAGS - FLSTC/I

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	5244	FASTENER, self-locking (4)	FLSTC, FLSTCI
2	6229W	WASHER (4)	FLSTC, FLSTCI
3	6702	WASHER (2)	FLSTC, FLSTCI
4	7507	ACORN NUT (2)	FLSTC, FLSTCI
5	7531	LOCKNUT (4)	FLSTC, FLSTCI
6	90247-00	BUCKLE ASSEMBLY (4)	FLSTC, FLSTCI
7	90346-00	SUPPORT, lower, front (2)	FLSTC, FLSTCI
8	90367-03	STUD (4)	FLSTC, FLSTCI
9	90438-10	SADDLEBAG STRAP REPAIR KIT	FLSTC, FLSTCI
10	90476-00	SADDLEBAG, left	FLSTC, FLSTCI
	90477-00	SADDLEBAG, right	FLSTC, FLSTCI
11	90524-01	ISOLATOR (2)	FLSTC, FLSTCI
12	91679-00	BACKPLATE (2)	FLSTC, FLSTCI
13	91850-00	CONCHO KIT, w/ 5244 & 91679-00 (2)	FLSTC, FLSTCI
INTERNATIONAL MODELS ONLY			
14	98837-97	SADDLEBAG REMOVAL KIT, w/ 4 thread protector caps	FLSTC, FLSTCI

SADDLEBAGS - FLSTS/I

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	6229W	WASHER (2)	FLSTS, FLSTSI
2	6702	WASHER (2)	FLSTS, FLSTSI
3	7507	ACORN NUT (2)	FLSTS, FLSTSI
4	7531	LOCKNUT (4)	FLSTS, FLSTSI
5	90291-03	BUCKLE, saddlebag (4)	FLSTS, FLSTSI
6	90346-00	SUPPORT, lower front (2)	FLSTS, FLSTSI
7	90367-03	STUD (4)	FLSTS, FLSTSI
8	90524-01	ISOLATOR (2)	FLSTS, FLSTSI
9	91299-01	SADDLEBAG, left (black trim)	FLSTS, FLSTSI
	91300-01	SADDLEBAG, right (black trim)	FLSTS, FLSTSI
10	91877-97	CONCHO (4)	FLSTS, FLSTSI
11	98837-97	SADDLEBAG REMOVAL KIT, w/ 4 thread protector caps	FLSTS, FLSTSI
INTERNATIONAL MODELS ONLY			
12	98837-97	SADDLEBAG REMOVAL KIT, w/ 4 thread protector caps (HDI)	FLSTS, FLSTSI

MIRRORS

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	7127	LOCKWASHER, right side	FLSTC, FLSTCI, FXSTB, FXSTBI
2	7736	ACORN NUT, left side	ALL
	7736	ACORN NUT, right side	FLSTC, FLSTCI, FXSTB, FXSTBI
3	91840-03B	MIRROR KIT, short, right, convex (chrome)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	91845-03B	MIRROR KIT, short, left, convex (chrome)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
	91909-03B	MIRROR KIT, long, right, convex (black)	FXSTB, FXSTBI
	91910-03B	MIRROR KIT, long, left, convex (black)	FXSTB, FXSTBI

CALIFORNIA EVAPORATIVE EMISSIONS

View interactive image

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
NOTE: These parts are required for motorcycles sold in the state of California.			
1	4195	SCREW, canister to transmission housing (2)	ALL
2	6139	WASHER, canister to transmission housing (2)	ALL
3	11321	CABLE STRAP, canister to mounting bracket (2)	ALL
4	27042-84A	CANISTER ASSEMBLY	ALL
5	27293-00	CANISTER MOUNTING BRACKET	ALL
6	27328-00	HOSE, rollover valve to canister	ALL
7	28839-00	VENT LINE ASSEMBLY, fuel tank to vapor valve & carburetor to canister	ALL
8	28884-00	EVAPORATIVE TUBE ASSEMBLY, large diameter tube from canister to carburetor backplate	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
9	29312-95	CONNECTOR, evaporator (carbureted only)	ALL
10	56076-97	RETAINER, vent line	ALL
NOTE: Hose or insulator is sold in bulk length under the following part numbers. Cut to length.			
11	27138-90	HOSE, 3/16 inch I.D. x 11/32 inch O.D. (rubber) (10 feet)	ALL

Hardware List

[View interactive table](#)

PART NO.	DESCRIPTION
1001	SCREW 1/4-20 X 5/8 TORX button head, self-tapping (Grade 8)
1039	SCREW 5/16-18 X 2-1/2 hex flange head (Grade 8)
1311D	SCREW No. 8-32 X 1/2 Phillips truss head, self-sealing
1314	SCREW K50-2.24 X 17.25MM TORX truss head
1783C	SCREW 5/16-18 X 7/8 Pozidriv flat countersink head (Grade 2)
2447	SCREW 3/16-24 X 3/4 socket button head (Grade 8)
2448	SCREW 3/16-24 X 1/2 socket button head (Grade 8)
2452	SCREW No. 12-24 X 13/16 pan head, with lockpatch
2501A	SCREW No. 8-32 X 3/8 hex head, self-tapping
2531	SCREW No. 4-40 X 5/16 Pozidriv pan head (Grade 2)
2534	SCREW 5/16-24 X 3/4 button head (Grade 8)
2538	SCREW 1/4-20 X 1 Pozidriv pan head (Grade 2)
2566	SCREW No. 8-32 X 7/8 self-tapping
2579A	SCREW No. 8-32 X 5/16 Pozidriv oval head
2604	SCREW No. 10-32 X 1/2 Pozidriv pan head (Grade 2)
2646	SCREW No. 8-32 X 3/4 Pozidriv pan head (Grade 2)
2647B	SCREW No. 10-24 X 3/4 socket head, self-locking
2692WB	SCREW No. 10-24 X 1/2 socket fillister head (Grade 8)
2720	SCREW 10-24 X 1.0 TORX head, with lockpatch
2773	SCREW 1/4-20 X 1/2 Pozidriv pan head (Grade 2)
2823	SCREW 5/16-24 X 3/8 Pozidriv truss head, with lockpatch
2882W	SCREW 5/16-18 X 5/8 hex head (Grade 5)
2887WA	SCREW 5/16-18 X 1-3/4 hex head (Grade 5)
2921	SCREW No. 12 X 5/8 TORX pan head
29269-83A	SCREW 15/16-18 X 5/8 hex button head, with lockpatch
2927	SCREW 1/4-20 X 1/2 socket flat head
2941	SCREW 1/4-20 X 35/64 socket head, self-tapping (Grade 5)
2955	SCREW No. 6-32 X 1/4 Phillips pan head, with lockwasher
2980	SCREW M6 X 1 X 16mm hex flange head
3008	SCREW No. 10-24 X 1-1/4 TORX head, with adhesive

PART NO.	DESCRIPTION
3017	SCREW No. 10-24 X 0.44 TORX pan head, self-tapping
3022A	SCREW 1/4-20 X 5/8 socket fillister head, with lockpatch
31689-90	BOLT M4 X 0.7 X 12 hex head
3214	SCREW 3/8-16 X 1-1/4 socket head, thread-cutting
3233	SCREW 1/4-28 X 1/4 socket head
3249	SCREW 5/16-18 X 1-3/16 socket head (Grade 8)
3268	SCREW 5/16-18 X 1-1/4 knurled head
3275	SCREW 5/16-18 X 3/4 socket head (Grade 8)
3300	SCREW 5/16-18 X 1-1/2 socket head, with lockpatch (Grade 8)
3403	LOCKNUT M8-1.25 X 12mm flange (zinc)
3440	BOLT 3/8-16 X 1/2 hex head (Grade 5)
3471	BOLT 1/2-13 X 2-3/4 hex head (Grade 5)
3485A	SCREW 5/16-18 X 1-3/4 knurled head (Grade 8)
3494A	BOLT 5/16-18 X 7/8 hex head
35078-79	NUT 3/4-16 X .391 X 1
3509	BOLT 3/8-16 X 2-3/4 hex head (Grade 8)
3514	SCREW No. 8-32 X 1 fillister head (Grade 5)
35211-91B	NUT 1-1/2-24 X .350 X 1-7/8 hex head
3533	SCREW 5/16-24 X 3/8 socket button head
3538	SCREW 5/16-24 X 1/2 socket button head
3560WA	BOLT No. 10-24 X 3/8
3561WC	BOLT No. 10-24 X 3/8
3562	SCREW No. 12 X 1/2 hex head, with washer, self-tapping
3563	SCREW 1/4-20 X 3/8 hex flange head (Grade 5)
3574	SCREW 1/4-20 X 3/4 flange
3588	SCREW 1/4-20 X 1/2 hex flange head
3589	SCREW 5/16-24 X 1-1/4 socket head (chrome)
3594	SCREW 1/4-20 X 5/8 knurled head (Grade 8)
3601	SCREW 1/4-20 X 1-1/4 knurled head (Grade 8)
3602A	SCREW No. 10-32 X 1/2 self-tapping
3655A	SCREW 5/16-18 X 7/8 TORX pan head, with lockpatch (Grade 8)

PART NO.	DESCRIPTION
3658	SCREW No. 10-24 X 1/2 TORX head (Grade 5)
3692A	SCREW 5/16-18 X 1.0 hex head, with lockpatch
3693A	SCREW 5/16-18 X 1-3/4 hex head, with lockpatch
3699D	SCREW 3/8-16 X 2.0 hex flange head (Grade 8)
3728	SCREW 1/4-20 X 1/2 hex head
3736A	SCREW 5/16-18 X 1-1/4 hex flange head, with lockpatch
3737A	SCREW 7/16-14 X 2-1/4 hex head, with lockpatch (Grade 5)
3746A	SCREW 1/4-20 X 2-1/4 hex flange head (Grade 8)
37496-90	NUT
3767B	BOLT 1/4-20 X 5/8 hex head (Grade 5)
3775	SCREW 3/8-16 X 2 hex head (Grade 5)
3784	SET SCREW 1/2-20 X 1/2 socket head, with lockpatch
3892	SCREW 1/4 X 5/8 self-tapping
3909	SCREW 1/4-20 X 1-1/4 SEMS hex head (Grade 5)
3953W	BOLT 5/16-24 X 1/2 hex head (Grade 5)
3987	BOLT 5/16-18 X 3/4 hex head (Grade 5)
4017	BOLT 5/16-18 X 1 hex head (Grade 5)
4029A	SCREW 3/8-16 X 2-1/4 socket head (black)
4074A	BOLT 1/2-13 X 2 hex head, shoulder
4091	SCREW No. 10-24 X 1/2 hex head, with washer, self-tapping (zinc)
4132	SCREW 1/4-20 X 1-1/8 TORX button head (Grade 5) (black)
4163	SCREW 3/4-16 X 7/8 TORX button head (Grade 8)
4164	SCREW 3/8-16 X 1-1/4 hex head (Grade 8)
4165	SCREW 3/4-16 X 1-39/64 hex head (Grade 8)
4166	SCREW No. 8-32 X 1/2 socket button head (Grade 8) (chrome)
4168	SCREW 3/8-16 X 1 self-tapping
4175	SCREW 1/2-20 X 5/8 socket button head, with lockpatch
4180	SCREW 3/8-16 X 1-1/2 TORX button head
4190	SCREW 3/8-16 X 3/4 TORX button head
4194	SCREW No. 10-24 X 5/16 TORX pan head (Grade 5)
4195	SCREW 3/8-18 X 3 socket head

PART NO.	DESCRIPTION
4197	BOLT 3/8-16 X 3-3/4 hex head (Grade 5)
4206	SCREW 3/16-18 X 1 hex head
4213	SCREW M8 X 1.25 X 30 button head
4216	SCREW 5/16-18 X 7/8 hex flange head (Grade 5)
4217	SCREW 5/16-18 X 1.0 hex flange head (Grade 5)
4232	SCREW 5/16-18 X 2-3/4 TORX button head (Grade 5)
4266A	SCREW 3/8-16 X 7/8 button head (Grade 5)
4267	SCREW 3/8-16 X 1-1/4 button head (Grade 5)
4311	SCREW 3/8-16 X 1-5/8 socket head
4312C	SCREW M6 X 1.0 X 14mm, SEMS flange head (stainless)
4313	SCREW 3/8-16 X 1-1/4 socket head
4314	SCREW 3/4-16 X 3 TORX head (Grade 8)
4315	SCREW 3/8-16 X 3-1/2 TORX head (Grade 8)
4326A	SCREW 5/16-18 X 2 socket head
4343	SCREW 5/16-24 X 1-3/4 socket button head, with adhesive
4350A	SCREW 3/8-16 X 1-1/2 socket head
4355B	SCREW 3/8-16 X 1-3/4 TORX head (Grade 8)
43567-92	SCREW 3/8-16 X 1 TORX pan head, with lockpatch
4358A	SCREW No. 10-32 X 5.250 hex head (zinc plate)
4383	SCREW 5/16-18 X 5/8 hex head, with washer (Grade 2)
4391	BOLT 5/16-24 X 5/8 hex head (Grade 5)
4400	BOLT 1/4-20 X 1-11/16 hex head with Scotch grip (Grade 8)
4411	BOLT 3/8-24 X 1-3/4 hex head (Grade 5)
4453	BOLT 1/4-20 X 7/8 hex head SPECIAL WITH TAPPED HOLE
4482	SCREW 5/16-24 X 1-3/8 socket button head, with lockptach (Grade 8)
45405-75A	SCREW M8 X 1.25 x 27 hex socket head
45717-63	LOCKWASHER 1 X 2 X 0.035 keyed special
45718-60	NUT 1-24 X 1.5 X 0.47
4716W	SCREW 3/8-16 X 1-1/4 hex head (Grade 5)
4717A	SCREW 1/4-20 X 2-1/4 knurled head, with lockpatch
4719W	BOLT 3/8-16 X 2-1/2 hex head (Grade 5)

PART NO.	DESCRIPTION
4721	BOLT 3/8-16 X 1-1/2 hex head (Grade 5)
4722	BOLT 3/8-16 X 2-1/4 hex head (Grade 5)
4724	BOLT 3/8-24 X 1-1/2 hex head (Grade 5)
4726	BOLT 7/16-20 X 1-1/2 hex head (Grade 5)
4729	BOLT 7/16-20 X 1-1/4 hex head (Grade 5)
4740A	SCREW 1/4-20 X 1-1/4 knurled head, with lockpatch (Grade 8)
4741A	SCREW 1/4-20 X 1 socket head, with lockpatch
4747	SCREW 3/8-16 X 2-5/8 knurled head (Grade 8)
4763	SCREW 5/16-18 X 1-1/4 TORX button head (Grade 5)
4814A	SCREW 1/4-20 X 1-1/8 knurled head, with lockpatch
4816A	SCREW 5/16-18 X 1-1/2 socket head
4820A	SCREW 1/4-20 X 2 socket head
5403B	BOLT 1/4-20 X 3/8 carriage
5416	BOLT 3/8-16 X 1/8 carriage (Grade 5)
5419	BOLT 5/16-18 X 1-3/4 carriage
54321-85	NUT No. 8-32 X 1/2 X 1/8 (brass)
5710	WASHER 63/64 X 1-1/2 X 5/64
5756	WASHER 21/32 X 1-5/16 X 5/8
5775	WASHER 11/32 X 1/2 X 31/64
6003	WASHER 1-3/16 X 1-3/8 X 11/16
6016	WASHER 11/32 X 11/16 X 1/16
6019	WASHER 3/8 X 29/32 X 1/16
6036	WASHER 17/64 X 1 X 1/16
6040A	WASHER 3/4 X 1-1/2 X 1/16
6042A	WASHER 1 X 1-1/5 X 1/16 layered
6057	WASHER 1/2 X 7/8 X 3/16, nylon
6072	WASHER 3/8 X 1 1/4 X 5/64
6099	WASHER 1/4 X 7/16 X 1/16
6101	WASHER 17/64 X 27/64 X 1/16
6109	WASHER 5/16 X 11/16 X 1/8
6139	WASHER 3/8 X 7/8 X 1/16

PART NO.	DESCRIPTION
6229W	WASHER 5/16 X 1-1/16 X 3/64
6237	WASHER 5/16 X 1-1/8 X 5/64
6294	WASHER 3/8 X 1-1/8 X 7/32
6333	WASHER 5/16 X 7/8 X 5/64
6336B	WASHER 5/16 X 15/16 X 3/16
6353	WASHER 3/8 X 13/16 X 1/16 (chrome)
6371	WASHER 25/64 X 1 X 3/32
6379W	WASHER 3/8 X 5/8 X 3/64
6400HB	WASHER 5/16 X 13/16 X 3/32
6409	WASHER 1/2 X 3/4 X 1/32 plastic
6474	WASHER 3/8 X 5/16 X 3/16 hardened
6497HW	WASHER 29/64 X 1-1/8 X 1/16
6498	WASHER 9/16 X 13/16 X 1/32 nylon
6516HW	WASHER 7/16 X 1-1/8 X 1/8
6530	WASHER 1/2 X 1 X 3/16
6532	WASHER 3/8 X 3/4 X 1/8
6534	WASHER 3/8 X 1-3/4 X 3/32 hardened
6535	WASHER 5/16 X 1-1/4 X 3/32 hardened
6590HW	WASHER 1/2 X 1-1/8 X 3/32
6639	WASHER 5/8 X 1-5/16 X 3/32 (chrome)
6655	WASHER 5/8 X 1-1/2 X 7/64
6701	WASHER 3/8 X 13/16 X 1/16
6702	WASHER 5/16 X 11/16 X 1/16
6703	WASHER 1/4 X 5/8 X 1/16
6716	WASHER No. 10 X 1/2 X 3/64
6724	WASHER 21/32 X 1-1/16 X 1/16
6753	WASHER 1/2 X 1-1/4 X 1/8 notched
6756	WASHER 1/2 X 1-1/16 X 3/32
6758	WASHER 3/8 X 37/64 X 7/64
6762B	WASHER 11/16 X 29/32 X 1/32
6771A	WASHER 5/16 X 1/2 X 1/16

PART NO.	DESCRIPTION
68026-99	SCREW No. 8-32 X 1 Phillips pan head (stainless)
68042-99	SCREW No. 8-32 X 3/8 TORX head
6812	WASHER 13/32 X 11/16 X 1/16
68120-00	SCREW No. 8-32 x 1-2 TORX head, self-tapping
6829	WASHER 31/64 X 1 X 7/64
6852	WASHER 41/64 X 1-1/8 X 5/64
7038	LOCKWASHER 3/8
7039	LOCKWASHER 7/16
7041	LOCKWASHER 5/16
7062	LOCKWASHER M8.4 X 13 X 1.2
7068	LOCKWASHER 1/2
7124	LOCKWASHER 1/4 internal tooth
7127	LOCKWASHER 5/16 internal tooth
7129	LOCKWASHER 1/2 internal tooth
7130W	LOCKWASHER 3/8 internal tooth
7220	LOCKWASHER No. 10 external tooth
7230	LOCKWASHER 1/4 external tooth
7232	LOCKWASHER 5/16 internal tooth
7434	WASHER 1/4 X 1-29/64 X 1/16 nylon
7479	NUT 5/8-11 flange (Grade 6)
7481	ACORN NUT 5/16-18 X 5/8 X 1/2
7495	NUT M6 flange
7507	ACORN NUT 5/16-18 X 11/16 X 1/2 (Grade 2) (chrome)
7531	LOCKNUT 5/16-18 X 9/32 X 1/2 flange
7549A	ACORN NUT 5/16-18 X 9/16 X 1/2
7593	NUT 5/16-24 flange
7600	NUT No. 4-40 keps
7601	LOCKNUT 3/8-16 flange
7606	LOCKNUT No. 8-32 X 1/4 X 1/4 hex (chrome)
7624	LOCKNUT No. 10-24 X 1/4 X 3/8
7627	ACORN NUT 1/2-13 X 3/4 (chrome)

PART NO.	DESCRIPTION
7629	NUT No. 10-32 X 3/8 keps
7651A	ACORN NUT No. 12-24 (Grade 2) (chrome)
7667	NUT 3/8-16 X 9/32 X 9/16 nylon insert
7669	NUT 5/16-18
7680W	ACORN NUT 3/8-16 X 25/32 X 9/16 (Grade 2) (chrome)
7686	LOCKNUT 1/4-20 X 5/16 X 7/16
7716	LOCKNUT 1/4-20 X 7/16 flange
7736	ACORN NUT 5/16-24 X 19/32 X 1/2 (Grade 2) (chrome)
7739	LOCKNUT 5/16-18 X 11/32 X 1/2
7742	LOCKNUT 1/4-20 X 7/32 X 7/16
7744	JAMNUT 5/16-24 X 3/16 X 1/2 (Grade 2)
7748W	NUT 5/16-18 X 1/4 X 1/2 (Grade 2)
7753	NUT 5/16-24 X 1/4 X 1/2 (Grade 2)
7768W	LOCKNUT 1/2-13 X 19/32 X 3/4
7778	LOCKNUT 3/8-16 X 7/16 X 9/16
7783	NUT 3/8-16 X 5/16 X 9/16 (Grade 2)
7792	NUT 1/4-20 X 1/4 (Grade 2)
7800W	NUT 3/8-24 X 5/16 X 9/16 (Grade 2)
7838	NUT No. 10-24 keps
7848W	JAMNUT 7/16-20 X 1/4 X 11/16 (Grade 2)
7862	ACORN NUT 3/8-16 (chrome)
7879	NUT 1/2-13 X 1/2 X 3/4 flange (Grade 6)
7880	NUT 1/2-13 X 7/16 X 3/4 (Grade 2)
7951	JAMNUT 3/4-16 X 17/64 X 1-7/64 (Grade 2)
7956	NUT 1/2-20 X 1/2 X 3/4
7959	ACORN NUT 1/2-13 X 13/16 X 3/4 (chrome)
7962	NUT 5/16-18 X 1-11/16
7974	JAMNUT 5/8-18 X 3/8 X 1
7987	NUT 5/8-18 X 15/16 slotted (Grade 8)
7994	LOCKNUT 5/8-18 X 15/16
8001	ACORN NUT 1/2-20 X 1.0 X 3/4 (Grade 5) (chrome)

PART NO.	DESCRIPTION
8108	SPEEDNUT 1/4-20
8144	NUT CLIP 5/16-18
855B	SCREW 3/8-16 X 2 knurled head
856A	SCREW 5/16-24 X 1 socket head (Grade 8)
858A	BOLT 5/16-18 X 3 hex head (Grade 5)
861A	SCREW 3/8-16 X 1 knurled head (Grade 8)
895	SCREW 5/16-18 X 3.0 hex flange head (Grade 5)
8972	WASHER 1-1/4 X 1-53/64 X 1/8
90770-79	SCREW No. 8-32 X 3/8 Pozidriv head, self-tapping
923	SCREW 1/4-20 X 3/4 socket pan head
925	SCREW 1/4-28 X 5/8 socket button head (Grade 8)
927A	SCREW 1/4-20 X 3/4 button head (Grade 8)
929A	SCREW M4 X 0.7 X 11.8 flange head
939	SCREW 1/4-20 X 1 self-tapping, with washer (Grade 2)
94004-90T	ACORN NUT 1/4-20 X 5/8 X 7/16 (chrome)
941	SCREW 1/4-20 X 5/8 socket button head (Grade 8)
945	SCREW 1/4-20 X 2-1/2 TORX button head (Grade 8)
946	SCREW 1/4-20 X 2-1/4 socket button head, with lockpatch (Grade 8)
956	SCREW 5/16-18 X 3-1/4 button head, with lockpatch (Grade 8)
960	SCREW 1/4-20 X 1-3/4 socket head (Grade 8)
961	SCREW 1/4-20 X 1/2 TORX pan head, with washer (Grade 8)
992	SCREW 7/16-20 X 1-1/2 TORX button head
994	SCREW 5/16-18 X 7/8 TORX button head (Grade 5)

New Parts List

[COMPLETE ENGINE - Twin Cam 88B™](#)

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	16118-03	ENGINE ASSEMBLY, complete (polished & silver)	FXST

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	16119-03	ENGINE ASSEMBLY, complete (polished & silver) (California only)	FXST
	16121-03	ENGINE ASSEMBLY, complete (chrome & black texture)	FLSTC, FLSTF, FLSTS, FXSTS
	16126-03	ENGINE ASSEMBLY, complete (chrome & black texture) (California only)	FLSTC, FLSTF, FLSTS, FXSTS
	16128-03	ENGINE ASSEMBLY, complete (chrome & black texture)	FXSTD
	16129-03	ENGINE ASSEMBLY, complete (chrome & black texture) (California only)	FXSTD
	16132-03	ENGINE ASSEMBLY, complete (black wrinkle) (California only)	FXSTB
	16155-03	ENGINE ASSEMBLY, complete (black wrinkle)	FXSTB
	16113-03	ENGINE ASSEMBLY, complete, w/ EFI (black wrinkle)	FXSTBI
	16114-03	ENGINE ASSEMBLY, complete, w/ EFI (polished & silver) (use 19223-03)	FXSTI
	16142-03	ENGINE ASSEMBLY, complete, w/ EFI (chrome & black texture)	FLSTCI, FLSTFI, FLSTSI, FXSTSI
	16184-03	ENGINE ASSEMBLY, complete, w/ EFI (chrome & black)	FXSTDI
	19223-03	ENGINE ASSEMBLY, complete, shortblock (silver) (replaces 16114-03)	FXSTI

[CYLINDERS, HEADS & VALVES - Twin Cam 88B™](#)

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
4	16480-92A	SCREW, internal thread, 1-7/8 inch long (4)	ALL
9	16775-99B	GASKET, cylinder head (2)	ALL
11	17052-99C	GASKET KIT, top end	ALL
	17053-99C	GASKET KIT, engine overhaul	ALL
	18124-83	INSERT, exhaust valve seat, 0.005 O.S. (2)	ALL
	18134-83	INSERT, intake valve seat, 0.005 O.S. (2)	ALL
15	18074-83B	INTAKE VALVE (2)	ALL
16	18082-83A	EXHAUST VALVE (2)	ALL
17	18101-83D	VALVE GUIDE, intake & exhaust (4)	ALL
22	18229-83A	RETAINER, valve collar (8)	ALL

ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
6	4400	BOLT (used w/ 17025-03A) (4)	ALL
9	11132A	O-RING, push rod cover (4)	ALL
10	11145A	O-RING, push rod cover (4)	ALL
13	16719-99B	GASKET, rocker housing (2)	ALL
14	17025-03A	BREATHER ASSEMBLY KIT, w/ 4400 & 26500002 (replaces 17907-01) (2)	ALL
15	17045-99D	GASKET KIT, cam service	ALL
18	17386-99A	GASKET, rocker cover (2)	ALL
19	17429-91	BEARING, rocker arm (8)	ALL
21	17573-99A	ROCKER HOUSING, chrome (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXSTD, FXSTDI, FXSTS, FXSTSI
	17574-99A	ROCKER HOUSING, polished (2)	FXST, FXSTI
	17618-99A	ROCKER HOUSING, black texture (2)	FXSTB, FXSTBI
33	18538-99C	HYDRAULIC LIFTER (4)	ALL
34	18635-99B	GASKET, lifter cover (2)	ALL
36	26500002	BAFFLE ASSEMBLY, breather, w/ breather valve & filter (used w/ 17025-03A)	ALL

PISTONS AND FLYWHEEL ASSEMBLY - Twin Cam 88B™

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
6	23912-00D	FLYWHEEL ASSEMBLY, w/ 11177A, thrust washer, expansion plug, crankpin, connecting rods, bearings & flywheels	ALL

CRANKCASE AND ENGINE OIL FILTER - Twin Cam 88B™

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
12	24004-03B	BEARING KIT, w/ 8972, 24605-07 & 35114-02	ALL
13	24039-03	SPACER, sprocket shaft	ALL
14	24605-07	ROLLER BEARING (2)	ALL
15	24678-03	SET OF CRANKCASES, w/ 100th medallion (black) **RESTRICTED SALES PART**	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTS, FXSTSI
	24679-03	SET OF CRANKCASES, w/ 100th medallion (silver) **RESTRICTED SALES PART**	FXST, FXSTI
16	24709-03	MEDALLION KIT, crankcase **RESTRICTED SALES PART**	ALL
20	63731-99A	OIL FILTER (black)	FXSTB, FXSTBI
	63798-99A	OIL FILTER (chrome)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI

ENGINE BALANCER - Twin Cam 88B™

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
15	16583-00A	DOWEL (4)	ALL

CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
14	17045-99D	GASKET KIT, cam service	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
16	25244-99A	GASKET, cam cover	ALL
19	25364-01B	CAM COVER (black texture)	FXSTB, FXSTBI
	25367-01B	CAM COVER (silver)	FXST, FXSTI
	25369-01B	CAM COVER (chrome)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXSTD, FXSTDI, FXSTS, FXSTSI
26	25716-99	SPROCKET, cam drive, 34T	ALL

[CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ \(2 OF 2\)](#)

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
32	26400-82B	RELIEF VALVE, oil pump	ALL
	32536-03	TIMER COVER **RESTRICTED SALES PART**	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXSTD, FXSTDI

[CARBURETOR \(1 OF 2\)](#)

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
10	27123-89A	SPRING	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS

[CARBURETOR \(2 OF 2\)](#)

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
54	28025-03	JET NEEDLE, N9E	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
56	63501-68B	HOSE, 1/4 inch I.D. x 5/8 inch O.D. (rubber) (25 feet)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS

INDUCTION MODULE - FUEL INJECTED

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
9	27608-01A	FUEL RAIL	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
10	27609-01B	INJECTOR, fuel (2)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
12	27628-01A	IDLE KIT, air control	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
13	27629-01A	THROTTLE KIT, position sensor	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
15	27635-01A	INDUCTION MODULE HARDWARE KIT	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
16	32416-10	SENSOR, manifold air pressure, w/ 11291	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI

AIR CLEANER & ENRICHENER - CARBURETED MODELS

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
4	29075-99	COVER, air cleaner (chrome) (California only)	FLSTC, FLSTF, FLSTS, FXST, FXSTD, FXSTS
	29089-99	COVER, air cleaner (black wrinkle) (California only)	FXSTB
	29809-03	COVER, air cleaner (California only) **RESTRICTED SALES PART**	FLSTC, FLSTF, FLSTS, FXSTD
5	29094-01	COVER, air cleaner (black wrinkle)	FXSTB
	29121-01	COVER, air cleaner (chrome)	FLSTC, FLSTF, FLSTS, FXST, FXSTD, FXSTS
	29808-03	COVER, air cleaner **RESTRICTED SALES PART**	FLSTC, FLSTF, FLSTS, FXSTD

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
6	29126-90B	SAFETY LABEL (California only)	FLSTC, FLSTF, FLSTS, FXST, FXSTD, FXSTS
	29449-98B	SAFETY LABEL (California only)	FXSTB
7	29127-95B	SAFETY LABEL	FLSTC, FLSTF, FLSTS, FXST, FXSTD, FXSTS
9	29229-88D	CABLE, enrichment	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
14	29404-01A	SAFETY LABEL	FXSTB
18	29474-99A	BRACKET, air cleaner cover	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
20	29581-01B	BACKPLATE ASSEMBLY	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
21	29583-01A	GASKET, carburetor to backplate	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
23	29788-03	BOLT, socket head (used w/ anniversary cover)	FLSTC, FLSTF, FLSTS, FXSTD
24	29811-03	WASHER (used w/ anniversary cover)	FLSTC, FLSTF, FLSTS, FXSTD
25	29582-01B	BACKPLATE (HDI only)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS

[AIR CLEANER - FUEL INJECTED MODELS](#)

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
3	29094-01	COVER, air cleaner (black wrinkle)	FXSTBI
	29121-01	COVER, air cleaner (chrome)	FLSTCI, FLSTFI, FLSTSI, FXSTDI, FXSTI, FXSTSI
	29808-03	COVER, air cleaner **RESTRICTED SALES PART**	FLSTCI, FLSTFI, FLSTSI, FXSTDI
4	29127-95B	SAFETY LABEL	FLSTCI, FLSTFI, FLSTSI, FXSTDI, FXSTI, FXSTSI
7	29404-01A	SAFETY LABEL	FXSTBI
10	29474-99A	BRACKET, air cleaner cover	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
12	29581-01B	BACKPLATE ASSEMBLY	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
13	29583-01A	GASKET, backplate	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
16	29788-03	BOLT (used w/ anniversary cover)	FLSTCI, FLSTFI, FLSTSI, FXSTDI
17	29811-03	WASHER (used w/ anniversary cover)	FLSTCI, FLSTFI, FLSTSI, FXSTDI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	29582-01B	BACKPLATE (HDI only)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI

ALTERNATOR & REGULATOR

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
9	30017-01B	STATOR	ALL

IGNITION MODULE & COIL - CARBURETED

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
11	31981-99C	SPARK PLUG CABLE, front cylinder	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
12	31983-00C	SPARK PLUG CABLE, rear cylinder	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
13	32362-04	SPARK PLUG, 6R12 (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
14	32568-00C	IGNITION MODULE	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS

ELECTRONIC CONTROL MODULE & COIL - FUEL INJECTED

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
11	31981-99C	SPARK PLUG CABLE, front cylinder	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
12	31983-00C	SPARK PLUG CABLE, rear cylinder	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
13	32362-04	SPARK PLUG, 6R12 (2)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
14	32534-11	ELECTRONIC CONTROL MODULE, base level, blank (Note: Requires digital tech programming.)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI

ENGINE SENSORS AND SWITCHES

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
5	32416-10	SENSOR, manifold air pressure, w/ 11291	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
7	32707-01C	SENSOR, crankshaft position, w/ 11289A, 72199-94 & 74194-98	ALL
14	74194-98	TERMINAL PIN, #20-24 AWG (2)	ALL

STARTER MOTOR

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	929A	SCREW (2)	ALL
13	10957	O-RING	ALL
20	31516-94A	CLUTCH ASSEMBLY, starter, w/ 8879, 10957, 31664-94, 31692-90 & return spring	ALL
28	31553-94B	STARTER, complete (black texture) (replaces 31702-98 BT & JA)	ALL
29	31604-91A	STARTER SOLENOID REPAIR KIT	ALL
30	31612-09	JACKSHAFT KIT, starter	ALL

GEAR SHIFTER

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
29	33895-82D	SHIFT LEVER KIT, w/ 3275 (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
30	34064-00C	SPRING, shift lever centering	ALL
35	34564-90B	SHIFT LEVER (chrome)	FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
36	34611-65A	PEG, shift lever	FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
	34611-65A	PEG, shift lever (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
40	34979-00	SLEEVE, shift lever pivot	ALL

TRANSMISSION HOUSING (1 OF 2)

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
8	3699D	SCREW (4)	ALL
21	11132A	O-RING, filler plug	ALL
27	12067B	OIL SEAL, mainshaft, left side	ALL
29	25604-00A	INNER RAMP	ALL
30	25605-00A	OUTER RAMP	ALL
31	33005-03	TRANSMISSION ASSEMBLY (silver)	FXST, FXSTI
	33006-03	TRANSMISSION ASSEMBLY (chrome & black)	FLSTC, FLSTCI, FXSTS, FXSTSI
	33007-03	TRANSMISSION ASSEMBLY (chrome & black)	FLSTF, FLSTFI, FLSTS, FLSTSI
	33051-03	TRANSMISSION ASSEMBLY (black wrinkle)	FXSTB, FXSTBI
	33052-03	TRANSMISSION ASSEMBLY (chrome & black)	FXSTD, FXSTDI
33	33904-00A	SWITCH, neutral indicator, w/ 11290	ALL

[TRANSMISSION HOUSING \(2 OF 2\)](#)

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
35	34732-00A	TRANSMISSION HOUSING ASSEMBLY (black)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTS, FXSTSI
	34774-00A	TRANSMISSION HOUSING ASSEMBLY (silver)	FXST, FXSTI
36	34904-86D	GASKET, upper cover	ALL
40	35087-99A	RETAINING RING, bearing (2)	ALL
42	35653-98A	GASKET, bearing housing	ALL
43	36801-87C	GASKET, right side cover	ALL
47	48052-00A	BRACKET, transmission mounting, right	ALL
48	60328-98B	DRAIN PLUG, w/ 11105	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
52	72194-94	TERMINAL, pin (3)	ALL
53	74430-00D	SENSOR, speedometer, w/ 11289A, 72143-94, 72163-94BK & 72194-94	ALL

TRANSMISSION GEARS

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
12	35051-89A	NEEDLE BEARING (2)	ALL

CLUTCH

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
4	37069-90A	OIL SLINGER ASSEMBLY	ALL
14	37872-00	SEAT, clutch spring	ALL
22	37912-00	PRESSURE PLATE	ALL

PRIMARY HOUSING

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
12	11147B	O-RING, housing cover	ALL
13	12052A	OIL SEAL	ALL
14	12066A	OIL SEAL	ALL
	60743-03	COVER, clutch **RESTRICTED SALES PART**	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXSTD, FXSTDI
16	25416-99C	SEAL, clutch cover	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
20	60539-94B	GASKET, primary cover	ALL
21	60543-99B	COVER ASSEMBLY, primary (chrome)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXSTD, FXSTDI, FXSTS, FXSTSI
	60715-99B	COVER ASSEMBLY, primary (black wrinkle)	FXSTB, FXSTBI
	60721-99B	COVER ASSEMBLY, primary (silver)	FXST, FXSTI
22	60567-90C	GASKET, inspection cover	ALL
26	63859-95B	GASKET (2)	ALL
27	25700225	GASKET KIT, inner primary w/ 12, 13, 14, 16, 17, 22, 26 and 11324, 31430-94, 33126-94, 34906-85D, 37909-90, 63859-95B	ALL

BELTS, CHAINS & SPROCKETS

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
9	35211-91B	NUT, sprocket	ALL
14	40307-00B	REAR BELT, 135T	ALL
15	40250-94C	SPROCKET, transmission, 32T	ALL

CLUTCH CONTROL

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
10	45015-96	HAND LEVER, clutch	ALL
14	45044-96A	CLAMP, lever bracket	ALL

FRONT BRAKE CONTROL

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
13	10209	CLAMP (used w/ 45209-97B) (2)	FLSTS, FLSTSI
21	42317-06A	BRAKE LINE KIT, w/ 10065, 41731-01, 41733-88 & 68562-84	FLSTC, FLSTCI, FLSTF, FLSTFI
	45119-00B	BRAKE LINE KIT, w/ 10065, 41731-01, 41733-88, 68562-84 & 71795-63A	FXSTD, FXSTDI
	45199-99B	BRAKE LINE KIT, w/ 10065, 41731-01, 41733-88, 68562-84 & 71795-63A	FXST, FXSTI
	45209-97B	BRAKE LINE KIT, w/ 10065, 10209, 41731-88A, 41733-88 & 68562-84	FLSTS, FLSTSI
	45250-98B	BRAKE LINE KIT, w/ 10065, 41731-01, 41733-88, 68562-84 & 71795-63A	FXSTB, FXSTBI
24	45019-96D	MASTER CYLINDER ASSEMBLY, front, w/ 11143, 45006-96C, 45016-96, 45030-03C & 45032-82 (9/16 inch bore)	ALL
25	45030-03C	COVER KIT, reservoir, w/ 2579A	ALL
27	45044-96A	CLAMP, handlebar control	ALL
29	68562-84	CLAMP (used w/ 45119-00B, 45199-99B, 45209-97B & 45250-98B)	FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI
	68562-84	CLAMP (used w/ 42317-06A) (3)	FLSTC, FLSTCI, FLSTF, FLSTFI
30	71795-63A	CLAMP (used w/ 45119-00B, 45199-99B & 45250-98B)	FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI

REAR BRAKE CONTROL

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
11	11688	RETAINING RING	ALL
14	40922-87A	BOOT, push rod	ALL
17	41755-99D	MASTER CYLINDER ASSEMBLY, w/ 2, 12, 13, 14, 18, 19, 21 & 30	ALL
21	42454-99A	RESERVOIR, master cylinder, w/o O-rings	ALL
	42568-05A	GASKET, master cylinder reservoir (used w/ 46458-05)	ALL
27	45108-04	BRACKET, brake line (used w/ 45133-04B)	ALL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
28	45133-04B	BRAKE LINE KIT, rear, w/ 3588, 41731-01 & 45108-04	ALL
30	46458-05	COVER KIT, reservoir, w/ 42568-05A	ALL
32	72023-51E	STOP LAMP SWITCH, rear	ALL
33	72463-00A	BRACKET, brake line	ALL

FRONT BRAKE CALIPER - SPRINGER MODELS

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	44077-88F	CALIPER ASSEMBLY, front brake, right	FXSTS, FXSTSI
	44079-97C	CALIPER ASSEMBLY, front brake, left	FLSTS, FLSTSI

FRONT BRAKE CALIPER

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	44046-00D	CALIPER ASSEMBLY, left	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI
3	44082-00D	PAD KIT	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI

REAR BRAKE CALIPER

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	44016-00D	CALIPER ASSEMBLY, rear brake	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	44441-00D	CALIPER ASSEMBLY, rear brake	FXSTD, FXSTDI
3	44082-00D	PAD KIT	ALL

FRONT WHEEL (1 OF 2)

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
11	41038-00	WHEEL, front, 16 inch, solid cast disc, w/o bearings & sleeve	FLSTF, FLSTFI
12	41109-88A	AXLE, front	FXSTS, FXSTSI
14	43005-05A	WHEEL, front, 16 inch, laced, w/ 43085-97, 43241-05 & hub, w/o bearings & sleeve	FLSTC, FLSTCI
	43016-00B	WHEEL, front, 16 inch, laced, w/ 43085-97, 43241-05 & hub, w/o bearings & sleeve	FLSTS, FLSTSI
	43671-05A	WHEEL, front, 21 inch, laced, w/ 43239-05, 43662-80B & hub, w/o bearings & sleeve	FXSTB, FXSTBI, FXSTD, FXSTDI
	43676-05A	WHEEL, front, 21 inch, laced, w/ 43239-05, 43662-80B & hub, w/o bearings & sleeve	FXSTS, FXSTSI
	43700-05A	WHEEL, front, 21 inch, laced, w/ 43239-05, 43662-80B & hub, w/o bearings & sleeve	FXST, FXSTI
19	43241-05	SPOKE & NIPPLE SET, 16 inch (set of 40)	FLSTC, FLSTCI, FLSTS, FLSTSI
	43239-05	SPOKE & NIPPLE SET, 21 inch (set of 40)	FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI

FRONT WHEEL (2 OF 2)

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
30	95595-84A	WEIGHT, 5 grams (for cast wheel) (silver)	FLSTF, FLSTFI

REAR WHEEL

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
-----------	----------	-------------	----------

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
8	40700-05A	WHEEL, rear, 16 inch, laced, w/ 43085-97, 43241-05 & hub, w/o bearings & sleeve (chrome)	FLSTC, FLSTCI, FLSTS, FLSTSI, FXST, FXSTI, FXSTS, FXSTSI
10	41074-00	WHEEL, rear, 17 inch, disc, w/o bearings & sleeve (silver)	FXSTD, FXSTDI
11	41092-03	WHEEL, rear, 16 inch, disc, w/o bearings & sleeve (silver)	FLSTF, FLSTFI
	41095-03	WHEEL, rear, 16 inch, disc, w/o bearings & sleeve (black)	FXSTB, FXSTBI
14	41595-00B	SPACER, rear axle, left	ALL
18	43241-05	SPOKE & NIPPLE SET, 16 inch rim (set of 40)	FLSTC, FLSTCI, FLSTS, FLSTSI, FXST, FXSTI, FXSTS, FXSTSI
25	95595-84A	WEIGHT, 5 grams (silver)	FLSTF, FLSTFI, FXSTB, FXSTBI, FXSTD, FXSTDI

[FRONT FORK - FXST/I & FXSTB/I](#)

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
14	45640-00A	STEM & BRACKET, w/ 45648-85A & 48365-48A	FXST, FXSTB, FXSTBI, FXSTI
15	45648-85A	PAD (felt) (2)	FXST, FXSTB, FXSTBI, FXSTI
16	45670-80A	CAP, fork stem	FXST, FXSTB, FXSTBI, FXSTI
17	45672-80B	BRACKET, upper (chrome)	FXST, FXSTB, FXSTBI, FXSTI
42	48332-48C	ADJUSTING NUT, upper	FXST, FXSTB, FXSTBI, FXSTI

[FRONT FORK - FXSTD/I](#)

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
10	45475-00A	STEM & BRACKET, w/ 48365-48A	FXSTD, FXSTDI
12	45670-80A	CAP, fork stem	FXSTD, FXSTDI

[FRONT FORK - FLSTC/I & FLSTF/I \(1 OF 2\)](#)

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
21	45456-86B	BRACKET, upper	FLSTC, FLSTCI, FLSTF, FLSTFI
22	45605-00A	STEM & BRACKET ASSEMBLY, w/ 48365-48A	FLSTC, FLSTCI, FLSTF, FLSTFI
24	45670-80A	CAP, fork stem	FLSTC, FLSTCI, FLSTF, FLSTFI

FRONT FORK - FLSTC/I & FLSTF/I (2 OF 2)

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
55	67814-86	BACK PANEL, right, rear	FLSTC, FLSTCI, FLSTF, FLSTFI

FRONT FORK - FXSTS/I

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
27	46062-88	SPRING BRIDGE	FXSTS, FXSTSI

FRONT FORK - FLSTS/I

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
26	46062-88	SPRING BRIDGE	FLSTS, FLSTSI

FRAME & JIFFY STAND

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
14	33630-00A	BRACKET, jiffy stand, shift lever & footboard, w/ shifter bushings	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
16	47008-00C	FRAME	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	48887-00B	FRAME	FXSTD, FXSTDI
25	71450-04	LOCKSET, w/ 10065, 45680-90, 61081-92, 71452-91A & ignition switch	ALL

REAR FORK AND SHOCK ABSORBERS

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
2	4074A	BOLT (2)	ALL
9	9270A	BEARING, rear fork pivot (2)	ALL
13	47573-00A	REAR FORK, w/ 9270A & 11282	ALL
17	48048-00A	BUSHING, rear fork (2)	ALL
18	48049-00A	SPACER, rear fork (2)	ALL
19	54508-00B	SHOCK ABSORBER, complete (2)	ALL
22	60363-00B	SPLASH GUARD	ALL

SEATS

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
7	5244	RETAINER CLIP (6)	FLSTC, FLSTCI
	53073-03	SEAT, passenger, w/ logo **RESTRICTED SALES PART**	FLSTF, FLSTFI
	51043-03	SEAT, front, 100th anniversary	FLSTF, FLSTFI
	52906-03	SEAT, pillion passenger **RESTRICTED SALES PART**	FLSTC, FLSTCI
27	52444-03	MEDALLION, sissy bar backrest **RESTRICTED SALES PART**	FLSTC, FLSTCI
34	91806-00A	SEAT ASSEMBLY	FXSTD, FXSTDI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	51032-03A	SEAT ASSEMBLY **RESTRICTED SALES PART**	FXSTD, FXSTDI

SEATS - FLSTS/I

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	51033-03	SEAT ASSEMBLY **RESTRICTED SALES PART**	FLSTS, FLSTSI
13	52687-97	GRAB RAIL, seat	FLSTS, FLSTSI

FOOTRESTS & FOOTBOARDS

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
12	33630-00A	BRACKET, jiffy stand, shift lever & footboard, w/ shifter bushings	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
	42431-11	SUPPORT ASSEMBLY, right footboard & brake (used w/ 50600026)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
	50600026	SUPPORT BRACKET KIT, right footboard & brake, w/ 10866 & 42431-11 (replaces 42431-00)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
16	42507-00B	BRACKET, brake lever & footrest	FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI

HANDLEBAR

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	56224-99A	HANDLEBAR, drag style	FXSTB, FXSTBI
14	56018-98A	HANDLEBAR RISER, right (chrome)	FXSTB, FXSTBI
	56019-98A	HANDLEBAR RISER, left (chrome)	FXSTB, FXSTBI
19	56135-00A	CLAMP, lower (2)	FXSTD, FXSTDI

THROTTLE CONTROL

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
3	10263A	CLAMP, throttle cables	FXSTS, FXSTSI

WINDSHIELD - FLSTC/I

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
7	7651A	ACORN NUT (9)	FLSTC, FLSTCI
8	57062-00A	BRACKET, windshield, right	FLSTC, FLSTCI
	57063-00A	BRACKET, windshield, left	FLSTC, FLSTCI
21	57400112	WINDSHIELD ASSEMBLY, complete, w/ 1, 2, 6, 7, 8, 10, 11, 12, 13, 14, 15, 16, 17, 19, 20 & 22	FLSTC, FLSTCI
22	91800025	HARDWARE KIT, windshield, w/ 4343, 4482, 6400HB & 67621-94 (used w/ 57400112)	FLSTC, FLSTCI

HEADLAMP (1 OF 2)

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
16	67601-94A	GASKET, headlamp	FLSTS, FLSTSI, FXSTD, FXSTDI, FXSTS, FXSTSI
17	67603-94A	ADAPTER RING	FLSTS, FLSTSI, FXSTD, FXSTDI, FXSTS, FXSTSI
23	67790-93A	TRIM RING (chrome)	FXST, FXSTB, FXSTBI, FXSTI
25	67894-93A	TRIM RING (chrome)	FLSTS, FLSTSI, FXSTD, FXSTDI, FXSTS, FXSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
26	68329-03	BULB, HB2/H4	FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
30	69696-05	HEADLAMP SHELL ASSEMBLY, 5-3/4 inch	FXST, FXSTB, FXSTBI, FXSTI
31	69715-05A	HEADLAMP SHELL ASSEMBLY, 5-3/4 inch	FXSTD, FXSTDI
32	69717-05A	HEADLAMP SHELL ASSEMBLY, 5-3/4 inch	FXSTS, FXSTSI
	69769-05A	HEADLAMP SHELL ASSEMBLY, 5-3/4 inch	FLSTS, FLSTSI

HEADLAMP (2 OF 2)

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
48	69696-05	HEADLAMP SHELL ASSEMBLY, 5-3/4 inch	FXST, FXSTB, FXSTBI, FXSTI
49	69715-05A	HEADLAMP SHELL ASSEMBLY, 5-3/4 inch	FXSTD, FXSTDI
50	69717-05A	HEADLAMP SHELL ASSEMBLY, 5-3/4 inch	FLSTS, FLSTSI, FXSTS, FXSTSI

HEADLAMP - FLSTC/I & FLSTF/I

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
11	68050-93A	RETAINING RING	FLSTC, FLSTCI, FLSTF, FLSTFI
12	68051-93A	TRIM RING (chrome)	FLSTC, FLSTCI, FLSTF, FLSTFI
14	69748-05B	HEADLAMP SHELL ASSEMBLY, 7 inch	FLSTC, FLSTCI, FLSTF, FLSTFI

AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
-----------	----------	-------------	----------

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
11	58082-02A	BRACKET, auxiliary lamps	FLSTC, FLSTCI
16	68168-89A	BULB, turn signal (2)	FLSTC, FLSTCI
24	68683-02	HOUSING	FLSTC, FLSTCI, FLSTS, FLSTSI
35	68730-98	LABEL, fog lamp switch (HDI)	FLSTS, FLSTSI
37	68846-98C	FOGLAMP ASSEMBLY, w/ 2, 7, 17, 24, 27 & 38 (HDI) (2)	FLSTC, FLSTCI, FLSTS, FLSTSI
38	68847-98A	SEALED UNIT, fog lamps (HDI) (2)	FLSTC, FLSTCI, FLSTS, FLSTSI

FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	14142-86A	TRIM, "Heritage Softail" (2)	FLSTC, FLSTCI
21	59139-00A	FENDER (prime)	FLSTF, FLSTFI
23	59211-74A	SIDE TRIM (2)	FLSTC, FLSTCI
25	59876-00A	FENDER (prime)	FXSTD, FXSTDI
26	59924-80B	FENDER (prime)	FXST, FXSTB, FXSTBI, FXSTI

FRONT FENDER - FXSTS/I

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
6	33714-90B	BUSHING	FXSTS, FXSTSI

FRONT FENDER - FLSTS/I

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	59164-97A	FENDER, w/ 5216 (prime)	FLSTS, FLSTSI

REAR FENDER & SUPPORTS - FXST/I, FXSTS/I & FXSTB/I

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	4266A	SCREW (6)	FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
7	58991-03	SUPPORT, right (black wrinkle)	FXSTB, FXSTBI
	59066-03	SUPPORT, left (black wrinkle)	FXSTB, FXSTBI
	59964-03	SUPPORT, right (chrome)	FXST, FXSTI, FXSTS, FXSTSI
	59969-03	SUPPORT, left (chrome)	FXST, FXSTI, FXSTS, FXSTSI
8	59050-03	BRACKET, fender mounting, front (2)	FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
9	59076-03	BRACKET, fender mounting, rear (2)	FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
11	59567-00C	PROTECTIVE TAPE, rear fender	FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI

REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
3	4266A	SCREW (2)	FLSTC, FLSTCI, FLSTS, FLSTSI
	4266A	SCREW (4)	FLSTF, FLSTFI
10	45550-03	PLATE, wire retainer (2)	FLSTF, FLSTFI
11	59050-03	BRACKET, fender mounting, front (2)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
12	59088-03	BRACKET, fender mounting, rear (2)	FLSTF, FLSTFI
13	59119-03	BRACKET, fender mounting, rear (2)	FLSTC, FLSTCI, FLSTS, FLSTSI
15	59155-00B	REAR FENDER KIT (primed)	FLSTS, FLSTSI
18	59567-00C	PROTECTIVE TAPE	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
22	59954-03	SUPPORT, left (chrome)	FLSTC, FLSTCI, FLSTS, FLSTSI
	59955-03	SUPPORT, right (chrome)	FLSTC, FLSTCI, FLSTS, FLSTSI
23	59964-03	SUPPORT, right (chrome)	FLSTF, FLSTFI
	59969-03	SUPPORT, left (chrome)	FLSTF, FLSTFI
31	90367-03	STUD, saddlebag (4)	FLSTC, FLSTCI, FLSTS, FLSTSI

REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
18	59567-00C	PROTECTIVE TAPE	FXSTD, FXSTDI

LICENSE PLATE BRACKETS

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
13	59995-03	BRACKET, license plate & tail lamp	FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI

FUEL TANK

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
5	5818A	BUSHING, front tank mount (2)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
23	61272-92C	CAP, fuel filler, right	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
30	62180-00D	FUEL TANK, 5-gallon (primed)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
34	63501-68B	HOSE, 1/4 inch I.D. x 5/8 inch O.D. (rubber) (25 feet)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS
36	63521-95A	HOSE, 5/16 inch I.D. x 5/8 inch O.D. (rubber) (25 feet)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTS

FUEL TANK - FUEL INJECTED

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
5	5818A	BUSHING, front tank mount (2)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
25	61272-92C	CAP, fuel filler, right	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
27	61625-01D	FUEL TANK, 5-gallon (primed)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
33	62900-01D	FUEL LINE, from tank to intake	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
35	63521-95A	HOSE, 5/16 inch I.D. x 5/8 inch O.D. (rubber) (25 feet)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI

FUEL TANK - FXSTD

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
4	5818A	BUSHING, front tank mount (2)	FXSTD
20	61272-92C	CAP, fuel filler, right	FXSTD
24	62082-00D	FUEL TANK (primed)	FXSTD
35	63501-68B	HOSE, 1/4 inch I.D. x 5/8 inch O.D. (rubber) (25 feet)	FXSTD
37	63521-95A	HOSE, 5/16 inch I.D. x 5/8 inch O.D. (rubber) (25 feet)	FXSTD

FUEL TANK - FXSTD - FUEL INJECTED

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
4	5818A	BUSHING, front tank mount (2)	FXSTDI
19	61272-92C	CAP, fuel filler, right	FXSTDI
22	62082-00D	FUEL TANK (primed)	FXSTDI
26	62190-01D	FUEL LINE, from tank to intake	FXSTDI
31	63521-95A	HOSE, 5/16 inch I.D. x 5/8 inch O.D. (rubber) (25 feet)	FXSTDI

FUEL PUMP - FUEL INJECTED

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
9	61192-96A	GASKET, fuel gauge	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
	61960-04	RUBBER CUSHION (used w/ 62897-01B)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
	62163-04	HOUSING FUEL PUMP (used w/ 62897-01B)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
	62188-04	SPACER, rubber (used w/ 62897-01B)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
	62897-01B	PUMP ASSEMBLY, fuel, w/ 3, 15, 16, 17, 18 & 19 (replaces 62897-01A)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
23	72439-00B	CONNECTOR ASSEMBLY KIT, 3-way, w/ 72458-00	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
24	72458-00	CONNECTOR KIT, w/ 11380	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
	75130-01D	MODULE ASSEMBLY, fuel pump, complete, w/ 2, 7, 8, 10, 11, 14, 21, 22 & 30 (replaces 75130-01B)	FXSTDI
	75132-01D	MODULE ASSEMBLY, fuel pump, complete, w/ 2, 7, 8, 10, 11, 14, 21, 22 & 30	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI
	75298-05	FUEL LEVEL SENDER KIT, w/ 72439-00B (used w/ 75130-01D)	FXSTDI
	75300-05	FUEL LEVEL SENDER KIT, w/ 72439-00B (used w/ 75132-01D)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTI, FXSTSI

[SENDING UNITS - CARBURETED MODELS](#)

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
5	61192-96A	GASKET, cap gauge	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
9	72439-00B	CONNECTOR ASSEMBLY KIT, 3-way, w/ 72458-00	FXSTD
10	72458-00	CONNECTOR KIT, w/ 11380	FXSTD
24	75053-01B	FUEL GAUGE	FXSTD
	75129-00C	TOP PLATE ASSEMBLY, w/ 10065, 11380, 72439-00B & sending unit (replaces 75129-00B)	FXSTD

FUEL TANK TRIM

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	62067-03A	MEDALLION, left (gold) (for 2-tone anniversary silver, black tanks) **RESTRICTED SALES PART**	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
	62068-03A	MEDALLION, right (gold) (for 2-tone anniversary silver, black tanks) **RESTRICTED SALES PART**	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI
	62234-03A	MEDALLION, left (chrome) (for anniversary gunmetal, black tanks) **RESTRICTED SALES PART**	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	62235-03A	MEDALLION, right (chrome) (for anniversary gunmetal, black tanks) **RESTRICTED SALES PART**	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	62236-03A	MEDALLION, left (gold) (for 2-tone anniversary silver, black tanks) **RESTRICTED SALES PART**	FXSTD, FXSTDI
	62237-03A	MEDALLION, right (gold) (for 2-tone anniversary silver, black tanks) **RESTRICTED SALES PART**	FXSTD, FXSTDI
	62238-03A	MEDALLION, left (chrome) (for anniversary gunmetal, black tanks) **RESTRICTED SALES PART**	FXSTD, FXSTDI
	62239-03A	MEDALLION, right (chrome) (for anniversary gunmetal, black tanks) **RESTRICTED SALES PART**	FXSTD, FXSTDI

OIL TANK & LINES

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
5	8144	LOCKNUT (2)	ALL
17	60328-98B	DRAIN PLUG, w/ 11105	ALL
18	62492-01A	OIL TANK (also order 8144) (gloss black)	FXST, FXSTI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	62498-01A	OIL TANK (also order 8144) (chrome)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXSTD, FXSTDI, FXSTS, FXSTSI
19	62769-00A	BRACKET, oil tank top	ALL
20	62845-00A	FILLER CAP, w/ dipstick	ALL
21	63553-00B	HOSE, oil tank drain	ALL

[EXHAUST SYSTEM - FXST/I, FLSTC/I, FXSTS/I & FXSTB/I](#)

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
8	11860	SPACER STUD (2)	FLSTC, FLSTCI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
9	65296-95A	CLAMP, muffler (2)	FLSTC, FLSTCI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
10	65324-83B	GASKET, exhaust port	FLSTC, FLSTCI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
12	65328-83A	CLAMP, exhaust manifold (2)	FLSTC, FLSTCI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
13	65401-00B	EXHAUST PIPE, front	FLSTC, FLSTCI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	65842-00A	MUFFLER, catalytic (California) (2)	FLSTC, FXST, FXSTB, FXSTS
16	65603-00A	EXHAUST PIPE, rear	FLSTC, FLSTCI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
17	65702-00A	SHIELD, rear exhaust	FLSTC, FLSTCI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
18	65732-00B	SHIELD, front exhaust	FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	65750-00B	SHIELD, front exhaust	FLSTC, FLSTCI
19	65912-00A	TUBE ASSEMBLY, interconnect	FLSTC, FLSTCI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
23	65682-00A	MUFFLER, catalytic (HDI only)	FLSTC, FLSTCI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI

[EXHAUST SYSTEM - FLSTF/I & FXSTD/I](#)

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
11	65085-00A	SHIELD, front exhaust (chrome)	FXSTD, FXSTDI
	65148-00A	SHIELD, front exhaust	FLSTF, FLSTFI
12	65090-00B	MUFFLER, front, catalytic (California)	FLSTF, FXSTD
	65094-00A	MUFFLER, front	FLSTF, FLSTFI, FXSTD, FXSTDI
13	65296-95A	CLAMP, muffler (2)	FLSTF, FLSTFI, FXSTD, FXSTDI
14	65324-83B	GASKET, exhaust port	FLSTF, FLSTFI, FXSTD, FXSTDI
16	65328-83A	CLAMP, exhaust manifold (2)	FLSTF, FLSTFI, FXSTD, FXSTDI
20	65464-00A	HEAT SHIELD, rear exhaust pipe	FLSTFI
21	65499-00A	EXHAUST PIPE, front	FLSTF, FLSTFI, FXSTD, FXSTDI
22	65503-00A	EXHAUST PIPE, rear	FLSTF, FLSTFI, FXSTD, FXSTDI
26	65830-03	SEAL, exhaust interconnect	FLSTF, FLSTFI, FXSTD, FXSTDI
27	65890-00A	MUFFLER, rear	FLSTF, FLSTFI, FXSTD, FXSTDI
	65900-00A	MUFFLER, rear, catalytic (California)	FLSTF, FXSTD
30	65939-00A	MUFFLER, front, catalytic (HDI only)	FLSTF, FLSTFI, FXSTD, FXSTDI

[EXHAUST SYSTEM - FLSTS/I](#)

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
15	65081-00A	EXHAUST PIPE, left	FLSTS, FLSTSI
16	65296-95A	CLAMP, muffler (3)	FLSTS, FLSTSI
18	65324-83B	GASKET, exhaust port	FLSTS, FLSTSI
20	65328-83A	CLAMP, exhaust manifold (2)	FLSTS, FLSTSI
21	65364-00A	MUFFLER, right, catalytic (California only)	FLSTS
23	65498-00A	EXHAUST PIPE, front	FLSTS, FLSTSI
24	65513-00A	EXHAUST PIPE, right, rear	FLSTS, FLSTSI
33	65907-97A	HEAT SHIELD, front	FLSTS, FLSTSI
34	65908-00A	HEAT SHIELD, rear	FLSTS, FLSTSI
39	65806-00A	MUFFLER, right, catalytic (HDI)	FLSTS, FLSTSI

BATTERY

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	4312C	SCREW (2)	ALL
2	15368-01A	WARNING LABEL	ALL
3	65989-97C	BATTERY, sealed, w/ terminal bolts	ALL
5	70060-92B	CABLE ASSEMBLY, battery negative	ALL
6	70078-00B	CABLE ASSEMBLY, battery positive, w/ 70584-94	ALL

INSTRUMENTS (1 OF 2)

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
13	68112-99A	BEZEL, indicator lamps	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
14	68113-99B	HOUSING ASSEMBLY, indicator lights, w/ 74118-98BK, 74158-98, 74193-98 & 74195-98	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
15	71248-00A	INSTRUMENT PANEL, black	FXSTB, FXSTBI
	71250-00A	INSTRUMENT PANEL, chrome	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTI, FXSTS, FXSTSI

INSTRUMENTS (2 OF 2)

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	60987-03	NAMEPLATE, ignition switch (non-serial) **RESTRICTED SALES PART**	FLSTF, FLSTFI
	60988-03	NAMEPLATE, ignition switch (non-serial) **RESTRICTED SALES PART**	FLSTS, FLSTSI
	60997-03	NAMEPLATE, ignition switch (non-serial) **RESTRICTED SALES PART**	FLSTC, FLSTCI

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	61537-03	NAMEPLATE, ignition switch (non-serial) **RESTRICTED SALES PART**	FXST, FXSTI
	61538-03	NAMEPLATE, ignition switch (non-serial) **RESTRICTED SALES PART**	FXSTS, FXSTSI
	61539-03	NAMEPLATE, ignition switch (non-serial) **RESTRICTED SALES PART**	FXSTB, FXSTBI
19	71450-04	LOCKSET, complete, w/ 10065, 61081-92, 71452-91A, fork lock & ignition switch	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI

INSTRUMENTS - FXSTD/I

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
7	60996-03	NAME PLATE (non-serial) **RESTRICTED SALES PART**	FXSTD, FXSTDI
9	67223-00A	SEAL, speedometer	FXSTD, FXSTDI
13	68892-00A	HOUSING ASSEMBLY, indicator lights, w/ 74118-98BK, 74158-98, 74193-98 & 74195-98	FXSTD, FXSTDI
14	68893-00A	BEZEL, indicator lights	FXSTD, FXSTDI
19	71450-04	LOCKSET, complete, w/ 61081-92, 71452-91A, cable strap, fork lock & ignition switch	FXSTD, FXSTDI
24	74193-98	SOCKET TERMINAL (12)	FXSTD, FXSTDI

FRONT TURN SIGNALS

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
11	68168-89A	BULB, front turn signal (2)	FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI

TAIL LAMP (1 OF 2)

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	68167-04	BULB, tail lamp, wedge mount (used w/ 68370-03A)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
22	68368-03	LIGHT ASSEMBLY, tail lamp, w/ 68369-03 & 68370-03 (Late Model Year) (use 68140-04)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	68140-04	LIGHT ASSEMBLY, tail lamp, w/ 68369-03 & 68370-03A (replaces 68140-99A & 68368-03)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
24	68370-03	SOCKET ASSEMBLY, w/ 68167-88 (Late Model Year) (used w/ 68368-03)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	68370-03A	SOCKET ASSEMBLY, w/ 68167-04 (used w/ 68140-04)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
25	68818-03A	HARNESS, rear lamps, w/ 10115, 70523-06, 73156-96BK, 73158-96BK & 73191-96	FLSTC, FLSTCI, FLSTF, FLSTFI
	68819-03	HARNESS, rear lamps, w/ 10115, 73156-96BK, 73158-96BK & 73191-96	FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI

[TAIL LAMP \(2 OF 2\)](#)

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
30	70523-06	CONDUIT (used w/ 68818-03A) (use 69200018)	FLSTC, FLSTCI, FLSTF, FLSTFI
	69200018	CONDUIT, cut to length	FLSTC, FLSTCI, FLSTF, FLSTFI
40	68371-03	LIGHT ASSEMBLY, tail lamp, w/ 68372-03 & 69187-03 (Late Model Year) (use 68141-04) (HDI)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	68141-04	LIGHT ASSEMBLY, tail lamp, w/ 68372-03 & 69187-03A (replaces 68371-03 & 68141-99A) (HDI)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	68142-04	LIGHT ASSEMBLY, tail lamp, w/ 68558-03 & 69187-03A (replaces 68833-99) (HDI)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
41	68372-03	LENS, tail lamp, w/ 68026-99 (HDI)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	68558-03	LENS, tail lamp, w/ 68026-99 (red) (used w/ 68142-04) (HDI)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
43	69187-03	SOCKET ASSEMBLY, w/ 68167-88 (Late Model Year) (used w/ 68371-03) (HDI)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI
	69187-03A	SOCKET ASSEMBLY, w/ 68167-04 (Late Model Year) (used w/ 68141-04 & 68142-04) (HDI)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTI, FXSTS, FXSTSI

HORN

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
8	32617-00Y	SCREW (3)	FLSTS, FLSTSI
	69039-09	COVER, horn (black wrinkle)	FXSTB, FXSTBI
11	69060-90F	HORN ASSEMBLY	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
14	69070-97B	HORN ASSEMBLY	FLSTS, FLSTSI
16	69123-92A	MOUNT, horn (rubber)	FLSTC, FLSTCI, FLSTF, FLSTFI, FXST, FXSTB, FXSTBI, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI

WIRING HARNESS, MAIN - CARBURETED (1 OF 2)

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	70216-03	MAIN WIRING HARNESS	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
5	31522-00C	RELAY	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
6	70974-00B	SHIELD, loom	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
20	72164-94A	PLUG, 4-pin connector	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS

WIRING HARNESS, MAIN - CARBURETED (2 OF 2)

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	70216-03	MAIN WIRING HARNESS (Continued)	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS
35	72327-03A	CONNECTOR, 3-way	FLSTC, FLSTF, FLSTS, FXST, FXSTB, FXSTD, FXSTS

WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	70431-03	MAIN WIRING HARNESS	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
6	31511-01B	RELAY, black	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
7	31522-00C	RELAY	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
9	70974-00B	SHIELD, loom	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
25	72164-94A	PLUG, 4-way connector	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI

[WIRING HARNESS, MAIN - FUEL INJECTED \(2 OF 2\)](#)

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	70431-03	MAIN WIRING HARNESS (Continued)	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI
44	72327-03A	HOUSING, female, 3-way	FLSTCI, FLSTFI, FLSTSI, FXSTBI, FXSTDI, FXSTI, FXSTSI

[HANDLEBAR SWITCHES](#)

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
8	71568-96A	HOUSING, lower, left	ALL
9	71587-04	CLIP	ALL
10	71621-08	STOP LAMP SWITCH KIT, front, w/ 10181 & 72266-94	ALL
11	71682-06A	SWITCH KIT, dimmer & horn, w/ 10181 & 72266-94	ALL
12	71683-06A	SWITCH KIT, right turn signal, w/ 10181 & 72266-94	ALL
13	71684-06A	SWITCH KIT, engine stop/start, w/ 10181 & 72266-94	ALL
14	71685-06A	SWITCH KIT, left turn signal, w/ 10181 & 72266-94	ALL

[SWITCHES & CIRCUIT BREAKERS](#)

[View interactive table](#)

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
14	31522-00C	STARTER RELAY	ALL
15	33904-00A	SWITCH, neutral indicator, w/ 11290	ALL
18	68921-01D	MODULE, turn signal canceller	ALL
	68923-00D	MODULE, security system	ALL
20	70048-03	WIRE ASSEMBLY, circuit breaker to starter	ALL
21	70354-03	BRACKET, electrical	ALL
23	71450-04	LOCKSET, complete, w/ 10065, 61081-92, 71452-91A, fork lock & ignition switch	ALL
25	72023-51E	STOP LAMP SWITCH, rear	ALL
32	72380-07	BRACKET, electrical connectors (located behind steering head) (used w/ 47008-00C & 48887-00B)	ALL
35	68921-01D	MODULE, turn signal canceller (HDI)	ALL
	68925-00D	MODULE, security system & turn signal canceller (HDI)	ALL
37	68958-07C	SIREN (for siren vehicles) (HDI)	ALL
38	69309-10	BATTERY, siren (HDI)	ALL

[SADDLEBAGS - FLSTC/I](#)

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	5244	FASTENER, self-locking (4)	FLSTC, FLSTCI
8	90367-03	STUD (4)	FLSTC, FLSTCI
9	90438-10	SADDLEBAG STRAP REPAIR KIT	FLSTC, FLSTCI
12	91679-00	BACKPLATE (2)	FLSTC, FLSTCI

[SADDLEBAGS - FLSTS/I](#)

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
5	90291-03	BUCKLE, saddlebag (4)	FLSTS, FLSTSI
7	90367-03	STUD (4)	FLSTS, FLSTSI

MIRRORS

View interactive table

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
3	91840-03B	MIRROR KIT, short, right, convex (chrome)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
	91845-03B	MIRROR KIT, short, left, convex (chrome)	FLSTC, FLSTCI, FLSTF, FLSTFI, FLSTS, FLSTSI, FXST, FXSTD, FXSTDI, FXSTI, FXSTS, FXSTSI
	91909-03B	MIRROR KIT, long, right, convex (black)	FXSTB, FXSTBI
	91910-03B	MIRROR KIT, long, left, convex (black)	FXSTB, FXSTBI

Numerical Index

View interactive table

10006	ALTERNATOR & REGULATOR FRAME & JIFFY STAND THROTTLE CONTROL FUEL PUMP - FUEL INJECTED FRONT TURN SIGNALS FRONT TURN SIGNALS WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
1001	SEATS
10014	CARBURETOR (1 OF 2) FUEL TANK FUEL TANK - FXSTD
10031	FRONT BRAKE CONTROL
10038A	FUEL TANK FUEL TANK - FUEL INJECTED FUEL TANK - FXSTD FUEL TANK - FXSTD - FUEL INJECTED
10039	HANDLEBAR
10040	FRAME & JIFFY STAND FRAME & JIFFY STAND
10053	FRONT BRAKE CONTROL

10065	FRONT BRAKE CONTROL FRAME & JIFFY STAND HEADLAMP (1 OF 2) HEADLAMP - FLSTC/I & FLSTF/I AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I SENDING UNITS - CARBURETED MODELS INSTRUMENTS (1 OF 2) FRONT TURN SIGNALS WIRING HARNESS, MAIN - CARBURETED (1 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2) SWITCHES & CIRCUIT BREAKERS
10074	EXHAUST SYSTEM - FXST/I, FLSTC/I, FXSTS/I & FXSTB/I EXHAUST SYSTEM - FXST/I, FLSTC/I, FXSTS/I & FXSTB/I EXHAUST SYSTEM - FLSTF/I & FXSTD/I
10076	FRONT BRAKE CONTROL
10080	OIL TANK & LINES
10081	FRAME & JIFFY STAND
10102	FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I SENDING UNITS - CARBURETED MODELS INSTRUMENTS (1 OF 2) INSTRUMENTS - FXSTD/I
10103	SENDING UNITS - CARBURETED MODELS INSTRUMENTS (1 OF 2) INSTRUMENTS - FXSTD/I
10108	REAR BRAKE CONTROL SWITCHES & CIRCUIT BREAKERS
10113	TAIL LAMP (1 OF 2) TAIL LAMP (1 OF 2)
10115	TAIL LAMP (1 OF 2)
10124	CLUTCH CONTROL
10136	WIRING HARNESS, MAIN - CARBURETED (1 OF 2)
10149	SWITCHES & CIRCUIT BREAKERS
10177	ALTERNATOR & REGULATOR IGNITION MODULE & COIL - CARBURETED ELECTRONIC CONTROL MODULE & COIL - FUEL INJECTED
10181	FRONT TURN SIGNALS HANDLEBAR SWITCHES
10183	TAIL LAMP (1 OF 2)
10184	REAR FENDER & SUPPORTS - FXST/I, FXSTS/I & FXSTB/I TAIL LAMP (1 OF 2)
10190	THROTTLE CONTROL
10193	FRAME & JIFFY STAND
10208	OIL TANK & LINES

10209	FRONT BRAKE CONTROL
10216	OIL TANK & LINES
10222	FUEL TANK - FUEL INJECTED FUEL TANK - FXSTD - FUEL INJECTED FUEL PUMP - FUEL INJECTED
10224	SWITCHES & CIRCUIT BREAKERS
10226	FUEL TANK FUEL TANK - FUEL INJECTED SWITCHES & CIRCUIT BREAKERS
10228	REAR FENDER & SUPPORTS - FXST/I, FXSTS/I & FXSTB/I REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I
10236	FUEL TANK FUEL TANK - FUEL INJECTED
10263A	THROTTLE CONTROL
1039	ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™
10866	FOOTRESTS & FOOTBOARDS
10957	STARTER MOTOR
10998	TRANSMISSION HOUSING (1 OF 2)
11031	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)
11067	TRANSMISSION GEARS
11085	BELTS, CHAINS & SPROCKETS
11096	CLUTCH
11105	TRANSMISSION HOUSING (1 OF 2) OIL TANK & LINES
11132A	ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™ TRANSMISSION HOUSING (1 OF 2)
11140	CRANKCASE AND ENGINE OIL FILTER - Twin Cam 88B™
11143	CLUTCH CONTROL FRONT BRAKE CONTROL
11145A	ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™
11147B	PRIMARY HOUSING
11150	GEAR SHIFTER
11155	THROTTLE CONTROL
11157	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)
11161	TRANSMISSION HOUSING (1 OF 2)
11165	TRANSMISSION HOUSING (1 OF 2)

11177A	<u>PISTONS AND FLYWHEEL ASSEMBLY - Twin Cam 88B™</u>
11179	<u>TRANSMISSION HOUSING (1 OF 2)</u> <u>CLUTCH CONTROL</u>
11182	<u>STARTER MOTOR</u>
11191	<u>GEAR SHIFTER</u>
11244	<u>FORK ROCKERS & CALIPER MOUNTING - FXSTS/I</u> <u>FRONT FENDER - FXSTS/I</u>
11248	<u>STARTER MOTOR</u>
11256	<u>CYLINDERS, HEADS & VALVES - Twin Cam 88B™</u>
11260	<u>FORK ROCKERS & CALIPER MOUNTING - FLSTS/I</u>
11261	<u>FRONT FENDER - FLSTS/I</u>
11270	<u>ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™</u>
11271	<u>THROTTLE CONTROL</u>
11272	<u>THROTTLE CONTROL</u>
11273	<u>CRANKCASE AND ENGINE OIL FILTER - Twin Cam 88B™</u>
11280	<u>FRONT WHEEL (1 OF 2)</u>
11282	<u>REAR FORK AND SHOCK ABSORBERS</u>
11286	<u>CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)</u>
11289A	<u>ENGINE SENSORS AND SWITCHES</u> <u>TRANSMISSION HOUSING (1 OF 2)</u>
11290	<u>TRANSMISSION HOUSING (1 OF 2)</u> <u>SWITCHES & CIRCUIT BREAKERS</u>
11291	<u>INDUCTION MODULE - FUEL INJECTED</u> <u>ENGINE SENSORS AND SWITCHES</u>
11292	<u>AIR CLEANER & ENRICHENER - CARBURETED MODELS</u> <u>AIR CLEANER - FUEL INJECTED MODELS</u>
11293	<u>ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™</u>
11294	<u>SEATS</u>
11298	<u>CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)</u>
11301	<u>CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)</u>
11319A	<u>GEAR SHIFTER</u>
11321	<u>CALIFORNIA EVAPORATIVE EMISSIONS</u>
11323	<u>FUEL TANK - FUEL INJECTED</u> <u>FUEL TANK - FXSTD</u> <u>FUEL TANK - FXSTD - FUEL INJECTED</u>
11326	<u>OIL TANK & LINES</u>

11342	GEAR SHIFTER
11345	OIL TANK & LINES
11351	FUEL PUMP - FUEL INJECTED
11364	REAR BRAKE CONTROL
11380	FUEL PUMP - FUEL INJECTED SENDING UNITS - CARBURETED MODELS
11410	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I
11413	REAR BELT GUARD
11437	FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I FRONT FENDER - FLSTS/I
11447	OIL TANK & LINES
11456	FRONT FORK - FXSTS/I
11494	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)
11514	REAR FORK AND SHOCK ABSORBERS
11529	FUEL TANK FUEL TANK - FUEL INJECTED
11533	FUEL TANK FUEL TANK - FUEL INJECTED
11565	REAR FORK AND SHOCK ABSORBERS
11688	REAR BRAKE CONTROL
11860	EXHAUST SYSTEM - FXST/I, FLSTC/I, FXSTS/I & FXSTB/I
12035B	TRANSMISSION GEARS
12045	GEAR SHIFTER
12052A	PRIMARY HOUSING
12066A	PRIMARY HOUSING
12067B	TRANSMISSION HOUSING (1 OF 2)
12068	CRANKCASE AND ENGINE OIL FILTER - Twin Cam 88B™
1311D	FUEL PUMP - FUEL INJECTED SENDING UNITS - CARBURETED MODELS SENDING UNITS - CARBURETED MODELS
1314	FUEL PUMP - FUEL INJECTED
14142-86A	FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I
14150-86	FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2)
14270-92	PRIMARY HOUSING
14716-00	ENGINE BALANCER - Twin Cam 88B™

14717-00	<u>ENGINE BALANCER - Twin Cam 88B™</u>
14728-00	<u>ENGINE BALANCER - Twin Cam 88B™</u>
14761-00	<u>ENGINE BALANCER - Twin Cam 88B™</u>
14762-00	<u>ENGINE BALANCER - Twin Cam 88B™</u>
14764-00	<u>ENGINE BALANCER - Twin Cam 88B™</u>
14780-00	<u>ENGINE BALANCER - Twin Cam 88B™</u>
14781-00	<u>ENGINE BALANCER - Twin Cam 88B™</u>
14782-00	<u>ENGINE BALANCER - Twin Cam 88B™</u>
14783-00	<u>ENGINE BALANCER - Twin Cam 88B™</u>
14784-00	<u>ENGINE BALANCER - Twin Cam 88B™</u>
14785-00	<u>ENGINE BALANCER - Twin Cam 88B™</u>
14786-00	<u>ENGINE BALANCER - Twin Cam 88B™</u>
14787-00	<u>ENGINE BALANCER - Twin Cam 88B™</u>
14788-00	<u>ENGINE BALANCER - Twin Cam 88B™</u>
14789-00	<u>ENGINE BALANCER - Twin Cam 88B™</u>
14790-00	<u>ENGINE BALANCER - Twin Cam 88B™</u>
15368-01A	<u>BATTERY</u>
16113-03	<u>COMPLETE ENGINE - Twin Cam 88B™</u>
16114-03	<u>COMPLETE ENGINE - Twin Cam 88B™</u>
16118-03	<u>COMPLETE ENGINE - Twin Cam 88B™</u>
16119-03	<u>COMPLETE ENGINE - Twin Cam 88B™</u>
16121-03	<u>COMPLETE ENGINE - Twin Cam 88B™</u>
16126-03	<u>COMPLETE ENGINE - Twin Cam 88B™</u>
16128-03	<u>COMPLETE ENGINE - Twin Cam 88B™</u>
16129-03	<u>COMPLETE ENGINE - Twin Cam 88B™</u>
16132-03	<u>COMPLETE ENGINE - Twin Cam 88B™</u>
16142-03	<u>COMPLETE ENGINE - Twin Cam 88B™</u>
16155-03	<u>COMPLETE ENGINE - Twin Cam 88B™</u>
16184-03	<u>COMPLETE ENGINE - Twin Cam 88B™</u>
16247-00	<u>ENGINE MOUNTS</u>
16478-85A	<u>CYLINDERS, HEADS & VALVES - Twin Cam 88B™</u>

16480-92A	<u>CYLINDERS, HEADS & VALVES - Twin Cam 88B™</u>
16525-99	<u>CYLINDERS, HEADS & VALVES - Twin Cam 88B™</u>
16526-99	<u>CYLINDERS, HEADS & VALVES - Twin Cam 88B™</u>
16574-99A	<u>CRANKCASE AND ENGINE OIL FILTER - Twin Cam 88B™</u> <u>TRANSMISSION HOUSING (1 OF 2)</u>
16583-00A	<u>ENGINE BALANCER - Twin Cam 88B™</u>
16589-99A	<u>CRANKCASE AND ENGINE OIL FILTER - Twin Cam 88B™</u>
16595-99A	<u>CYLINDERS, HEADS & VALVES - Twin Cam 88B™</u> <u>CRANKCASE AND ENGINE OIL FILTER - Twin Cam 88B™</u>
16715-83	<u>CYLINDERS, HEADS & VALVES - Twin Cam 88B™</u>
16716-99	<u>CYLINDERS, HEADS & VALVES - Twin Cam 88B™</u>
16717-99	<u>CYLINDERS, HEADS & VALVES - Twin Cam 88B™</u>
16719-99B	<u>ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™</u>
16722-99	<u>CYLINDERS, HEADS & VALVES - Twin Cam 88B™</u>
16724-99	<u>CYLINDERS, HEADS & VALVES - Twin Cam 88B™</u>
16775-99B	<u>CYLINDERS, HEADS & VALVES - Twin Cam 88B™</u>
16834-99A	<u>CYLINDERS, HEADS & VALVES - Twin Cam 88B™</u>
17025-03A	<u>ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™</u>
17045-99D	<u>ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™</u> <u>CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)</u>
17052-99C	<u>CYLINDERS, HEADS & VALVES - Twin Cam 88B™</u>
17053-99C	<u>CYLINDERS, HEADS & VALVES - Twin Cam 88B™</u>
17360-83A	<u>ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™</u>
17375-83A	<u>ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™</u>
17386-99A	<u>ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™</u>
17429-91	<u>ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™</u>
17572-99	<u>ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™</u>
17573-99A	<u>ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™</u>
17574-99A	<u>ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™</u>
17575-99	<u>ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™</u>
17576-99	<u>ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™</u>
17577-99	<u>ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™</u>
17594-99	<u>ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™</u>

17611-83	ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™
17618-99A	ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™
17620-99	ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™
1783C	BELTS, CHAINS & SPROCKETS
17907-01	ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™
17922-99	ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™
17923-99	ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™
17939-99	ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™
17945-36B	ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™
17947-36	ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™
17948-99	ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™
17964-99	ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™
17966-99	ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™
17968-99	ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™
18001-83B	CYLINDERS, HEADS & VALVES - Twin Cam 88B™
18011-86	CYLINDERS, HEADS & VALVES - Twin Cam 88B™
18020-83	CYLINDERS, HEADS & VALVES - Twin Cam 88B™
18074-83B	CYLINDERS, HEADS & VALVES - Twin Cam 88B™
18076-83	CYLINDERS, HEADS & VALVES - Twin Cam 88B™
18082-83A	CYLINDERS, HEADS & VALVES - Twin Cam 88B™
18101-83D	CYLINDERS, HEADS & VALVES - Twin Cam 88B™
18124-83	CYLINDERS, HEADS & VALVES - Twin Cam 88B™
18130-83D	CYLINDERS, HEADS & VALVES - Twin Cam 88B™
18131-83D	CYLINDERS, HEADS & VALVES - Twin Cam 88B™
18133-83B	CYLINDERS, HEADS & VALVES - Twin Cam 88B™
18134-83	CYLINDERS, HEADS & VALVES - Twin Cam 88B™
18201-83	CYLINDERS, HEADS & VALVES - Twin Cam 88B™
18202-83	CYLINDERS, HEADS & VALVES - Twin Cam 88B™
18219-83A	CYLINDERS, HEADS & VALVES - Twin Cam 88B™
18222-83A	CYLINDERS, HEADS & VALVES - Twin Cam 88B™
18229-83A	CYLINDERS, HEADS & VALVES - Twin Cam 88B™
18535-99	ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™

18538-99C	ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™
18635-99B	ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™
19223-03	COMPLETE ENGINE - Twin Cam 88B™
21930-99	PISTONS AND FLYWHEEL ASSEMBLY - Twin Cam 88B™
21931-99	PISTONS AND FLYWHEEL ASSEMBLY - Twin Cam 88B™
21933-99	PISTONS AND FLYWHEEL ASSEMBLY - Twin Cam 88B™
21936-99	PISTONS AND FLYWHEEL ASSEMBLY - Twin Cam 88B™
21937-99	PISTONS AND FLYWHEEL ASSEMBLY - Twin Cam 88B™
21938-99	PISTONS AND FLYWHEEL ASSEMBLY - Twin Cam 88B™
22097-99	PISTONS AND FLYWHEEL ASSEMBLY - Twin Cam 88B™
22132-99	PISTONS AND FLYWHEEL ASSEMBLY - Twin Cam 88B™
22307-99	CRANKCASE AND ENGINE OIL FILTER - Twin Cam 88B™
23912-00D	PISTONS AND FLYWHEEL ASSEMBLY - Twin Cam 88B™
24004-03B	CRANKCASE AND ENGINE OIL FILTER - Twin Cam 88B™
24039-03	CRANKCASE AND ENGINE OIL FILTER - Twin Cam 88B™
24316-99	PISTONS AND FLYWHEEL ASSEMBLY - Twin Cam 88B™
2447	FRONT FENDER - FLSTS/I HORN
2448	FRONT FENDER - FLSTS/I
2452	WINDSHIELD - FLSTC/I
24603-00	ENGINE MOUNTS
24605-07	CRANKCASE AND ENGINE OIL FILTER - Twin Cam 88B™
24678-03	CRANKCASE AND ENGINE OIL FILTER - Twin Cam 88B™
24679-03	CRANKCASE AND ENGINE OIL FILTER - Twin Cam 88B™
24709-03	CRANKCASE AND ENGINE OIL FILTER - Twin Cam 88B™
24983-00	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)
2501A	INSTRUMENTS (1 OF 2) INSTRUMENTS - FXSTD/I SWITCHES & CIRCUIT BREAKERS
25244-99A	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)
25267-99B	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)
2531	FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I
2534	SEATS

25344-99	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)
25364-01B	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)
25367-01B	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)
25369-01B	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)
2538	SEATS
25414-99	PRIMARY HOUSING
25416-99C	PRIMARY HOUSING
25533-99A	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)
25534-99	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)
25544-00	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)
25604-00A	TRANSMISSION HOUSING (1 OF 2)
25605-00A	TRANSMISSION HOUSING (1 OF 2)
25607-99	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)
25609-99	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)
25610-99	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)
2566	CLUTCH CONTROL
25700225	PRIMARY HOUSING
25716-99	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)
25717-00	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)
25719-00	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)
25721-00	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)
25722-00	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)
25723-00	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)
25725-00	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)
2579A	FRONT BRAKE CONTROL REAR BRAKE CONTROL
25938-00	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)
26035-99B	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (2 OF 2)
2604	FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I LICENSE PLATE BRACKETS
26210-99	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (2 OF 2)
26248-00	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (2 OF 2)

26255-00	<u>CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (2 OF 2)</u>
26352-95A	<u>CRANKCASE AND ENGINE OIL FILTER - Twin Cam 88B™</u>
26400-82B	<u>CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (2 OF 2)</u>
26432-76A	<u>CRANKCASE AND ENGINE OIL FILTER - Twin Cam 88B™</u>
2646	<u>REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I</u>
26464-99	<u>CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (2 OF 2)</u>
2647B	<u>AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I</u>
26500002	<u>ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™</u>
26561-99	<u>ENGINE SENSORS AND SWITCHES</u>
26567-99	<u>FUEL TANK</u> <u>FUEL TANK - FXSTD</u>
2692WB	<u>REAR TURN SIGNALS</u>
26995-86B	<u>CARBURETOR (1 OF 2)</u> <u>INDUCTION MODULE - FUEL INJECTED</u>
27002-89	<u>CARBURETOR (1 OF 2)</u>
27009-86A	<u>CARBURETOR (1 OF 2)</u> <u>INDUCTION MODULE - FUEL INJECTED</u>
27010-86A	<u>CARBURETOR (1 OF 2)</u> <u>INDUCTION MODULE - FUEL INJECTED</u>
27016-00	<u>FUEL TANK</u> <u>FUEL TANK - FUEL INJECTED</u> <u>FUEL TANK - FXSTD - FUEL INJECTED</u>
27042-84A	<u>CALIFORNIA EVAPORATIVE EMISSIONS</u>
27072-00	<u>FUEL TANK</u> <u>FUEL TANK - FUEL INJECTED</u> <u>FUEL TANK - FXSTD</u> <u>FUEL TANK - FXSTD - FUEL INJECTED</u>
27100-88	<u>CARBURETOR (1 OF 2)</u>
27101-88	<u>CARBURETOR (1 OF 2)</u>
27122-89	<u>CARBURETOR (1 OF 2)</u>
27123-89A	<u>CARBURETOR (1 OF 2)</u>
27124-89	<u>CARBURETOR (1 OF 2)</u>
27125-89	<u>CARBURETOR (1 OF 2)</u>
27126-89	<u>CARBURETOR (1 OF 2)</u>
27127-89	<u>CARBURETOR (1 OF 2)</u>
27128-89	<u>CARBURETOR (1 OF 2)</u>

27130-90	CARBURETOR (1 OF 2)
27136-90A	CARBURETOR (1 OF 2)
27137-81	CARBURETOR (1 OF 2)
27138-90	CALIFORNIA EVAPORATIVE EMISSIONS
27146-89	CARBURETOR (1 OF 2)
27147-89	CARBURETOR (1 OF 2)
27148-89	CARBURETOR (1 OF 2)
27156-89	CARBURETOR (1 OF 2)
27162-89	CARBURETOR (1 OF 2)
27170-89	CARBURETOR (1 OF 2)
2720	ALTERNATOR & REGULATOR
27231-98	CARBURETOR (1 OF 2)
2723A	FRONT FENDER - FXSTS/I
27243-95	CARBURETOR (1 OF 2)
27249-96	FUEL TANK - FUEL INJECTED FUEL TANK - FXSTD FUEL TANK - FXSTD - FUEL INJECTED
27260-00	CARBURETOR (1 OF 2)
27261-96	CARBURETOR (1 OF 2)
27262-96	CARBURETOR (1 OF 2)
27263-96	CARBURETOR (1 OF 2)
27267-00	CARBURETOR (1 OF 2)
27270-95	INDUCTION MODULE - FUEL INJECTED
27293-00	CALIFORNIA EVAPORATIVE EMISSIONS
27311-76	CARBURETOR (1 OF 2)
27315-88A	CARBURETOR (1 OF 2)
27317-88	CARBURETOR (1 OF 2)
27328-00	CALIFORNIA EVAPORATIVE EMISSIONS
27339-90	CARBURETOR (2 OF 2)
27360-76	CARBURETOR (2 OF 2)
27361-76A	CARBURETOR (2 OF 2)
27362-76	CARBURETOR (2 OF 2)
27371-76A	CARBURETOR (2 OF 2)

2738	<u>FRONT FENDER - FXSTS/I</u>
27405-00	<u>CARBURETOR (2 OF 2)</u>
27408-01	<u>FUEL PUMP - FUEL INJECTED</u>
27414-99C	<u>CARBURETOR (2 OF 2)</u>
27421-99C	<u>CARBURETOR (2 OF 2)</u>
27428-00B	<u>CARBURETOR (2 OF 2)</u>
27429-00B	<u>CARBURETOR (2 OF 2)</u>
27560-00	<u>FUEL TANK - FXSTD</u>
27575-88A	<u>CARBURETOR (2 OF 2)</u>
27576-92	<u>CARBURETOR (2 OF 2)</u>
27577-92	<u>CARBURETOR (2 OF 2)</u>
27579-88A	<u>CARBURETOR (2 OF 2)</u>
27580-88	<u>CARBURETOR (2 OF 2)</u>
27581-88	<u>CARBURETOR (2 OF 2)</u>
27582-88	<u>CARBURETOR (2 OF 2)</u>
27583-88	<u>CARBURETOR (2 OF 2)</u>
27585-88	<u>CARBURETOR (2 OF 2)</u>
27586-88	<u>CARBURETOR (2 OF 2)</u>
27587-88	<u>CARBURETOR (2 OF 2)</u>
27600-01A	<u>INDUCTION MODULE - FUEL INJECTED</u>
27603-01	<u>INDUCTION MODULE - FUEL INJECTED</u>
27604-01A	<u>INDUCTION MODULE - FUEL INJECTED</u>
27608-01A	<u>INDUCTION MODULE - FUEL INJECTED</u>
27609-01B	<u>INDUCTION MODULE - FUEL INJECTED</u>
27612-01	<u>INDUCTION MODULE - FUEL INJECTED</u>
27613-99	<u>CARBURETOR (2 OF 2)</u>
27628-01A	<u>INDUCTION MODULE - FUEL INJECTED</u>
27629-01A	<u>INDUCTION MODULE - FUEL INJECTED</u>
27630-01	<u>INDUCTION MODULE - FUEL INJECTED</u>
27635-01A	<u>INDUCTION MODULE - FUEL INJECTED</u>
27667-00A	<u>WIRING HARNESS, MAIN - CARBURETED (1 OF 2)</u> <u>WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)</u>

2773	LICENSE PLATE BRACKETS LICENSE PLATE BRACKETS
27886-78A	CARBURETOR (2 OF 2)
28025-03	CARBURETOR (2 OF 2)
2823	FRONT FORK - FXST/I & FXSTB/I
28828-00	FUEL TANK - FUEL INJECTED FUEL TANK - FXSTD FUEL TANK - FXSTD - FUEL INJECTED
2882W	FRAME & JIFFY STAND
28838-00	FUEL TANK FUEL TANK - FUEL INJECTED FUEL TANK - FXSTD FUEL TANK - FXSTD - FUEL INJECTED
28839-00	CALIFORNIA EVAPORATIVE EMISSIONS
2887WA	PRIMARY HOUSING
28884-00	CALIFORNIA EVAPORATIVE EMISSIONS
29062-95B	AIR CLEANER & ENRICHENER - CARBURETED MODELS
29075-99	AIR CLEANER & ENRICHENER - CARBURETED MODELS
29089-99	AIR CLEANER & ENRICHENER - CARBURETED MODELS
29094-01	AIR CLEANER & ENRICHENER - CARBURETED MODELS AIR CLEANER - FUEL INJECTED MODELS
29121-01	AIR CLEANER & ENRICHENER - CARBURETED MODELS AIR CLEANER - FUEL INJECTED MODELS
29126-90B	AIR CLEANER & ENRICHENER - CARBURETED MODELS
29127-95B	AIR CLEANER & ENRICHENER - CARBURETED MODELS AIR CLEANER - FUEL INJECTED MODELS
29161-00	AIR CLEANER & ENRICHENER - CARBURETED MODELS
29169-00	AIR CLEANER & ENRICHENER - CARBURETED MODELS
2917	HEADLAMP (1 OF 2) REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I
29181-00	AIR CLEANER & ENRICHENER - CARBURETED MODELS
2921	WINDSHIELD - FLSTC/I
29229-88D	AIR CLEANER & ENRICHENER - CARBURETED MODELS
29256-00	AIR CLEANER & ENRICHENER - CARBURETED MODELS
29269-83A	AIR CLEANER & ENRICHENER - CARBURETED MODELS AIR CLEANER - FUEL INJECTED MODELS
2927	SEATS - FLSTS/I

29312-95	CALIFORNIA EVAPORATIVE EMISSIONS
29313-95	AIR CLEANER & ENRICHENER - CARBURETED MODELS AIR CLEANER - FUEL INJECTED MODELS
29338-99	AIR CLEANER & ENRICHENER - CARBURETED MODELS
29342-99	AIR CLEANER & ENRICHENER - CARBURETED MODELS
29366-00	AIR CLEANER & ENRICHENER - CARBURETED MODELS
29404-01A	AIR CLEANER & ENRICHENER - CARBURETED MODELS AIR CLEANER - FUEL INJECTED MODELS
2941	ALTERNATOR & REGULATOR
29449-98B	AIR CLEANER & ENRICHENER - CARBURETED MODELS
29456-99	AIR CLEANER & ENRICHENER - CARBURETED MODELS
29461-99	AIR CLEANER & ENRICHENER - CARBURETED MODELS AIR CLEANER - FUEL INJECTED MODELS
29465-99	AIR CLEANER & ENRICHENER - CARBURETED MODELS AIR CLEANER - FUEL INJECTED MODELS
29474-99A	AIR CLEANER & ENRICHENER - CARBURETED MODELS AIR CLEANER - FUEL INJECTED MODELS
29476-99	AIR CLEANER & ENRICHENER - CARBURETED MODELS AIR CLEANER - FUEL INJECTED MODELS
29482-00	AIR CLEANER & ENRICHENER - CARBURETED MODELS
2955	HANDLEBAR SWITCHES
29581-01B	AIR CLEANER & ENRICHENER - CARBURETED MODELS AIR CLEANER - FUEL INJECTED MODELS
29582-01B	AIR CLEANER & ENRICHENER - CARBURETED MODELS AIR CLEANER - FUEL INJECTED MODELS
29583-01A	AIR CLEANER & ENRICHENER - CARBURETED MODELS AIR CLEANER - FUEL INJECTED MODELS
29584-01	AIR CLEANER & ENRICHENER - CARBURETED MODELS AIR CLEANER - FUEL INJECTED MODELS
29658-01	AIR CLEANER - FUEL INJECTED MODELS
29660-01	AIR CLEANER - FUEL INJECTED MODELS
29662-01	AIR CLEANER - FUEL INJECTED MODELS
29664-01	AIR CLEANER - FUEL INJECTED MODELS
29666-01	AIR CLEANER - FUEL INJECTED MODELS
29668-01	AIR CLEANER - FUEL INJECTED MODELS
29788-03	AIR CLEANER & ENRICHENER - CARBURETED MODELS AIR CLEANER - FUEL INJECTED MODELS

2980	CLUTCH
29808-03	AIR CLEANER & ENRICHENER - CARBURETED MODELS AIR CLEANER - FUEL INJECTED MODELS
29809-03	AIR CLEANER & ENRICHENER - CARBURETED MODELS
29811-03	AIR CLEANER & ENRICHENER - CARBURETED MODELS AIR CLEANER - FUEL INJECTED MODELS
29923-01A	ALTERNATOR & REGULATOR
29981-95	ALTERNATOR & REGULATOR
30017-01B	ALTERNATOR & REGULATOR
3008	INSTRUMENTS - FXSTD/I
3017	FUEL TANK FUEL TANK - FUEL INJECTED
30202-01	ELECTRONIC CONTROL MODULE & COIL - FUEL INJECTED
3022A	TAIL LAMP (1 OF 2)
31342-94	STARTER MOTOR
31430-94	STARTER MOTOR
31510-90	STARTER MOTOR
31511-01B	WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
31515-90	STARTER MOTOR
31516-94A	STARTER MOTOR
31518-90	STARTER MOTOR
31519-90	STARTER MOTOR
31522-00C	WIRING HARNESS, MAIN - CARBURETED (1 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2) SWITCHES & CIRCUIT BREAKERS
31527-90	STARTER MOTOR
31530-90	STARTER MOTOR
31535-91	STARTER MOTOR
31538-98	STARTER MOTOR
31548-90	STARTER MOTOR
31553-94B	STARTER MOTOR
31604-91A	STARTER MOTOR
31606-00	IGNITION MODULE & COIL - CARBURETED
31612-09	STARTER MOTOR

31655-99	IGNITION MODULE & COIL - CARBURETED
31662-90	STARTER MOTOR
31664-94	STARTER MOTOR
31682-00	IGNITION MODULE & COIL - CARBURETED
31688-90	STARTER MOTOR
31689-90	STARTER MOTOR
31692-90	STARTER MOTOR
31695-90	STARTER MOTOR
31702-98	STARTER MOTOR
31703-98	STARTER MOTOR
31725-00	IGNITION MODULE & COIL - CARBURETED
31741-00	FRAME & JIFFY STAND
31742-00	IGNITION MODULE & COIL - CARBURETED ELECTRONIC CONTROL MODULE & COIL - FUEL INJECTED
31743-01	ELECTRONIC CONTROL MODULE & COIL - FUEL INJECTED
31772-01	ELECTRONIC CONTROL MODULE & COIL - FUEL INJECTED
31773-01	ELECTRONIC CONTROL MODULE & COIL - FUEL INJECTED
31981-99C	IGNITION MODULE & COIL - CARBURETED ELECTRONIC CONTROL MODULE & COIL - FUEL INJECTED
31983-00C	IGNITION MODULE & COIL - CARBURETED ELECTRONIC CONTROL MODULE & COIL - FUEL INJECTED
3214	HEADLAMP (1 OF 2)
3233	FRAME & JIFFY STAND
32362-04	IGNITION MODULE & COIL - CARBURETED ELECTRONIC CONTROL MODULE & COIL - FUEL INJECTED
32416-10	INDUCTION MODULE - FUEL INJECTED ENGINE SENSORS AND SWITCHES
32446-99	ENGINE SENSORS AND SWITCHES
3249	TRANSMISSION HOUSING (1 OF 2) TRANSMISSION HOUSING (1 OF 2)
32534-11	ELECTRONIC CONTROL MODULE & COIL - FUEL INJECTED
32536-03	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (2 OF 2)
32543-99	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (2 OF 2)
32568-00C	IGNITION MODULE & COIL - CARBURETED
32617-00Y	HORN

3268	FRONT FENDER - FLSTS/I
32707-01C	ENGINE SENSORS AND SWITCHES
32727-00	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (2 OF 2)
3275	CARBURETOR (1 OF 2) INDUCTION MODULE - FUEL INJECTED GEAR SHIFTER
3290	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)
3300	TRANSMISSION HOUSING (1 OF 2)
33005-03	TRANSMISSION HOUSING (1 OF 2)
33006-03	TRANSMISSION HOUSING (1 OF 2)
33007-03	TRANSMISSION HOUSING (1 OF 2)
33048-72	FOOTRESTS & FOOTBOARDS FOOTRESTS & FOOTBOARDS
33051-03	TRANSMISSION HOUSING (1 OF 2)
33052-03	TRANSMISSION HOUSING (1 OF 2)
33126-94	STARTER MOTOR
33127-94	STARTER MOTOR
33189-63	FOOTRESTS & FOOTBOARDS FOOTRESTS & FOOTBOARDS
33301-00A	GEAR SHIFTER
33304-00	GEAR SHIFTER
33318-85	PRIMARY HOUSING
33344-94	TRANSMISSION HOUSING (1 OF 2)
33364-00A	GEAR SHIFTER
33374-00	GEAR SHIFTER
33375-00A	GEAR SHIFTER
33376-00	GEAR SHIFTER
33383-02	GEAR SHIFTER
33445-94A	PRIMARY HOUSING
33446-94A	PRIMARY HOUSING
33449-94	STARTER MOTOR
33525-00	OIL TANK & LINES
33531-00	OIL TANK & LINES
33630-00A	FRAME & JIFFY STAND

	FOOTRESTS & FOOTBOARDS
33660-90B	GEAR SHIFTER
33668-90C	GEAR SHIFTER
33683-00	FRAME & JIFFY STAND FOOTRESTS & FOOTBOARDS
337	TRANSMISSION HOUSING (1 OF 2)
33708-94	GEAR SHIFTER FOOTRESTS & FOOTBOARDS
33714-90B	FRONT FENDER - FXSTS/I
33719-79B	GEAR SHIFTER
33720-93	FRONT FENDER - FXSTS/I
33849-97	GEAR SHIFTER
33895-82D	GEAR SHIFTER
33904-00A	TRANSMISSION HOUSING (1 OF 2) SWITCHES & CIRCUIT BREAKERS
3403	STARTER MOTOR
34064-00C	GEAR SHIFTER
34088-87A	GEAR SHIFTER
34091-85A	TRANSMISSION GEARS
34191-79E	GEAR SHIFTER
34193-79E	GEAR SHIFTER
34195-79E	GEAR SHIFTER
3440	LICENSE PLATE BRACKETS
34541-00	TRANSMISSION HOUSING (1 OF 2)
34544-00	TRANSMISSION HOUSING (1 OF 2)
34564-90B	GEAR SHIFTER
34611-65A	GEAR SHIFTER GEAR SHIFTER
3471	HANDLEBAR
34732-00A	TRANSMISSION HOUSING (2 OF 2)
34774-00A	TRANSMISSION HOUSING (2 OF 2)
3485A	FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I
34904-86D	TRANSMISSION HOUSING (2 OF 2)
34920-86A	TRANSMISSION HOUSING (2 OF 2)

3494A	HANDLEBAR
34972-02B	GEAR SHIFTER
34977-02A	GEAR SHIFTER
34978-00A	GEAR SHIFTER
34979-00	GEAR SHIFTER
35025-79B	TRANSMISSION GEARS
35026-94	TRANSMISSION GEARS
35027-94	TRANSMISSION GEARS
35028-94	TRANSMISSION GEARS
35029-94	TRANSMISSION GEARS
35042-91	TRANSMISSION GEARS
35051-89A	TRANSMISSION GEARS
35060-00	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (2 OF 2)
35064-79	TRANSMISSION GEARS
35076-79	TRANSMISSION HOUSING (2 OF 2)
35078-79	TRANSMISSION HOUSING (2 OF 2)
35087-99A	TRANSMISSION HOUSING (2 OF 2)
3509	HEADLAMP (1 OF 2)
35114-02	CRANKCASE AND ENGINE OIL FILTER - Twin Cam 88B™
3514	HEADLAMP (1 OF 2) HEADLAMP - FLSTC/I & FLSTF/I AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I
35211-91B	BELTS, CHAINS & SPROCKETS
35251-93C	TRANSMISSION HOUSING (2 OF 2)
35252-93B	TRANSMISSION HOUSING (2 OF 2)
3533	FRONT FORK - FXSTS/I FRONT FORK - FLSTS/I
3538	FRONT BRAKE CONTROL FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2) FRONT FORK - FXSTS/I FRONT FORK - FLSTS/I AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I
3559	STARTER MOTOR
3560WA	FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I
3561WC	FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I

3562	FRONT BRAKE CALIPER - SPRINGER MODELS
35622-79C	TRANSMISSION GEARS
35625-94	TRANSMISSION GEARS
35626-94	TRANSMISSION GEARS
35629-79	TRANSMISSION GEARS
3563	HORN
35632-79	TRANSMISSION GEARS
35653-98A	TRANSMISSION HOUSING (2 OF 2)
3574	REAR FORK AND SHOCK ABSORBERS SEATS SEATS - FLSTS/I SWITCHES & CIRCUIT BREAKERS
3588	REAR BRAKE CONTROL
3589	WINDSHIELD - FLSTC/I
3594	TRANSMISSION HOUSING (1 OF 2) BELTS, CHAINS & SPROCKETS FRONT BRAKE CONTROL
3601	ELECTRONIC CONTROL MODULE & COIL - FUEL INJECTED
3602A	IGNITION MODULE & COIL - CARBURETED ELECTRONIC CONTROL MODULE & COIL - FUEL INJECTED
3633	SEATS - FLSTS/I
3655A	REAR BRAKE CONTROL FRONT WHEEL (1 OF 2) FRONT WHEEL (1 OF 2)
3658	INSTRUMENTS - FXSTD/I HANDLEBAR SWITCHES
36801-87C	TRANSMISSION HOUSING (2 OF 2)
3692A	ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™
3693A	ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™
3699D	TRANSMISSION HOUSING (1 OF 2)
37069-90A	CLUTCH
37075-87	TRANSMISSION HOUSING (2 OF 2)
37088-90	CLUTCH
37090-98A	CLUTCH
37105-99	TRANSMISSION HOUSING (2 OF 2)
37189-99	TRANSMISSION HOUSING (2 OF 2)

37232-00	TRANSMISSION HOUSING (2 OF 2)
3728	EXHAUST SYSTEM - FXST/I, FLSTC/I, FXSTS/I & FXSTB/I EXHAUST SYSTEM - FLSTF/I & FXSTD/I EXHAUST SYSTEM - FLSTS/I
37312-75	CLUTCH
37313-80	CLUTCH
3736A	ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™
3737A	BELTS, CHAINS & SPROCKETS REAR WHEEL
3746A	ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™
37496-90	CLUTCH
375	TRANSMISSION HOUSING (1 OF 2) PRIMARY HOUSING
37550-98	CLUTCH
3767B	SEATS
37707-98A	CLUTCH
3775	HEADLAMP (1 OF 2) EXHAUST SYSTEM - FLSTS/I
37802-98B	CLUTCH
3784	GEAR SHIFTER
37871-98A	CLUTCH
37872-00	CLUTCH
37883-98	CLUTCH
37884-98	CLUTCH
37903-90	CLUTCH
37904-90	CLUTCH
37905-00	CLUTCH
37906-90	CLUTCH
37909-90	CLUTCH
37912-00	CLUTCH
37913-98	CLUTCH
37932-98	CLUTCH
38608-96	CLUTCH CONTROL
38630-88	CLUTCH CONTROL

38653-01	THROTTLE CONTROL
38664-00	CLUTCH CONTROL
38665-00	CLUTCH CONTROL
38666-00	CLUTCH CONTROL
38712-68	ENGINE SENSORS AND SWITCHES
38723-99	ENGINE SENSORS AND SWITCHES
3892	FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2) SWITCHES & CIRCUIT BREAKERS
3909	GEAR SHIFTER
3953W	FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2)
3987	REAR BELT GUARD REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I EXHAUST SYSTEM - FLSTF/I & FXSTD/I REAR TURN SIGNALS
39954-99A	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (2 OF 2)
39964-99A	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (2 OF 2)
39965-99	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (2 OF 2)
39976-01	BELTS, CHAINS & SPROCKETS
39990-01	BELTS, CHAINS & SPROCKETS
39998-65A	BELTS, CHAINS & SPROCKETS
40007-36B	BELTS, CHAINS & SPROCKETS
4017	GEAR SHIFTER EXHAUST SYSTEM - FLSTS/I
40250-94C	BELTS, CHAINS & SPROCKETS
40251-92A	BELTS, CHAINS & SPROCKETS
40266-85	BELTS, CHAINS & SPROCKETS
40289-00	BELTS, CHAINS & SPROCKETS REAR WHEEL
40295-00	BELTS, CHAINS & SPROCKETS REAR WHEEL
40299-83A	BELTS, CHAINS & SPROCKETS
4029A	FRONT FORK - FLSTS/I
40303-00	BELTS, CHAINS & SPROCKETS REAR WHEEL
40307-00B	BELTS, CHAINS & SPROCKETS
40308-94	BELTS, CHAINS & SPROCKETS

40323-00	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (2 OF 2)
40384-91	BELTS, CHAINS & SPROCKETS
40392-91	BELTS, CHAINS & SPROCKETS
40700-05A	REAR WHEEL
4074A	REAR FORK AND SHOCK ABSORBERS
4091	FRONT BRAKE CONTROL
40910-00A	FRONT WHEEL (1 OF 2)
40918-87	REAR BRAKE CONTROL
40920-87	REAR BRAKE CONTROL
40922-87A	REAR BRAKE CONTROL
40964-00	REAR WHEEL
40976-00	REAR WHEEL
41038-00	FRONT WHEEL (1 OF 2)
41040-88B	FORK ROCKERS & CALIPER MOUNTING - FXSTS/I
41042-93	FRONT FENDER - FXSTS/I
41047-97	FORK ROCKERS & CALIPER MOUNTING - FLSTS/I
41074-00	REAR WHEEL
41092-03	REAR WHEEL
41095-03	REAR WHEEL
41109-88A	FRONT WHEEL (1 OF 2)
41110-79A	REAR WHEEL
41116-97	FRONT WHEEL (1 OF 2)
41123-79	FRONT WHEEL (1 OF 2) REAR WHEEL
4132	CLUTCH CONTROL FRONT BRAKE CONTROL
41584-86A	FRONT WHEEL (1 OF 2)
41595-00B	REAR WHEEL
4163	FORK ROCKERS & CALIPER MOUNTING - FLSTS/I FRAME & JIFFY STAND FOOTRESTS & FOOTBOARDS
4164	FORK ROCKERS & CALIPER MOUNTING - FLSTS/I
4165	FORK ROCKERS & CALIPER MOUNTING - FLSTS/I
4166	TAIL LAMP (1 OF 2)

4168	<u>TRANSMISSION HOUSING (1 OF 2)</u>
41713-86	<u>FRONT BRAKE CONTROL</u> <u>FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2)</u>
41731-01	<u>FRONT BRAKE CONTROL</u> <u>REAR BRAKE CONTROL</u>
41731-88A	<u>FRONT BRAKE CONTROL</u>
41733-88	<u>FRONT BRAKE CONTROL</u>
41739-84A	<u>FRONT BRAKE CONTROL</u>
41747-82A	<u>FRONT BRAKE CONTROL</u> <u>REAR BRAKE CONTROL</u>
4175	<u>CYLINDERS, HEADS & VALVES - Twin Cam 88B™</u>
41755-99D	<u>REAR BRAKE CONTROL</u>
41797-00	<u>REAR WHEEL</u>
4180	<u>SEATS</u> <u>REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I</u>
4190	<u>EXHAUST SYSTEM - FLSTF/I & FXSTD/I</u>
4194	<u>INSTRUMENTS - FXSTD/I</u>
4195	<u>CALIFORNIA EVAPORATIVE EMISSIONS</u>
41957-97A	<u>REAR BRAKE CONTROL</u>
4197	<u>FUEL TANK</u> <u>FUEL TANK - FUEL INJECTED</u> <u>FUEL TANK - FXSTD</u> <u>FUEL TANK - FXSTD - FUEL INJECTED</u>
4206	<u>OIL TANK & LINES</u>
4213	<u>FRONT FORK - FXSTD/I</u>
4216	<u>OIL TANK & LINES</u>
4217	<u>OIL TANK & LINES</u>
42303-00A	<u>FRONT BRAKE CONTROL</u>
42305-00	<u>FRONT BRAKE CONTROL</u>
42317-06A	<u>FRONT BRAKE CONTROL</u>
4232	<u>REAR TURN SIGNALS</u>
42382-87C	<u>REAR BRAKE CONTROL</u>
42416-83	<u>REAR BRAKE CONTROL</u>
42431-00	<u>FOOTRESTS & FOOTBOARDS</u>
42431-11	<u>FOOTRESTS & FOOTBOARDS</u>

42454-99A	REAR BRAKE CONTROL
42455-99	REAR BRAKE CONTROL
42460-80B	REAR BRAKE CONTROL
42507-00B	FOOTRESTS & FOOTBOARDS
42515-00A	REAR BRAKE CONTROL
42532-82	REAR BRAKE CONTROL
42533-91A	TRANSMISSION HOUSING (2 OF 2)
42568-05A	REAR BRAKE CONTROL
42597-00A	REAR BRAKE CONTROL
4266A	REAR FENDER & SUPPORTS - FXST/I, FXSTS/I & FXSTB/I REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I
4267	REAR FENDER & SUPPORTS - FXST/I, FXSTS/I & FXSTB/I REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I
43005-05A	FRONT WHEEL (1 OF 2)
43016-00B	FRONT WHEEL (1 OF 2)
43067-97	FRONT WHEEL (1 OF 2)
43085-97	FRONT WHEEL (1 OF 2) REAR WHEEL
4311	FRAME & JIFFY STAND
4312C	BATTERY
4313	TRANSMISSION HOUSING (1 OF 2)
4314	FOOTRESTS & FOOTBOARDS
4315	FOOTRESTS & FOOTBOARDS
43155-00	FRONT WHEEL (1 OF 2)
43157-83A	FRONT WHEEL (1 OF 2) REAR WHEEL
43239-05	FRONT WHEEL (1 OF 2)
43241-05	FRONT WHEEL (1 OF 2) REAR WHEEL
4326A	STARTER MOTOR
43346-83B	FRONT WHEEL (1 OF 2)
43354-00	FRONT WHEEL (1 OF 2)
43360-00	FRONT WHEEL (1 OF 2)

4343	WINDSHIELD - FLSTC/I
43466-97	FRONT FENDER - FLSTS/I
43467-97	FRONT FENDER - FLSTS/I
4350A	FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2) FRONT FORK - FXSTS/I FRONT FORK - FLSTS/I
4355B	FOOTRESTS & FOOTBOARDS FOOTRESTS & FOOTBOARDS
43567-92	REAR WHEEL
4358A	STARTER MOTOR
43608-00	FRONT WHEEL (1 OF 2) REAR WHEEL
43614-00	FRONT WHEEL (1 OF 2)
43617-00A	FRONT WHEEL (1 OF 2)
43623-00	FRONT WHEEL (1 OF 2)
43624-00	FRONT WHEEL (1 OF 2)
43654-00A	REAR WHEEL
43662-80B	FRONT WHEEL (1 OF 2)
43671-05A	FRONT WHEEL (1 OF 2)
43672-00	FRONT WHEEL (1 OF 2)
43676-05A	FRONT WHEEL (1 OF 2)
43683-00A	FRONT WHEEL (1 OF 2)
43700-05A	FRONT WHEEL (1 OF 2)
43701-00	FRONT WHEEL (1 OF 2)
43727-00	BELTS, CHAINS & SPROCKETS REAR WHEEL
4383	REAR BELT GUARD
4391	FRONT TURN SIGNALS
4400	ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™
44016-00D	REAR BRAKE CALIPER
44020-83	FRONT BRAKE CALIPER - SPRINGER MODELS
44021-83	FRONT BRAKE CALIPER - SPRINGER MODELS
44022-83	FRONT BRAKE CALIPER - SPRINGER MODELS
44029-00	FRONT WHEEL (1 OF 2) FORK ROCKERS & CALIPER MOUNTING - FXSTS/I

44030-88A	FORK ROCKERS & CALIPER MOUNTING - FXSTS/I
44031-97	FORK ROCKERS & CALIPER MOUNTING - FLSTS/I
44044-00	FORK ROCKERS & CALIPER MOUNTING - FXSTS/I
44046-00D	FRONT BRAKE CALIPER
44047-83	FRONT BRAKE CALIPER - SPRINGER MODELS
44048-83	FRONT BRAKE CALIPER - SPRINGER MODELS FRONT BRAKE CALIPER REAR BRAKE CALIPER
44053-83B	FRONT BRAKE CALIPER - SPRINGER MODELS
44054-83	FRONT BRAKE CALIPER - SPRINGER MODELS
44059-83	FRONT BRAKE CALIPER - SPRINGER MODELS
44061-83	FRONT BRAKE CALIPER - SPRINGER MODELS
44062-83	FRONT BRAKE CALIPER - SPRINGER MODELS
44063-83C	FRONT BRAKE CALIPER - SPRINGER MODELS
44074-88B	FRONT BRAKE CALIPER - SPRINGER MODELS
44077-88F	FRONT BRAKE CALIPER - SPRINGER MODELS
44079-97C	FRONT BRAKE CALIPER - SPRINGER MODELS
44082-00D	FRONT BRAKE CALIPER REAR BRAKE CALIPER
44086-97	FORK ROCKERS & CALIPER MOUNTING - FLSTS/I
44097-97	FRONT BRAKE CALIPER - SPRINGER MODELS
4411	HEADLAMP - FLSTC/I & FLSTF/I
44147-87A	FRONT BRAKE CALIPER REAR BRAKE CALIPER
44156-00	FRONT WHEEL (2 OF 2)
44160-00	FRONT BRAKE CALIPER
44163-00	FRONT BRAKE CALIPER
44177-00	FRONT BRAKE CALIPER REAR BRAKE CALIPER
44190-88A	FRONT BRAKE CALIPER - SPRINGER MODELS
44197-77	FRONT BRAKE CALIPER - SPRINGER MODELS
44215-97A	FRONT BRAKE CALIPER - SPRINGER MODELS
44235-97	FORK ROCKERS & CALIPER MOUNTING - FLSTS/I
44236-97	FORK ROCKERS & CALIPER MOUNTING - FLSTS/I

44260-00	FRONT WHEEL (2 OF 2)
44313-01	FRONT BRAKE CALIPER REAR BRAKE CALIPER
44314-00	FRONT BRAKE CALIPER REAR BRAKE CALIPER
44315-00	FRONT BRAKE CALIPER REAR BRAKE CALIPER
44337-00B	FRONT BRAKE CALIPER REAR BRAKE CALIPER
44338-00	FRONT BRAKE CALIPER REAR BRAKE CALIPER
44351-00	REAR BRAKE CALIPER
44441-00D	REAR BRAKE CALIPER
44447-00	FRONT WHEEL (2 OF 2)
4453	FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2)
4482	WINDSHIELD - FLSTC/I
45006-96C	FRONT BRAKE CONTROL
45015-96	CLUTCH CONTROL
45016-96	FRONT BRAKE CONTROL
45019-96D	FRONT BRAKE CONTROL
45021-86	CLUTCH CONTROL
45030-03C	FRONT BRAKE CONTROL
45032-82	CLUTCH CONTROL FRONT BRAKE CONTROL
45036-88	CLUTCH CONTROL
45042-96	REAR BRAKE CONTROL
45044-96A	CLUTCH CONTROL FRONT BRAKE CONTROL
45066-00	FRONT FORK - FXSTD/I
45091-97	FRONT BRAKE CONTROL
45108-04	REAR BRAKE CONTROL
45110-96	FRONT BRAKE CONTROL
45119-00	FRONT BRAKE CONTROL
45119-00B	FRONT BRAKE CONTROL
45133-04B	REAR BRAKE CONTROL

45156-00	<u>REAR BRAKE CONTROL</u>
45199-99	<u>FRONT BRAKE CONTROL</u>
45199-99B	<u>FRONT BRAKE CONTROL</u>
45209-97B	<u>FRONT BRAKE CONTROL</u>
45250-98	<u>FRONT BRAKE CONTROL</u>
45250-98B	<u>FRONT BRAKE CONTROL</u>
45323-01	<u>FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I</u> <u>FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I</u>
45359-00	<u>ENGINE BALANCER - Twin Cam 88B™</u>
45405-75A	<u>FRONT FORK - FXST/I & FXSTB/I</u> <u>FRONT FORK - FXSTD/I</u> <u>FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2)</u>
45417-00	<u>FRONT FORK - FXST/I & FXSTB/I</u> <u>FRONT FORK - FXSTD/I</u>
45418-00	<u>FRONT FORK - FXST/I & FXSTB/I</u>
45419-80	<u>FRONT FORK - FXST/I & FXSTB/I</u> <u>FRONT FORK - FXSTD/I</u> <u>FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2)</u>
45420-80	<u>FRONT FORK - FXST/I & FXSTB/I</u>
45423-92	<u>CLUTCH CONTROL</u>
45423-96	<u>FRONT BRAKE CONTROL</u>
45456-86B	<u>FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2)</u>
45468-00	<u>OIL TANK & LINES</u>
45473-88	<u>FRONT FORK - FXSTS/I</u>
45475-00A	<u>FRONT FORK - FXSTD/I</u>
45491-97	<u>FRONT FORK - FLSTS/I</u>
45544-88	<u>HANDLEBAR</u>
45550-03	<u>REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I</u>
45567-88	<u>FRONT FORK - FXSTS/I</u> <u>FRONT FORK - FLSTS/I</u>
45569-00	<u>FRONT FORK - FXSTS/I</u>
45605-00A	<u>FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2)</u>
45607-93	<u>FRONT FORK - FXSTS/I</u>
45611-86	<u>FRONT FORK - FXST/I & FXSTB/I</u> <u>FRONT FORK - FXSTD/I</u> <u>FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2)</u> <u>FRONT FORK - FXSTS/I</u>

45619-97	<u>FRONT FORK - FLSTS/I</u>
45628-92	<u>FRONT FORK - FXSTS/I</u> <u>FRONT FORK - FLSTS/I</u>
45629-97	<u>FORK ROCKERS & CALIPER MOUNTING - FLSTS/I</u>
45631-97	<u>FORK ROCKERS & CALIPER MOUNTING - FLSTS/I</u>
45633-00	<u>FRONT FORK - FLSTS/I</u>
45640-00A	<u>FRONT FORK - FXST/I & FXSTB/I</u>
45648-85A	<u>FRONT FORK - FXST/I & FXSTB/I</u>
45649-91	<u>FORK ROCKERS & CALIPER MOUNTING - FXSTS/I</u>
45651-91	<u>FORK ROCKERS & CALIPER MOUNTING - FXSTS/I</u>
45655-88	<u>FORK ROCKERS & CALIPER MOUNTING - FXSTS/I</u> <u>FORK ROCKERS & CALIPER MOUNTING - FLSTS/I</u>
45656-97	<u>FORK ROCKERS & CALIPER MOUNTING - FLSTS/I</u>
45659-88	<u>FORK ROCKERS & CALIPER MOUNTING - FXSTS/I</u> <u>FORK ROCKERS & CALIPER MOUNTING - FLSTS/I</u>
45660-88A	<u>FORK ROCKERS & CALIPER MOUNTING - FXSTS/I</u> <u>FORK ROCKERS & CALIPER MOUNTING - FLSTS/I</u>
45662-88	<u>FORK ROCKERS & CALIPER MOUNTING - FXSTS/I</u> <u>FORK ROCKERS & CALIPER MOUNTING - FLSTS/I</u>
45663-88A	<u>FORK ROCKERS & CALIPER MOUNTING - FXSTS/I</u> <u>FORK ROCKERS & CALIPER MOUNTING - FLSTS/I</u>
45670-80A	<u>FRONT FORK - FXST/I & FXSTB/I</u> <u>FRONT FORK - FXSTD/I</u> <u>FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2)</u>
45672-80B	<u>FRONT FORK - FXST/I & FXSTB/I</u>
45680-90	<u>FRAME & JIFFY STAND</u>
45685-93	<u>FRONT FORK - FXST/I & FXSTB/I</u> <u>HEADLAMP (1 OF 2)</u>
45717-63	<u>FRONT FORK - FXST/I & FXSTB/I</u> <u>FRONT FORK - FXSTD/I</u>
45718-60	<u>FRONT FORK - FXST/I & FXSTB/I</u> <u>FRONT FORK - FXSTD/I</u>
45733-48	<u>FRONT FORK - FXST/I & FXSTB/I</u> <u>FRONT FORK - FXSTD/I</u> <u>FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2)</u>
45764-00	<u>REAR FORK AND SHOCK ABSORBERS</u>
45769-00	<u>FRONT FORK - FXSTD/I</u>
45790-80	<u>FRONT FORK - FXSTD/I</u>

45803-97	FRONT FORK - FXST/I & FXSTB/I FRONT FORK - FXSTD/I FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2)
45806-00	OIL TANK & LINES
45832-77A	FRONT FORK - FXST/I & FXSTB/I FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2)
45838-77	FRONT FORK - FXST/I & FXSTB/I FRONT FORK - FXSTD/I FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2)
45842-77A	FRONT FORK - FXST/I & FXSTB/I FRONT FORK - FXSTD/I FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2)
45845-77	FRONT FORK - FXST/I & FXSTB/I FRONT FORK - FXSTD/I FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2)
45858-77	FRONT FORK - FXST/I & FXSTB/I FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2)
45859-77A	FRONT FORK - FXST/I & FXSTB/I FRONT FORK - FXSTD/I FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2)
45865-84	FRONT FORK - FXST/I & FXSTB/I FRONT FORK - FXSTD/I FRONT FORK - FLSTC/I & FLSTF/I (2 OF 2)
45866-84	FRONT FORK - FXST/I & FXSTB/I FRONT FORK - FXSTD/I FRONT FORK - FLSTC/I & FLSTF/I (2 OF 2)
45873-00	FRONT FORK - FXST/I & FXSTB/I
45874-91	FRONT FORK - FXST/I & FXSTB/I
45875-84A	FRONT FORK - FXST/I & FXSTB/I FRONT FORK - FXSTD/I FRONT FORK - FLSTC/I & FLSTF/I (2 OF 2)
45915-00	FRONT FORK - FLSTC/I & FLSTF/I (2 OF 2)
45916-00	FRONT FORK - FLSTC/I & FLSTF/I (2 OF 2)
45917-86	FRONT FORK - FLSTC/I & FLSTF/I (2 OF 2)
45918-00	FRONT FORK - FLSTC/I & FLSTF/I (2 OF 2)
45930-00	FRONT FORK - FLSTC/I & FLSTF/I (2 OF 2)
45931-00	FRONT FORK - FLSTC/I & FLSTF/I (2 OF 2)
45932-00	FRONT FORK - FLSTC/I & FLSTF/I (2 OF 2)
45933-86	FRONT FORK - FXST/I & FXSTB/I FRONT FORK - FXSTD/I FRONT FORK - FLSTC/I & FLSTF/I (2 OF 2)
45935-88	FRONT FORK - FXSTS/I FRONT FORK - FLSTS/I

45936-88	FRONT FORK - FXSTS/I FRONT FORK - FLSTS/I
45937-88	FRONT FORK - FXSTS/I FRONT FORK - FLSTS/I
45940-84	FRONT FORK - FXST/I & FXSTB/I FRONT FORK - FXSTD/I FRONT FORK - FLSTC/I & FLSTF/I (2 OF 2)
45964-86	FRONT FORK - FLSTC/I & FLSTF/I (2 OF 2)
45998-73	FRONT FORK - FXST/I & FXSTB/I FRONT FORK - FLSTC/I & FLSTF/I (2 OF 2)
46000-00	FRONT FORK - FXSTD/I
46004-00	FRONT FORK - FXST/I & FXSTB/I
46006-00	FRONT FORK - FXST/I & FXSTB/I
46048-00	FRONT FORK - FXST/I & FXSTB/I FRONT FORK - FXSTD/I
46053-88	FRONT FORK - FXSTS/I FRONT FORK - FLSTS/I
46054-88	FRONT FORK - FXSTS/I FRONT FORK - FLSTS/I
46055-88	FRONT FORK - FXSTS/I FRONT FORK - FLSTS/I
46056-88	FRONT FORK - FXSTS/I FRONT FORK - FLSTS/I
46057-88	FRONT FORK - FXSTS/I FRONT FORK - FLSTS/I
46058-97	HANDLEBAR
46059-90	HANDLEBAR
46060-88	FRONT FORK - FXSTS/I FRONT FORK - FLSTS/I
46062-88	FRONT FORK - FXSTS/I FRONT FORK - FLSTS/I
46064-00	FRONT FORK - FXSTD/I
46066-00	FRONT FORK - FXSTD/I
46067-00	FRONT FORK - FXSTD/I
46068-00	FRONT FORK - FXSTD/I
46175-00	FRONT FORK - FXSTD/I
46176-00	FRONT FORK - FXSTD/I
46458-05	REAR BRAKE CONTROL

47008-00C	FRAME & JIFFY STAND
4716W	ENGINE MOUNTS FOOTRESTS & FOOTBOARDS
4717A	ELECTRONIC CONTROL MODULE & COIL - FUEL INJECTED TRANSMISSION HOUSING (1 OF 2)
4719W	EXHAUST SYSTEM - FLSTS/I
4721	FOOTRESTS & FOOTBOARDS FOOTRESTS & FOOTBOARDS FOOTRESTS & FOOTBOARDS
4722	HEADLAMP (1 OF 2) HEADLAMP - FLSTC/I & FLSTF/I
4724	HEADLAMP (1 OF 2)
4726	ENGINE MOUNTS
4729	FRONT FORK - FXST/I & FXSTB/I FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2)
4740A	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2) TRANSMISSION HOUSING (1 OF 2) PRIMARY HOUSING
4741A	ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™ CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2) IGNITION MODULE & COIL - CARBURETED ENGINE SENSORS AND SWITCHES
4747	FORK ROCKERS & CALIPER MOUNTING - FXSTS/I
47573-00A	REAR FORK AND SHOCK ABSORBERS
47577-00	REAR FORK AND SHOCK ABSORBERS
47579-00	REAR FORK AND SHOCK ABSORBERS
47610-00	REAR FORK AND SHOCK ABSORBERS
4763	FUEL TANK FUEL TANK - FUEL INJECTED FUEL TANK - FXSTD FUEL TANK - FXSTD - FUEL INJECTED
48048-00A	REAR FORK AND SHOCK ABSORBERS
48049-00A	REAR FORK AND SHOCK ABSORBERS
48052-00A	TRANSMISSION HOUSING (2 OF 2)
48053-00	TRANSMISSION HOUSING (2 OF 2)
48054-00	ENGINE MOUNTS
48093-00	ENGINE MOUNTS
48094-00	ENGINE MOUNTS
48127-01	ALTERNATOR & REGULATOR

4814A	ALTERNATOR & REGULATOR TRANSMISSION HOUSING (1 OF 2)
4816A	HANDLEBAR
4820A	PRIMARY HOUSING
48300-60	FRONT FORK - FXST/I & FXSTB/I FRONT FORK - FXSTD/I FRONT FORK - FLSTC/I & FLSTF/I (2 OF 2) FRONT FORK - FXSTS/I FRONT FORK - FLSTS/I
48306-88	FRONT FORK - FXSTS/I FRONT FORK - FLSTS/I
48315-60	FRONT FORK - FXST/I & FXSTB/I FRONT FORK - FXSTD/I FRONT FORK - FLSTC/I & FLSTF/I (2 OF 2) FRONT FORK - FXSTS/I FRONT FORK - FLSTS/I FRAME & JIFFY STAND
48324-00	FRONT FORK - FXSTD/I
48330-48A	FRONT FORK - FXST/I & FXSTB/I
48332-48C	FRONT FORK - FXST/I & FXSTB/I
48361-80	FRONT FORK - FXST/I & FXSTB/I FRONT FORK - FXSTD/I FRONT FORK - FLSTC/I & FLSTF/I (2 OF 2) FRONT FORK - FXSTS/I FRONT FORK - FLSTS/I
48365-48A	FRONT FORK - FXST/I & FXSTB/I FRONT FORK - FXSTD/I FRONT FORK - FLSTC/I & FLSTF/I (2 OF 2) FRONT FORK - FXSTS/I FRONT FORK - FLSTS/I
48868-00	FRAME & JIFFY STAND
48887-00B	FRAME & JIFFY STAND
49166-00	FOOTRESTS & FOOTBOARDS
50005-85A	FRAME & JIFFY STAND
50015-74A	FRAME & JIFFY STAND
50087-89B	FRAME & JIFFY STAND
50600026	FOOTRESTS & FOOTBOARDS
50614-91A	FOOTRESTS & FOOTBOARDS
50621-79A	FOOTRESTS & FOOTBOARDS
50635-82A	FOOTRESTS & FOOTBOARDS
508	FRONT WHEEL (1 OF 2) REAR WHEEL

509	FRONT BRAKE CALIPER - SPRINGER MODELS FRONT FENDER - FLSTS/I
50912-72	FOOTRESTS & FOOTBOARDS FOOTRESTS & FOOTBOARDS
50942-00	FOOTRESTS & FOOTBOARDS FOOTRESTS & FOOTBOARDS
50972-75	FRAME & JIFFY STAND
50991-86	FRONT FORK - FLSTC/I & FLSTF/I (2 OF 2)
51032-03A	SEATS
51033-03	SEATS - FLSTS/I
51043-03	SEATS
51184-00	SEATS
51185-00	SEATS
51186-00	SEATS
51188-00	SEATS
515	REAR BRAKE CONTROL
51792-01	SEATS - FLSTS/I
51793-01	SEATS - FLSTS/I
51796-00	SEATS - FLSTS/I
52015-97A	SEATS - FLSTS/I
52097-00	SEATS
5216	FRONT FENDER - FLSTS/I
52189-00	SEATS
52210-00	SEATS
52218-00	SEATS
5244	SEATS SADDLEBAGS - FLSTC/I
52441-95	FRONT FENDER - FLSTS/I TAIL LAMP (1 OF 2)
52444-03	SEATS
52467-00	SEATS SEATS - FLSTS/I
52506-00	SEATS
52507-00	SEATS
52560-00	SEATS

52602-00	SEATS
52687-97	SEATS - FLSTS/I
52720-00A	SEATS
52731-00	SEATS
52771-82	SEATS
52787-00	SEATS
52788-00	SEATS
52906-03	SEATS
53073-03	SEATS
53156-86	HANDLEBAR
53157-97	HANDLEBAR
534	FRONT BRAKE CALIPER - SPRINGER MODELS FORK ROCKERS & CALIPER MOUNTING - FXSTS/I
53436-97	REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I TAIL LAMP (2 OF 2)
53438-92	HEADLAMP (2 OF 2) HEADLAMP - FLSTC/I & FLSTF/I
5403B	LICENSE PLATE BRACKETS
5416	BELTS, CHAINS & SPROCKETS EXHAUST SYSTEM - FLSTF/I & FXSTD/I EXHAUST SYSTEM - FLSTS/I
5419	INSTRUMENTS (1 OF 2)
54321-85	FRONT WHEEL (2 OF 2) FRONT WHEEL (2 OF 2) REAR WHEEL
54484-97	FRONT FORK - FLSTS/I
54485-97	FRONT FORK - FXSTS/I
54508-00B	REAR FORK AND SHOCK ABSORBERS
55919-01	HANDLEBAR
55933-97	HANDLEBAR
56018-98A	HANDLEBAR
56019-98A	HANDLEBAR
56076-97	CALIFORNIA EVAPORATIVE EMISSIONS
56093-88A	HANDLEBAR
56102-99	HANDLEBAR

56119-77A	HANDLEBAR
56122-77	HANDLEBAR
56124-77	HANDLEBAR
56133-00A	HANDLEBAR
56135-00A	HANDLEBAR
56153-73	HANDLEBAR
56159-73	HANDLEBAR
56182-00A	REAR FORK AND SHOCK ABSORBERS
56183-00	REAR FORK AND SHOCK ABSORBERS
56188-00	HANDLEBAR
56206-96	THROTTLE CONTROL
56220-94A	THROTTLE CONTROL
56224-99A	HANDLEBAR
56305-96	THROTTLE CONTROL
56306-96	THROTTLE CONTROL
56342-01	THROTTLE CONTROL
56343-01	THROTTLE CONTROL
56394-74	THROTTLE CONTROL
56396-74A	THROTTLE CONTROL
56397-74C	THROTTLE CONTROL
56402-83A	THROTTLE CONTROL
56432-98	THROTTLE CONTROL
56433-98	THROTTLE CONTROL
56508-76	THROTTLE CONTROL
56538-88	HANDLEBAR
56540-88	HANDLEBAR
56541-86A	HANDLEBAR
56542-86A	HANDLEBAR
56548-97	HANDLEBAR
56550-97	HANDLEBAR
56567-86B	HANDLEBAR
56569-86	HANDLEBAR

56627-00	REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I
56628-00	REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I
57060-00	WINDSHIELD - FLSTC/I
57062-00A	WINDSHIELD - FLSTC/I
57063-00A	WINDSHIELD - FLSTC/I
5710	FRONT FORK - FXST/I & FXSTB/I FRONT FORK - FXSTD/I FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2)
57217-02	REAR BRAKE CONTROL
57400112	WINDSHIELD - FLSTC/I
5756	REAR WHEEL
5775	OIL TANK & LINES
58060-93	FRONT TURN SIGNALS
58082-02A	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I
58089-97	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I
5818A	FUEL TANK FUEL TANK - FUEL INJECTED FUEL TANK - FXSTD FUEL TANK - FXSTD - FUEL INJECTED
58213-00	WINDSHIELD - FLSTC/I
58241-95	WINDSHIELD - FLSTC/I
58252-95	WINDSHIELD - FLSTC/I
58253-95	WINDSHIELD - FLSTC/I
58272-95	WINDSHIELD - FLSTC/I
58406-75A	WINDSHIELD - FLSTC/I
58408-75A	WINDSHIELD - FLSTC/I
58416-77A	WINDSHIELD - FLSTC/I
58417-77	WINDSHIELD - FLSTC/I
58428-94	WINDSHIELD - FLSTC/I
58431-94	WINDSHIELD - FLSTC/I
5885	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I
58991-03	REAR FENDER & SUPPORTS - FXST/I, FXSTS/I & FXSTB/I
59043-93	FRONT FENDER - FXSTS/I
59050-03	REAR FENDER & SUPPORTS - FXST/I, FXSTS/I & FXSTB/I REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I

59053-00	REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I
59066-03	REAR FENDER & SUPPORTS - FXST/I, FXSTS/I & FXSTB/I
59076-03	REAR FENDER & SUPPORTS - FXST/I, FXSTS/I & FXSTB/I
59088-03	REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I
59116-96	FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I
59117-96	REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I
59118-00	FRONT FENDER - FLSTS/I
59119-03	REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I
59122-97	FRONT FENDER - FLSTS/I
59129-86A	FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I
59139-00A	FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I
59144-00A	REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I
59155-00B	REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I
59164-97A	FRONT FENDER - FLSTS/I
59174-99	SEATS - FLSTS/I
59176-96A	FRONT FENDER - FXSTS/I
59180-80	FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I
59201-96	FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I
59211-74A	FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I
59235-86	FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I
59251-90	REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I
59254-91	REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I
59255-91	SEATS REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I
59256-84A	SEATS
59259-90	REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I LICENSE PLATE BRACKETS
59287-92	REAR FENDER & SUPPORTS - FXST/I, FXSTS/I & FXSTB/I REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I
59288-92	REAR FENDER & SUPPORTS - FXST/I, FXSTS/I & FXSTB/I REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I
59289-92	FRONT FORK - FXSTS/I FRONT FORK - FLSTS/I

	REAR FENDER & SUPPORTS - FXST/I, FXSTS/I & FXSTB/I REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I
59290-92	FRONT FORK - FXSTS/I FRONT FORK - FLSTS/I REAR FENDER & SUPPORTS - FXST/I, FXSTS/I & FXSTB/I REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I
59355-97	FRONT FENDER - FLSTS/I FRONT FENDER - FLSTS/I
59357-00	FRONT FENDER - FLSTS/I
59358-97	FRONT FENDER - FLSTS/I
59438-00	REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I
59465-00	REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I
59481-00	FRONT FORK - FXST/I & FXSTB/I FRONT FORK - FXSTD/I FRONT FORK - FLSTC/I & FLSTF/I (2 OF 2)
59482-00	FRONT FORK - FXST/I & FXSTB/I FRONT FORK - FXSTD/I FRONT FORK - FLSTC/I & FLSTF/I (2 OF 2)
59543-01	REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I
59567-00C	REAR FENDER & SUPPORTS - FXST/I, FXSTS/I & FXSTB/I REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I
59596-00A	REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I
59672-99	REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I
59759-00	REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I
59768-97	SEATS SEATS SEATS - FLSTS/I REAR FENDER & SUPPORTS - FXST/I, FXSTS/I & FXSTB/I REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I
59876-00A	FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I
59914-00A	REAR FENDER & SUPPORTS - FXST/I, FXSTS/I & FXSTB/I
59924-80B	FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I
59954-03	REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I
59955-03	REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I
59964-03	REAR FENDER & SUPPORTS - FXST/I, FXSTS/I & FXSTB/I REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I
59969-03	REAR FENDER & SUPPORTS - FXST/I, FXSTS/I & FXSTB/I REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I

59984-73	LICENSE PLATE BRACKETS
59986-75	LICENSE PLATE BRACKETS
59988-72A	REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I LICENSE PLATE BRACKETS
59995-03	LICENSE PLATE BRACKETS
60001-55	LICENSE PLATE BRACKETS
60003-89	LICENSE PLATE BRACKETS
60019-93A	REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I LICENSE PLATE BRACKETS
60020-97	LICENSE PLATE BRACKETS
60021-97	LICENSE PLATE BRACKETS
60028-00	REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I
6003	TRANSMISSION GEARS
60035-00	REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I
601	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)
60120-00A	REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I
60123-02	REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I LICENSE PLATE BRACKETS
6016	PRIMARY HOUSING
6019	ENGINE MOUNTS FRONT BRAKE CALIPER - SPRINGER MODELS SEATS REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I
60328-98B	TRANSMISSION HOUSING (2 OF 2) OIL TANK & LINES
6036	SEATS SEATS - FLSTS/I
60362-00	REAR BELT GUARD
60363-00B	REAR FORK AND SHOCK ABSORBERS
6040A	FORK ROCKERS & CALIPER MOUNTING - FXSTS/I
6042A	FORK ROCKERS & CALIPER MOUNTING - FXSTS/I FORK ROCKERS & CALIPER MOUNTING - FLSTS/I
60533-00A	REAR BELT GUARD
60539-94B	PRIMARY HOUSING
60543-99B	PRIMARY HOUSING
60564-00A	REAR BELT GUARD

60567-90C	PRIMARY HOUSING
6057	GEAR SHIFTER
60572-86	PRIMARY HOUSING
60586-99A	PRIMARY HOUSING
60630-94B	PRIMARY HOUSING
60668-99	PRIMARY HOUSING
60678-85	PRIMARY HOUSING
60713-99	PRIMARY HOUSING
60715-99B	PRIMARY HOUSING
6072	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I
60721-99B	PRIMARY HOUSING
60724-98A	PRIMARY HOUSING
60743-03	PRIMARY HOUSING
609	GEAR SHIFTER TRANSMISSION HOUSING (1 OF 2)
60987-03	INSTRUMENTS (2 OF 2)
60988-03	INSTRUMENTS (2 OF 2)
6099	IGNITION MODULE & COIL - CARBURETED ELECTRONIC CONTROL MODULE & COIL - FUEL INJECTED REAR BRAKE CONTROL
60993-00	FUEL TANK FUEL TANK - FUEL INJECTED
60996-03	INSTRUMENTS - FXSTD/I
60997-03	INSTRUMENTS (2 OF 2)
61001-01	FUEL PUMP - FUEL INJECTED
6101	CLUTCH CONTROL FRONT BRAKE CONTROL
61081-92	FRAME & JIFFY STAND INSTRUMENTS (1 OF 2) INSTRUMENTS - FXSTD/I SWITCHES & CIRCUIT BREAKERS
6109	FRONT FENDER - FLSTS/I HORN
61109-85D	FUEL TANK FUEL TANK - FUEL INJECTED FUEL TANK - FXSTD FUEL TANK - FXSTD - FUEL INJECTED
61155-00	FUEL TANK

	FUEL TANK - FUEL INJECTED
61165-00	FUEL TANK FUEL TANK - FUEL INJECTED
61192-96A	FUEL PUMP - FUEL INJECTED SENDING UNITS - CARBURETED MODELS
61209-01A	FUEL PUMP - FUEL INJECTED
61231-01	FUEL PUMP - FUEL INJECTED
61272-92C	FUEL TANK FUEL TANK - FUEL INJECTED FUEL TANK - FXSTD FUEL TANK - FXSTD - FUEL INJECTED
61315-02	FUEL PUMP - FUEL INJECTED SENDING UNITS - CARBURETED MODELS
61324-01	SENDING UNITS - CARBURETED MODELS
61338-02	FUEL TANK FUEL TANK - FXSTD
61381-02	FUEL PUMP - FUEL INJECTED
6139	CALIFORNIA EVAPORATIVE EMISSIONS
61450-95	FUEL TANK FUEL TANK - FUEL INJECTED FUEL TANK - FXSTD FUEL TANK - FXSTD - FUEL INJECTED
61537-03	INSTRUMENTS (2 OF 2)
61538-03	INSTRUMENTS (2 OF 2)
61539-03	INSTRUMENTS (2 OF 2)
61583-02	FUEL PUMP - FUEL INJECTED
61625-01D	FUEL TANK - FUEL INJECTED
61657-00	SEATS
61721-00A	FUEL TANK - FXSTD FUEL TANK - FXSTD - FUEL INJECTED
61960-00	FUEL PUMP - FUEL INJECTED
61960-04	FUEL PUMP - FUEL INJECTED
61961-00	FUEL PUMP - FUEL INJECTED
62067-03A	FUEL TANK TRIM
62068-03A	FUEL TANK TRIM
62082-00D	FUEL TANK - FXSTD FUEL TANK - FXSTD - FUEL INJECTED
62123-66	FRAME & JIFFY STAND

62146-00	FUEL TANK - FXSTD FUEL TANK - FXSTD - FUEL INJECTED
62150-85	FUEL TANK FUEL TANK - FUEL INJECTED FUEL TANK - FXSTD FUEL TANK - FXSTD - FUEL INJECTED
62161-02	FUEL TANK FUEL TANK - FXSTD
62163-01A	FUEL PUMP - FUEL INJECTED
62163-04	FUEL PUMP - FUEL INJECTED
62165-01	FUEL PUMP - FUEL INJECTED
62166-02	FUEL TANK FUEL TANK - FXSTD
62172-02	FUEL TANK FUEL TANK - FXSTD
62180-00D	FUEL TANK
62188-01	FUEL PUMP - FUEL INJECTED
62188-04	FUEL PUMP - FUEL INJECTED
62189-01A	FUEL TANK - FUEL INJECTED FUEL TANK - FXSTD - FUEL INJECTED
62190-01D	FUEL TANK - FXSTD - FUEL INJECTED
62234-03A	FUEL TANK TRIM
62235-03A	FUEL TANK TRIM
62236-03A	FUEL TANK TRIM
62237-03A	FUEL TANK TRIM
62238-03A	FUEL TANK TRIM
62239-03A	FUEL TANK TRIM
6229W	SADDLEBAGS - FLSTC/I SADDLEBAGS - FLSTS/I
62357-00	FUEL PUMP - FUEL INJECTED
6237	REAR BRAKE CONTROL
62373-01	FUEL PUMP - FUEL INJECTED
62375-57A	TRANSMISSION HOUSING (2 OF 2)
62492-01A	OIL TANK & LINES
62498-01A	OIL TANK & LINES
62555-95	CARBURETOR (2 OF 2) FUEL TANK

	FUEL TANK - FUEL INJECTED FUEL TANK - FXSTD FUEL TANK - FXSTD - FUEL INJECTED
62769-00A	OIL TANK & LINES
62840-00A	OIL TANK & LINES
62842-00	FUEL TANK - FXSTD
62843-00	FUEL TANK - FUEL INJECTED FUEL TANK - FXSTD FUEL TANK - FXSTD - FUEL INJECTED
62845-00A	OIL TANK & LINES
62880-00	FUEL TANK FUEL TANK - FUEL INJECTED
62881-00	FUEL TANK FUEL TANK - FUEL INJECTED FUEL TANK - FXSTD FUEL TANK - FXSTD - FUEL INJECTED
62897-01A	FUEL PUMP - FUEL INJECTED
62897-01B	FUEL PUMP - FUEL INJECTED
62900-01D	FUEL TANK - FUEL INJECTED
62919-00	FUEL TANK - FXSTD FUEL TANK - FXSTD - FUEL INJECTED
6294	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)
6296	REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I
6333	SEATS
6336B	REAR TURN SIGNALS
634	TRANSMISSION HOUSING (1 OF 2)
63501-68B	CARBURETOR (2 OF 2) FUEL TANK FUEL TANK - FXSTD
63505-84	FUEL TANK FUEL TANK - FXSTD
63521-95A	FUEL TANK FUEL TANK - FUEL INJECTED FUEL TANK - FXSTD FUEL TANK - FXSTD - FUEL INJECTED
6353	FRONT FORK - FXSTS/I FRONT FORK - FLSTS/I
63553-00B	OIL TANK & LINES
63601-00	OIL TANK & LINES
63611-00	OIL TANK & LINES

63628-00	OIL TANK & LINES
63632-00	OIL TANK & LINES
6371	FORK ROCKERS & CALIPER MOUNTING - FXSTS/I
63731-99A	CRANKCASE AND ENGINE OIL FILTER - Twin Cam 88B™
63783-00	OIL TANK & LINES
63798-99A	CRANKCASE AND ENGINE OIL FILTER - Twin Cam 88B™
6379W	SEATS HEADLAMP (1 OF 2) REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I LICENSE PLATE BRACKETS
63815-99	ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™
63859-95B	PRIMARY HOUSING
6400HB	BELTS, CHAINS & SPROCKETS FRAME & JIFFY STAND WINDSHIELD - FLSTC/I HEADLAMP - FLSTC/I & FLSTF/I FUEL TANK FUEL TANK - FUEL INJECTED FUEL TANK - FXSTD FUEL TANK - FXSTD - FUEL INJECTED
6409	SEATS FRONT FENDER - FXSTS/I
6474	HEADLAMP (1 OF 2)
6497HW	GEAR SHIFTER
6498	FORK ROCKERS & CALIPER MOUNTING - FXSTS/I
65081-00A	EXHAUST SYSTEM - FLSTS/I
65085-00A	EXHAUST SYSTEM - FLSTF/I & FXSTD/I
65090-00B	EXHAUST SYSTEM - FLSTF/I & FXSTD/I
65094-00A	EXHAUST SYSTEM - FLSTF/I & FXSTD/I
65148-00A	EXHAUST SYSTEM - FLSTF/I & FXSTD/I
6516HW	ENGINE MOUNTS BELTS, CHAINS & SPROCKETS REAR WHEEL
65296-95A	EXHAUST SYSTEM - FXST/I, FLSTC/I, FXSTS/I & FXSTB/I EXHAUST SYSTEM - FLSTF/I & FXSTD/I EXHAUST SYSTEM - FLSTS/I
6530	ENGINE MOUNTS
65311-97	EXHAUST SYSTEM - FLSTS/I
6532	TRANSMISSION HOUSING (1 OF 2)

65324-83B	EXHAUST SYSTEM - FXST/I, FLSTC/I, FXSTS/I & FXSTB/I EXHAUST SYSTEM - FLSTF/I & FXSTD/I EXHAUST SYSTEM - FLSTS/I
65325-83A	EXHAUST SYSTEM - FXST/I, FLSTC/I, FXSTS/I & FXSTB/I EXHAUST SYSTEM - FLSTF/I & FXSTD/I EXHAUST SYSTEM - FLSTS/I
65328-83A	EXHAUST SYSTEM - FXST/I, FLSTC/I, FXSTS/I & FXSTB/I EXHAUST SYSTEM - FLSTF/I & FXSTD/I EXHAUST SYSTEM - FLSTS/I
6534	REAR FORK AND SHOCK ABSORBERS
6535	REAR FORK AND SHOCK ABSORBERS
65364-00A	EXHAUST SYSTEM - FLSTS/I
65366-00	EXHAUST SYSTEM - FLSTS/I
65401-00B	EXHAUST SYSTEM - FXST/I, FLSTC/I, FXSTS/I & FXSTB/I
65413-00	EXHAUST SYSTEM - FXST/I, FLSTC/I, FXSTS/I & FXSTB/I
65435-00	EXHAUST SYSTEM - FLSTF/I & FXSTD/I
65445-00	EXHAUST SYSTEM - FLSTF/I & FXSTD/I
65463-00	EXHAUST SYSTEM - FXST/I, FLSTC/I, FXSTS/I & FXSTB/I EXHAUST SYSTEM - FXST/I, FLSTC/I, FXSTS/I & FXSTB/I EXHAUST SYSTEM - FLSTF/I & FXSTD/I
65464-00A	EXHAUST SYSTEM - FLSTF/I & FXSTD/I
65498-00A	EXHAUST SYSTEM - FLSTS/I
65499-00A	EXHAUST SYSTEM - FLSTF/I & FXSTD/I
65503-00A	EXHAUST SYSTEM - FLSTF/I & FXSTD/I
65513-00A	EXHAUST SYSTEM - FLSTS/I
65603-00A	EXHAUST SYSTEM - FXST/I, FLSTC/I, FXSTS/I & FXSTB/I
65652-97A	EXHAUST SYSTEM - FLSTF/I & FXSTD/I EXHAUST SYSTEM - FLSTS/I
65654-97	EXHAUST SYSTEM - FLSTF/I & FXSTD/I EXHAUST SYSTEM - FLSTS/I
65655-00	EXHAUST SYSTEM - FLSTS/I
65679-00	EXHAUST SYSTEM - FLSTS/I
65682-00A	EXHAUST SYSTEM - FXST/I, FLSTC/I, FXSTS/I & FXSTB/I
65702-00A	EXHAUST SYSTEM - FXST/I, FLSTC/I, FXSTS/I & FXSTB/I
65708-97	EXHAUST SYSTEM - FLSTS/I
65732-00B	EXHAUST SYSTEM - FXST/I, FLSTC/I, FXSTS/I & FXSTB/I
65734-95	EXHAUST SYSTEM - FLSTF/I & FXSTD/I

	EXHAUST SYSTEM - FLSTS/I
65750-00B	EXHAUST SYSTEM - FXST/I, FLSTC/I, FXSTS/I & FXSTB/I
65781-82	EXHAUST SYSTEM - FLSTS/I
65782-82	EXHAUST SYSTEM - FLSTS/I
65793-00	EXHAUST SYSTEM - FLSTS/I
65806-00A	EXHAUST SYSTEM - FLSTS/I
65830-03	EXHAUST SYSTEM - FLSTF/I & FXSTD/I
65842-00A	EXHAUST SYSTEM - FXST/I, FLSTC/I, FXSTS/I & FXSTB/I
65885-00	EXHAUST SYSTEM - FXST/I, FLSTC/I, FXSTS/I & FXSTB/I
65890-00A	EXHAUST SYSTEM - FLSTF/I & FXSTD/I
65894-00	EXHAUST SYSTEM - FLSTF/I & FXSTD/I
65900-00A	EXHAUST SYSTEM - FLSTF/I & FXSTD/I
65907-97A	EXHAUST SYSTEM - FLSTS/I
65908-00A	EXHAUST SYSTEM - FLSTS/I
65909-00	EXHAUST SYSTEM - FLSTS/I
6590HW	FRONT WHEEL (1 OF 2) HANDLEBAR
65910-97	EXHAUST SYSTEM - FLSTS/I
65911-97	EXHAUST SYSTEM - FLSTS/I
65912-00A	EXHAUST SYSTEM - FXST/I, FLSTC/I, FXSTS/I & FXSTB/I
65926-00	EXHAUST SYSTEM - FLSTF/I & FXSTD/I
65927-00	EXHAUST SYSTEM - FXST/I, FLSTC/I, FXSTS/I & FXSTB/I
65939-00A	EXHAUST SYSTEM - FLSTF/I & FXSTD/I
65989-97C	BATTERY
66030-88	FRONT FORK - FXSTS/I
66210-00	BATTERY
66373-06	SWITCHES & CIRCUIT BREAKERS
6639	FRONT WHEEL (1 OF 2)
6655	FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2)
6701	HEADLAMP (1 OF 2) REAR FENDER & SUPPORTS - FXST/I, FXSTS/I & FXSTB/I REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I EXHAUST SYSTEM - FXST/I, FLSTC/I, FXSTS/I & FXSTB/I EXHAUST SYSTEM - FLSTS/I TAIL LAMP (1 OF 2)

6702	GEAR SHIFTER REAR BELT GUARD FRONT FORK - FXST/I & FXSTB/I FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2) FRAME & JIFFY STAND FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I FUEL TANK FUEL TANK - FUEL INJECTED FUEL TANK - FXSTD FUEL TANK - FXSTD - FUEL INJECTED EXHAUST SYSTEM - FLSTF/I & FXSTD/I EXHAUST SYSTEM - FLSTS/I REAR TURN SIGNALS SADDLEBAGS - FLSTC/I SADDLEBAGS - FLSTS/I
6703	FRONT BRAKE CONTROL WINDSHIELD - FLSTC/I LICENSE PLATE BRACKETS EXHAUST SYSTEM - FXST/I, FLSTC/I, FXSTS/I & FXSTB/I EXHAUST SYSTEM - FLSTF/I & FXSTD/I EXHAUST SYSTEM - FLSTS/I
67033-99A	INSTRUMENTS (1 OF 2)
6716	IGNITION MODULE & COIL - CARBURETED ELECTRONIC CONTROL MODULE & COIL - FUEL INJECTED REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I FUEL TANK FUEL TANK - FUEL INJECTED INSTRUMENTS - FXSTD/I
67190-89	INSTRUMENTS (1 OF 2)
67196-99A	INSTRUMENTS (2 OF 2)
67197-99A	INSTRUMENTS (2 OF 2)
67223-00A	INSTRUMENTS - FXSTD/I
6724	REAR FORK AND SHOCK ABSORBERS
67266-94	REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I
67271-99	INSTRUMENTS (1 OF 2)
67423-00	INSTRUMENTS - FXSTD/I
6753	HANDLEBAR
6756	HANDLEBAR
6758	FRONT BRAKE CALIPER - SPRINGER MODELS
67601-94A	HEADLAMP (1 OF 2)
67602-94	HEADLAMP (2 OF 2)
67603-94A	HEADLAMP (1 OF 2)
67604-94	HEADLAMP (2 OF 2)

67615-96	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I
67621-94	WINDSHIELD - FLSTC/I
6762B	ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™
67685-92	HEADLAMP (1 OF 2)
67691-92	HEADLAMP (2 OF 2) HEADLAMP - FLSTC/I & FLSTF/I
67698-81D	HEADLAMP (1 OF 2)
67705-92	HEADLAMP (1 OF 2)
67713-86	HEADLAMP - FLSTC/I & FLSTF/I
6771A	INSTRUMENTS (1 OF 2)
67763-92A	HEADLAMP (2 OF 2)
67768-97	HEADLAMP - FLSTC/I & FLSTF/I
67769-93	HEADLAMP (1 OF 2) HEADLAMP (2 OF 2)
67772-97	HEADLAMP (1 OF 2)
67781-92A	HEADLAMP (2 OF 2)
67790-93A	HEADLAMP (1 OF 2)
67793-92A	HEADLAMP - FLSTC/I & FLSTF/I
67798-92	HEADLAMP - FLSTC/I & FLSTF/I
67801-92A	HEADLAMP - FLSTC/I & FLSTF/I
67808-86	FRONT FORK - FLSTC/I & FLSTF/I (2 OF 2)
67814-86	FRONT FORK - FLSTC/I & FLSTF/I (2 OF 2)
67816-86	FRONT FORK - FLSTC/I & FLSTF/I (2 OF 2)
67819-86	FRONT FORK - FLSTC/I & FLSTF/I (2 OF 2)
67821-87	FRONT FORK - FLSTC/I & FLSTF/I (2 OF 2)
67822-88	FRONT TURN SIGNALS
67827-88A	FRONT TURN SIGNALS
67828-88A	FRONT TURN SIGNALS
67829-88	FRONT TURN SIGNALS
67846-70	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I
67854-98	INSTRUMENTS (1 OF 2) INSTRUMENTS - FXSTD/I
67858-89	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I

67880-94	INSTRUMENTS (1 OF 2) INSTRUMENTS - FXSTD/I
67892-93	HEADLAMP (1 OF 2)
67894-93A	HEADLAMP (1 OF 2) HEADLAMP (2 OF 2)
67915-00	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I
68026-99	TAIL LAMP (1 OF 2)
68042-99	CRANKCASE AND ENGINE OIL FILTER - Twin Cam 88B™ CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (2 OF 2) ENGINE SENSORS AND SWITCHES ENGINE SENSORS AND SWITCHES
68046-79	REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I
68050-93A	HEADLAMP - FLSTC/I & FLSTF/I
68051-93A	HEADLAMP - FLSTC/I & FLSTF/I
68052-93	HEADLAMP - FLSTC/I & FLSTF/I
68066-99A	TAIL LAMP (1 OF 2)
68081-96	REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I
68112-99A	INSTRUMENTS (1 OF 2)
68113-99B	INSTRUMENTS (1 OF 2)
6812	FRONT FORK - FXSTS/I FRONT FORK - FLSTS/I FORK ROCKERS & CALIPER MOUNTING - FXSTS/I FORK ROCKERS & CALIPER MOUNTING - FLSTS/I FRAME & JIFFY STAND FOOTRESTS & FOOTBOARDS
68120-00	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (2 OF 2)
68140-04	TAIL LAMP (1 OF 2)
68140-99A	TAIL LAMP (1 OF 2)
68141-04	TAIL LAMP (2 OF 2)
68141-99A	TAIL LAMP (2 OF 2)
68142-04	TAIL LAMP (2 OF 2)
68163-84	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I FRONT TURN SIGNALS REAR TURN SIGNALS
68167-04	TAIL LAMP (1 OF 2) TAIL LAMP (2 OF 2)
68167-88	TAIL LAMP (1 OF 2) TAIL LAMP (2 OF 2)
68168-89A	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I

	FRONT TURN SIGNALS TAIL LAMP (1 OF 2) TAIL LAMP (1 OF 2) TAIL LAMP - FXSTD/I
68169-90A	TAIL LAMP (2 OF 2) TAIL LAMP (2 OF 2) TAIL LAMP - FXSTD/I
68193-95	FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I
68226-97	TAIL LAMP (1 OF 2)
68233-97	TAIL LAMP (1 OF 2)
68234-97	TAIL LAMP (2 OF 2)
68235-97	TAIL LAMP (1 OF 2)
68236-97	TAIL LAMP (1 OF 2)
68237-97	TAIL LAMP (1 OF 2)
68238-97	TAIL LAMP (1 OF 2)
68239-97	TAIL LAMP (2 OF 2)
6829	FRONT FORK - FXSTS/I FRONT FORK - FLSTS/I
68296-99A	TAIL LAMP (1 OF 2)
68329-03	HEADLAMP (1 OF 2) HEADLAMP - FLSTC/I & FLSTF/I
68331-02	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I
68353-00	TAIL LAMP - FXSTD/I
68354-00A	TAIL LAMP - FXSTD/I
68356-00A	TAIL LAMP - FXSTD/I
68368-03	TAIL LAMP (1 OF 2)
68369-03	TAIL LAMP (1 OF 2)
68370-03	TAIL LAMP (1 OF 2)
68370-03A	TAIL LAMP (1 OF 2)
68371-03	TAIL LAMP (2 OF 2)
68372-03	TAIL LAMP (2 OF 2)
68381-00	TAIL LAMP - FXSTD/I
68385-97	HORN
68440-86	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I REAR TURN SIGNALS

68446-00	REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I
68452-86	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I REAR TURN SIGNALS REAR TURN SIGNALS
68480-02	REAR TURN SIGNALS
68505-90	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I
68506-92	REAR TURN SIGNALS
68510-74C	REAR TURN SIGNALS
68519-68A	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I
6852	ENGINE BALANCER - Twin Cam 88B™
68558-03	TAIL LAMP (2 OF 2)
68562-84	FRONT BRAKE CONTROL FRONT BRAKE CONTROL
68572-64B	REAR TURN SIGNALS
68619-83	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I
68650-92	HEADLAMP (2 OF 2)
68654-92	HEADLAMP - FLSTC/I & FLSTF/I
68671-69D	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I
68674-69A	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I
68683-02	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I
68705-93A	HEADLAMP (1 OF 2)
68706-00	FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I
68713-94A	REAR TURN SIGNALS
68720-62	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I
68721-62	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I
68725-62A	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I
68730-98	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I
68765-94A	REAR TURN SIGNALS
68766-94	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I
68767-94	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I
68798-97A	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I
68817-00	TAIL LAMP - FXSTD/I
68818-03A	TAIL LAMP (1 OF 2)

68819-03	TAIL LAMP (1 OF 2)
68821-00	REAR TURN SIGNALS
68830-99A	TAIL LAMP (1 OF 2)
68832-99	TAIL LAMP (1 OF 2)
68833-99	TAIL LAMP (2 OF 2)
68846-98C	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I
68847-98A	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I
68889-00	REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I
68890-00A	REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I
68891-00	REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I
68892-00A	INSTRUMENTS - FXSTD/I
68893-00A	INSTRUMENTS - FXSTD/I
68894-00	INSTRUMENTS - FXSTD/I
68901-00A	INSTRUMENTS - FXSTD/I
68902-00A	INSTRUMENTS - FXSTD/I
68903-00A	INSTRUMENTS - FXSTD/I
68904-00	FRONT TURN SIGNALS
68905-00	REAR TURN SIGNALS
68906-00	FRONT TURN SIGNALS
68907-00	REAR TURN SIGNALS
68921-01D	SWITCHES & CIRCUIT BREAKERS SWITCHES & CIRCUIT BREAKERS
68923-00D	SWITCHES & CIRCUIT BREAKERS
68925-00D	SWITCHES & CIRCUIT BREAKERS
68926-00	SWITCHES & CIRCUIT BREAKERS
68927-00	SWITCHES & CIRCUIT BREAKERS
68931-00A	TAIL LAMP - FXSTD/I
68932-00A	TAIL LAMP - FXSTD/I
68958-07C	SWITCHES & CIRCUIT BREAKERS
68972-00	FRONT TURN SIGNALS
68973-00	FRONT TURN SIGNALS FRONT TURN SIGNALS REAR TURN SIGNALS REAR TURN SIGNALS

68975-00	FRONT TURN SIGNALS
68977-00	REAR TURN SIGNALS
68978-00	REAR TURN SIGNALS
68989-98	FRONT TURN SIGNALS
69012-93A	HORN
69039-09	HORN
69046-01	ENGINE MOUNTS
69047-01	ENGINE MOUNTS
69060-90F	HORN
69062-91A	TAIL LAMP (2 OF 2) HORN
69069-97	HORN
69070-97B	HORN
69120-91	HORN
69123-92A	HORN
69136-00	ENGINE MOUNTS
69137-00	ENGINE MOUNTS
69163-00	HEADLAMP (1 OF 2)
69187-03	TAIL LAMP (2 OF 2)
69187-03A	TAIL LAMP (2 OF 2)
69200018	TAIL LAMP (2 OF 2)
69309-10	SWITCHES & CIRCUIT BREAKERS
69609-00	HEADLAMP (1 OF 2)
69696-05	HEADLAMP (1 OF 2) HEADLAMP (2 OF 2)
69715-05A	HEADLAMP (1 OF 2) HEADLAMP (2 OF 2)
69717-05A	HEADLAMP (1 OF 2) HEADLAMP (2 OF 2)
69748-05B	HEADLAMP - FLSTC/I & FLSTF/I
69750-05B	HEADLAMP - FLSTC/I & FLSTF/I
69769-05A	HEADLAMP (1 OF 2)
70048-03	SWITCHES & CIRCUIT BREAKERS
70060-92B	BATTERY

70078-00B	<u>BATTERY</u>
7012	<u>FORK ROCKERS & CALIPER MOUNTING - FXSTS/I</u>
70196-00	<u>FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I</u>
70197-86	<u>HANDLEBAR</u>
70216-03	<u>WIRING HARNESS, MAIN - CARBURETED (1 OF 2)</u> <u>WIRING HARNESS, MAIN - CARBURETED (2 OF 2)</u>
70280-01	<u>SENDING UNITS - CARBURETED MODELS</u>
70345-84	<u>HANDLEBAR</u> <u>REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I</u> <u>HANDLEBAR SWITCHES</u>
70347-84	<u>TAIL LAMP (2 OF 2)</u>
70354-03	<u>SWITCHES & CIRCUIT BREAKERS</u>
7038	<u>HEADLAMP (1 OF 2)</u> <u>HEADLAMP - FLSTC/I & FLSTF/I</u> <u>EXHAUST SYSTEM - FLSTS/I</u>
7039	<u>ENGINE MOUNTS</u> <u>FRONT FORK - FXST/I & FXSTB/I</u> <u>FRONT FORK - FXSTD/I</u> <u>FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2)</u>
7041	<u>STARTER MOTOR</u> <u>GEAR SHIFTER</u> <u>FRONT FORK - FXST/I & FXSTB/I</u> <u>FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2)</u> <u>FRAME & JIFFY STAND</u> <u>EXHAUST SYSTEM - FLSTS/I</u>
70431-03	<u>WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)</u> <u>WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)</u>
70504-81	<u>THROTTLE CONTROL</u>
70523-06	<u>TAIL LAMP (2 OF 2)</u>
70540-02	<u>TAIL LAMP (2 OF 2)</u>
70584-94	<u>BATTERY</u>
70586-93	<u>HEADLAMP (2 OF 2)</u>
70598-99	<u>WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)</u>
7062	<u>FRONT FORK - FXSTD/I</u>
7068	<u>FRONT WHEEL (1 OF 2)</u> <u>HANDLEBAR</u>
70974-00B	<u>WIRING HARNESS, MAIN - CARBURETED (1 OF 2)</u> <u>WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)</u>
7124	<u>FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2)</u>
71248-00A	<u>INSTRUMENTS (1 OF 2)</u>

71250-00A	<u>INSTRUMENTS (1 OF 2)</u>
71265-95	<u>INSTRUMENTS (1 OF 2)</u>
7127	<u>MIRRORS</u>
7129	<u>HANDLEBAR</u>
71302-93A	<u>INSTRUMENTS (2 OF 2)</u>
7130W	<u>HEADLAMP (1 OF 2)</u> <u>HEADLAMP - FLSTC/I & FLSTF/I</u>
71313-96A	<u>INSTRUMENTS (2 OF 2)</u> <u>INSTRUMENTS - FXSTD/I</u> <u>SWITCHES & CIRCUIT BREAKERS</u>
71439-00	<u>INSTRUMENTS - FXSTD/I</u>
71450-04	<u>FRAME & JIFFY STAND</u> <u>INSTRUMENTS (2 OF 2)</u> <u>INSTRUMENTS - FXSTD/I</u> <u>SWITCHES & CIRCUIT BREAKERS</u>
71452-91A	<u>FRAME & JIFFY STAND</u> <u>INSTRUMENTS (2 OF 2)</u> <u>INSTRUMENTS - FXSTD/I</u> <u>SWITCHES & CIRCUIT BREAKERS</u>
71464-00	<u>INSTRUMENTS - FXSTD/I</u>
71563-96	<u>HANDLEBAR SWITCHES</u>
71564-96	<u>HANDLEBAR SWITCHES</u>
71567-96	<u>HANDLEBAR SWITCHES</u>
71568-96A	<u>HANDLEBAR SWITCHES</u>
71587-04	<u>HANDLEBAR SWITCHES</u>
71621-08	<u>HANDLEBAR SWITCHES</u>
71682-06A	<u>HANDLEBAR SWITCHES</u>
71683-06A	<u>HANDLEBAR SWITCHES</u>
71684-06A	<u>HANDLEBAR SWITCHES</u>
71685-06A	<u>HANDLEBAR SWITCHES</u>
71795-63A	<u>FRONT BRAKE CONTROL</u>
72023-51E	<u>REAR BRAKE CONTROL</u> <u>SWITCHES & CIRCUIT BREAKERS</u>
72033-93	<u>WIRING HARNESS, MAIN - CARBURETED (1 OF 2)</u> <u>WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)</u>
72039-71A	<u>WIRING HARNESS, MAIN - CARBURETED (1 OF 2)</u> <u>WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)</u>
72043-71A	<u>WIRING HARNESS, MAIN - CARBURETED (1 OF 2)</u>

	WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
72056-92	HEADLAMP (2 OF 2)
72076-00	WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
72077-00	WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
72078-00	WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
72106-94BK	WIRING HARNESS, MAIN - CARBURETED (1 OF 2) WIRING HARNESS, MAIN - CARBURETED (1 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
72113-94BK	WIRING HARNESS, MAIN - CARBURETED (1 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
72116-94BK	HANDLEBAR SWITCHES
72119-94BK	WIRING HARNESS, MAIN - CARBURETED (1 OF 2)
72124-94GY	WIRING HARNESS, MAIN - CARBURETED (1 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
72139-94GY	WIRING HARNESS, MAIN - CARBURETED (1 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
72143-94	TRANSMISSION HOUSING (2 OF 2)
72144-94	WIRING HARNESS, MAIN - CARBURETED (1 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
72146-94	WIRING HARNESS, MAIN - CARBURETED (1 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
72153-94	WIRING HARNESS, MAIN - CARBURETED (1 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
72156-94	HANDLEBAR SWITCHES
72159-94	WIRING HARNESS, MAIN - CARBURETED (1 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
72163-94BK	TRANSMISSION HOUSING (2 OF 2)
72164-94A	WIRING HARNESS, MAIN - CARBURETED (1 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
72176-94	HANDLEBAR SWITCHES
72190-94	WIRING HARNESS, MAIN - CARBURETED (1 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
72191-94	WIRING HARNESS, MAIN - CARBURETED (1 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2) HANDLEBAR SWITCHES
72194-94	TRANSMISSION HOUSING (2 OF 2)
72195-94	ALTERNATOR & REGULATOR WIRING HARNESS, MAIN - CARBURETED (1 OF 2)

72199-94	ALTERNATOR & REGULATOR ENGINE SENSORS AND SWITCHES WIRING HARNESS, MAIN - CARBURETED (1 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
7220	FRONT BRAKE CONTROL
72213-94	WIRING HARNESS, MAIN - CARBURETED (1 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
72214-94	WIRING HARNESS, MAIN - CARBURETED (1 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
72230-98	WIRING HARNESS, MAIN - CARBURETED (1 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
72231-98	WIRING HARNESS, MAIN - CARBURETED (1 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
72242-94	ALTERNATOR & REGULATOR WIRING HARNESS, MAIN - CARBURETED (1 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
72244-95	WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
72245-95	WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
72247-95	WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
72249-94	ALTERNATOR & REGULATOR SWITCHES & CIRCUIT BREAKERS
72263-95	WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
72266-94	TAIL LAMP - FXSTD/I HANDLEBAR SWITCHES
72273-95	WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
72280-95	WIRING HARNESS, MAIN - CARBURETED (1 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
72290-94	WIRING HARNESS, MAIN - CARBURETED (1 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
72291-94	WIRING HARNESS, MAIN - CARBURETED (1 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
72292-94	WIRING HARNESS, MAIN - CARBURETED (2 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)
72295-94	WIRING HARNESS, MAIN - CARBURETED (2 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)
7230	LICENSE PLATE BRACKETS
7232	FRONT FORK - FXSTS/I FRONT FORK - FLSTS/I
72327-03A	WIRING HARNESS, MAIN - CARBURETED (2 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)
72330-95	WIRING HARNESS, MAIN - CARBURETED (2 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)

	<u>SWITCHES & CIRCUIT BREAKERS</u>
72366-95	<u>ALTERNATOR & REGULATOR</u> <u>WIRING HARNESS, MAIN - CARBURETED (2 OF 2)</u> <u>WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)</u>
72368-00	<u>SWITCHES & CIRCUIT BREAKERS</u>
72369-00	<u>WIRING HARNESS, MAIN - CARBURETED (2 OF 2)</u> <u>WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)</u> <u>SWITCHES & CIRCUIT BREAKERS</u>
72374-00	<u>SWITCHES & CIRCUIT BREAKERS</u>
72380-00	<u>SWITCHES & CIRCUIT BREAKERS</u>
72380-07	<u>SWITCHES & CIRCUIT BREAKERS</u>
72405-98BK	<u>WIRING HARNESS, MAIN - CARBURETED (2 OF 2)</u> <u>WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)</u>
72412-97	<u>TAIL LAMP - FXSTD/I</u>
72428-00	<u>WIRING HARNESS, MAIN - CARBURETED (2 OF 2)</u> <u>WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)</u>
72429-00	<u>WIRING HARNESS, MAIN - CARBURETED (2 OF 2)</u>
72430-00	<u>WIRING HARNESS, MAIN - CARBURETED (2 OF 2)</u> <u>WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)</u>
72432-00	<u>WIRING HARNESS, MAIN - CARBURETED (2 OF 2)</u> <u>WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)</u>
72434-00	<u>WIRING HARNESS, MAIN - CARBURETED (2 OF 2)</u> <u>WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)</u>
72439-00B	<u>FUEL PUMP - FUEL INJECTED</u> <u>SENDING UNITS - CARBURETED MODELS</u>
72456-01	<u>SWITCHES & CIRCUIT BREAKERS</u>
72458-00	<u>FUEL PUMP - FUEL INJECTED</u> <u>SENDING UNITS - CARBURETED MODELS</u>
72463-00A	<u>REAR BRAKE CONTROL</u>
72516-01	<u>WIRING HARNESS, MAIN - CARBURETED (2 OF 2)</u> <u>WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)</u>
72604-01BK	<u>ALTERNATOR & REGULATOR</u>
72614-01BK	<u>ALTERNATOR & REGULATOR</u>
72644-01	<u>ALTERNATOR & REGULATOR</u>
72654-01	<u>ALTERNATOR & REGULATOR</u>
72690-01	<u>ALTERNATOR & REGULATOR</u>
72691-01	<u>ALTERNATOR & REGULATOR</u>
72904-01BK	<u>FUEL PUMP - FUEL INJECTED</u>

	SENDING UNITS - CARBURETED MODELS
72914-01BK	SENDING UNITS - CARBURETED MODELS WIRING HARNESS, MAIN - CARBURETED (2 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)
72990-01	FUEL PUMP - FUEL INJECTED SENDING UNITS - CARBURETED MODELS
72991-01	SENDING UNITS - CARBURETED MODELS WIRING HARNESS, MAIN - CARBURETED (2 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)
73102-96BK	HEADLAMP (2 OF 2) HEADLAMP - FLSTC/I & FLSTF/I FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I TAIL LAMP - FXSTD/I
73102-96WE	TAIL LAMP - FXSTD/I
73104-96BK	TAIL LAMP - FXSTD/I WIRING HARNESS, MAIN - CARBURETED (2 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)
73104-96WE	TAIL LAMP - FXSTD/I
73106-96BK	WIRING HARNESS, MAIN - CARBURETED (2 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)
73108-96BK	WIRING HARNESS, MAIN - CARBURETED (2 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)
73152-96BK	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I REAR TURN SIGNALS REAR TURN SIGNALS
73152-96WE	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I REAR TURN SIGNALS
73153-96BK	REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I
73154-96BK	HEADLAMP (2 OF 2) HEADLAMP - FLSTC/I & FLSTF/I TAIL LAMP (2 OF 2) TAIL LAMP - FXSTD/I
73154-96WE	REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I
73156-96BK	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I FRONT TURN SIGNALS TAIL LAMP (2 OF 2)
73158-96BK	TAIL LAMP (2 OF 2) TAIL LAMP - FXSTD/I
73165-01	SENDING UNITS - CARBURETED MODELS
73166-01	SENDING UNITS - CARBURETED MODELS
73167-01	SENDING UNITS - CARBURETED MODELS
73168-01	SENDING UNITS - CARBURETED MODELS

73190-96	HEADLAMP (2 OF 2) HEADLAMP - FLSTC/I & FLSTF/I FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I TAIL LAMP - FXSTD/I WIRING HARNESS, MAIN - CARBURETED (2 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)
73191-96	HEADLAMP (2 OF 2) HEADLAMP - FLSTC/I & FLSTF/I AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I FRONT FENDER - FLSTS/I REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I FRONT TURN SIGNALS REAR TURN SIGNALS TAIL LAMP (2 OF 2) TAIL LAMP - FXSTD/I
73196-96	WIRING HARNESS, MAIN - CARBURETED (2 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)
739A	PRIMARY HOUSING
74102-98BK	ENGINE SENSORS AND SWITCHES
74108-98BK	WIRING HARNESS, MAIN - CARBURETED (2 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)
74112-98BK	WIRING HARNESS, MAIN - CARBURETED (2 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)
74113-98BK	SENDING UNITS - CARBURETED MODELS WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)
74118-98BK	INSTRUMENTS (2 OF 2) INSTRUMENTS - FXSTD/I
74119-98BK	WIRING HARNESS, MAIN - CARBURETED (2 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)
74142-98	ENGINE SENSORS AND SWITCHES
74148-98	WIRING HARNESS, MAIN - CARBURETED (2 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)
74152-98	WIRING HARNESS, MAIN - CARBURETED (2 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)
74153-98	SENDING UNITS - CARBURETED MODELS WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)
74158-98	INSTRUMENTS (2 OF 2) INSTRUMENTS - FXSTD/I
74159-98	WIRING HARNESS, MAIN - CARBURETED (2 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)
74190-98	WIRING HARNESS, MAIN - CARBURETED (2 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)
74191-98	FUEL PUMP - FUEL INJECTED SENDING UNITS - CARBURETED MODELS WIRING HARNESS, MAIN - CARBURETED (2 OF 2)

	<u>WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)</u>
74193-98	<u>INSTRUMENTS (2 OF 2)</u> <u>INSTRUMENTS - FXSTD/I</u>
74194-98	<u>ENGINE SENSORS AND SWITCHES</u>
74195-98	<u>SENDING UNITS - CARBURETED MODELS</u> <u>INSTRUMENTS (2 OF 2)</u> <u>INSTRUMENTS - FXSTD/I</u> <u>WIRING HARNESS, MAIN - CARBURETED (2 OF 2)</u> <u>WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2)</u>
7434	<u>SEATS - FLSTS/I</u>
74430-00D	<u>TRANSMISSION HOUSING (2 OF 2)</u>
74540-01	<u>ALTERNATOR & REGULATOR</u>
74599-77B	<u>SWITCHES & CIRCUIT BREAKERS</u>
7479	<u>REAR FORK AND SHOCK ABSORBERS</u>
7481	<u>HORN</u>
7495	<u>HORN</u>
75049-01A	<u>SENDING UNITS - CARBURETED MODELS</u>
75053-01B	<u>SENDING UNITS - CARBURETED MODELS</u>
75062-01	<u>SENDING UNITS - CARBURETED MODELS</u>
7507	<u>REAR BELT GUARD</u> <u>FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I</u> <u>SADDLEBAGS - FLSTC/I</u> <u>SADDLEBAGS - FLSTS/I</u>
75099-01A	<u>FUEL PUMP - FUEL INJECTED</u>
75129-00B	<u>SENDING UNITS - CARBURETED MODELS</u>
75129-00C	<u>SENDING UNITS - CARBURETED MODELS</u>
75130-01B	<u>FUEL PUMP - FUEL INJECTED</u>
75130-01D	<u>FUEL PUMP - FUEL INJECTED</u>
75132-01D	<u>FUEL PUMP - FUEL INJECTED</u>
75142-02	<u>FUEL PUMP - FUEL INJECTED</u>
75206-01A	<u>SENDING UNITS - CARBURETED MODELS</u>
75298-05	<u>FUEL PUMP - FUEL INJECTED</u>
75300-05	<u>FUEL PUMP - FUEL INJECTED</u>
7531	<u>FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I</u> <u>FRONT FENDER - FXSTS/I</u> <u>SADDLEBAGS - FLSTC/I</u> <u>SADDLEBAGS - FLSTS/I</u>

7549A	INSTRUMENTS (1 OF 2)
755	FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I FRONT FENDER - FLSTS/I
758	FUEL TANK FUEL TANK - FUEL INJECTED FUEL TANK - FXSTD FUEL TANK - FXSTD - FUEL INJECTED
7588	FORK ROCKERS & CALIPER MOUNTING - FXSTS/I
7593	EXHAUST SYSTEM - FXST/I, FLSTC/I, FXSTS/I & FXSTB/I EXHAUST SYSTEM - FLSTF/I & FXSTD/I EXHAUST SYSTEM - FLSTS/I
7600	FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I
7601	ENGINE MOUNTS SEATS AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I REAR FENDER & SUPPORTS - FXST/I, FXSTS/I & FXSTB/I REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I EXHAUST SYSTEM - FXST/I, FLSTC/I, FXSTS/I & FXSTB/I EXHAUST SYSTEM - FLSTF/I & FXSTD/I EXHAUST SYSTEM - FLSTS/I
7606	HEADLAMP (1 OF 2) AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I
7613A	FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I
762	SEATS - FLSTS/I
7624	FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I HORN
7627	FORK ROCKERS & CALIPER MOUNTING - FXSTS/I
7629	IGNITION MODULE & COIL - CARBURETED ELECTRONIC CONTROL MODULE & COIL - FUEL INJECTED FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I LICENSE PLATE BRACKETS SWITCHES & CIRCUIT BREAKERS
765	CRANKCASE AND ENGINE OIL FILTER - Twin Cam 88B™
7651A	WINDSHIELD - FLSTC/I
7667	FORK ROCKERS & CALIPER MOUNTING - FXSTS/I FOOTRESTS & FOOTBOARDS
7669	REAR BELT GUARD
7680W	FRONT FORK - FXSTS/I FRONT FORK - FLSTS/I
7686	FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2) SEATS - FLSTS/I

7716	FOOTRESTS & FOOTBOARDS
7736	GEAR SHIFTER MIRRORS MIRRORS
7739	FRONT FENDER - FLSTS/I
7742	REAR BRAKE CONTROL
7744	FRONT TURN SIGNALS
7748W	FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2) FUEL TANK - FXSTD FUEL TANK - FXSTD - FUEL INJECTED
7753	FRONT TURN SIGNALS
7768W	HANDLEBAR
7778	BELTS, CHAINS & SPROCKETS FOOTRESTS & FOOTBOARDS FOOTRESTS & FOOTBOARDS FOOTRESTS & FOOTBOARDS
7783	REAR FORK AND SHOCK ABSORBERS
7792	REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I LICENSE PLATE BRACKETS LICENSE PLATE BRACKETS TAIL LAMP (1 OF 2)
7800W	HEADLAMP (1 OF 2) HEADLAMP - FLSTC/I & FLSTF/I
7838	STARTER MOTOR FRONT FENDER - FLSTS/I
7848W	CLUTCH
7862	FORK ROCKERS & CALIPER MOUNTING - FLSTS/I HEADLAMP (1 OF 2) FUEL TANK FUEL TANK - FUEL INJECTED FUEL TANK - FXSTD FUEL TANK - FXSTD - FUEL INJECTED
7879	ENGINE MOUNTS
7880	FORK ROCKERS & CALIPER MOUNTING - FLSTS/I
7892	AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I
7899A	REAR BELT GUARD
7951	REAR BRAKE CONTROL
7956	FRONT WHEEL (1 OF 2)
7959	FRONT FORK - FXSTS/I FRONT FORK - FLSTS/I
7962	FRONT FORK - FXST/I & FXSTB/I

7964	TAIL LAMP (1 OF 2)
7965	FUEL TANK FUEL TANK - FUEL INJECTED FUEL TANK - FXSTD FUEL TANK - FXSTD - FUEL INJECTED
7974	ENGINE BALANCER - Twin Cam 88B™
7987	FRONT WHEEL (1 OF 2) REAR WHEEL
7994	FRONT WHEEL (1 OF 2)
8001	FRONT WHEEL (1 OF 2)
8108	FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2) REAR FORK AND SHOCK ABSORBERS HORN
8144	OIL TANK & LINES
8483A	SWITCHES & CIRCUIT BREAKERS
855B	FRONT FORK - FXSTS/I FRONT FORK - FLSTS/I
856A	GEAR SHIFTER
858A	PRIMARY HOUSING
861A	EXHAUST SYSTEM - FLSTS/I
8871	STARTER MOTOR
8873	TRANSMISSION HOUSING (1 OF 2)
8876A	TRANSMISSION GEARS
8879	STARTER MOTOR
8883	STARTER MOTOR
895	CRANKCASE AND ENGINE OIL FILTER - Twin Cam 88B™
8972	CRANKCASE AND ENGINE OIL FILTER - Twin Cam 88B™
8977	TRANSMISSION HOUSING (1 OF 2)
8983	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)
8989	ENGINE BALANCER - Twin Cam 88B™
8990A	CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2)
8991	ENGINE BALANCER - Twin Cam 88B™
8992A	TRANSMISSION HOUSING (1 OF 2)
8996A	TRANSMISSION HOUSING (1 OF 2)
90247-00	SADDLEBAGS - FLSTC/I

90291-03	SADDLEBAGS - FLSTS/I
90346-00	SADDLEBAGS - FLSTC/I SADDLEBAGS - FLSTS/I
90367-03	REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I SADDLEBAGS - FLSTC/I SADDLEBAGS - FLSTS/I
90438-10	SADDLEBAGS - FLSTC/I
90469-94	FRAME & JIFFY STAND
90476-00	SADDLEBAGS - FLSTC/I
90477-00	SADDLEBAGS - FLSTC/I
90524-01	SADDLEBAGS - FLSTC/I SADDLEBAGS - FLSTS/I
9077	STARTER MOTOR
90770-79	CLUTCH CONTROL
91299-01	SADDLEBAGS - FLSTS/I
91300-01	SADDLEBAGS - FLSTS/I
9135	PRIMARY HOUSING
9139	FORK ROCKERS & CALIPER MOUNTING - FXSTS/I FORK ROCKERS & CALIPER MOUNTING - FLSTS/I
9140	FORK ROCKERS & CALIPER MOUNTING - FXSTS/I FORK ROCKERS & CALIPER MOUNTING - FLSTS/I
9141	FORK ROCKERS & CALIPER MOUNTING - FXSTS/I FORK ROCKERS & CALIPER MOUNTING - FLSTS/I
91679-00	SADDLEBAGS - FLSTC/I
91710-00	SEATS
91800025	WINDSHIELD - FLSTC/I
91806-00A	SEATS
91840-03B	MIRRORS
91845-03B	MIRRORS
91850-00	SEATS SADDLEBAGS - FLSTC/I
91877-97	SEATS - FLSTS/I SADDLEBAGS - FLSTS/I
91909-03B	MIRRORS
91910-03B	MIRRORS
9194	FRONT FENDER - FLSTS/I

9196	FRONT FENDER - FLSTS/I
9198	CRANKCASE AND ENGINE OIL FILTER - Twin Cam 88B™
9207	FRONT FENDER - FLSTS/I
923	FRONT BRAKE CONTROL
925	STARTER MOTOR
9267	FRONT WHEEL (1 OF 2) REAR WHEEL
9268	FRONT FENDER - FLSTS/I
9270A	REAR FORK AND SHOCK ABSORBERS
927A	FRONT TURN SIGNALS
929A	STARTER MOTOR
939	FRAME & JIFFY STAND
94004-90T	WINDSHIELD - FLSTC/I
941	PRIMARY HOUSING FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2)
94426-95	WINDSHIELD - FLSTC/I
945	PRIMARY HOUSING
946	AIR CLEANER & ENRICHENER - CARBURETED MODELS AIR CLEANER - FUEL INJECTED MODELS
95578-41	FRONT WHEEL (2 OF 2) REAR WHEEL
95581-47	FRONT WHEEL (2 OF 2) REAR WHEEL
95582-47	FRONT WHEEL (2 OF 2) REAR WHEEL
95595-84A	FRONT WHEEL (2 OF 2) REAR WHEEL
956	ENGINE BALANCER - Twin Cam 88B™
960	IGNITION MODULE & COIL - CARBURETED
961	PRIMARY HOUSING
9837	GEAR SHIFTER
9840	WIRING HARNESS, MAIN - CARBURETED (1 OF 2) WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
9842	SWITCHES & CIRCUIT BREAKERS
9843	ALTERNATOR & REGULATOR SWITCHES & CIRCUIT BREAKERS

9847	HEADLAMP (1 OF 2)
9848	HEADLAMP (1 OF 2)
98837-97	SADDLEBAGS - FLSTC/I SADDLEBAGS - FLSTS/I SADDLEBAGS - FLSTS/I
9898	HEADLAMP (2 OF 2)
992	FRONT FORK - FXSTD/I
9937	WIRING HARNESS, MAIN - FUEL INJECTED (1 OF 2)
994	FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I
9955	EXHAUST SYSTEM - FXST/I, FLSTC/I, FXSTS/I & FXSTB/I EXHAUST SYSTEM - FLSTF/I & FXSTD/I EXHAUST SYSTEM - FLSTS/I
SEE NOTE	FUEL TANK TRIM

Component Types and Introduction Dates

[View interactive table](#)

101A1 - Generic Nuts

7956	Unknown
7736	1949
7739	Unknown
7588	Unknown
8144	Unknown
7951	Unknown
7838	Unknown
7624	Unknown
7629	1990
7627	Unknown
7792	2012
3633	Unknown
7680W	Unknown
5216	Unknown
52720-00A	2000
7778	Unknown
37496-90	1990
7862	Unknown

7479	2000
7613A	1959
7748W	Unknown
3403	Unknown
94004-90T	1990
7768W	Unknown
35078-79	1979
7987	Unknown
67846-70	1970
7495	1994
7994	1988
762	1997
7879	2000
7880	Unknown
7964	Unknown
7965	Unknown
8001	Unknown
7974	Unknown
7481	Unknown
7753	Unknown
8108	Unknown
40392-91	1991
7744	1943
7593	1991
7742	Unknown
7549A	Unknown
7601	1990
45764-00	2000
7959	1997
102A1 - Generic Screws	
2447	Unknown
2917	2000
2448	Unknown

3533	Unknown
4266A	Unknown
4206	Unknown
4763	Unknown
1001	Unknown
3017	2000
68052-93	1993
4180	Unknown
3987	Unknown
4217	1999
4175	1998
68026-99	1999
1314	Unknown
4213	Unknown
2452	Unknown
4216	1999
2566	1995
2579A	Unknown
4741A	1994
2692WB	Unknown
3655A	Unknown
5419	2000
3692A	Unknown
44215-97A	1997
5416	Unknown
3249	Unknown
2646	2000
2955	1996
3953W	2009
3485A	Unknown
3022A	Unknown
994	2000

4311	Unknown
992	Unknown
44177-00	2000
4315	Unknown
43567-92	1992
3514	Unknown
4314	Unknown
2927	Unknown
4313	Unknown
941	Unknown
2941	Unknown
4350A	Unknown
29788-03	2003
4232	Unknown
3561WC	Unknown
4747	Unknown
2921	Unknown
4091	Unknown
2980	Unknown
3275	2002
1311D	2001
3693A	Unknown
895	Unknown
4326A	1990
960	2000
2773	Unknown
68452-86	1986
4132	Unknown
4391	2009
2723A	Unknown
4740A	1994
3658	Unknown
45405-75A	1975

3268	1997
956	Unknown
32617-00Y	2000
939	1991
3560WA	Unknown
3601	Unknown
2647B	Unknown
4729	Unknown
68120-00	2000
4355B	Unknown
4724	2009
90770-79	1979
4726	2009
2887WA	Unknown
4722	2009
4721	2009
4400	2011
3594	1992
45838-77	1977
925	Unknown
923	Unknown
861A	Unknown
4816A	Unknown
68042-99	1999
3728	2014
3746A	2004
1039	Unknown
2604	Unknown
4029A	1990
3699D	2006
33376-00	2000
4719W	2009

3300	Unknown
4411	2009
2720	2012
3494A	Unknown
4267	Unknown
45858-77	1977
3588	1990
3589	Unknown
3563	1999
2882W	2009
4017	2009
3562	Unknown
4383	Unknown
929A	Unknown
3909	Unknown
2501A	Unknown
29269-83A	1983
2538	Unknown
3509	Unknown
2534	Unknown
2531	Unknown
94426-95	1995
3233	Unknown
3602A	Unknown
4820A	Unknown
50635-82A	1982
3559	Unknown
3775	2009
56402-83A	1983
27317-88	1988
27146-89	1989
4358A	Unknown
47579-00	2000

4717A	Unknown
3767B	2009
927A	Unknown
3574	Unknown
3440	2009
945	Unknown
3214	Unknown
946	Unknown
855B	2014
3784	Unknown
4312C	Unknown
961	Unknown
48093-00	2000
3008	2000
4716W	2009
16478-85A	1985
44190-88A	1988
856A	1990
1783C	Unknown
3737A	Unknown
56397-74C	1974
2823	Unknown
4163	Unknown
4164	Unknown
4165	Unknown
4166	Unknown
4168	2000
5403B	Unknown
3736A	2005
4195	Unknown
4194	Unknown
4197	Unknown

4453	1986
3892	Unknown
4190	Unknown
45790-80	1980
858A	Unknown
16480-92A	1992
4343	Unknown
4814A	Unknown
3538	Unknown
3471	2009
103A1 - Generic Washers	
6019	Unknown
6639	2006
6758	1988
6756	1988
45662-88	1988
6016	2013
6336B	Unknown
6474	Unknown
6040A	2000
56159-73	1973
7130W	Unknown
27125-89	1989
6497HW	2010
6771A	Unknown
27148-89	1989
7434	1999
6294	2010
8972	Unknown
29811-03	2003
6379W	Unknown
6371	Unknown
6333	Unknown

6057	1991
45717-63	1963
6099	2011
27127-89	1989
6109	1980
6101	2011
6139	Unknown
7129	Unknown
31689-90	1990
6852	1999
6072	Unknown
6534	2000
6535	2000
6590HW	Unknown
7230	Unknown
7232	1954
45323-01	2001
6516HW	Unknown
6530	Unknown
6532	2000
6036	Unknown
6812	Unknown
6042A	Unknown
65782-82	1982
7220	Unknown
27137-81	1981
7068	Unknown
6498	Unknown
7038	1998
7039	Unknown
6724	1984
6829	1997

6409	Unknown
6762B	Unknown
6237	2014
56183-00	2000
6753	Unknown
6229W	Unknown
6655	1979
7041	1958
6703	1970
6701	Unknown
6702	Unknown
6400HB	Unknown
6716	Unknown
104A1 - Custom Nuts	
54321-85	1985
7606	1983
105A1 - Custom Screws	
7899A	Unknown
4482	Unknown
27130-90	1990
37090-98A	1998
4074A	2006
27262-96	1996
48054-00	2000
106A1 - Custom Washers	
6003	2010
7124	Unknown
108A1 - Hose Clamps	
56135-00A	2000
10053	2010
10038A	1994
10031	2010
65708-97	1997

10014	Unknown
10208	Unknown
10222	2000
9955	Unknown
10080	Unknown
10074	Unknown
10113	Unknown
45044-96A	1996
108B1 - P Clamps	
508	Unknown
10209	Unknown
71795-63A	1965
10076	2010
109A1 - Studs	
16715-83	1983
10184	Unknown
45998-73	1973
90367-03	2003
45544-88	1988
10136	Unknown
16834-99A	1999
10224	Unknown
56550-97	1997
110B1 - Plain Bushings	
31430-94	1994
34979-00	2000
5818A	Unknown
9194	2012
9198	Unknown
62881-00	2000
48330-48A	1948
8996A	1996

17429-91	1991
33446-94A	1994
33714-90B	2011
9139	1988
8989	1998
25344-99	1999
9270A	Unknown
8992A	Unknown
8991	Unknown
53156-86	1986
44030-88A	1988
9837	Unknown
8876A	Unknown
61657-00	2000
33445-94A	1994
67266-94	1994
56182-00A	2000
33708-94	1994
48048-00A	2000
45866-84	1984
9141	1988
57217-02	2002
8883	Unknown
8879	Unknown
9267	Unknown
110C1 - Radial Shaft Seals	
45359-00	2000
12066A	Unknown
12068	Unknown
12045	Unknown
12035B	Unknown
11291	Unknown
12052A	2003

12067B	2002
110D1 - Rolling Element Bearings	
8977	Unknown
9135	Unknown
8983	Unknown
8990A	Unknown
24605-07	2007
9140	1988
8871	Unknown
33720-93	1993
9207	Unknown
111A1 - Adhesive	
72194-94	1994
73165-01	2001
58417-77	1977
72690-01	2001
73166-01	2001
72990-01	2001
73167-01	2001
72691-01	2001
73168-01	2001
111D1 - Isolating Tape	
61960-04	2004
111F1 - Protective Tape	
90524-01	2001
59567-00C	2000
116A1 - Banjo Bolts	
41739-84A	1984
41747-82A	1982
117A1 - Coil Springs	
56396-74A	1974
27162-89	1989

119A1 - O-Rings

11165	Unknown
72458-00	2000
11270	Unknown
11273	Unknown
11323	2004
11326	Unknown
26432-76A	1976
11105	Unknown
11345	Unknown
10957	2006
11145A	2007
11351	2001
11157	1983
27577-92	1992
11140	1982
11147B	2006
11289A	Unknown
45845-77	1977
11132A	2007
11298	Unknown
11191	1989
11293	1996
11290	1998
11292	Unknown
11380	Unknown
44059-83	1983
11301	Unknown
11286	Unknown
31695-90	1990
11364	2002
11256	1996
11179	1986

120A1 - Pins	
16583-00A	2000
601	Unknown
609	Unknown
634	Unknown
534	Unknown
16574-99A	1999
16589-99A	1999
42460-80B	1980
337	Unknown
509	Unknown
515	Unknown
375	Unknown
16595-99A	1999
121A1 - Grommets	
11447	1984
62880-00	2000
11437	Unknown
11410	Unknown
11413	Unknown
29342-99	1999
121B1 - Press-Fit Plugs	
739A	Unknown
68446-00	2000
765	1997
10228	2000
3290	2013
72164-94A	1994
755	Unknown
122A1 - Retaining Rings	
10998	1985
11271	Unknown

11272	Unknown
41713-86	1986
10124	1992
17945-36B	1936
11319A	Unknown
45021-86	1986
10040	1982
44021-83	1983
35114-02	2002
11688	Unknown
65325-83A	1983
45611-86	1986
35087-99A	1999
10183	1996
10103	Unknown
5244	Unknown
11031	Unknown
11150	1984
10108	Unknown
10193	Unknown
11342	Unknown
11155	Unknown
11533	2014
38723-99	1999
68562-84	1984
31530-90	1990
11143	Unknown
11494	Unknown
37905-00	2000
11177A	1996
11294	Unknown
11096	2010
11282	Unknown

11280	Unknown
11067	Unknown
11182	Unknown
10226	2000
11085	Unknown
27124-89	1989
10216	2013
60678-85	1985
10149	Unknown
10263A	2009
11248	Unknown
67604-94	1994
11161	Unknown
123B1 - Spring Washers	
7127	Unknown
7062	Unknown
124A1 - Spacers	
14782-00	2000
14787-00	2000
14781-00	2000
9196	Unknown
62188-04	2004
11261	Unknown
24603-00	2000
48049-00A	2000
6296	Unknown
33344-94	1994
5775	1984
29923-01A	2001
49166-00	2000
14788-00	2000
5756	Unknown

14786-00	2000
14784-00	2000
11860	Unknown
5885	Unknown
14783-00	2000
35629-79	1979
14785-00	2000
5710	Unknown
48094-00	2000
9268	Unknown
14780-00	2000
11244	Unknown
125A1 - Tie Straps	
10065	1985
10236	1999
11321	2000
10039	1981
10177	1996
10181	1996
10006	1960
10081	1984
10115	2003
126A1 - Miscellaneous Hardware	
50972-75	1975
48324-00	2000
11565	2000
31692-90	1990
46057-88	1988
47573-00A	2000
68331-02	2002
46053-88	1988
27136-90A	1990
11514	1998

44337-00B	2000
45567-88	1988
11456	Unknown
46056-88	1988
61583-02	2002
46060-88	1988
41042-93	1993
61960-00	2000
33126-94	1994
11529	Unknown
33318-85	1985
45628-92	1992
45935-88	1988
46059-90	1990
45937-88	1988
46058-97	1997
33375-00A	2001
33449-94	1994
56394-74	1974
33374-00	2000
46062-88	1988
8873	1984
44061-83	1983
126B1 - Rivets Fasteners	
8483A	Unknown
127A1 - Miscellaneous, Non-System-Specific Component	
91850-00	2000
91679-00	2000
127B1 - Generic Mounting Bracket	
44097-97	1997
52097-00	2000
52015-97A	1997

33683-00	2000
33630-00A	2000
48053-00	2000
58082-02A	2002
140A1 - Battery Warning Label	
15368-01A	2001
140A2 - General Warning Label	
29449-98B	1998
68798-97A	1997
29126-90B	1990
44197-77	1977
140A3 - Other Special Warning Label	
68730-98	1998
14150-86	1986
140G2 - EPA Label	
29404-01A	2001
29127-95B	1995
141A1 - Medallion	
60987-03	2003
62067-03A	2003
52444-03	2003
61537-03	2003
24709-03	2003
60988-03	2003
62068-03A	2003
14270-92	1992
61538-03	2003
61539-03	2003
66030-88	1988
44338-00	2000
71302-93A	1993
60996-03	2003
60997-03	2003

161A1 - Powertrain Assembly	
16129-03	2003
16119-03	2003
16132-03	2003
162D1 - Engine Assembly	
16155-03	2003
16184-03	2003
16121-03	2003
16126-03	2003
16118-03	2003
16114-03	2003
16128-03	2003
16113-03	2003
16142-03	2003
162D2 - Engine Assembly Common Unit	
19223-03	2003
164A1 - Engine Mount Bracket	
38608-96	1996
16247-00	2000
164B1 - Engine Mount Bracket sub-component	
7962	Unknown
7600	Unknown
7716	1990
69047-01	2001
7783	Unknown
7531	1980
7669	Unknown
69046-01	2001
7667	Unknown
7686	Unknown
7507	Unknown
7892	1998

7848W	Unknown
7800W	Unknown
165A1 - Cylinder Head	
18011-86	1986
16724-99	1999
16716-99	1999
16722-99	1999
16717-99	1999
165B1 - Cylinder Head and Base Gaskets	
16775-99B	1999
173B1 - Rocker Arm Shaft	
17594-99	1999
179A1 - Lifters	
17577-99	1999
18538-99C	2011
179B1 - Push Rod	
17922-99	1999
17923-99	1999
179C1 - Lifter Anti-Rotation Device	
18535-99	1999
180A1 - Valves	
18076-83	1983
18101-83D	1999
18074-83B	2007
18082-83A	1983
181B1 - Valve Seals	
18133-83B	1983
18130-83D	1983
18219-83A	1983
18020-83	1983
18134-83	1983
18131-83D	1983
18124-83	1983

18001-83B	1983
181C1 - Valve Collars	
18229-83A	1984
17947-36	1936
17968-99	1999
219A1 - Piston	
16526-99	1999
21933-99	1999
16525-99	1999
21930-99	1999
21931-99	1999
220A1 - Piston Ring	
21937-99	1999
21938-99	1999
21936-99	1999
221A1 - Piston Pin	
22132-99	1999
22097-99	1999
237B1 - Connecting Rod sub-component	
24316-99	1999
239A1 - PT Lower End Miscellaneous Component	
48365-48A	1981
35060-00	2000
241A1 - Flywheel	
23912-00D	2007
24004-03B	2012
244A1 - Crankcase	
24678-03	2003
24679-03	2003
244D1 - Crankcase sub-component	
22307-99	1999
24039-03	2003

245A1 - PT Cases Miscellaneous Component	
24983-00	2000
254A1 - Camdrive Gear	
25533-99A	2001
254B1 - Camshaft	
25544-00	2000
25938-00	2000
25534-99	1999
254C1 - Camshaft Sprocket	
40299-83A	1983
25609-99	1999
25716-99	1999
254D1 - Camshaft Support	
25267-99B	2001
255A1 - Camdrive Chain	
25607-99	1999
25610-99	1999
255B1 - Camdrive Chain Guide	
39965-99	1999
255D1 - Camdrive Chain Tensioner sub-component	
39976-01	2001
14764-00	2000
256A1 - Timer Cover	
32536-03	2003
32543-99	1999
32727-00	2000
257A1 - Cam Cover	
25364-01B	2001
25367-01B	2001
25369-01B	2001
257B1 - Clutch Cover	
60668-99	1999
60713-99	1999

25414-99	1999
60743-03	2003
257D1 - Clutch Inspection Cover	
60572-86	1986
257E1 - Cover Gaskets	
35653-98A	1998
65324-83B	2009
61315-02	2002
11260	2010
41731-01	2001
34904-86D	1986
67602-94	1994
17053-99C	2011
67223-00A	2000
29583-01A	2001
43727-00	2000
61109-85D	1985
16719-99B	1999
17045-99D	2011
61324-01	2001
61381-02	2002
25416-99C	1999
67601-94A	1994
41733-88	1988
25244-99A	1999
29313-95	1995
63859-95B	1995
29062-95B	1995
45733-48	1948
60567-90C	1990
25700225	2012
18635-99B	1999

60539-94B	1994
36801-87C	1987
41731-88A	1988
17052-99C	2011
61192-96A	1996
17386-99A	1999
257L1 - Primary Cover	
60715-99B	1999
60630-94B	1994
60543-99B	1999
60721-99B	1999
60724-98A	2000
60586-99A	1999
257M1 - Push Rod Cover	
17948-99	1999
17939-99	1999
257N1 - Rocker-Arm / Valve Cover	
17575-99	1999
17620-99	1999
17574-99A	1999
17618-99A	1999
17375-83A	1983
17611-83	1983
17573-99A	1999
17360-83A	1983
17572-99	1999
257P1 - Tappet Cover	
17576-99	1999
17964-99	1999
17966-99	1999
258A1 - PT Covers Miscellaneous Component	
34541-00	2000
37105-99	1999

62373-01	2001
265A1 - Vent / Breather Line	
17907-01	2001
17025-03A	2011
26500002	2011
270A1 - Carburetor	
27361-76A	1976
27339-90	1990
27360-76	1976
27362-76	1976
27429-00B	2000
27260-00	2000
27147-89	1989
27583-88	1988
27156-89	1989
27405-00	2000
27261-96	1996
27243-95	1995
27371-76A	1976
27582-88	1988
27587-88	1988
27311-76	1976
27428-00B	2000
27414-99C	1999
27101-88	1988
28025-03	2003
27421-99C	1999
27585-88	1988
27586-88	1988
27575-88A	1988
27560-00	2000
27100-88	1988

27128-89	1989
27126-89	1989
27267-00	2000
27315-88A	1988
27263-96	1996
27576-92	1992
271C1 - Intercooler Gasket	
65781-82	1982
65927-00	2000
272B1 - Throttle Body / Intake Manifold	
27600-01A	2001
27603-01	2001
273A1 - Intake Manifold	
27613-99	1999
27630-01	2001
273C1 - Throttle Body/Intake Manifold sub-component	
27604-01A	2001
273E1 - Idle Air Control Actuator	
27628-01A	2001
273K1 - Throttle Body to Manifold Seal	
26995-86B	1986
273N1 - Throttle Cable Retention Bracket	
56508-76	1976
274B1 - Fuel Rail	
27408-01	2001
27608-01A	2001
274C1 - Fuel Injector	
27609-01B	2001
275A1 - PT Upper End Miscellaneous Component	
27635-01A	2002
37313-80	1980
290A1 - Airbox Baseplate	
29581-01B	2001

29582-01B	2001
29456-99	1999
290C1 - Airbox Baseplate sub-component	
29664-01	2001
29482-00	2000
29366-00	2000
29808-03	2003
29584-01	2001
29658-01	2001
29169-00	2000
29256-00	2000
29809-03	2003
29089-99	1999
29181-00	2000
29161-00	2000
29662-01	2001
29666-01	2001
29660-01	2001
290D1 - Airbox Seal	
29338-99	1999
292B1 - Air Duct Bezel	
29668-01	2001
294A1 - Air Filter Element	
63815-99	1999
29461-99	1999
294B1 - Breather Bolt	
29465-99	1999
294C1 - Breather Hose	
29476-99	1999
294F1 - Engine Breather Valve	
28828-00	2000
294G1 - Air Cleaner	

27010-86A	1986
27009-86A	1986
295A1 - Intake Miscellaneous Component	
27579-88A	1988
27002-89	1989
27886-78A	1978
29229-88D	1988
27170-89	1989
299C1 - Charging Rotor	
29981-95	1995
299F1 - Stator Assembly	
30017-01B	2006
314E1 - Starter Friction Clutch	
31516-94A	2010
9077	Unknown
314F1 - Starter Motor	
31518-90	1990
31510-90	1990
31702-98	1998
31515-90	1990
31553-94B	1994
31612-09	2009
314G1 - Starter Motor sub-component	
31741-00	2000
31535-91	1991
27581-88	1988
31548-90	1990
31527-90	1990
31664-94	1994
31688-90	1990
31703-98	1998
314H1 - Starter Solenoid	
31604-91A	1991

314L1 - Starter Motor Drive	
33189-63	1963
316A1 - Ignition Coil	
31655-99	1999
32568-00C	2015
31743-01	2001
316B1 - Spark Plug Cable	
31981-99C	1999
31983-00C	2000
316C1 - Spark Plug	
32362-04	2004
327C1 - Pressure Sensor	
32416-10	2010
74430-00D	2000
327D1 - Proximity Sensor	
32707-01C	2007
327E1 - Temperature Sensor	
27270-95	1995
32446-99	1999
327F1 - Throttle Position Sensor	
27629-01A	2001
336A1 - Shift Linkage Rod Assembly	
33895-82D	2010
336C1 - Shift Linkage Rod End	
33719-79B	1979
336D1 - Shift Pedal	
33849-97	1997
336F1 - Toepeg	
34611-65A	1965
339A1 - Shift Lever	
34564-90B	1990
33668-90C	1990

339D1 - Shifter Fork	
34195-79E	1979
34088-87A	1987
34193-79E	1979
34191-79E	1979
339H1 - Shifter Mechanism Components (internal)	
34064-00C	2000
33301-00A	2000
33304-00	2000
33383-02	2002
34091-85A	1985
33364-00A	2000
33660-90B	1990
33127-94	1994
339K1 - Shifter Pawl	
34972-02B	2002
347A1 - Transmission Assembly	
33005-03	2003
33006-03	2003
33007-03	2003
35076-79	1979
33052-03	2003
37189-99	1999
33051-03	2003
35064-79	1979
37232-00	2000
348A1 - Transmission Output Sprocket Cover	
34774-00A	2000
34732-00A	2000
350A1 - Transmission Output Sprocket	
40250-94C	1994
350E1 - Transmission Gear	
31342-94	1994

350F1 - Transmission Mainshaft

35029-94	1994
35027-94	1994
35025-79B	1981
35028-94	1994
35042-91	1991

350G1 - Transmission Shim / Spacer

25721-00	2000
25723-00	2000
25722-00	2000
25717-00	2000
25719-00	2000
25725-00	2000

352A1 - Engine Balancer

14789-00	2000
14790-00	2000

352B1 - Engine Balancer sub-component

14728-00	2000
14717-00	2000
14762-00	2000
14761-00	2000
14716-00	2000

356A1 - Transmission Countershaft

35026-94	1994
35626-94	1994
35632-79	1979
35625-94	1994
35622-79C	1979

363A1 - PT Driveline Miscellaneous Component

42533-91A	1991
35251-93C	1993
35252-93B	1993

35051-89A	1989
35211-91B	1991
34978-00A	2000
34977-02A	2002
40266-85	1985
37069-90A	2010
365A1 - Primary Chain	
40007-36B	1936
365B1 - Primary Chain Tensioner	
39990-01	2001
39998-65A	1970
39954-99A	1999
39964-99A	1999
365C1 - Primary Drive Assembly	
40308-94	1994
40384-91	1991
40251-92A	1992
40323-00	2000
367A1 - Clutch Lever	
45015-96	1996
367H1 - Clutch Lever sub-component	
37312-75	1975
37871-98A	1998
34920-86A	1986
37904-90	1990
37906-90	1990
38630-88	1988
37909-90	1990
37872-00	2000
370A1 - Clutch Assembly	
45036-88	1988
37802-98B	1998
370B1 - Clutch Friction Plate	

37932-98	1998
37913-98	1998
370C1 - Clutch Hub	
37550-98	1998
370E1 - Clutch Metal Plate	
37903-90	1990
37088-90	1990
370F1 - Clutch Pressure Plate	
37912-00	2000
370F3 - Clutch Diaphragm Spring	
37883-98	1998
37884-98	1998
370G1 - Clutch Shell	
37707-98A	1998
372D1 - Clutch Cable	
38666-00	2000
38665-00	2000
38664-00	2000
372K2 - Clutch Ramp	
25604-00A	2000
25605-00A	2000
372N1 - Clutch Vacuum Hose	
26567-99	1999
400A1 - Drive-Belt	
40307-00B	2011
409A1 - Rear Wheel	
41074-00	2000
409C1 - Rear Wheel Hub	
40976-00	2000
410D1 - Electronic Control Module (ECM)	
68921-01D	2001
72456-01	2001

32534-11	2011
59543-01	2001
410G1 - Security System Control Module	
68923-00D	2000
68925-00D	2000
413A1 - Brake Caliper	
44441-00D	2000
44046-00D	2000
44074-88B	1995
44077-88F	1988
44160-00	2000
44016-00D	2000
44163-00	2000
44086-97	1997
413B1 - Brake Bleeder Screw	
44048-83	1983
413C1 - Brake Caliper sub-component	
44235-97	1997
45420-80	1980
44044-00	2000
44054-83	1983
46175-00	2000
44315-00	2000
44147-87A	1987
44022-83	1983
44236-97	1997
48361-80	1980
413E1 - Brake Pad Pin	
44314-00	2000
44053-83B	1983
413G1 - Brake Caliper Piston Set	
44313-01	2001
415B1 - Brake Rotor	

44156-00	2000
41797-00	2000
44260-00	2000
416A1 - Brakes Miscellaneous Component	
40918-87	1987
42431-11	2011
40920-87	1987
72023-51E	2012
41040-88B	1988
43466-97	1997
417A1 - Brake Master Cylinder Assembly	
45030-03C	2003
41755-99D	1999
417B1 - Brake Master Cylinder	
45019-96D	1996
417C1 - Brake Master Cylinder Piston Set	
42382-87C	2000
44020-83	1983
417D1 - Brake Master Cylinder sub-Component	
10866	2011
45006-96C	1996
42568-05A	2011
42455-99	1999
44047-83	1983
43467-97	1997
40922-87A	1987
45032-82	1982
45423-92	1992
45423-96	1996
42507-00B	2000
41047-97	1997
46458-05	2005

44351-00	2000
417F1 - Brake Master Cylinder Reservoir	
42454-99A	1999
417G1 - Front Brake Lever	
45016-96	1996
418B1 - Brake Line	
42303-00A	2000
45209-97B	2000
45156-00	2000
45091-97	1997
45119-00B	2002
45133-04B	2006
45110-96	1996
45199-99B	2001
45199-99	1999
45250-98	1998
42305-00	2000
45250-98B	1998
45119-00	2000
42317-06A	2006
45108-04	2004
420A1 - Wheel Rim	
43662-80B	1983
43085-97	1997
421A1 - Wheel Spoke with Nipple	
43239-05	2005
43241-05	2005
422B1 - Wheel Sprocket	
40289-00	2000
40303-00	2000
40295-00	2000
423G1 - Valve Stem	
43157-83A	1983

423H1 - Valve Stem Cap	
41123-79	1979
423K1 - Wheel Weights	
95578-41	1941
95595-84A	2010
95581-47	1947
95582-47	1947
424A1 - Wheels, Tires and Final Drive Miscellaneous Component	
44062-83	1983
44079-97C	1997
40700-05A	2005
430B1 - Rear Axle Carrier / Adjuster	
45066-00	2000
430D1 - Front Axle	
41116-97	1997
43354-00	2000
41584-86A	1986
41109-88A	1988
43346-83B	1983
430E1 - Rear Axle	
41110-79A	1979
45832-77A	1977
433A1 - Front Wheel	
41038-00	2000
433B1 - Front Wheel Bearing Spacer	
43614-00	2000
43608-00	2000
43654-00A	2000
43671-05A	2005
43623-00	2000
40910-00A	2000
41595-00B	2000

43360-00	2000
43700-05A	2005
44029-00	2000
43683-00A	2000
43617-00A	2000
47577-00	2000
43005-05A	2005
43624-00	2000
43676-05A	2005
56153-73	1973
43016-00B	2000
433C1 - Front Wheel Hub	
43701-00	2000
43155-00	2000
43067-97	1997
44447-00	2000
454A1 - Front Telescopic Fork	
45916-00	2000
46064-00	2000
46004-00	2000
454B1 - Springer Fork	
45633-00	2000
45917-86	1986
45651-91	1991
45629-97	1997
45649-91	1991
46006-00	2000
45569-00	2000
45607-93	1993
45915-00	2000
46066-00	2000
45631-97	1997
455A1 - Front Telescopic Fork Slider	

45964-86	1986
46067-00	2000
45873-00	2000
45417-00	2000
45874-91	1991
46068-00	2000
45918-00	2000
455B1 - Front Telescopic Fork Spring	
46048-00	2000
46054-88	1988
45931-00	2000
45619-97	1997
46055-88	1988
455C1 - Front Telescopic Fork sub-component	
44031-97	1997
45660-88A	1988
45803-97	1997
45930-00	2000
45865-84	1984
45940-84	1984
45656-97	1997
45419-80	1980
2738	Unknown
45933-86	1986
45663-88A	1988
7012	1988
45936-88	1988
456A1 - Fork Protector	
46000-00	2000
45859-77A	1977
456C1 - Fork Lock	
45680-90	1990

457D1 - Steering Stem	
45475-00A	2000
45605-00A	2000
457E1 - Steering Stem Bearing Insert Cup	
48315-60	1960
48300-60	1960
457F1 - Steering Stem Nut	
45718-60	1960
458A1 - Front Suspension and Steering Miscellaneous Component	
45659-88	1988
6353	Unknown
45875-84A	1984
45842-77A	1977
48306-88	1988
48332-48C	1948
45670-80A	1980
45655-88	1988
67819-86	1986
45648-85A	1985
459A1 - Upper Triple Clamp	
45456-86B	1986
45672-80B	1980
45473-88	1988
45769-00	2000
45491-97	1997
459B1 - Lower Triple Clamp	
67814-86	1986
67816-86	1986
67821-87	1987
45685-93	1993
67808-86	1986
45640-00A	2009
50991-86	1986

470A1 - Frame	
31519-90	1990
48887-00B	2000
47008-00C	2000
472D1 - Chassis Structure Miscellaneous Component	
59043-93	1993
472D2 - Chassis Structure Mounting Bracket	
59964-03	2003
69137-00	2000
59066-03	2003
59969-03	2003
59954-03	2003
59955-03	2003
61721-00A	2000
60035-00	2000
58991-03	2003
62769-00A	2000
60028-00	2000
48052-00A	2000
475B1 - Swingarm Pivot Shaft	
47610-00	2000
500A1 - Sidestand Assembly	
50087-89B	1989
500E1 - Sidestand Leg sub-component	
62123-66	1966
50015-74A	1974
50005-85A	1985
505B1 - Footpeg Mount Bracket	
33048-72	1972
50942-00	2000
505D1 - Passenger Footpeg	
50621-79A	1979

505H1 - Footpeg Insert	
50614-91A	1991
506A1 - Brake Pedal	
42597-00A	2000
42416-83	1983
42515-00A	2000
41957-97A	1997
50912-72	1972
42532-82	1982
50600026	2011
507B1 - Rider Interface Mounting Bracket	
42431-00	2000
520A1 - Rider Seat or Full Seat	
51793-01	2001
51032-03A	2006
51792-01	2001
51033-03	2003
52560-00	2000
52218-00	2000
52602-00	2000
52506-00	2000
91806-00A	2001
91710-00	2000
52467-00	2000
51043-03	2003
521A1 - Seat Support Structure	
48868-00	2000
521C1 - Seat Suspension Damper	
45418-00	2000
45932-00	2000
46176-00	2000
523B1 - Back Rest Pad	
52189-00	2000

52731-00	2000
523C1 - Back Rest Support Structure	
52788-00	2000
52787-00	2000
52771-82	1982
524A1 - Passenger Grab Handle	
52687-97	1997
51188-00	2000
51184-00	2000
51186-00	2000
51185-00	2000
524B1 - Passenger Seat	
52906-03	2003
51796-00	2000
52210-00	2000
52507-00	2000
53073-03	2003
540B1 - Rear Shock	
54508-00B	2000
54484-97	1997
54485-97	1997
540L2 - Rear Suspension Mounting Bracket	
44082-00D	2000
44063-83C	1983
558A1 - Handlebar	
55933-97	1997
56093-88A	1989
53157-97	1997
55919-01	2001
56102-99	1999
56569-86	1986
56188-00	2000

56224-99A	1999
559D1 - Lower Handlebar Clamp	
56542-86A	1986
56538-88	1988
56019-98A	1998
56018-98A	1998
56133-00A	2001
56548-97	1997
56541-86A	1986
56124-77	1977
56122-77	1977
56540-88	1988
559E1 - Upper Handlebar Clamp	
56119-77A	1977
56567-86B	1986
560A1 - Mirror	
91840-03B	2003
91845-03B	2003
91909-03B	2003
91910-03B	2003
561A1 - Throttle Cable	
56432-98	1998
56433-98	1998
56343-01	2001
56305-96	1996
56342-01	2001
56306-96	1996
561B1 - Left Hand Grip	
56206-96	1996
561D1 - Throttle Assembly sub-component	
38653-01	2001
561E1 - Throttle Grip	
56220-94A	1994

572E1 - Side Cover	
34544-00	2000
573A1 - Bodywork Miscellaneous Component	
58272-95	1995
58252-95	1995
7651A	Unknown
573B1 - Bodywork Mounting Bracket	
59053-00	2000
56628-00	2000
56627-00	2000
574B1 - Windscreen / Windshield	
58428-94	1994
57400112	2012
58431-94	1994
57062-00A	2000
57060-00	2000
58241-95	1995
58253-95	1995
58416-77A	1977
58406-75A	1975
67621-94	1994
57063-00A	2000
58213-00	2000
58408-75A	1975
589A1 - Front Fender	
59129-86A	1986
59164-97A	1997
59924-80B	1980
59876-00A	2010
59176-96A	1996
59139-00A	2000
59438-00	2000

59050-03	2003
595D1 - Rear Fender	
59914-00A	2000
59759-00	2000
59596-00A	2000
59155-00B	2000
59144-00A	2000
59076-03	2003
59119-03	2003
59768-97	1997
59088-03	2003
59174-99	1999
596A1 - Tire Mud Flap	
60363-00B	2000
596B1 - Fender Tip	
69609-00	2000
59358-97	1997
68046-79	1979
59116-96	1996
59117-96	1996
603B1 - Belt / Chain Guard	
60533-00A	2000
60564-00A	2004
60362-00	2000
608A1 - Carbon Canister	
27293-00	2000
27042-84A	1995
608B1 - Carbon Canister Hose	
28839-00	2000
27016-00	2000
28884-00	2000
27328-00	2000
609A1 - Fuel Miscellaneous Component	

62919-00	2000
72439-00B	2000
61231-01	2001
62188-01	2001
62842-00	2000
27612-01	2001
609B1 - Fuel and Intake Mounting Bracket	
62146-00	2000
29474-99A	1999
610A1 - Fuel Tank	
61450-95	1995
61625-01D	2001
62082-00D	2000
62180-00D	2000
611B1 - Fuel Cap	
61272-92C	1992
611F1 - Fuel Tank Vapor Vent Hose	
27072-00	2000
27138-90	1990
62357-00	2000
62555-95	1995
28838-00	2000
63501-68B	1968
63505-84	1984
612A1 - Fuel Filter	
61001-01	2001
612B1 - Fuel Level Sensor	
75142-02	2002
75298-05	2005
75206-01A	2001
75300-05	2005
612B2 - Fuel Valve	

62166-02	2002
62161-02	2002
61338-02	2002
62172-02	2002
62150-85	1985
612C1 - Fuel Line	
62900-01D	2009
63521-95A	1995
62190-01D	2009
612F1 - Fuel Pump	
62897-01B	2001
62897-01A	2001
75132-01D	2001
62165-01	2001
62163-01A	2001
62163-04	2004
75130-01D	2001
75130-01B	2001
612K1 - Fuel Pump sub-component	
62843-00	2000
75129-00C	2000
75129-00B	2000
61209-01A	2001
758	Unknown
613B1 - Horn Cover	
69012-93A	1993
69039-09	2009
613D1 - Intake / Fuel Tank Cover Trim	
61961-00	2000
613K1 - Airbox Cover	
29075-99	1999
29094-01	2001
29121-01	2001

614C1 - Trim	
62234-03A	2003
71464-00	2000
91877-97	1997
59211-74A	1974
62235-03A	2003
62239-03A	2003
62237-03A	2003
14142-86A	1986
59235-86	1986
40964-00	2000
62236-03A	2003
71265-95	1995
61155-00	2000
61165-00	2000
62238-03A	2003
624A1 - Oil Pump Assembly	
26035-99B	1999
624B1 - Oil Pump Assembly sub-component	
26248-00	2000
26464-99	1999
26255-00	2000
26210-99	1999
26400-82B	1982
625B1 - Oil Tank	
62498-01A	2007
62840-00A	2000
62492-01A	2001
627B1 - Oil Drain Plug	
60328-98B	1998
627E1 - Oil Filler Plug / Dipstick	
37075-87	1987

62845-00A	2000
627E2 - Sight Glass	
45042-96	1996
627F1 - Oil Filter	
63798-99A	1999
63731-99A	1999
627H1 - Oil Line	
33531-00	2000
63601-00	2000
33525-00	2000
63783-00	2000
63628-00	2000
45806-00	2000
63611-00	2000
627K1 - Oil Line Fitting	
26352-95A	1995
45468-00	2000
63632-00	2000
62375-57A	1957
627M1 - Oil Pressure Regulator Valve	
62189-01A	2001
628A1 - PT Lubrication and Cooling Miscellaneous Component	
63553-00B	2010
648K1 - Exhaust Miscellaneous Component	
65912-00A	2000
649A1 - Muffler	
65094-00A	2000
65413-00	2000
65734-95	1995
65682-00A	2002
65090-00B	2000
65366-00	2000
65364-00A	2000

65655-00	2000
649C1 - Muffler Tailpipe / Outlet	
65926-00	2000
654A1 - Exhaust Shield	
65463-00	2000
65702-00A	2000
65909-00	2000
65750-00B	2000
65910-97	1997
65732-00B	2000
65085-00A	2007
65908-00A	2000
65445-00	2000
65911-97	1997
65148-00A	2007
65907-97A	2006
655A1 - Muffler Mount	
65435-00	2000
655C1 - Exhaust Mounting Bracket	
65311-97	1997
65652-97A	1997
656C1 - Header	
65081-00A	2000
65513-00A	2000
656E1 - Header Pipe	
65503-00A	2000
65603-00A	2000
65498-00A	2000
65499-00A	2000
65401-00B	2000
658A1 - Exhaust Catalyst	
65793-00	2000

65894-00	2000
65806-00A	2002
65679-00	2000
65939-00A	2002
65890-00A	2000
65842-00A	2000
65900-00A	2000
65885-00	2000
659A1 - Exhaust Clamp	
65296-95A	1995
65654-97	2017
659B1 - Exhaust Flange	
65328-83A	2010
659C1 - Exhaust Gasket	
65830-03	2003
660A1 - Battery	
66373-06	2006
65989-97C	1997
660E1 - Ground Strap	
70060-92B	1992
660G1 - Positive Battery Cable	
70078-00B	2000
660H1 - Positive Battery Cable Boot	
31662-90	1990
70584-94	1994
677A1 - Headlight	
69748-05B	2005
68705-93A	1993
67713-86	1986
67603-94A	1994
68832-99	1999
58060-93	1993
69750-05B	2005

67894-93A	1993
67763-92A	1993
67769-93	1993
69163-00	2000
68051-93A	1993
67790-93A	1993
67781-92A	1993
67705-92	1992
69715-05A	2005
69696-05	2005
67892-93	1993
69769-05A	2005
68725-62A	1962
67698-81D	2001
68050-93A	1993
67768-97	1997
67685-92	1992
67793-92A	2001
67772-97	1997
67801-92A	1993
69717-05A	2005
677B1 - Headlight sub-component	
67798-92	1992
67880-94	1994
678A1 - Taillight	
68558-03	2003
68066-99A	2004
69187-03A	2003
68236-97	1997
68141-99A	1999
68369-03	2003
68142-04	2004

68830-99A	1999
68237-97	1997
68372-03	2003
68235-97	1997
68368-03	2003
68140-99A	1999
68296-99A	2004
68234-97	1997
68932-00A	2000
68140-04	2004
68370-03A	2003
68354-00A	2000
68233-97	1997
68141-04	2004
68440-86	1986
68226-97	1997
68931-00A	2000
678B1 - Taillight Housing	
68356-00A	2000
678C1 - Taillight Lens	
68238-97	1997
68239-97	1997
678D1 - Turnsignal	
67822-88	1988
68975-00	2000
68480-02	2002
68510-74C	1974
68767-94	1994
68978-00	2000
67828-88A	1988
68977-00	2000
68766-94	1994
68765-94A	1994

68671-69D	1969
67827-88A	1988
68713-94A	1994
68972-00	2000
59201-96	1996
67829-88	1988
58089-97	1997
68821-00	2000
68989-98	1998
678E1 - Turnsignal Lens	
59357-00	2000
68973-00	2000
68506-92	1992
68505-90	1990
679B1 - Reflector	
60123-02	2002
59254-91	1991
59287-92	1992
60019-93A	1993
59259-90	1990
59482-00	2000
59481-00	2000
59256-84A	1984
59290-92	1992
59289-92	1992
59288-92	1992
59988-72A	1972
59255-91	1991
59251-90	1990
679D1 - License Plate Bracket	
60020-97	1997
60120-00A	2000

68371-03	2003
60001-55	1955
60003-89	1989
59986-75	1975
68890-00A	2000
59995-03	2003
59984-73	1973
60021-97	1997
680A1 - Decorative Light	
59672-99	1999
68674-69A	1969
68683-02	2002
68706-00	2000
59122-97	1997
68721-62	1962
59355-97	1997
59180-80	1980
59118-00	2000
68846-98C	1998
68720-62	1962
680B1 - Emergency Light	
67691-92	1992
680C1 - Incandescent Bulb	
68833-99	1999
68847-98A	1998
68193-95	1995
68572-64B	1964
68169-90A	1990
68168-89A	1989
53436-97	1997
68163-84	1984
68167-88	1988
68381-00	2000

68329-03	2003
68353-00	2000
68167-04	2004
52441-95	1995
53438-92	1992
690A1 - Emergency Siren	
68958-07C	2010
690B1 - Emergency Siren sub-component	
69309-10	2010
692C1 - Electrical Miscellaneous Component	
69070-97B	1997
68112-99A	1999
68894-00	2000
72374-00	2000
70354-03	2003
90469-94	1994
68892-00A	2000
68113-99B	1999
72176-94	1994
692C2 - Electrical Mounting Bracket	
67271-99	1999
69069-97	1997
69136-00	2000
30202-01	2001
72463-00A	2000
69123-92A	1992
68385-97	1997
31682-00	2000
66210-00	2000
59465-00	2000
31772-01	2001
69120-91	1991

31773-01	2001
68519-68A	1968
31606-00	2000
67423-00	2000
69060-90F	2010
72368-00	2000
48127-01	2001
31742-00	2000
45550-03	2003
31725-00	2000
69062-91A	1991
692D1 - Fuse	
74599-77B	1977
70048-03	2003
72330-95	1995
692E1 - Fuse / Relay Block	
72369-00	2000
72432-00	2000
72430-00	2000
692E2 - Fuse / Relay Block Cover	
27667-00A	2000
692F1 - Wire Harness	
68818-03A	2003
68819-03	2003
67915-00	2000
68817-00	2000
68891-00	2000
75062-01	2001
70197-86	1986
70280-01	2001
67615-96	1996
70196-00	2000
70216-03	2003

70431-03	2003
692G1 - Conduit / Sheathing / Sleeving	
72366-95	1995
72249-94	1994
72266-94	1994
70523-06	2006
69200018	2010
70540-02	2002
692G2 - Wire Guide	
72412-97	1997
10190	Unknown
27580-88	1988
692H1 - Connector	
73152-96BK	1996
70586-93	1993
72119-94BK	1994
27249-96	1996
72159-94	1994
72380-00	2000
72116-94BK	1994
72144-94	1994
72280-95	1995
74142-98	1998
72124-94GY	1994
9848	Unknown
9847	Unknown
72113-94BK	1994
29312-95	1995
72156-94	1994
72139-94GY	1994
72247-95	1995
68650-92	1992

72273-95	1995
68654-92	1992
72078-00	2000
72516-01	2001
72199-94	1994
72153-94	1994
692H2 - Terminal	
72245-95	1995
72076-00	2000
72292-94	1994
72213-94	1994
9898	Unknown
72429-00	2000
72428-00	2000
72290-94	1994
72242-94	1994
72291-94	1994
9840	Unknown
9843	Unknown
9842	Unknown
9937	Unknown
72434-00	2000
72991-01	2001
74190-98	1998
74194-98	1998
692K1 - Connector / Terminal Seal	
68904-00	2000
74193-98	1998
69187-03	2003
72604-01BK	2001
72039-71A	1971
68370-03	2003
73154-96WE	1996

68905-00	2000
72614-01BK	2001
72654-01	2001
72644-01	2001
692L1 - Wire Harness sub-component	
74191-98	1998
74148-98	1998
70345-84	1984
72263-95	1995
72077-00	2000
74152-98	1998
72195-94	1994
74158-98	1998
72231-98	1998
70347-84	1984
72214-94	1994
70504-81	1981
73190-96	1996
73104-96WE	1996
10102	Unknown
73156-96BK	1996
74108-98BK	1998
74113-98BK	1998
73106-96BK	1996
72904-01BK	2001
70598-99	1999
73152-96WE	1996
72380-07	2007
72230-98	1998
74153-98	1998
74195-98	1998
74102-98BK	1998

73153-96BK	1996
73158-96BK	1996
72043-71A	1971
72143-94	1994
73102-96WE	1996
72244-95	1995
72327-03A	2003
72033-93	1993
72106-94BK	1994
56076-97	1997
72405-98BK	1998
72163-94BK	1994
73191-96	1996
72146-94	1994
74159-98	1998
38712-68	1968
72190-94	1994
74119-98BK	1998
73104-96BK	1996
73196-96	1996
73102-96BK	1996
72056-92	1992
72295-94	1994
72191-94	1994
74112-98BK	1998
74118-98BK	1998
73154-96BK	1996
70974-00B	2000
73108-96BK	1996
72914-01BK	2001
709A1 - Dash Panel	
60993-00	2000
709B1 - Instrument Cluster or Speedometer	

67033-99A	2003
67190-89	1989
68903-00A	2000
68901-00A	2001
68893-00A	2000
68889-00	2000
67196-99A	1999
68902-00A	2001
67197-99A	2003
71248-00A	2000
709B2 - Fuel Gauge	
75099-01A	2001
75053-01B	2001
75049-01A	2001
709E1 - Tank Console	
71439-00	2000
71250-00A	2000
714A1 - Ignition Switch	
71313-96A	1996
714B1 - Mechanical Switch	
33904-00A	2000
68619-83	1983
714C1 - Pressure Switch	
26561-99	1999
714D1 - Relay	
31522-00C	2004
31511-01B	2001
715A1 - Hand Control	
71684-06A	2006
67854-98	1998
71587-04	2004
67858-89	1989

71683-06A	2006
71564-96	1996
71563-96	1996
71568-96A	1996
71685-06A	2006
71682-06A	2006
71567-96	1996
71621-08	2008
747A1 - Voltage Regulator	
74540-01	2001
902A1 - Saddlebag	
98837-97	1997
90476-00	2000
91300-01	2001
90477-00	2000
90247-00	2000
91299-01	2001
90346-00	2000
903A1 - Lockset	
71450-04	2004
903B1 - Key or Key-set	
61081-92	1992
903C1 - Key Transponder	
68926-00	2000
68927-00	2000
917B1 - Service Program Kit	
90438-10	2010
918B1 - Hardware Kit	
91800025	2012
936B1 - Cleaner	
41092-03	2003
41095-03	2003
989A1 - GM - LP - Miscellaneous	

Common Service Parts

AUDIO & INSTRUMENTATION[View interactive table](#)

PART NO.	DESCRIPTION	PART AND MODEL(S)
67880-94	BOOT	<p><i>INSTRUMENTS (1 OF 2):</i></p> <p>FXST FLSTC FXSTS FLSTF FLSTS FXSTB FXSTI FLSTCI FLSTFI FLSTSI FXSTSI FXSTBI</p> <p><i>INSTRUMENTS - FXSTD/I:</i></p> <p>FXSTD FXSTDI</p>

BEARINGS, SEALS & HARDWARE[View interactive table](#)

PART NO.	DESCRIPTION	PART AND MODEL(S)
10014	CLAMP	<p><i>CARBURETOR (1 OF 2):</i></p> <p>FXST FLSTC FXSTS FLSTF FLSTS FXSTD FXSTB</p> <p><i>FUEL TANK:</i></p> <p>FXST FLSTC FXSTS FLSTF FLSTS FXSTB</p> <p><i>FUEL TANK - FXSTD:</i></p> <p>FXSTD</p>

PART NO.**DESCRIPTION****PART AND MODEL(S)**

10038A

CLAMP

FUEL TANK:

[FXST](#)
[FLSTC](#)
[FXSTS](#)
[FLSTF](#)
[FLSTS](#)
[FXSTB](#)

FUEL TANK - FUEL INJECTED:

[FXSTI](#)
[FLSTCI](#)
[FLSTFI](#)
[FLSTSI](#)
[FXSTSI](#)
[FXSTBI](#)

FUEL TANK - FXSTD:

[FXSTD](#)

FUEL TANK - FXSTD - FUEL INJECTED:

[FXSTDI](#)

10080

CLAMP

[OIL TANK & LINES: All Models](#)

10102

CLIP

FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I:

[FLSTC](#)
[FLSTCI](#)

SENDING UNITS - CARBURETED MODELS:

[FXST](#)
[FLSTC](#)
[FXSTS](#)
[FLSTF](#)
[FLSTS](#)
[FXSTD](#)
[FXSTB](#)

INSTRUMENTS (1 OF 2):

[FXST](#)
[FLSTC](#)
[FXSTS](#)
[FLSTF](#)
[FLSTS](#)
[FXSTB](#)
[FXSTI](#)
[FLSTCI](#)
[FLSTFI](#)
[FLSTSI](#)
[FXSTSI](#)
[FXSTBI](#)

INSTRUMENTS - FXSTD/I:

[FXSTD](#)
[FXSTDI](#)

PART NO.	DESCRIPTION	PART AND MODEL(S)
10222	CLAMP	<p><i>FUEL TANK - FUEL INJECTED:</i></p> <p>FXSTI FLSTCI FLSTFI FLSTSI FXSTSI FXSTBI</p> <p><i>FUEL TANK - FXSTD - FUEL INJECTED:</i></p> <p>FXSTDI</p> <p><i>FUEL PUMP - FUEL INJECTED:</i></p> <p>FXSTI FLSTCI FLSTFI FLSTSI FXSTSI FXSTBI FXSTDI</p>
11105	O-RING	<p>TRANSMISSION HOUSING (1 OF 2): All Models OIL TANK & LINES: All Models</p>
11132A	O-RING	<p>ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™: All Models TRANSMISSION HOUSING (1 OF 2): All Models</p>
11143	RETAINING RING	<p>CLUTCH CONTROL: All Models FRONT BRAKE CONTROL: All Models</p>
11145A	O-RING	<p>ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™: All Models</p>
11147B	O-RING	<p>PRIMARY HOUSING: All Models</p>
11150	RETAINING RING	<p>GEAR SHIFTER: All Models</p>
11157	O-RING	<p>CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2): All Models</p>
11165	QUAD SEAL	<p>TRANSMISSION HOUSING (1 OF 2): All Models</p>
11270	O-RING	<p>ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™: All Models</p>
11292	O-RING	<p><i>AIR CLEANER & ENRICHENER - CARBURETED MODELS:</i></p> <p>FXST FLSTC FXSTS FLSTF FLSTS FXSTD FXSTB</p> <p><i>AIR CLEANER - FUEL INJECTED MODELS:</i></p> <p>FXSTI FLSTCI FLSTFI FLSTSI FXSTSI FXSTBI FXSTDI</p>
11293	O-RING	<p>ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™: All Models</p>

PART NO.	DESCRIPTION	PART AND MODEL(S)
11301	O-RING	<u>CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2): All Models</u>
11447	GROMMET	<u>OIL TANK & LINES: All Models</u>
12035B	OIL SEAL	<u>TRANSMISSION GEARS: All Models</u>
12045	SEAL	<u>GEAR SHIFTER: All Models</u>
12052A	OIL SEAL	<u>PRIMARY HOUSING: All Models</u>
12066A	OIL SEAL	<u>PRIMARY HOUSING: All Models</u>
12067B	OIL SEAL	<u>TRANSMISSION HOUSING (1 OF 2): All Models</u>
1311D	SCREW	<p>FUEL PUMP - FUEL INJECTED:</p> <p><u>FXSTI</u> <u>FLSTCI</u> <u>FLSTFI</u> <u>FLSTSI</u> <u>FXSTSI</u> <u>FXSTBI</u> <u>FXSTDI</u></p> <p>SENDING UNITS - CARBURETED MODELS:</p> <p><u>FXST</u> <u>FLSTC</u> <u>FXSTS</u> <u>FLSTF</u> <u>FLSTS</u> <u>FXSTB</u></p> <p>SENDING UNITS - CARBURETED MODELS:</p> <p><u>FXSTD</u></p>
16715-83	STUD	<u>CYLINDERS, HEADS & VALVES - Twin Cam 88B™: All Models</u>
16719-99B	GASKET	<u>ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™: All Models</u>
17045-99D	GASKET KIT	<p><u>ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™: All Models</u></p> <p><u>CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2): All Models</u></p>
17386-99A	GASKET	<u>ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™: All Models</u>
18635-99B	GASKET	<u>ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™: All Models</u>
25244-99A	GASKET	<u>CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2): All Models</u>
2531	SCREW	<p>FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I:</p> <p><u>FLSTC</u> <u>FLSTCI</u></p>
25416-99C	SEAL	<u>PRIMARY HOUSING: All Models</u>
25700225	GASKET KIT	<u>PRIMARY HOUSING: All Models</u>

PART NO.	DESCRIPTION	PART AND MODEL(S)
26995-86B	SEAL	CARBURETOR (1 OF 2): FXST FLSTC FXSTS FLSTF FLSTS FXSTD FXSTB INDUCTION MODULE - FUEL INJECTED: FXSTI FLSTCI FLSTFI FLSTSI FXSTSI FXSTBI FXSTDI
2720	SCREW	ALTERNATOR & REGULATOR: All Models
31430-94	WASHER	STARTER MOTOR: All Models
3275	SCREW	CARBURETOR (1 OF 2): FXST FLSTC FXSTS FLSTF FLSTS FXSTD FXSTB INDUCTION MODULE - FUEL INJECTED: FXSTI FLSTCI FLSTFI FLSTSI FXSTSI FXSTBI FXSTDI GEAR SHIFTER: FLSTC FLSTF FLSTS FLSTCI FLSTFI FLSTSI
33126-94	LOCKPLATE	STARTER MOTOR: All Models
33318-85	LOCKING TAB	PRIMARY HOUSING: All Models

PART NO.	DESCRIPTION	PART AND MODEL(S)
3655A	SCREW	<u>REAR BRAKE CONTROL: All Models</u> FRONT WHEEL (1 OF 2): <u>FXST</u> <u>FLSTC</u> <u>FXSTS</u> <u>FLSTS</u> <u>FXSTD</u> <u>FXSTB</u> <u>FXSTI</u> <u>FLSTCI</u> <u>FLSTFI</u> <u>FLSTSI</u> <u>FXSTSI</u> <u>FXSTBI</u> <u>FXSTDI</u> FRONT WHEEL (1 OF 2): <u>FLSTF</u>
3658	SCREW	INSTRUMENTS - FXSTD/I: <u>FXSTD</u> <u>FXSTDI</u> <u>HANDLEBAR SWITCHES: All Models</u>
36801-87C	GASKET	<u>TRANSMISSION HOUSING (2 OF 2): All Models</u>
4132	SCREW	<u>CLUTCH CONTROL: All Models</u> <u>FRONT BRAKE CONTROL: All Models</u>
41731-01	GASKET	<u>FRONT BRAKE CONTROL: All Models</u> <u>REAR BRAKE CONTROL: All Models</u>
41731-88A	GASKET	FRONT BRAKE CONTROL: <u>FLSTS</u> <u>FLSTSI</u>
41733-88	GASKET	<u>FRONT BRAKE CONTROL: All Models</u>
43567-92	SCREW	<u>REAR WHEEL: All Models</u>
45405-75A	SCREW	FRONT FORK - FXST/I & FXSTB/I: <u>FXST</u> <u>FXSTB</u> <u>FXSTI</u> <u>FXSTBI</u> FRONT FORK - FXSTD/I: <u>FXSTD</u> <u>FXSTDI</u> FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2): <u>FLSTC</u> <u>FLSTF</u> <u>FLSTCI</u> <u>FLSTFI</u>

PART NO.	DESCRIPTION	PART AND MODEL(S)
45733-48	OIL SEAL	<p><i>FRONT FORK - FXST// & FXSTB//:</i></p> <p><u>FXST</u> <u>FXSTB</u> <u>FXSTI</u> <u>FXSTBI</u></p> <p><i>FRONT FORK - FXSTD//:</i></p> <p><u>FXSTD</u> <u>FXSTDI</u></p> <p><i>FRONT FORK - FLSTC// & FLSTF// (1 OF 2):</i></p> <p><u>FLSTC</u> <u>FLSTF</u> <u>FLSTCI</u> <u>FLSTFI</u></p>
45845-77	O-RING	<p><i>FRONT FORK - FXST// & FXSTB//:</i></p> <p><u>FXST</u> <u>FXSTB</u> <u>FXSTI</u> <u>FXSTBI</u></p> <p><i>FRONT FORK - FXSTD//:</i></p> <p><u>FXSTD</u> <u>FXSTDI</u></p> <p><i>FRONT FORK - FLSTC// & FLSTF// (1 OF 2):</i></p> <p><u>FLSTC</u> <u>FLSTF</u> <u>FLSTCI</u> <u>FLSTFI</u></p>
45858-77	DRAIN SCREW	<p><i>FRONT FORK - FXST// & FXSTB//:</i></p> <p><u>FXST</u> <u>FXSTB</u> <u>FXSTI</u> <u>FXSTBI</u></p> <p><i>FRONT FORK - FLSTC// & FLSTF// (1 OF 2):</i></p> <p><u>FLSTC</u> <u>FLSTF</u> <u>FLSTCI</u> <u>FLSTFI</u></p>
4740A	SCREW	<p><u>CAMSHAFTS AND CAMSHAFT COVER - Twin Cam 88B™ (1 OF 2): All Models</u> <u>TRANSMISSION HOUSING (1 OF 2): All Models</u> <u>PRIMARY HOUSING: All Models</u></p>

PART NO.**DESCRIPTION****PART AND MODEL(S)**

48300-60

ROLLER BEARING

FRONT FORK - FXST// & FXSTB//:[FXST](#)[FXSTB](#)[FXSTI](#)[FXSTBI](#)*FRONT FORK - FXSTD//:*[FXSTD](#)[FXSTDI](#)*FRONT FORK - FLSTC// & FLSTF// (2 OF 2):*[FLSTC](#)[FLSTF](#)[FLSTCI](#)[FLSTFI](#)*FRONT FORK - FXSTS//:*[FXSTS](#)[FXSTSI](#)*FRONT FORK - FLSTS//:*[FLSTS](#)[FLSTSI](#)

53156-86

BUSHING

HANDLEBAR:[FXST](#)[FLSTC](#)[FXSTS](#)[FLSTF](#)[FXSTB](#)[FXSTI](#)[FLSTCI](#)[FLSTFI](#)[FXSTSI](#)[FXSTBI](#)

PART NO.	DESCRIPTION	PART AND MODEL(S)
59768-97	SEAT NUT KIT	<p>SEATS:</p> <p>FLSTC</p> <p>FLSTF</p> <p>FLSTCI</p> <p>FLSTFI</p> <p>SEATS:</p> <p>FXST</p> <p>FXSTS</p> <p>FXSTD</p> <p>FXSTB</p> <p>FXSTI</p> <p>FXSTSI</p> <p>FXSTBI</p> <p>FXSTDI</p> <p>SEATS - FLSTS//:</p> <p>FLSTS</p> <p>FLSTSI</p> <p>REAR FENDER & SUPPORTS - FXST//, FXSTS// & FXSTB//:</p> <p>FXST</p> <p>FXSTS</p> <p>FXSTB</p> <p>FXSTI</p> <p>FXSTSI</p> <p>FXSTBI</p> <p>REAR FENDER & SUPPORTS - FLSTC//, FLSTF// & FLSTS//:</p> <p>FLSTC</p> <p>FLSTF</p> <p>FLSTS</p> <p>FLSTCI</p> <p>FLSTFI</p> <p>FLSTSI</p> <p>REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD//:</p> <p>FXSTD</p> <p>FXSTDI</p>
60539-94B	GASKET	PRIMARY HOUSING: All Models
60567-90C	GASKET	PRIMARY HOUSING: All Models
60678-85	RETAINING RING	PRIMARY HOUSING: All Models
61381-02	GASKET	<p>FUEL PUMP - FUEL INJECTED:</p> <p>FXSTI</p> <p>FLSTCI</p> <p>FLSTFI</p> <p>FLSTSI</p> <p>FXSTSI</p> <p>FXSTBI</p>
6229W	WASHER	<p>SADDLEBAGS - FLSTC//:</p> <p>FLSTC</p> <p>FLSTCI</p> <p>SADDLEBAGS - FLSTS//:</p> <p>FLSTS</p> <p>FLSTSI</p>
63859-95B	GASKET	PRIMARY HOUSING: All Models
6516HW	WASHER	<p>ENGINE MOUNTS: All Models</p> <p>BELTS, CHAINS & SPROCKETS: All Models</p> <p>REAR WHEEL: All Models</p>

PART NO.	DESCRIPTION	PART AND MODEL(S)
65324-83B	GASKET	<p>EXHAUST SYSTEM - FXST//, FLSTC//, FXSTS// & FXSTB//:</p> <p>FXST FLSTC FXSTS FXSTB FXSTI FLSTCI FXSTSI FXSTBI</p> <p>EXHAUST SYSTEM - FLSTF// & FXSTD//:</p> <p>FLSTF FXSTD FLSTFI FXSTDI</p> <p>EXHAUST SYSTEM - FLSTS//:</p> <p>FLSTS FLSTSI</p>
65325-83A	RETAINING RING	<p>EXHAUST SYSTEM - FXST//, FLSTC//, FXSTS// & FXSTB//:</p> <p>FXST FLSTC FXSTS FXSTB FXSTI FLSTCI FXSTSI FXSTBI</p> <p>EXHAUST SYSTEM - FLSTF// & FXSTD//:</p> <p>FLSTF FXSTD FLSTFI FXSTDI</p> <p>EXHAUST SYSTEM - FLSTS//:</p> <p>FLSTS FLSTSI</p>
65927-00	GASKET	<p>EXHAUST SYSTEM - FXST//, FLSTC//, FXSTS// & FXSTB//:</p> <p>FXST FLSTC FXSTS FXSTB FXSTI FLSTCI FXSTSI FXSTBI</p>
6702	WASHER	<p>GEAR SHIFTER: All Models REAR BELT GUARD: All Models</p> <p>FRONT FORK - FXST// & FXSTB//:</p> <p>FXST FXSTB FXSTI FXSTBI</p> <p>FRONT FORK - FLSTC// & FLSTF// (1 OF 2):</p> <p>FLSTC FLSTF FLSTCI FLSTFI</p> <p>FRAME & JIFFY STAND: All Models</p> <p>FRONT FENDER - FXST//, FXSTB//, FXSTD//, FLSTC// & FLSTF//:</p> <p>FXST FXSTD</p>

PART NO.

DESCRIPTION

PART AND MODEL(S)

[FXSTB](#)

[FXSTI](#)

[FXSTBI](#)

[FXSTDI](#)

REAR FENDER, SUPPORTS & LICENSE PLATE BRACKET - FXSTD/I:

[FXSTD](#)

[FXSTDI](#)

FUEL TANK:

[FXST](#)

[FLSTC](#)

[FXSTS](#)

[FLSTF](#)

[FLSTS](#)

[FXSTB](#)

FUEL TANK - FUEL INJECTED:

[FXSTI](#)

[FLSTCI](#)

[FLSTFI](#)

[FLSTSI](#)

[FXSTSI](#)

[FXSTBI](#)

FUEL TANK - FXSTD:

[FXSTD](#)

FUEL TANK - FXSTD - FUEL INJECTED:

[FXSTDI](#)

EXHAUST SYSTEM - FLSTF/I & FXSTD/I:

[FLSTF](#)

[FXSTD](#)

[FLSTFI](#)

[FXSTDI](#)

EXHAUST SYSTEM - FLSTS/I:

[FLSTS](#)

[FLSTSI](#)

REAR TURN SIGNALS:

[FXST](#)

[FXSTS](#)

[FLSTF](#)

[FLSTS](#)

[FXSTD](#)

[FXSTB](#)

[FXSTI](#)

[FLSTFI](#)

[FLSTSI](#)

[FXSTSI](#)

[FXSTBI](#)

[FXSTDI](#)

SADDLEBAGS - FLSTC/I:

[FLSTC](#)

[FLSTCI](#)

SADDLEBAGS - FLSTS/I:

[FLSTS](#)

[FLSTSI](#)

PART NO.	DESCRIPTION	PART AND MODEL(S)
7041	LOCKWASHER	<u>STARTER MOTOR: All Models</u> GEAR SHIFTER: <u>FXST</u> <u>FXSTS</u> <u>FXSTD</u> <u>FXSTB</u> <u>FXSTI</u> <u>FXSTSI</u> <u>FXSTBI</u> <u>FXSTDI</u> FRONT FORK - FXST/I & FXSTB/I: <u>FXST</u> <u>FXSTB</u> <u>FXSTI</u> <u>FXSTBI</u> FRONT FORK - FLSTC/I & FLSTF/I (1 OF 2): <u>FLSTC</u> <u>FLSTF</u> <u>FLSTCI</u> <u>FLSTFI</u> <u>FRAME & JIFFY STAND: All Models</u> EXHAUST SYSTEM - FLSTS/I: <u>FLSTS</u> <u>FLSTSI</u>
739A	PLUG	<u>PRIMARY HOUSING: All Models</u>
7593	NUT	EXHAUST SYSTEM - FXST/I, FLSTC/I, FXSTS/I & FXSTB/I: <u>FXST</u> <u>FLSTC</u> <u>FXSTS</u> <u>FXSTB</u> <u>FXSTI</u> <u>FLSTCI</u> <u>FXSTSI</u> <u>FXSTBI</u> EXHAUST SYSTEM - FLSTF/I & FXSTD/I: <u>FLSTF</u> <u>FXSTD</u> <u>FLSTFI</u> <u>FXSTDI</u> EXHAUST SYSTEM - FLSTS/I: <u>FLSTS</u> <u>FLSTSI</u>
7600	NUT	FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I: <u>FLSTC</u> <u>FLSTCI</u>
7613A	PUSH NUT	FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I: <u>FLSTC</u> <u>FLSTCI</u>
7716	LOCKNUT	FOOTRESTS & FOOTBOARDS: <u>FLSTC</u> <u>FLSTF</u> <u>FLSTS</u> <u>FLSTCI</u> <u>FLSTFI</u> <u>FLSTSI</u>
856A	SCREW	<u>GEAR SHIFTER: All Models</u>

PART NO.	DESCRIPTION	PART AND MODEL(S)
9267	SEALED BALL BEARING	FRONT WHEEL (1 OF 2): All Models REAR WHEEL: All Models
961	SCREW	PRIMARY HOUSING: All Models
9955	CLAMP	EXHAUST SYSTEM - FXST//, FLSTC//, FXSTS// & FXSTB//: FXST FLSTC FXSTS FXSTB FXSTI FLSTCI FXSTSI FXSTBI EXHAUST SYSTEM - FLSTF// & FXSTD//: FLSTF FXSTD FLSTFI FXSTDI EXHAUST SYSTEM - FLSTS//: FLSTS FLSTSI

BRAKING & SUSPENSION

[View interactive table](#)

PART NO.	DESCRIPTION	PART AND MODEL(S)
44063-83C	BRAKE PAD SET	FRONT BRAKE CALIPER - SPRINGER MODELS: FXSTS FLSTS FLSTSI FXSTSI
44082-00D	PAD KIT	FRONT BRAKE CALIPER: FXST FLSTC FLSTF FXSTD FXSTB FXSTI FLSTCI FLSTFI FXSTBI FXSTDI REAR BRAKE CALIPER: All Models
45875-84A	OIL SEAL	FRONT FORK - FXST// & FXSTB//: FXST FXSTB FXSTI FXSTBI FRONT FORK - FXSTD//: FXSTD FXSTDI FRONT FORK - FLSTC// & FLSTF// (2 OF 2): FLSTC FLSTF FLSTCI FLSTFI

CHASSIS & COMPONENTS

[View interactive table](#)

PART NO.	DESCRIPTION	PART AND MODEL(S)
50005-85A	SPRING	FRAME & JIFFY STAND: All Models

ELECTRICAL

[View interactive table](#)

PART NO.	DESCRIPTION	PART AND MODEL(S)
70345-84	RETAINER	HANDLEBAR: All Models <i>REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I:</i> FLSTS FLSTS! HANDLEBAR SWITCHES: All Models
71621-08	STOP LAMP SWITCH KIT	HANDLEBAR SWITCHES: All Models
72023-51E	STOP LAMP SWITCH	REAR BRAKE CONTROL: All Models SWITCHES & CIRCUIT BREAKERS: All Models
72330-95	FUSE	<i>WIRING HARNESS, MAIN - CARBURETED (2 OF 2):</i> FXST FLSTC FXSTS FLSTF FLSTS FXSTD FXSTB <i>WIRING HARNESS, MAIN - FUEL INJECTED (2 OF 2):</i> FXST! FLSTC! FLSTF! FLSTS! FXSTS! FXSTB! FXSTD! SWITCHES & CIRCUIT BREAKERS: All Models

ENGINE, TRANSMISSION & PRIMARY

[View interactive table](#)

PART NO.	DESCRIPTION	PART AND MODEL(S)
17025-03A	BREATHER ASSEMBLY KIT	ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™: All Models
18538-99C	HYDRAULIC LIFTER	ROCKER ARM ASSEMBLY & PUSH RODS - Twin Cam 88B™: All Models
37909-90	RETAINING RING	CLUTCH: All Models
37913-98	CLUTCH PLATE	CLUTCH: All Models

FOOT CONTROLS

[View interactive table](#)

PART NO.	DESCRIPTION	PART AND MODEL(S)
33895-82D	SHIFT LEVER KIT	GEAR SHIFTER: FLSTC FLSTF FLSTS FLSTCI FLSTFI FLSTSI
34611-65A	PEG	GEAR SHIFTER: FXST FXSTS FXSTD FXSTB FXSTI FXSTSI FXSTBI FXSTDI GEAR SHIFTER: FLSTC FLSTF FLSTS FLSTCI FLSTFI FLSTSI

INTAKE, EXHAUST & FUEL MGMT

View interactive table

PART NO.	DESCRIPTION	PART AND MODEL(S)
27002-89	SEAL RING	CARBURETOR (1 OF 2): FXST FLSTC FXSTS FLSTF FLSTS FXSTD FXSTB
27361-76A	DIAPHRAGM	CARBURETOR (2 OF 2): FXST FLSTC FXSTS FLSTF FLSTS FXSTD FXSTB
29229-88D	CABLE	AIR CLEANER & ENRICHENER - CARBURETED MODELS: FXST FLSTC FXSTS FLSTF FLSTS FXSTD FXSTB

PART NO.	DESCRIPTION	PART AND MODEL(S)
29476-99	BREATHER TUBE	<p><i>AIR CLEANER & ENRICHENER - CARBURETED MODELS:</i></p> <p>FXST FLSTC FXSTS FLSTF FLSTS FXSTD FXSTB</p> <p><i>AIR CLEANER - FUEL INJECTED MODELS:</i></p> <p>FXSTI FLSTCI FLSTFI FLSTSI FXSTSI FXSTBI FXSTDI</p>
61001-01	FUEL FILTER KIT	<p><i>FUEL PUMP - FUEL INJECTED:</i></p> <p>FXSTI FLSTCI FLSTFI FLSTSI FXSTSI FXSTBI FXSTDI</p>
65296-95A	CLAMP	<p><i>EXHAUST SYSTEM - FXST//, FLSTC//, FXSTS// & FXSTB//:</i></p> <p>FXST FLSTC FXSTS FXSTB FXSTI FLSTCI FXSTSI FXSTBI</p> <p><i>EXHAUST SYSTEM - FLSTF// & FXSTD//:</i></p> <p>FLSTF FXSTD FLSTFI FXSTDI</p> <p><i>EXHAUST SYSTEM - FLSTS//:</i></p> <p>FLSTS FLSTSI</p>

LIGHTING

[View interactive table](#)

PART NO.	DESCRIPTION	PART AND MODEL(S)
----------	-------------	-------------------

PART NO.	DESCRIPTION	PART AND MODEL(S)
68168-89A	BULB	<p>AUXILIARY/FOG LAMPS - FLSTC/I & FLSTS/I; FRONT TURN SIGNALS - FLSTC/I:</p> <p>FLSTC FLSTCI</p> <p>FRONT TURN SIGNALS:</p> <p>FXST FXSTS FLSTF FLSTS FXSTD FXSTB FXSTI FLSTFI FLSTSI FXSTSI FXSTBI FXSTDI</p> <p>TAIL LAMP (1 OF 2):</p> <p>FXST FLSTC FXSTS FLSTF FXSTB FXSTI FLSTCI FLSTFI FXSTSI FXSTBI</p> <p>TAIL LAMP (1 OF 2):</p> <p>FLSTS FLSTSI</p> <p>TAIL LAMP - FXSTD/I:</p> <p>FXSTD FXSTDI</p>
68193-95	BULB	<p>FRONT FENDER - FXST/I, FXSTB/I, FXSTD/I, FLSTC/I & FLSTF/I:</p> <p>FLSTC FLSTCI</p> <p>REAR FENDER & SUPPORTS - FLSTC/I, FLSTF/I & FLSTS/I:</p> <p>FLSTC FLSTCI</p>
68329-03	BULB	<p>HEADLAMP (1 OF 2):</p> <p>FXST FXSTS FLSTS FXSTD FXSTB FXSTI FLSTSI FXSTSI FXSTBI FXSTDI</p> <p>HEADLAMP - FLSTC/I & FLSTF/I:</p> <p>FLSTC FLSTF FLSTCI FLSTFI</p>
68572-64B	BULB	<p>REAR TURN SIGNALS: All Models</p>

PART NO.	DESCRIPTION	PART AND MODEL(S)
----------	-------------	-------------------

68973-00	LENS	
----------	------	--

FRONT TURN SIGNALS:

- [FXST](#)
- [FXSTS](#)
- [FLSTF](#)
- [FLSTS](#)
- [FXSTD](#)
- [FXSTB](#)
- [FXSTI](#)
- [FLSTFI](#)
- [FLSTSI](#)
- [FXSTSI](#)
- [FXSTBI](#)
- [FXSTDI](#)

FRONT TURN SIGNALS:

- [FXST](#)
- [FXSTS](#)
- [FLSTF](#)
- [FLSTS](#)
- [FXSTD](#)
- [FXSTB](#)
- [FXSTI](#)
- [FLSTFI](#)
- [FLSTSI](#)
- [FXSTSI](#)
- [FXSTBI](#)
- [FXSTDI](#)

REAR TURN SIGNALS:

- [FXST](#)
- [FXSTS](#)
- [FLSTF](#)
- [FLSTS](#)
- [FXSTD](#)
- [FXSTB](#)
- [FXSTI](#)
- [FLSTFI](#)
- [FLSTSI](#)
- [FXSTSI](#)
- [FXSTBI](#)
- [FXSTDI](#)

REAR TURN SIGNALS:

- [FXST](#)
- [FXSTS](#)
- [FLSTF](#)
- [FLSTS](#)
- [FXSTD](#)
- [FXSTB](#)
- [FXSTI](#)
- [FLSTFI](#)
- [FLSTSI](#)
- [FXSTSI](#)
- [FXSTBI](#)
- [FXSTDI](#)

MAINTENANCE & TOOLS

[View interactive table](#)

PART NO.	DESCRIPTION	PART AND MODEL(S)
----------	-------------	-------------------

PART NO.	DESCRIPTION	PART AND MODEL(S)
32362-04	SPARK PLUG	<p><i>IGNITION MODULE & COIL - CARBURETED:</i></p> <p>FXST FLSTC FXSTS FLSTF FLSTS FXSTD FXSTB</p> <p><i>ELECTRONIC CONTROL MODULE & COIL - FUEL INJECTED:</i></p> <p>FXSTI FLSTCI FLSTFI FLSTSI FXSTSI FXSTBI FXSTDI</p>
63731-99A	OIL FILTER	<p><i>CRANKCASE AND ENGINE OIL FILTER - Twin Cam 88B™:</i></p> <p>FXSTB FXSTBI</p>
63798-99A	OIL FILTER	<p><i>CRANKCASE AND ENGINE OIL FILTER - Twin Cam 88B™:</i></p> <p>FXST FLSTC FXSTS FLSTF FLSTS FXSTD FXSTI FLSTCI FLSTFI FLSTSI FXSTSI FXSTDI</p>
65989-97C	BATTERY	BATTERY: All Models
66373-06	BATTERY	SWITCHES & CIRCUIT BREAKERS: All Models
95582-47	WEIGHT	<p><i>FRONT WHEEL (2 OF 2):</i></p> <p>FXST FLSTC FXSTS FLSTS FXSTD FXSTB FXSTI FLSTCI FLSTSI FXSTSI FXSTBI FXSTDI</p> <p><i>REAR WHEEL:</i></p> <p>FXST FLSTC FXSTS FLSTS FXSTI FLSTCI FLSTSI FXSTSI</p>

PART NO.	DESCRIPTION	PART AND MODEL(S)
95595-84A	WEIGHT	<p>FRONT WHEEL (2 OF 2):</p> <p>FLSTF</p> <p>FLSTFI</p> <p>REAR WHEEL:</p> <p>FLSTF</p> <p>FXSTD</p> <p>FXSTB</p> <p>FLSTFI</p> <p>FXSTBI</p> <p>FXSTDI</p>

TIRES

[View interactive table](#)

PART NO.	DESCRIPTION	PART AND MODEL(S)
43157-83A	VALVE STEM	<p>FRONT WHEEL (1 OF 2):</p> <p>FLSTF</p> <p>FLSTFI</p> <p>REAR WHEEL:</p> <p>FLSTF</p> <p>FXSTD</p> <p>FXSTB</p> <p>FLSTFI</p> <p>FXSTBI</p> <p>FXSTDI</p>

WINDSHIELDS & AIR DEFLECTORS

[View interactive table](#)

PART NO.	DESCRIPTION	PART AND MODEL(S)
67621-94	BUSHING	<p>WINDSHIELD - FLSTC//:</p> <p>FLSTC</p> <p>FLSTCI</p>